E26 Bulb Outdoor Luminaires
Ceiling Mount – Pendant
120VAC / 60Hz

Model #: CRTP0718MBBK

Safety Precautions

- Read all safety precautions and installation instructions carefully before installing or servicing this fixture. Failure to comply with these instructions could result in potentially fatal electric shock and/or property damage.
- It is recommended that a qualified electrician perform all the wiring. This fixture must be wired in accordance with all national and local electrical codes.
- Do not handle any energized fixture or attempt to energize any fixture with wet hands or while standing on a wet or damp surface or in water.
- This fixture is designed for use in a 120VAC / 60Hz circuit.
- Make sure that the power source conforms to the requirements of the fixture. (See labels on the fixture housing).
- To reduce the risk of electrical shock, and to assure proper operation, this fixture must be adequately grounded. To accomplish proper grounding, there must be a separate ground wire (green) contact between this fixture and the ground connection of your main power supply panel.
- This fixture is intended to be used for general outdoor lighting in dry, damp or wet locations. For wet application, it must be mounted at least 48 inches above the ground level and must be under covered ceiling mount only (not suitable for submersion).

Assembly Instructions

Step 1 – Preparing for installation

A. **Disconnect electrical power** at the fuse or circuit breaker box before installing or servicing any part of this fixture.
B. Carefully remove the fixture and hardware kit from the carton.
C. Remove components from the hardware kit.
D. Remove mounting bracket (1) from the fixture (5) by removing two finials (8) and two rubber washers (7).
E. Install the mounting bracket (1) to the 3-0 or 4-0 junction box (not included) using two screws (2) to secure it. Note: adjust two screws (4) as needed for canopy to be tight against the ceiling then tighten two hex nuts (3) to secure it.
F. The fixture is provided with 108" adjustable cord (9). To raise the fixture frame from the floor to desire height by releasing the cable-locking screw on the side of strain relief connector (6) part of the fixture (5). Carefully push excess cord inside the canopy until desired length is achieved. Re-tighten cable-locking screw to secure it.

Wiring – All wiring must take place inside the junction box (not included)

Caution: Make sure power is off at the fuse or circuit breaker box. Check power wires for damage or scrapes. Use wire suitable for at least 90°C (194°F).
Note: Most dwellings built before 1985 have supply wire rated to 60°C (140°F). Consult a qualified electrician to ensure correct branch circuit conductor before installing.

Step 2 – Wiring fixture

A. Make all wire connections to appropriate wire. Secure with wire nuts (provided).
B. Connect the green wire from the fixture to the supply source ground wire.
C. Connect the black wire from the fixture to the black (L) wire from the supply power source.
D. Connect the white wire from the fixture to the white (N) wire from the supply power source.
E. **Do not mix wires.** Pull on each wire lead to make sure connections are secure. Make certain no bare wires are exposed outside of wire connectors. Tuck all connections neatly into the junction box.

Step 3 – Mounting fixture

A. Install the fixture (5) by aligning bottom holes to the screws (4) then using two rubber washers (7) and two finials (8) to secure it.

Step 4 – Lamping

A. Install medium base bulb, E26 (Type A, 60W max. – not included) into the socket then gently turning clockwise to secure it. Do not overtighten.

Step 5 – Restore power at the fuse or circuit breaker box

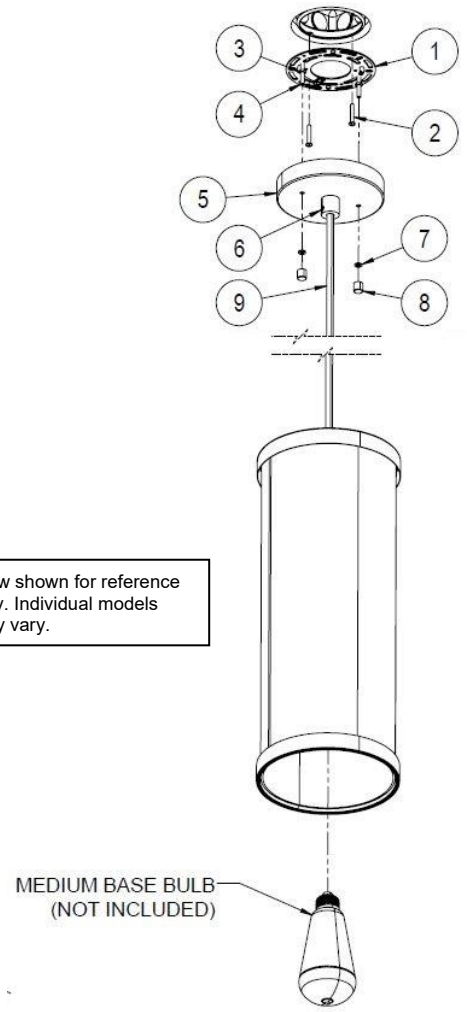

View shown for reference only. Individual models may vary.

Limited Factory Warranty
AFX Inc. hereby warrants that this fixture is free from defects in materials and workmanship when installed and used under normal operating conditions for a period of 2 years from date of purchase. This warranty covers all component parts and extends only to replacement of defective fixture or components; it does not cover failure due to improper installation, misuse, mishandling or damage incurred in transit.

2345 N. Ernie Krueger Circle Waukegan, IL 60087