






1.Please put the chair on flat floor
2.Please do not tight all bolts until all components are at right position

PARTIDENTIFICATION	QUANTITYPERSET	PARTIDENTIFICATION	QUANTITYPERSET
A: 	1	F:  M6x30	4
B: 	4	G: 	8
C: 	1	L_1:  M6	1
D: 	1	L_2:  M5	1
E:  M6x45	8		

1

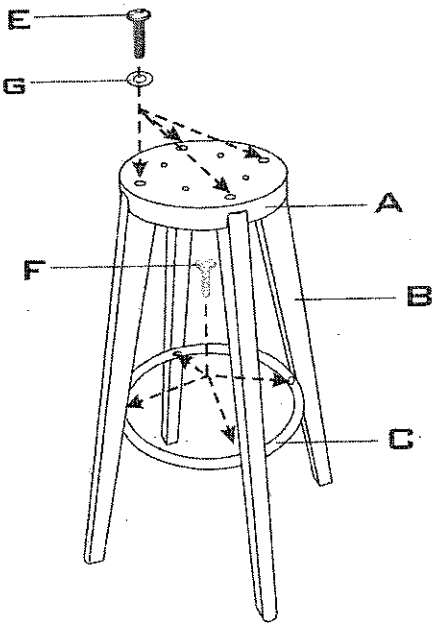

2

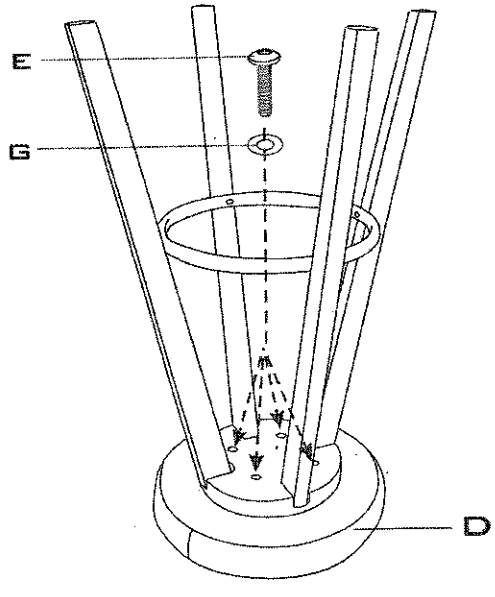

3

