


81010000038508

81010000038518

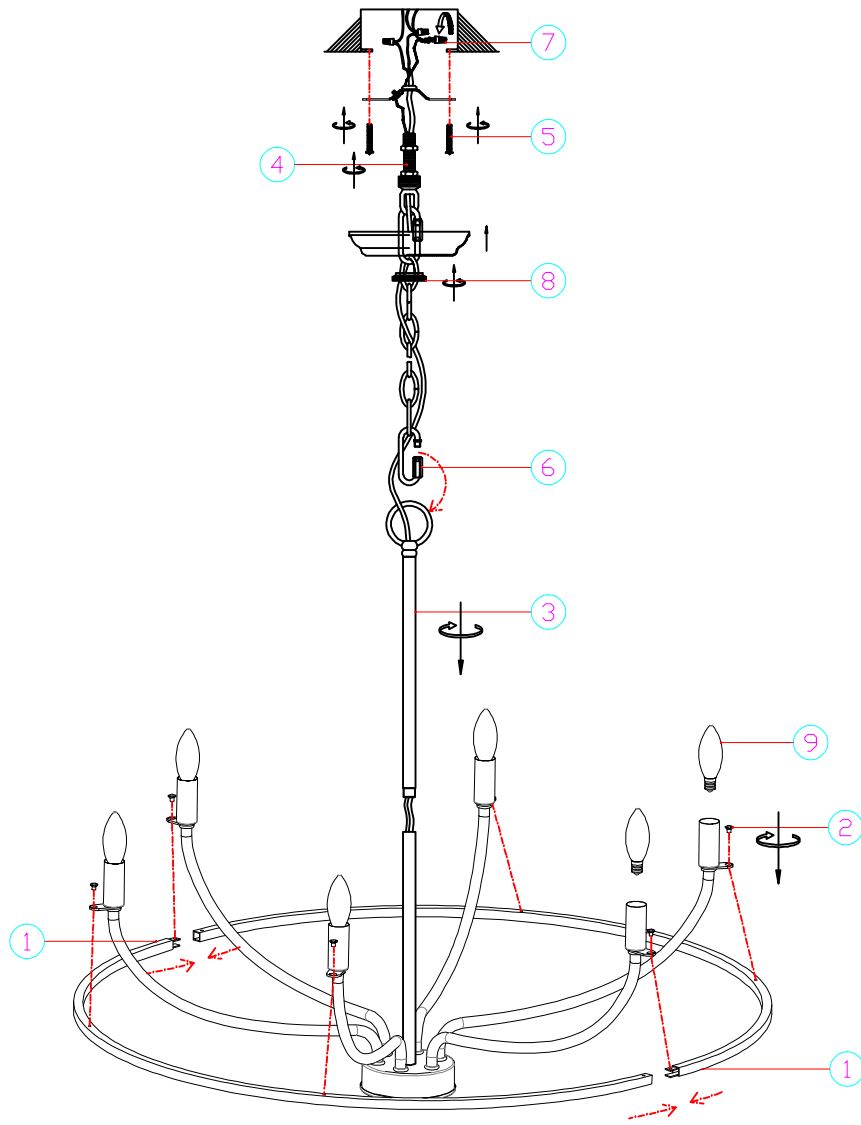

Installation steps:

1. Remove the screws on the half circle, then combine the half circles into a circle.
2. Fix the circle on the lamp head with the removed screws.
3. Pass the power cord through the iron tube, and then screw the iron tube into the lamp body.
4. Tighten the dental tube to the hanging plate
5. Fix the hanging plate on the junction box with screws
6. Buckle the movable buckle into the hanging chain and tighten it.
7. Connect the main wire of the lamp body to the wire reserved on the junction box
8. Put the canopy on the junction box, then tighten the bottom ring
9. Install the light source (without bulb)

Notice:

1. Before installation, please check whether the parts are complete and whether the lamps are in good condition.
2. Cut off the power supply before installation, and then perform wiring.
3. Install the lamp body first, and then install the power supply.
4. Installation and maintenance must be carried out by professional and technical personnel.