

Smart Bedside Table

User's manual



Functions



Support mobile phones with wireless charging function on the market. The phone can be charged by placing it in the corresponding area.




No indicator light: the table is not powered on
Blue light: the table is powered on and in standby status
Red light: the wireless charging is working


Operations

Short press the switch to turn on the light
Short press again to switch the light color
Long press to adjust brightness
Short press after a while to turn off the light

Bluetooth speaker

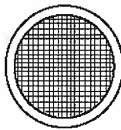

* Please note that the following features are optional and their availability depends on the actual product.

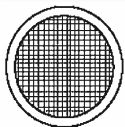

The two speakers would be installed on the left and right sides of table respectively

You could enjoy the pleasant music via blue-tooth speaker. Blue-tooth name: YUN CUBZ1 Passwords: 1234



Sensor light

When you pass by the bedside table, the sensor light will automatically turn on, and it will automatically turn off when you leave

Installation

Get the films of magnetic plate & metal plate off and paste them onto sensor light housing and bottom of table respectively, then set the light onto the table via magnetic force



TWS function: first, power off both tables completely. Then, plug in the power of the first table and plug in the power of the 2nd table within 20 seconds. After that, wait for about 30 seconds and use your phone to connect the table's Bluetooth named as "YUN CUBZ1." Click on it to connect and enter the password "1234." (Note: 1. If your phone has connected to this Bluetooth before, you need to delete the previous connection and follow the above steps. 2. If you find two Bluetooth devices with the same name, repeat the power on steps for both tables.)

Functions




Support mobile phones with wireless charging function on the market. The phone can be charged by placing it in the corresponding area.



No indicator light: the table is not powered on
Blue light: the table is powered on and in standby status
Red light: the wireless charging is working

Operations

Short press the switch to turn on the light
Short press again to switch the light color
Long press to adjust brightness
Short press after a while to turn off the light

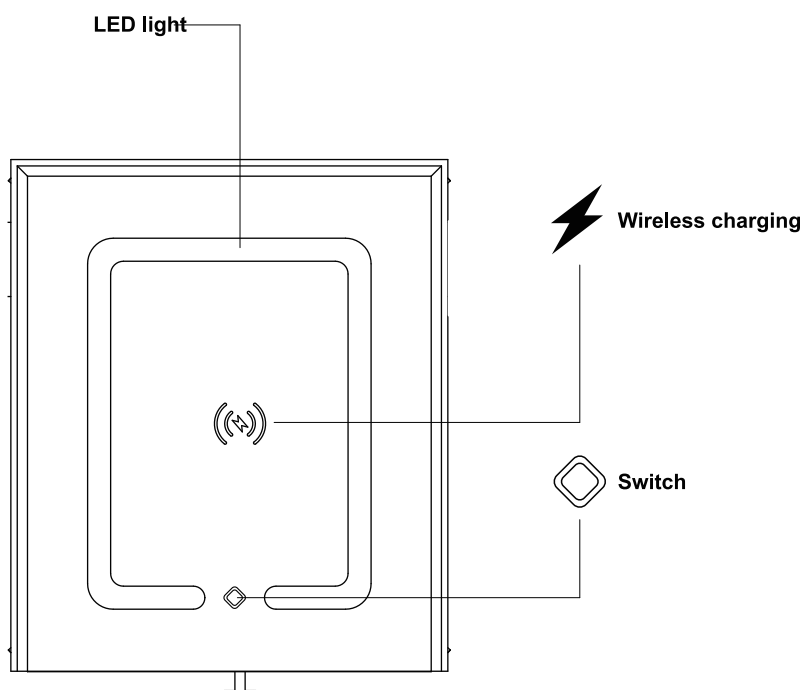

* Please note that the following features are optional and their availability depends on the actual product.



Fingerprint locking is strictly prevented and controlled for safety and worry-free.