

User Manual



Stair Climbing Hand Truck

The hand truck use

Checking the battery charge

1. Either on the stair climbing hand truck or when it has been removed turns the battery key fully clockwise.
2. Depress the red button and the green lights will illuminate if there is charge within the battery
 - . 1 light=25% charge
 - . 2 light=50% charge
 - . 3 light=75%charge
 - . 4 light=100%charge



Charging the battery: on the hand truck

3. Unscrew counter clockwise the battery connection cable




4. Plug in the charger cable and charge the battery
5. When battery is charged remove the charge cable and plug back in the connection cable and screw finger tight clockwise



Charging the battery: removed from the hand truck

6. The battery can be removed by turning the key clockwise.

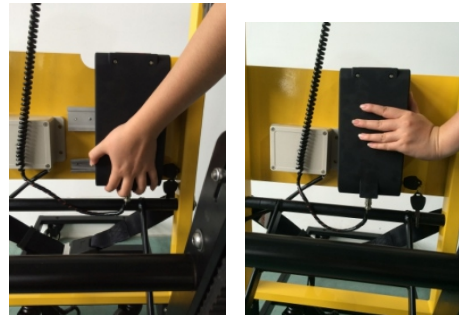

Operating for the hand truck

Deploying the hand truck

7. Remove the screws from hand truck and unbuckle the strap while holding the hand truck in a folded position.



8. fix the screws to the stair climbing hand truck



9. Releasing the safety belt, pull the hand truck platform down towards the floor and listen for a click when the platform is in position by turn and release the screws on platform



Extending the operating handle

10. Press the hand lever and lift the handle up and allow it to lock in position. Depending on the height of the operator there are three heights that can be selected.



Extending the tracks

11. Push the lower bar with the red arrow forward in the direction of the arrow. This will release the locking mechanism for the tracks.



12. Pull the upper bar of the tracks back until the tracks engage on the second locking position, then again on the third locking position.



Applying the brakes

13. Depress the red flap of braking mechanism firmly with the foot to engage brake.



Releasing the brakes

14. Firmly press the grey tab above the red tab to release the brake.



Folding the hand truck

15. Wrap the seat belt around the seat and tighten. The hand truck can now be moved back to its storage location.



Using for transport

16. Put the goods on the platform after extending it.
17. Fixing the goods by belt, press the red button to release the belt.



Motor control

18. Turn the key fully clockwise to turn on. A red light will illuminate on the front of the battery.



19. Turn on the red button when the red light is red, the motor can work.

20. Press the up button, move the stair climbing hand truck backward.

21. Press the down button, move the stair climbing hand truck forward.



Cleaning

Clean the stair climbing hand truck and its parts with a clean cloth or soft brush and warm soapy water. Rinse with warm water and air dry. Do not clean with products comprising of bleach or phenol. A stiff bristled brush can be used if necessary.

WARNING

Never leave an evacuee unattended in the Stair climber and always use restraints.

WARNING

Avoid changing the position of the rapidly, as this may result in an injury to the evacuee. Support the stair climbing hand truck while adjusting handles.

WARNING

Improper maintenance can cause injury. Maintain the stair climbing hand truck only for the purpose described in this manual.