


## • Product Parts

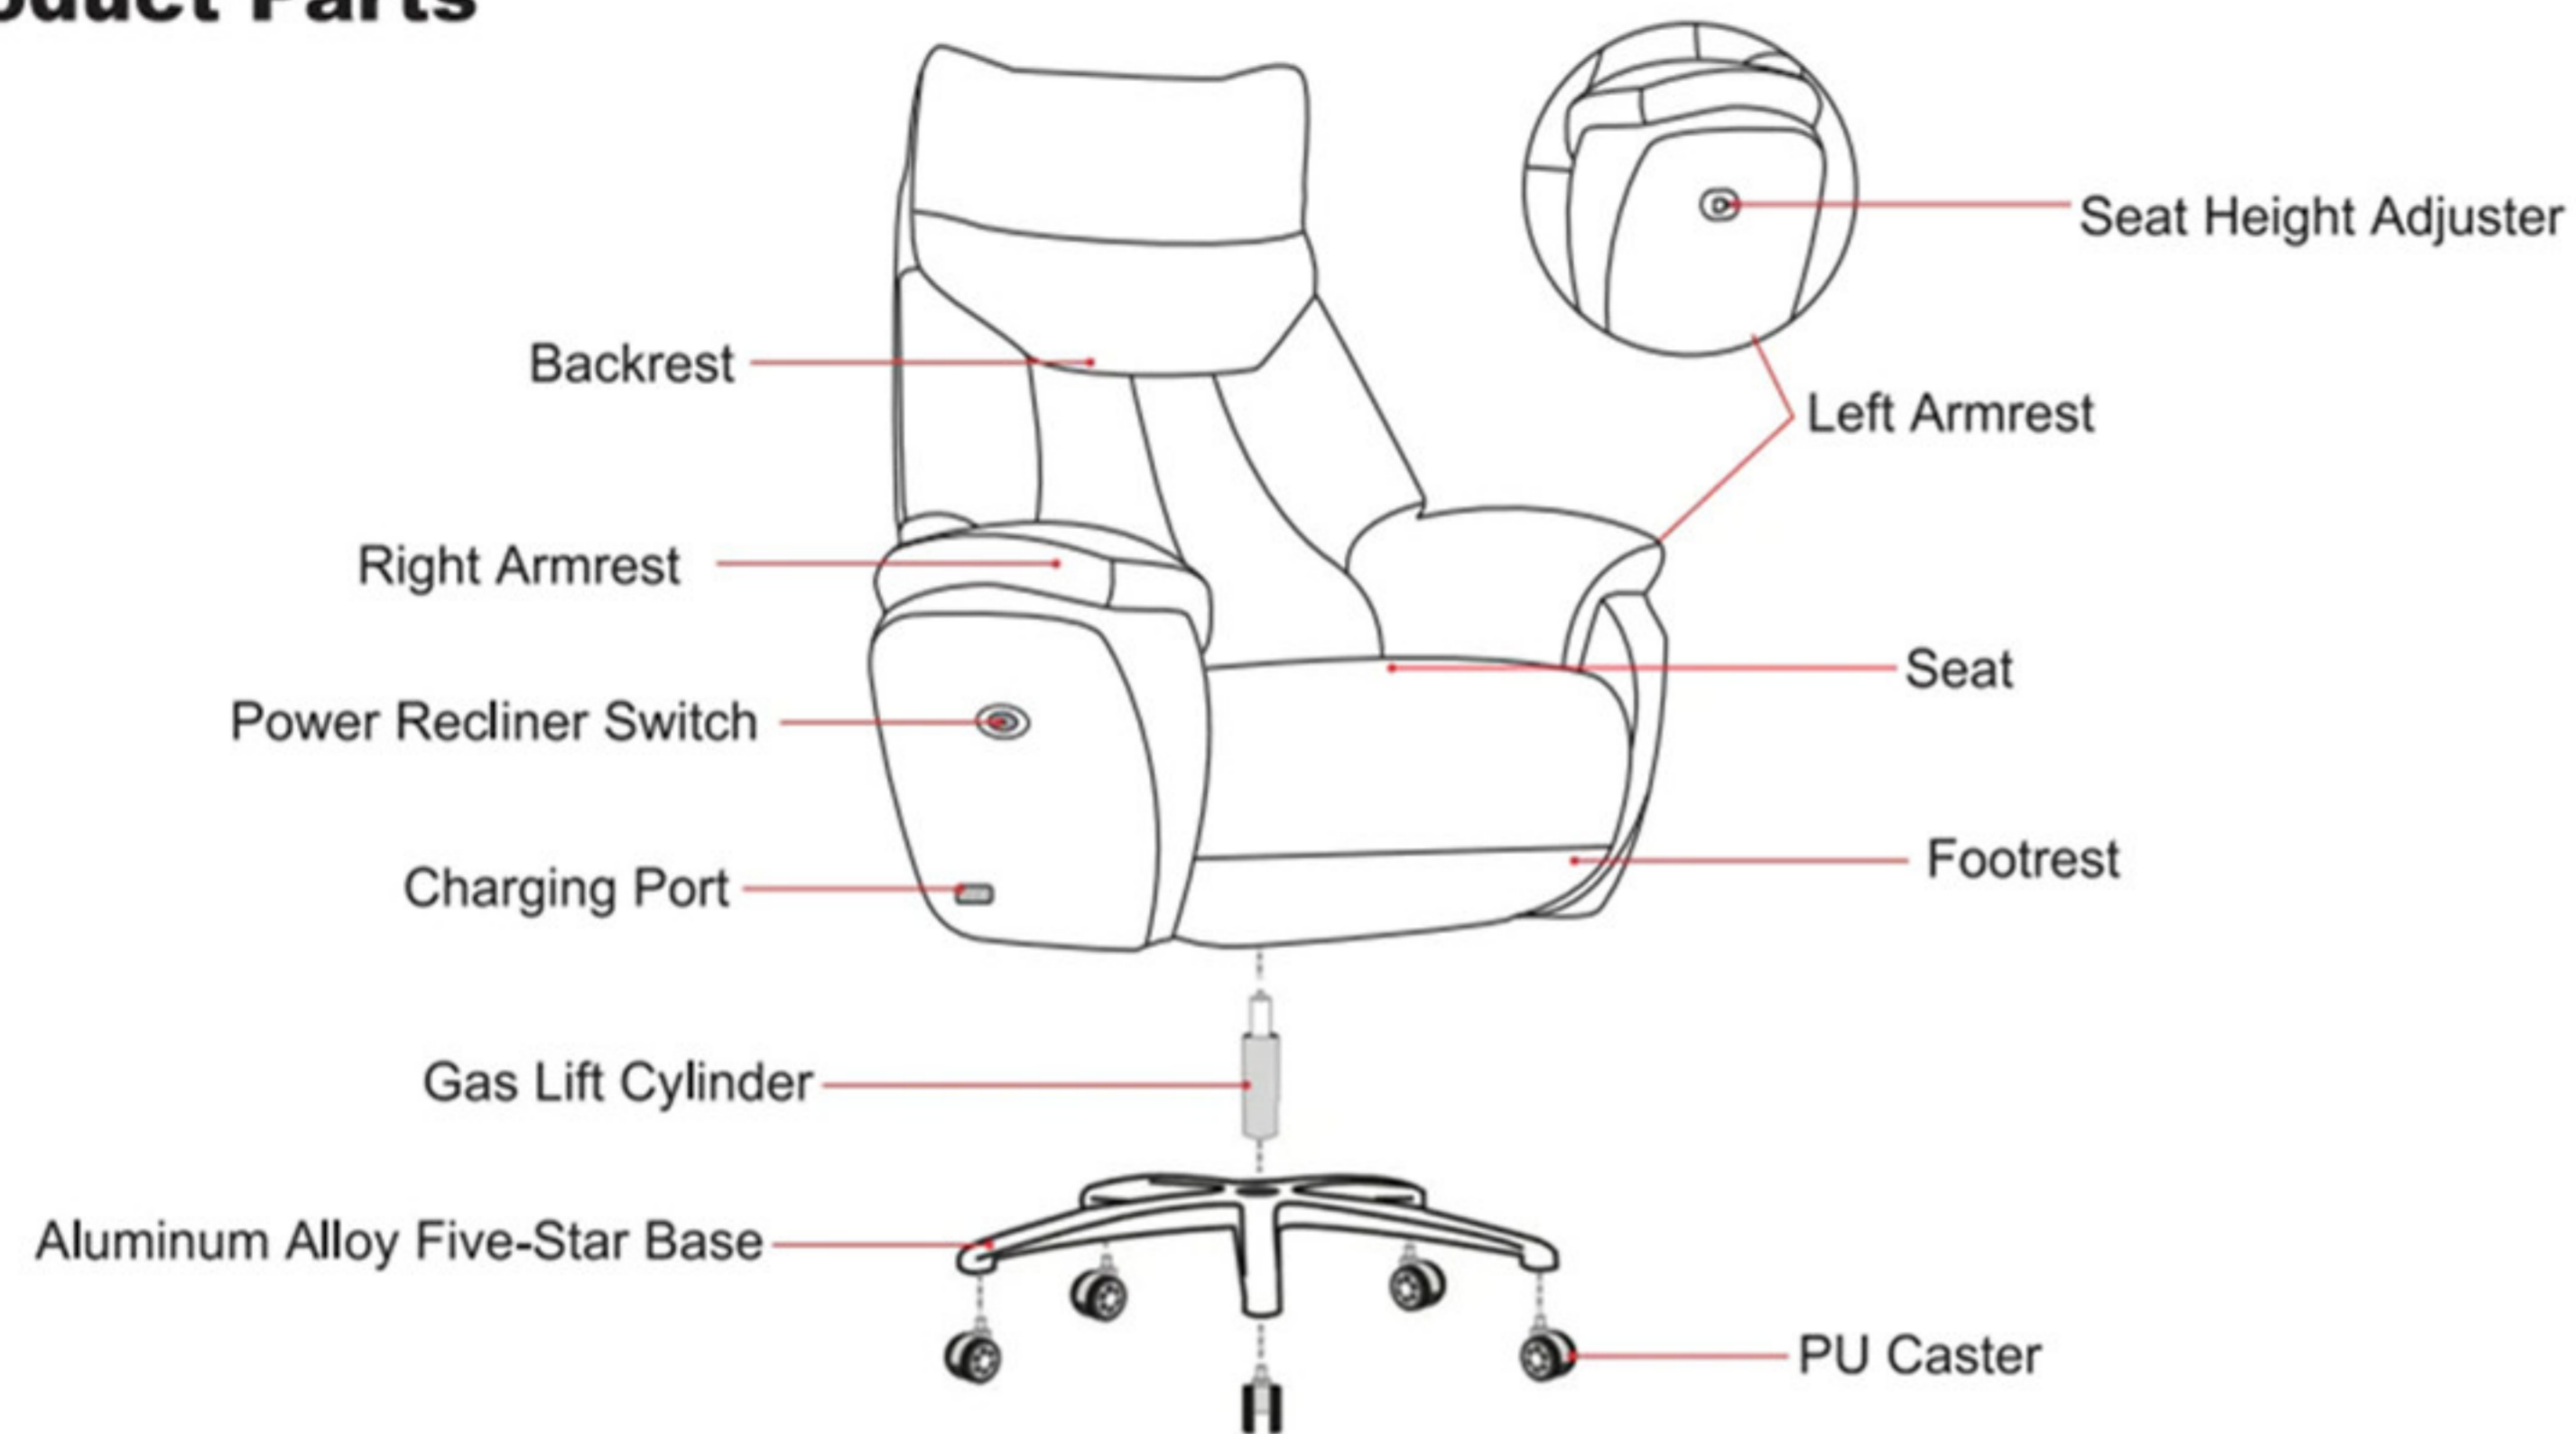

## • Installation

Step 1: Insert and push each caster into the base.

Step 2: Insert the gas lift cylinder into the center of the base.

Step 3: Insert top of the gas lift cylinder into the mounting hole.

## • Function

1. Adjustable seat height.
2. 360° freely swivel.
3. Independent backrest and footrest movement.
4. Lithium battery storage and rechargeable .

## • Instruction

1. Use the handle on the left armrest to adjust the seat height.
2. Use the buttons on the right armrest to control backrest and footrest.
3. Low battery warning sound is set to remind you to charge it in time. The charger is in the black mesh bag under the back of the chair. It usually takes about 3.5 hours to fully charge the battery (Please note: the new chair is in low battery).

## • Cautions

(1) If you want to get up and leave the chair, please first press the button to retract the footrest. If not done correctly, it may cause falls or tip-overs. Do not sit or put heavy objects on the footrest.



(2) Leather Maintenance

1. Keep dry and store it in a cool and ventilated place.
2. Do not expose to sunlight, fire, water, sharp objects and chemical solvents.
3. If there are stains, please use special leather cleaner to clean and care it.