



UV WAND

Portable UVC Sterilizing Wand

Owner's Manual




Thank you for purchasing our Portable UVC sterilizing wand. For best results, and for your own safety, please read these instructions prior to using this device for the first time. In addition, please keep this guide for future reference.

UVC Light Function

This product uses LEDs to emit effective ultraviolet rays. These ultraviolet rays destroy DNA and RNA molecular structure in bacteria, mold, and viruses. This will aid sterilizing and disinfecting most surfaces when used correctly.

Product Diagram

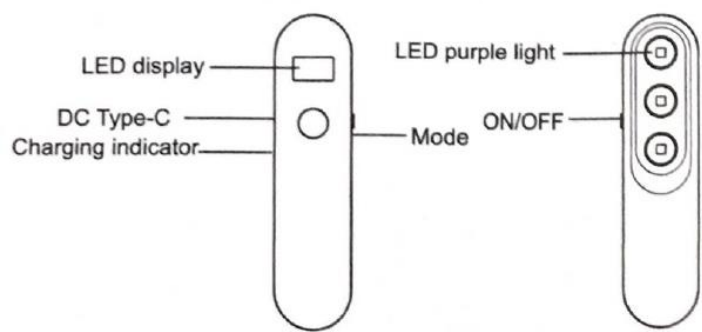

Function Description

1. Disinfection modes: 60 seconds /180 seconds.
2. Press the key once to enter the 60 second disinfection countdown, wand will display the 000 status after disinfection.
3. Press the key twice to enter the 180 second disinfection countdown, wand will display the 000 status after disinfection.
4. When entering the 000 mode, the wand will go into standby mode after 3 minutes. (shutdown is recommended when not in use to avoid power consumption)
5. Turn the UV Wand over (diodes upward facing) and the light will turn off automatically as a safety precaution.

NOTE: DO NOT look directly into the UV Light.

Product Specifications

Product name:	Advanced Pure Air UV Wand
Item Number	APA-1000UVW
LED Purple:	UVC270-280nm
	UVA395-400nm
Rated input	5V-2.0A (USB Type-C)
Rated power	1.5W (LED3535*3Pcs)
Battery parameters	Lithium Battery 3.7V 600mAh
Charging time	2.5 hour
Running Time	Around 2 hours (approx.)
Package size	160mm*32mm*17mm
Usages	Mobile phones, masks, keys, cosmetics, dining surfaces - sterilization
Function Description	Charging indicator light, the red light is on to indicate charging, and the light is off to indicate that the charging is completed
Temperature	Operating Temperature (32-104 °F)
	Storage Temperature (68-122 °F)
	Charging Temperature (32-104 °F)

Warning - Caution

1. This product produces UVC Light, do not look directly at the LED emitters with your eyes. May burn human skin with prolonged exposure.
2. Not for direct skin sanitizing. Please use sanitizing wipes, spray, or gel for sanitizing your hands.
3. Please keep the product away from children, this is NOT a toy.
4. Keep the lamp diodes clean and avoid water immersion.
Do not touch the lamp diodes.
5. Use for 1-3 minutes at a time is recommended.

How to Use:

General Use: Hold the UV Wand approximately 1-2 inches from the surface and gradually move the wand over the entire area.

Place items on a flat surface, away from water. Hold the UV Wand approximately 1-2 inches away from each object. Expose each object to the UV-C light for 10 seconds.

Allow the light to stay on each area for 5-10 seconds to ensure optimum exposure. Great for personal hygiene items such as hair brushes, toothbrushes, jewelry, razors, cell phones, and utensils.

REGISTRATION

NAME: _____
PHONE: _____
ADDRESS: _____
EMAIL: _____
DATE OF PURCHASE: ____ / ____ / ____

WARRANTY:

Advanced Pure Air® and its parent company, Real Spirit USA, warrants the UV Wand to the original consumer purchaser to be free from defects in materials and workmanship under normal operation and use for a period of one (1) year from the date of original purchase. Under the terms of the warranty, Real Spirit USA will repair or replace any defective part(s) free of charge. Shipping to and from Real Spirit USA shall be at purchasing owners' expense.

This warranty is valid only to the original owner with proof of purchase.

QUESTIONS?
CALL: 1-888-601-5886

Advanced Pure Air®

320 South Rock Blvd Suite 210 • Reno NV 89502 • Ph 888-601-5886
www.AdvancedPureAir.com • info@AdvancedPureAir.com