

## Instruction Menu

Proper installation steps:

1. Use a screwdriver to remove the cover of the bracket and insert a screwdriver into the hole in the bracket. Like Figure 1.
2. Select the location where you want to install the device, place the bracket on the wall and mark the location of the holes for the screws with a pen, like Figure 2.
3. After the holes of the screws are marked, remove the bracket. Drill holes in the marked area on the surface with a drill. Place the pin (included) in the drilled hole. Reinstall the bracket, connect the holes with the pins, and secure the screws with a screwdriver. like Figure 2.
4. Replace the cover on the bracket back into the bracket. Until you heard hear a click
5. Take out the device, install the fulcrum into the hole in the wall bracket cover, and immediately place the device down until you hear a “click” sound. To secure the bracket perfectly, Place the key (included) in the hexagonal hole in the bottom part of the bracket cover. like Figure 3.
6. Finally, put the key into the round hole on the lid and rotate to the right to open the device's lid. To prevent spilling, fill 3/4 of container with liquid soap. Close the lid and turn the key into the round hole to the left. like Figure 4.

Note: It is necessary to pull the crossbar several times, so that the equipment starts to flow out of soap several times.

You can check the amount of soapy water in the device from the small side window. Like Figure 4

**Important Note:**

\*\*\*for double or triple bodies, the bottom has been secured when packed into box, please DO use key to open the bottom lock before taking the dispenser off\*\*\*

The Cover on the bracket


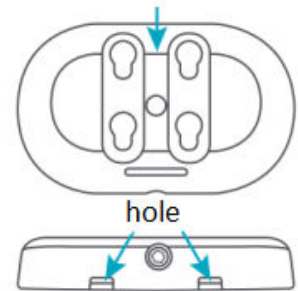



Figure 1

Bracket

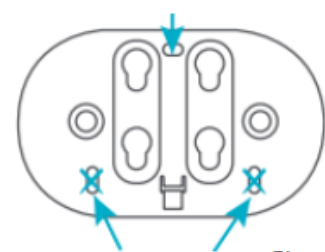

Screw holes

Figure 2

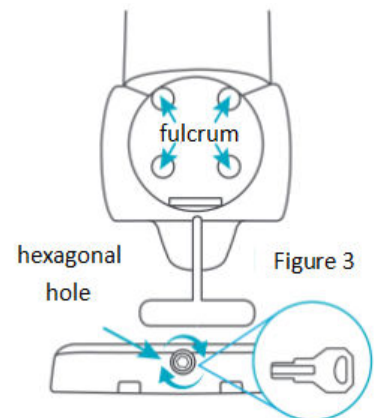

hexagonal hole

Figure 3

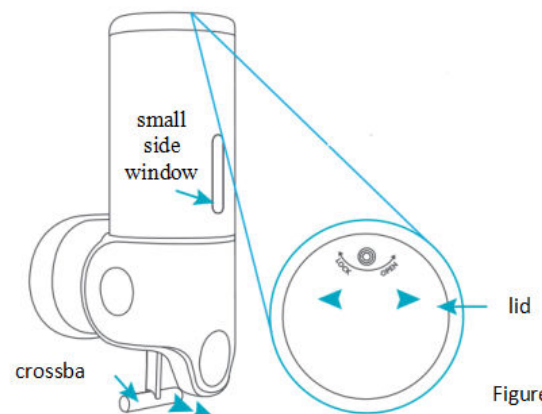


Figure 4