

USER GUIDE

MEDICINE CABINET SINGLE DOOR WITH LED LIGHTED MIRROR



IMPORTANT SAFETY INFORMATION

Please read through this installation instruction so you will know how to install and operate your model properly. Keep this document in a safe place for future reference after use.


WARNING

This product must be installed in accordance with the installation instruction by qualified technician. Failure to follow instruction could result in death or serious bodily injury.

CAUTION


This product must be serviced by qualified personnel. ALWAYS unplug the power cord or turn off the circuit breaker before service.

PACKAGE CONTENTS

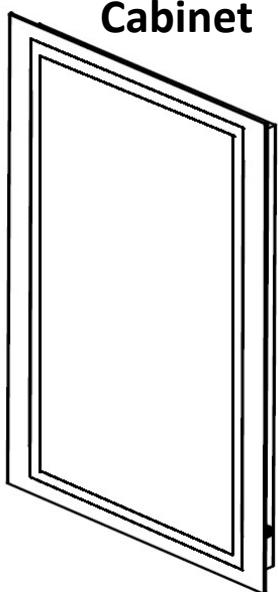


Cabinet

(x1)

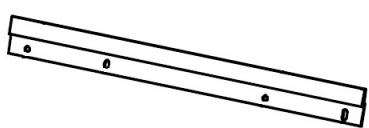

Mounting Bracket

(x1)
(x1)

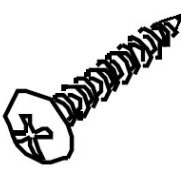

Screw

(x4)
(x4)




Drywall Anchor

(x4)
(x4)


INSTALLATION

1

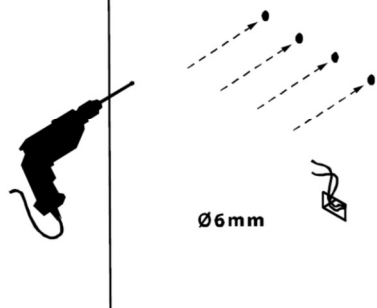


For drywall installation, mark the hole locations and drill Φ 6mm holes for the drywall anchors. Install a junction box behind the mirror for power connections.

2

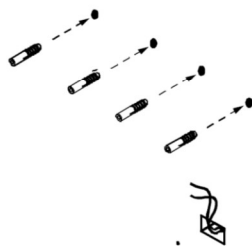


Insert provided drywall anchors.

3

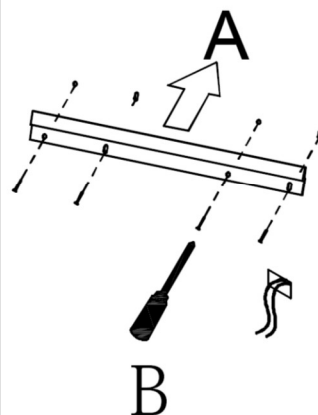


Install the mounting bracket.

4

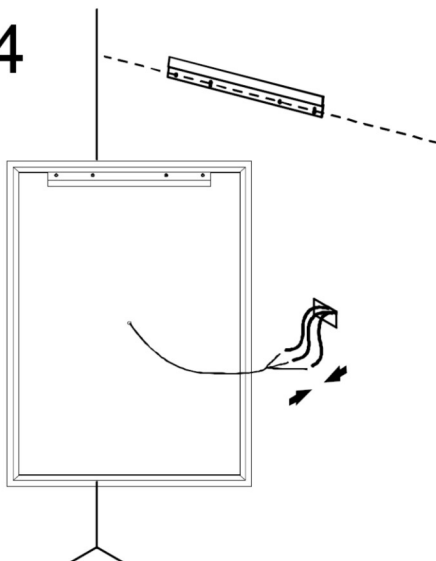


Connect to 110V power supply.

5

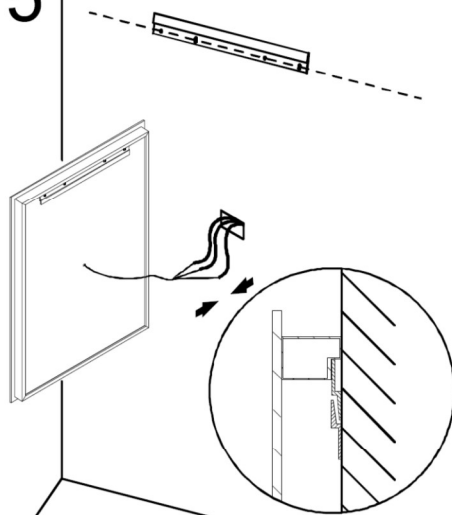

Hang the mirror to the wall and make sure the bracket in the back of the mirror lineup with the mounting bracket properly.

6

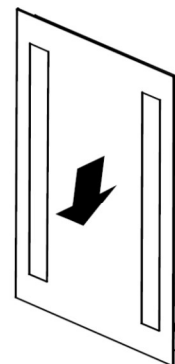


Press the mirror down slightly and make sure the brackets fit properly.




- Using the wall studs to hang the mirror is highly recommended.
- This mirror is NOT designed to work with dimmable wall switch.

INSTALLATION DIMENSIONS

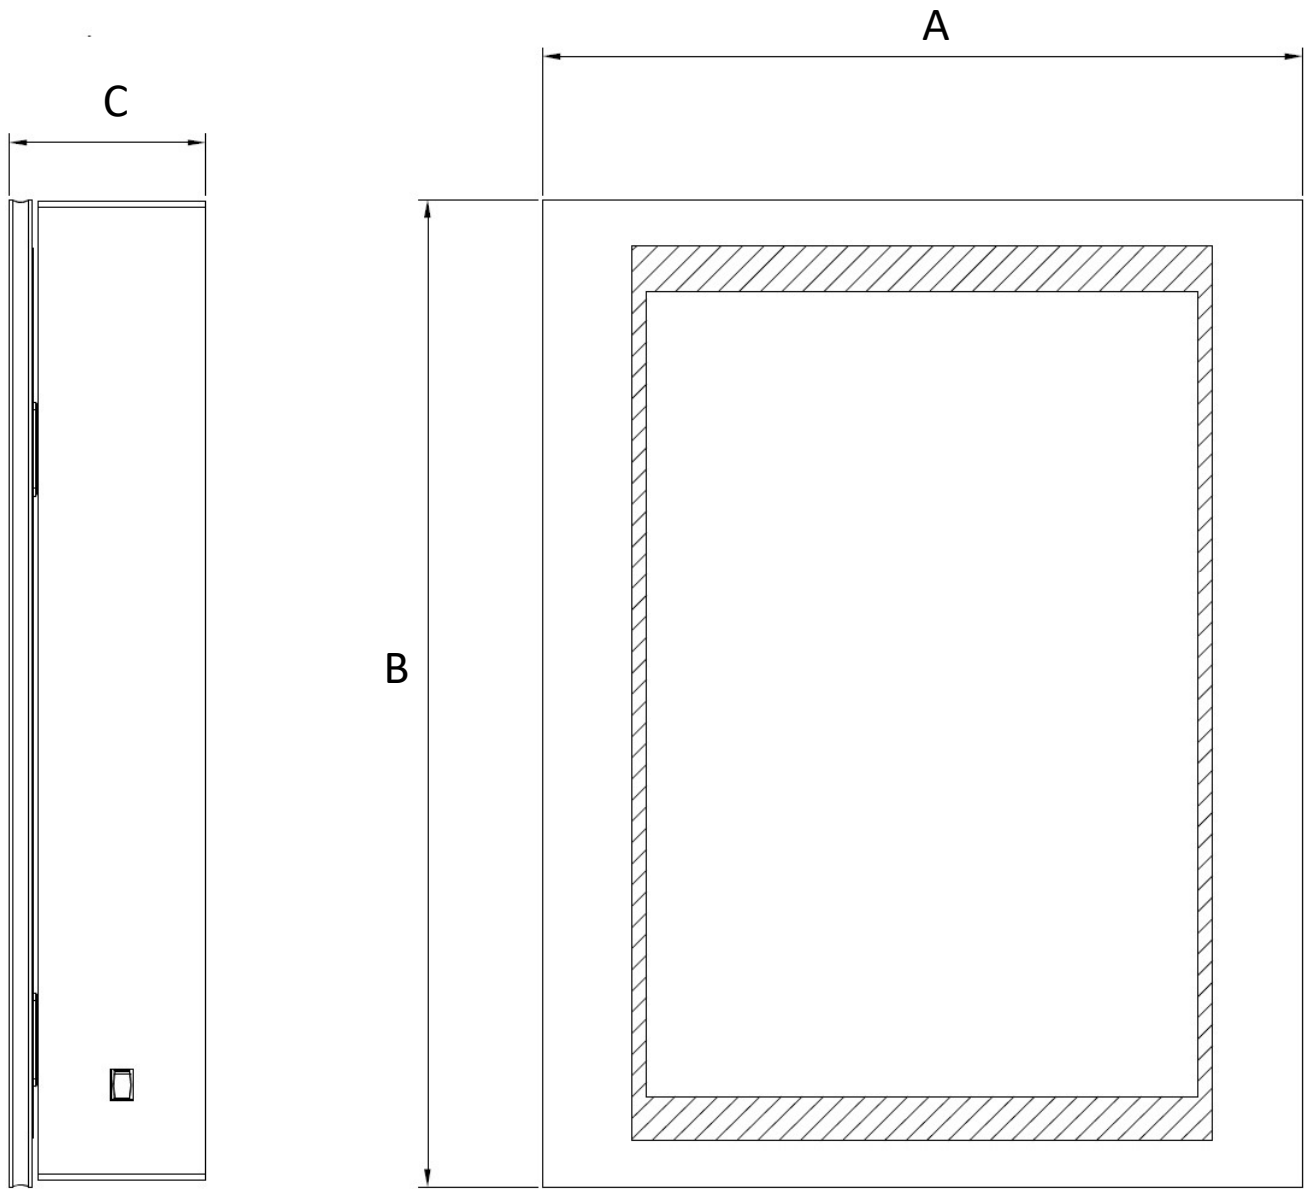

A	B	C
20	26	5 1/4
24	26	5 1/4

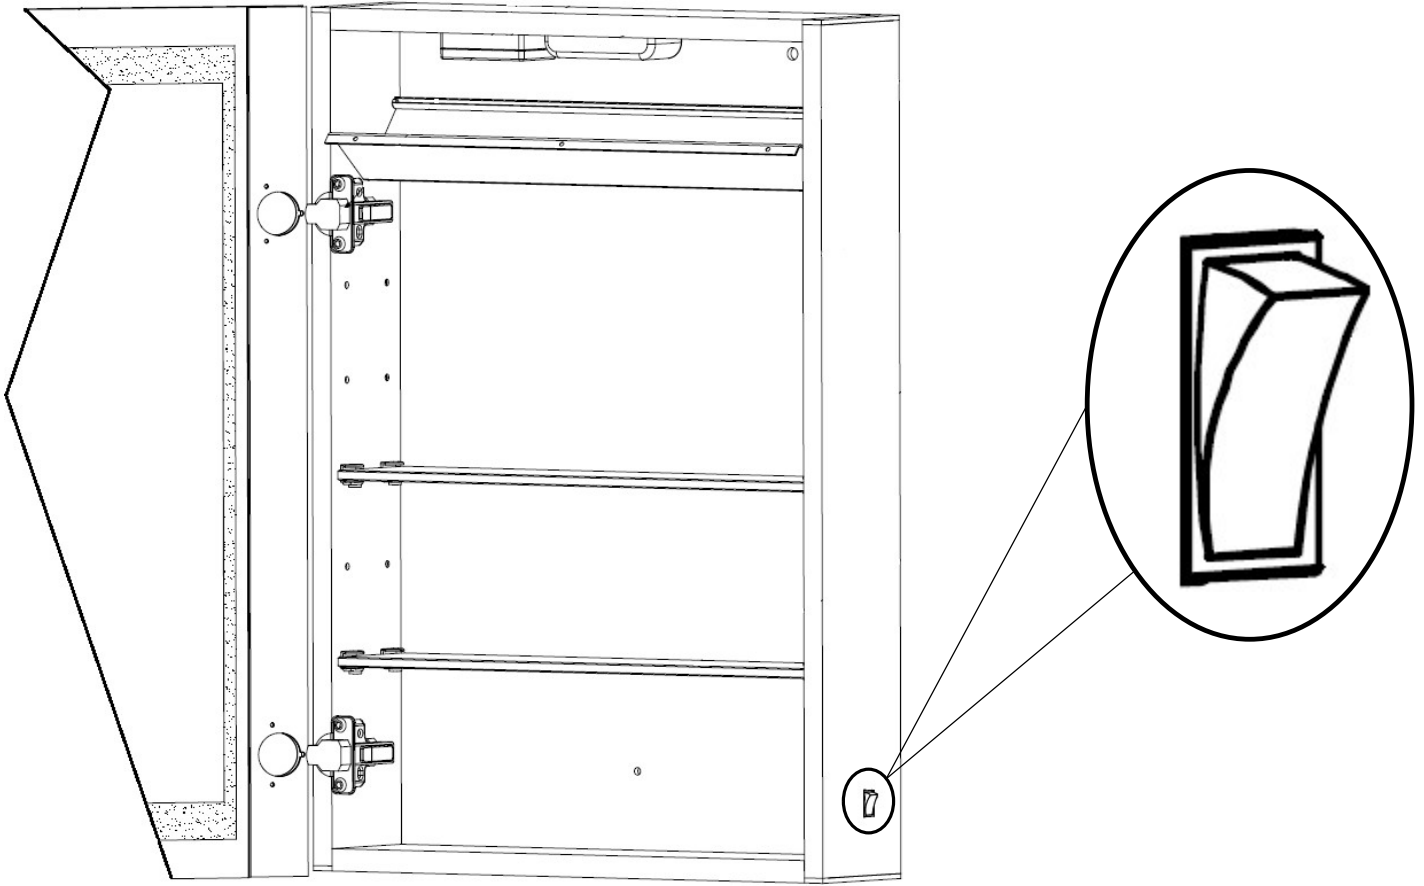

1. Rocker switch

- a. Locate the rocker switch on the side of the cabinet.
- b. Turn the lights on or off by pressing the switch.

CARE AND MAINTENANCE

Clean the mirror with a soft, damp cloth and dry thoroughly with a soft towel. Do NOT allow the edges of the mirror to get or remain wet over a period of time. Please do NOT use glass cleaner that contains ammonia or vinegar. Never spray any cleaner directly onto a mirror. Instead apply the cleaner to a soft cloth and then wipe the mirror. Make sure no commercial cleaner comes in contact with the edge or backing.


WARRANTY

5 years Limited Warranty

LED mirrors have been manufactured under the highest standards of quality and workmanship. We warrant to the original purchaser that our LED mirrors are free from any defects in material and workmanship by normal use for 5 years from date of purchase. A replacement for any defective part will be supplied FREE OF CHARGE for installation by you. This warranty is valid to the original purchaser only and does not cover product damage due to installation error, product abuse, product misuse, etc. whether or not performed by professionals. We will not be responsible for labor charges and/or damage incurred in installation, repair or replacement nor for any incidental or consequential damages. All warranty claims should be sent to us or call our customer service representative will contact you promptly to help you go through the process until you are completely satisfied with our products.

SHORTAGE OR DAMAGED PRODUCTS All shipments are carefully inspected and counted before leaving our distribution centers. Please inspect carefully on receipt of merchandise, noting any discrepancy or damage on the carrier's freight bill at that time, and file a claim with the carrier within 10 days from receipt of order. Then contact our office. Deductions from invoices for shortages or damage claims will not be allowed.

Exploded view

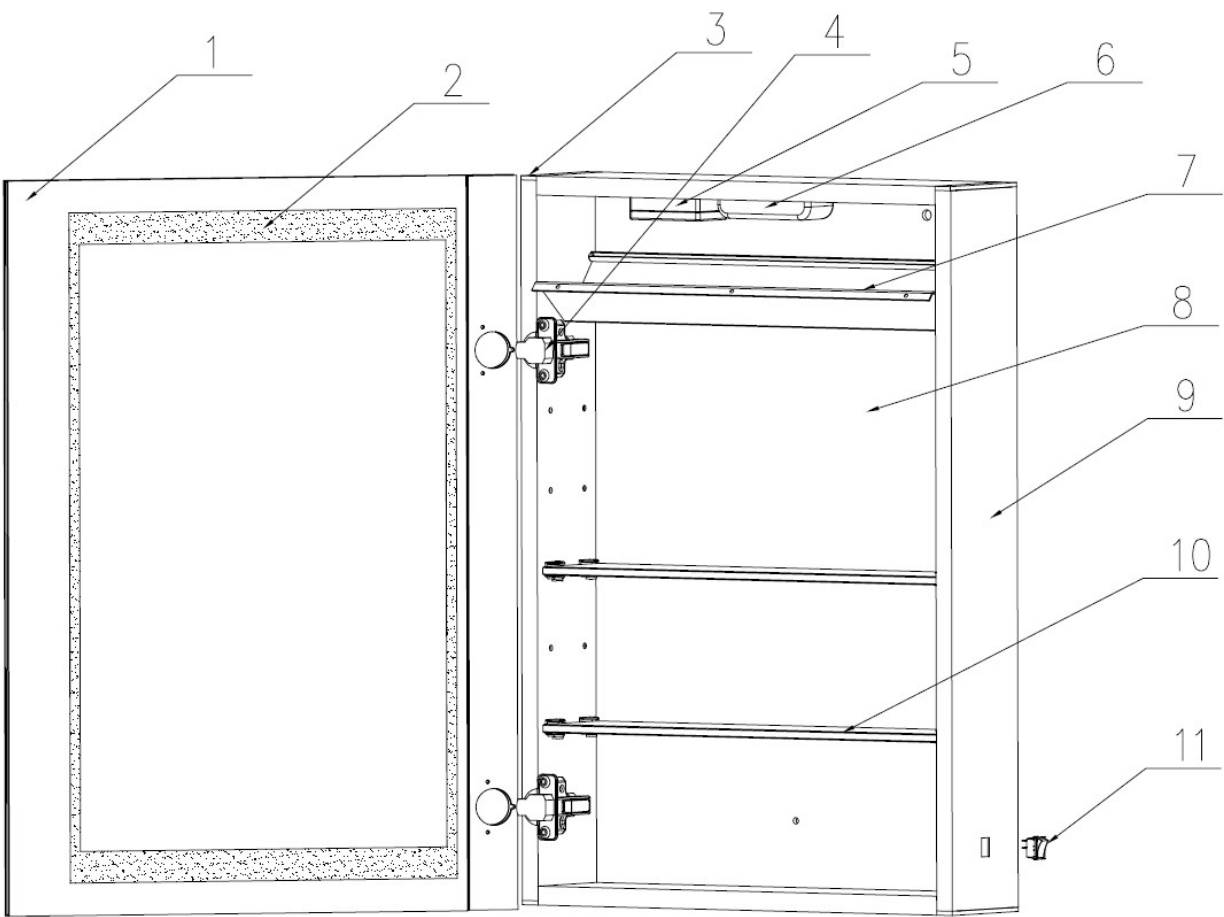

Part	Description
1	Mirror Door
2	LED Light
3	Plastic Cover
4	Hinge
5	Connection Box
6	LED Driver
7	Electrical Cover
8	Back Board
9	Aluminum Side Panel
10	Glass Shelf
11	Rocker Switch