

Step 4: Pillow cushion and back cushion

- ① The back cushion is attached to the top of the seat back with a zip and the pillow cushion is attached to the back of the body with Velcro.
- ② Connect the DC lead between the back of the chair and the back cushion, and secure the back cushion by Velcro.

(Two people can work together. One person sits on the massage chair first, determine the position of the head so that the pillow cushion is flush with the ears and then fix the pillow cushion, a better and more comfortable massage effect can be achieved.)

*Some types can skip Step 4 as preinstall at the factory.



Step 5: Connecting the cushion to the seat


- ① Take out the cushion and connect it to the DC lead and air hose at the seat.
- ② Place the cushion as close as possible to the back of the seat, aligning it flat against the cushion.



Step 6: Operation after installation

- ① Remove the transparent bracket, insert the metal rod into the reserved hole of the handrail, tighten it clockwise and put it into the operation panel.
- ② Insert the power plug into the power box jack (as shown) and plug the other end into the power socket.
- ③ Turn on the power switch of the body, the operation panel shows the number 0 and it is now ready to start.

* Be sure to check that the power switch is in the OFF position before connecting the power plug to the socket.

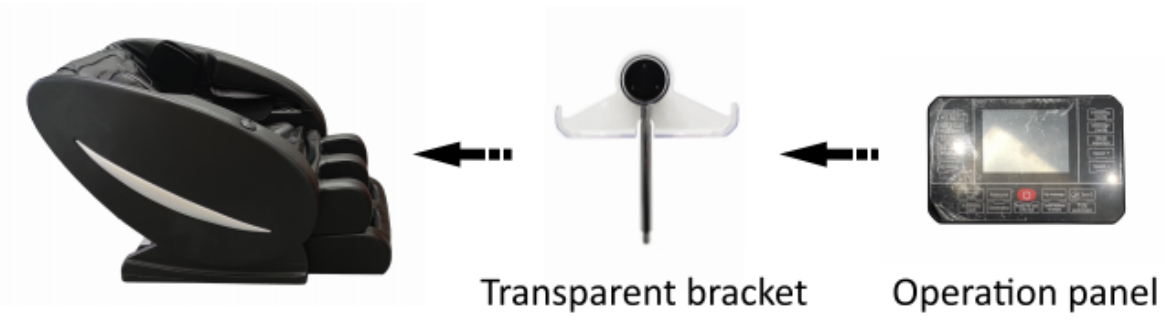

✉ Customer service: flykesales@outlook.com
YouTube Type "bilitok massage chair" into Youtube to get the video on how to install.