



Customer Service: 602-442-6609



# **BTX4FH**

## **OWNER'S MANUAL**

Installation & Operation



Serial No.

1 year parts warranty: 602-442-6609



# Table of Contents




|                                                |    |
|------------------------------------------------|----|
| Parts List .....                               | 01 |
| Unpacking Your Base .....                      | 02 |
| Attaching Legs To Base .....                   | 03 |
| Insert The Cords and Mattress Bar .....        | 04 |
| Pairing: Remote&bed .....                      | 05 |
| Remote Learning and Remove Learning Guide..... | 06 |
| Setting Programmable Positions .....           | 07 |
| Remote Control Instruction .....               | 08 |
| Headboard Bracket Installation Guide.....      | 09 |
| Troubleshooting .....                          | 10 |
| Safety & Warranty Warnings.....                | 11 |

All electronics and components that need to be installed are located in boxes under the foundation or attached to the frame. Before discarding the packing materials, ensure that all the parts are accounted for.




## Unpacking Your Base

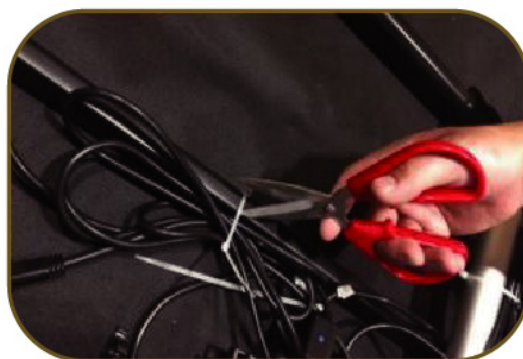


## Unpacking Your Base

1. Open the carton box. Lay out the adjustable base flat on the ground
2. Open all the parts boxes and cut the zip ties as shown

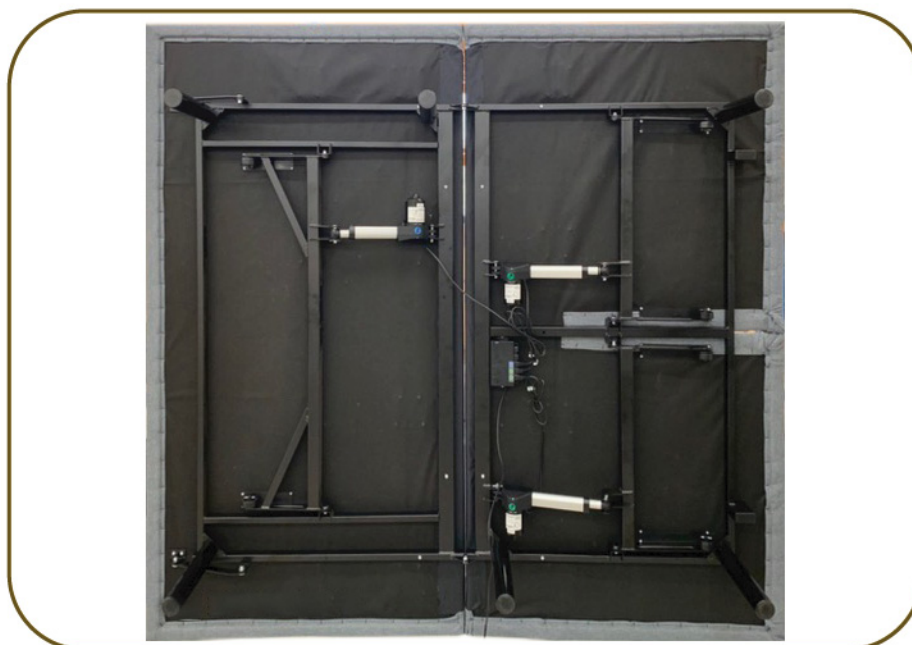





Legs attached

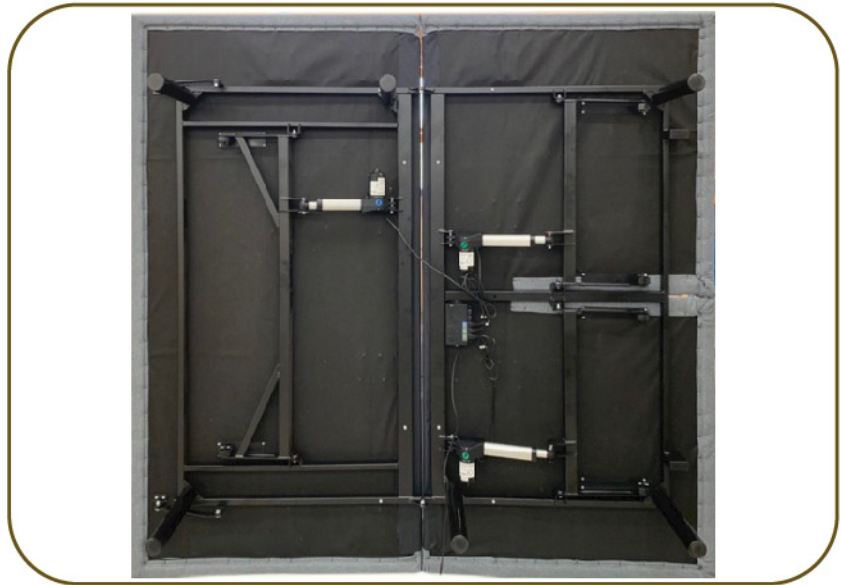

## Attaching Legs To Base

Locate the box containing 6 bed legs, tighten the 6 legs as shown.


## Insert the cords and retainer bar

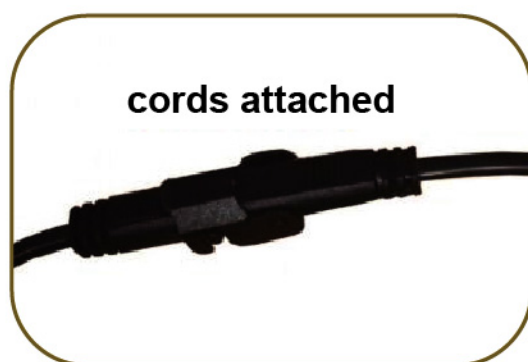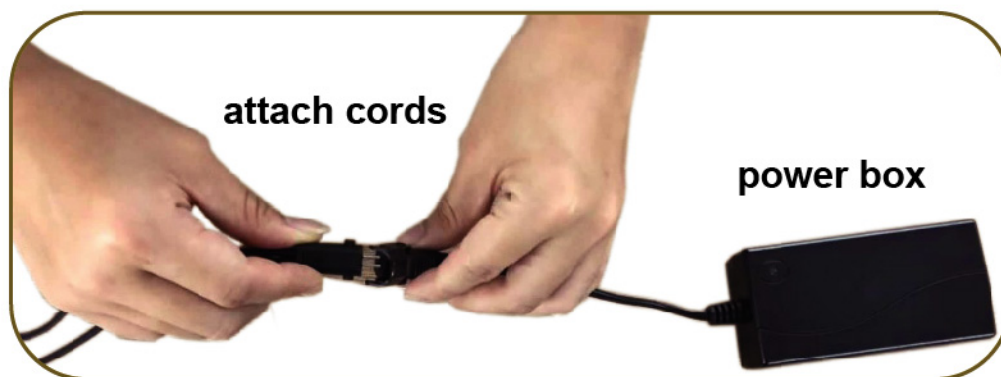

## Insert the cords and retainer bar


1. Please insert the cords properly as shown
2. Flip over the base , insert the mattress bar as shown.



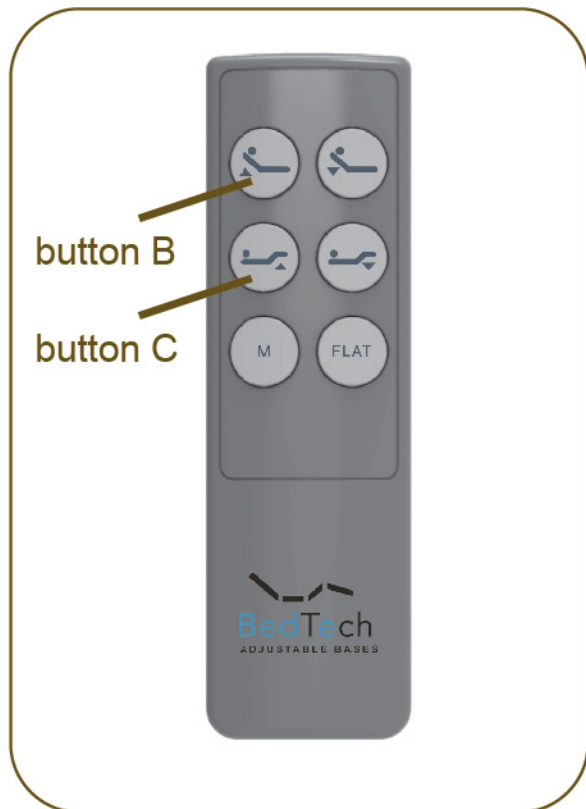

## Pairing: Remote&bed

1. Press and hold button B&C as shown above;
2. Press button A while you're holding B&C, release when you hear a beep sound, which means pairing is done.
3. Another one remote pairing is same method.

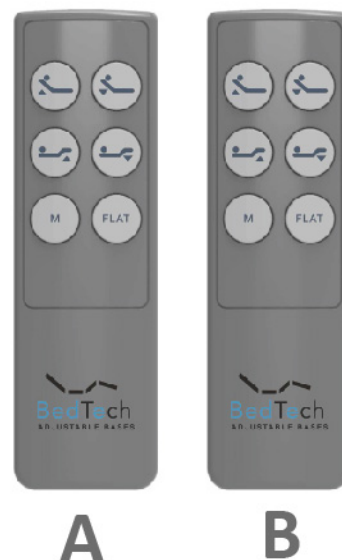

### **B remote learning A remote**

---

- Pressing B remote head up button + foot down together and hold on 5 seconds until the backlight turn on; at this time, pushing head up button + foot up button of A remote together within 10 seconds until you see the backlight flashing.

### **Remove learning**

---

- Pressing B remote head down button + foot down together and hold on 5 seconds until the backlight turn on.

## SETTING PROGRAMMABLE POSITIONS

The wireless power bed has a programmable feature that allows you to save custom positions. Please read all the instructions below before setting your custom presets on the remote.

### STEP 1

Adjust the head and foot to your desired position.



### STEP 2

Press and hold the flat button "FLAT" first, then press and hold memory button "M" for 5 seconds until the buttons' lights are flashing, the position is then saved.

The head setting positions can be different for right side and left side, but the foot position will be memoried on the last setting, it will be kept the same position.

### STEP 3

To adjust the saved position, repeat STEP 1 and 2, and the new position will be saved.

## Remote Control Instruction




# Headboard Bracket Installation Guide

## HEADBOARD BRACKET COMPONENTS

| 1                                                                                 | 2                                                                                 | 3                                                                                 | 4                                                                                 | 5                                                                                   | 6                                                                                   |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| (2) T-Brackets                                                                    | (2) Headboard Brackets                                                            | (4) Short Bolts<br>(5/16 in x 20mm)                                               | (12) Nuts                                                                         | (8) Long Bolts<br>(5/16 in x 45mm)                                                  | (2) Wrenches                                                                        |
|  |  |  |  |  |  |


### STEP 1

Attach T-bracket to metal bed frame, insert long bolt and nut to secure the position. Please do not fully tighten it.

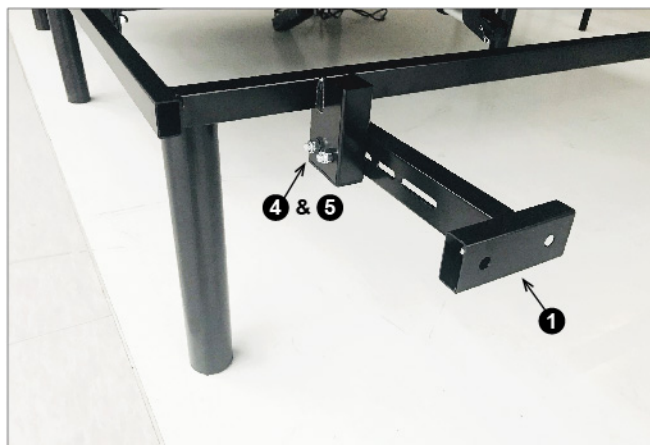

### STEP 2

Align and attach headboard bracket onto T-bracket, insert long bolt and nut to secure the position. Please do not fully tighten it.

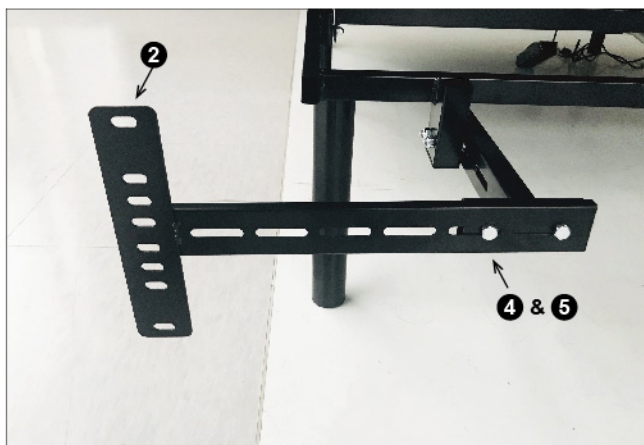

### STEP 3

Align and attach headboard bracket to your headboard, adjust the height to fit to holes on headboard, insert short bolt and nut from inside headboard bracket.

Make sure all bolts and nuts are in proper position, and fully tighten all bolts and nuts on brackets and headboard.

# TROUBLESHOOTING

1. The bed does not work:
  - a. Check whether cords are connected properly;
  - b. Check whether plug is inserted in properly;
  - c. Check whether you use the right power adapter(29V/2A)
  
2. The bed stops suddenly or does not respond to remote:
  - a. Remote battery is dead: replace with new battery.
  - b. Over loading: use the bed properly and within weight limit.
  - c. System error due to false operation: cut power, waiting 2 minutes before reconnect.
  - d. Bad connection: check all cords and plug, reconnect.

### READ THE FOLLOWING INFORMATION CAREFULLY BEFORE USING THIS PRODUCT

If unable to understand warnings, cautions, and/or instructions, contact the dealer or technical personnel if applicable, before attempting to use the equipment. Otherwise, injury or damage may result.

#### SAFETY WARNINGS:

- Do not use bed outdoors.
- Do not use bed near explosives.
- Using bed with oxygen administering equipment other than the nasal masked type creates a possible fire hazard.
- When using nasal or masked type administering equipment, route and secure oxygen or air tubing properly to ensure that tubing does not become entangled or damaged during normal operation of the bed.
- Use caution when having liquids in or around the bed to ensure no spilling occurs. In case of spillage, stand in a dry, clean area of the floor and unplug the bed immediately. Clean up spill and allow the area around bed to dry thoroughly before using the electric controls again. Do not eat or drink hot liquids while operating the bed.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
- Do not allow children or individuals with disabilities to operate the bed without adult supervision.
- Do not allow any person or pet under the bed at any time.
- During bed operation, make sure body is positioned within the confines of the bed. Do not place extremities over the sides of the bed when operating bed functions.

#### WARRANTY WARNINGS:

Do not open or tamper with control box, motors, or remote (with the exception of battery compartments). The warranty will be void if the internal workings of these components are tampered with.

#### Product Rating:

The motors are not designed to operate continuously for more than [2] minutes in an [18] minute time period or approximately 10% duty cycle. Attempting to circumvent or exceed this rating will shorten the life expectancy of the foundation and may void the warranty.

#### Operating Information:

- After power foundation assembly is completed, operate remote control to ensure proper functions.
- Keep moving parts free of obstruction during bed operation (including sheets, clothing, tubing, wiring, and products using electric power cords).
- Distribute body weight evenly over bed surface. Do not place entire weight on head or foot sections of the bed, during repositioning and entering or exiting bed.

#### Hospital Use Disclaimer:

This power foundation is designed for residential use only. It is not approved for hospital use and does not comply with hospital standards.

#### Weight Limits:

This product is not rated to support weights in excess of 750 pounds inclusive of the mattress and bedding. The bed will structurally support this weight, provided it is evenly distributed across the foundation. The power foundation is not designed to support or lift this amount in the head or foot sections alone. Exceeding this weight restriction could damage the bed and/or cause injury and will void the warranty.

#### ⚠ WARNING

DO NOT USE THIS BED IF WEIGHT  
LIMITATION IS EXCEEDED.

#### RADIO FREQUENCY: 2.4 GHz

##### FCC COMPLIANCE:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

To comply with the FCC RF exposure requirements, no change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the RF exposure requirement and void user's right to operate the device.

1 year parts warranty: 602-442-6609

