


ITEM NO.: MCALP

LED MEDICINE CABINET

PREMIUM DESIGN

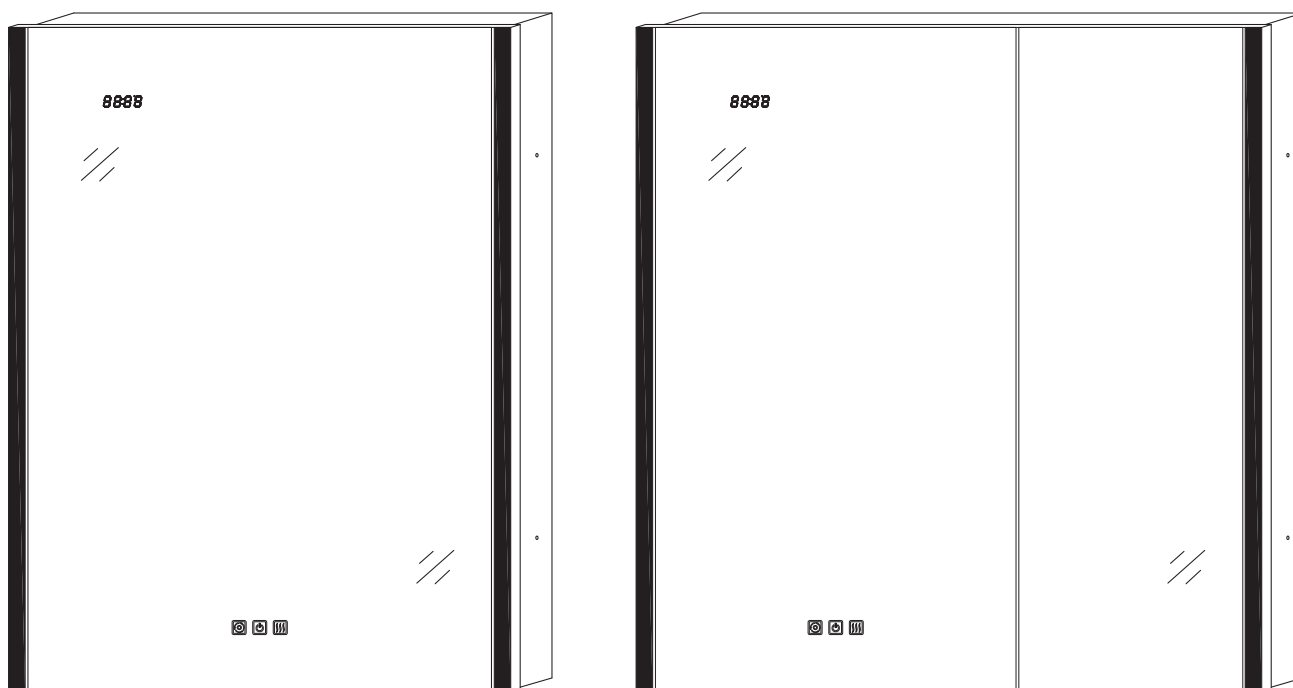

MCALP-US V1-2535

INSTALLATION INSTRUCTION

Please read this instruction carefully before the installation and keep it for the future use and the warranty.

BRAND SUPPORT

Thank you for choosing us !

We are a brand that specializes in producing mirrors professionally.

Your suggestions are important to us. We would greatly appreciate it if you could share your ideas with us so that we can improve our products and better satisfy our customers.



Manufacturer warranty for 2 years from date of purchase.

General Guidelines

1. Please carefully read the following instructions and use the product accordingly.
 2. Keep this manual and pass it on when transferring the product.
 3. This summary may not include every detail of all variations and considered steps.
- If you need further information or assistance, please feel free to contact us at our official email address:



homefixassist@outlook.com

Warnings

1. Children are not allowed to assemble the product. During assembly, please ensure that small parts are kept out of the reach of children, as they may pose a choking hazard if swallowed or inhaled.
2. Keep plastic packing bags out of reach of children to prevent suffocation or other potential dangers.
3. Avoid using sharp objects or corrosive chemicals on the product, as they can cause damage to both the product and the user.

Use Tips

1. Please use in safe voltage range. (100V-120V)
2. Do not strike the mirror with hard or pointed items.
3. WARNING: The installation must be performed by a qualified licensed electrician.



DANGER: Before installation, make sure the main power is cut off.


BEFORE INSTALLATION

1. Important Safety Instructions:


- Please read all instructions carefully before installing the item.
- Install by two or more adults is highly recommended.
- To connect the wires to electrical wire nuts, a qualified technician or electrician is highly recommended.
- Before installation, component addition or replacement, please make sure the main power has already cut off.
- Ensure the Install location(solid stone / brick walls) can bear the weight of the complete fitting.
- To prevent injury, the mirror must be installed according to this instruction.

2. Before Installation:

- After opening the package, please inspect the accessories according to the packing list in order to ensure the received accessories are complete.
- Ensure the installed voltage is between 100V and 120V.
If the voltage exceeds 120V, please use a transformer.
- This product is equipped with a built-in 14-gauge wire rated for 15A.
- It can be directly connected to a standard wall switch-controlled lighting circuit, ensuring stable power delivery to the outlet located at the top of the cabinet.
- You can connect the wires directly to your wire nuts.
- Before Installing the mirror on wall, please try to plug and power the product at first, to make sure that the lighting effects and the functions mentioned in section 3 work.
- If so, you can start to install.

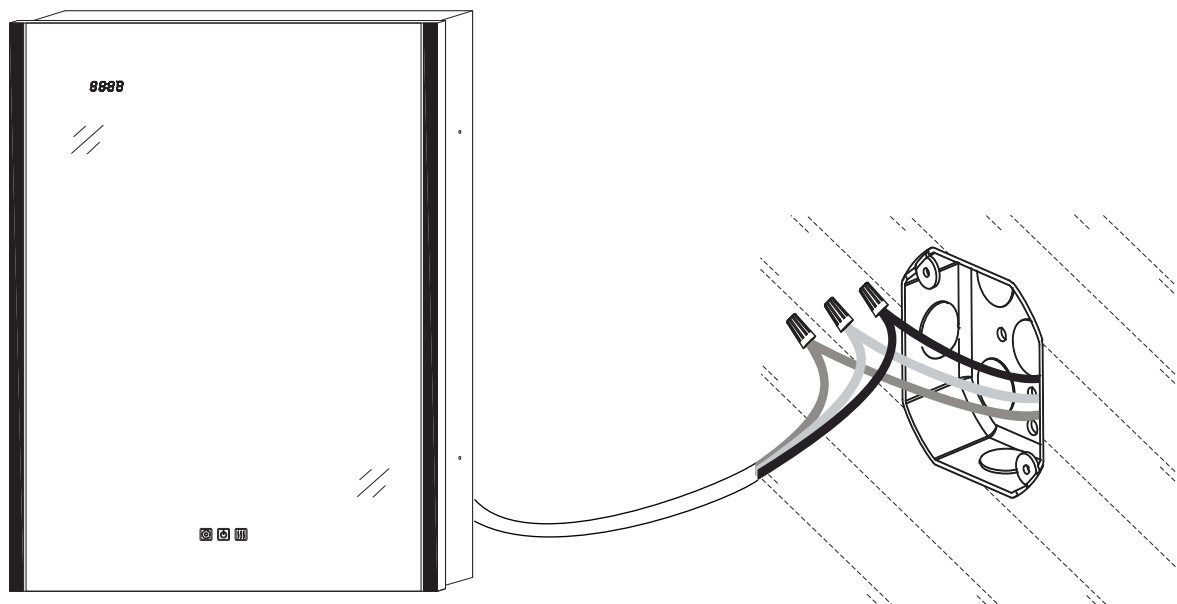

BUTTONS FUNCTION EXPLANATION

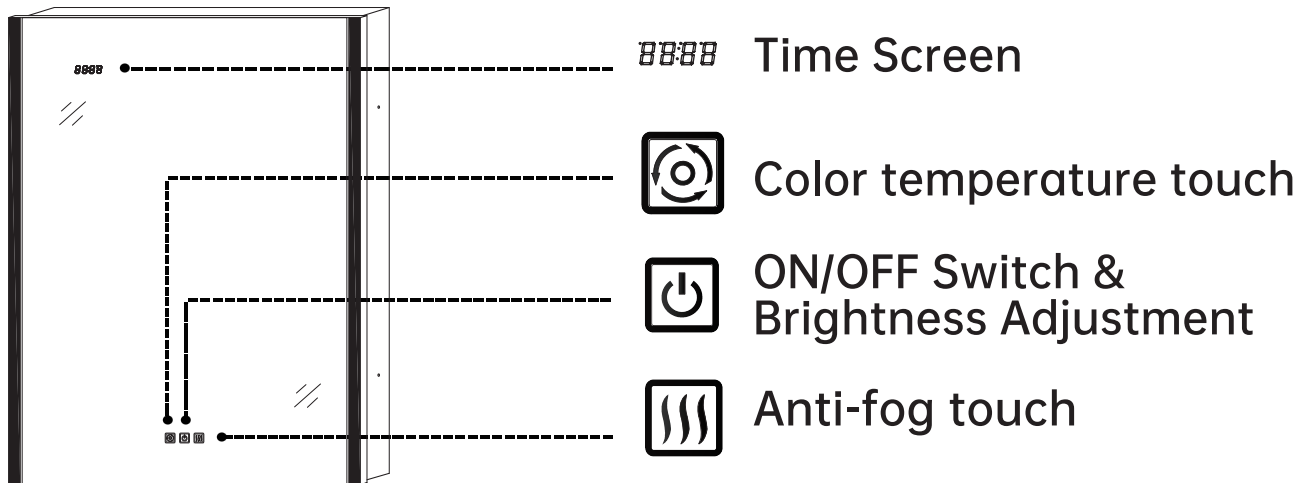

① Left button: Color temperature adjustment.

There are 3 C.T. to select, make a short press to switch them.

White light(6000K) - Natural light(4000K) - Yellow light(3000K).

Press and hold the touch to make the color temperature stepless adjustment(6000K to 3000K).

Memory function: The color temperature will keep the last choice.

② Middle button: ON/OFF Switch & Brightness Adjustment.

Short press the button to light the mirror front lighting on or off.

Press and hold the button to make the brightness stepless adjustment(100% to 20%).

Memory function: The light brightness will keep the last choice, hardwire Installation(wall switches)also work.

③ Right button: Anti-fog function.

Short press the button to activate or deactivate the defogging.

The demisting film will automatically turn off after heating for one hour by default. However, to avoid wasting electricity, we recommend that you manually turn off the device when it isn't in use.

Press and hold this Anti-fog button for 5-8 seconds to turn off all the button's backlight. If the backlight is accidentally turned off, you can press and hold the button again to turn it back on.

④ Left/Right button: Time function. - / +

In standby state, when the lights are not turned on (off), long press the color temperature button for 5S to wake up the clock adjustment function.


At this time, the hour can be adjusted.

After 5 seconds, the minutes can be adjusted.

The color temperature key is -, and the light Brightness key is +.

In standby mode (i.e., when the cabinet is plugged in but the lights are not illuminated), long-press the Brightness control key for 5-8 seconds to toggle the clock display on or off.

CABINET FUNCTION EXPLANATION

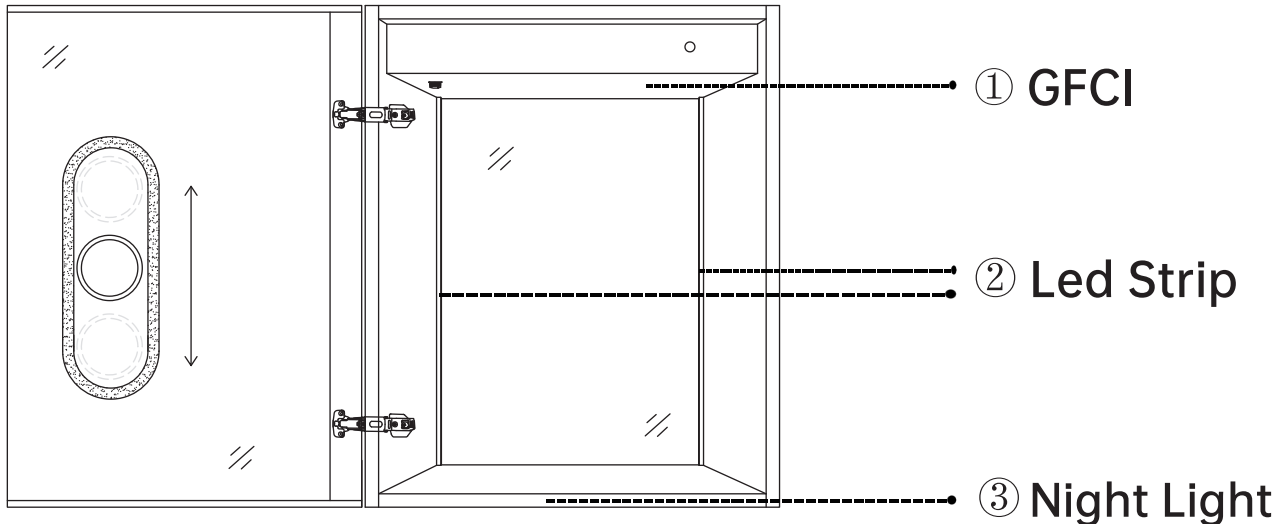


① GFCI.

GFCI is to protect you from severe electrical shocks.

Press the TEST button should turn off the power to the circuit, causing the RESET button to pop up.

(Remember to push the RESET button to reestablish power and protection).

Please press the TEST button (then RESET button) every month to assure proper operation.

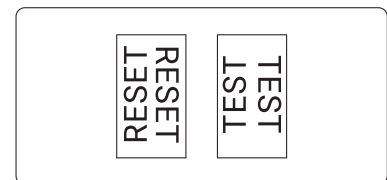


② Induction Led Strip.


The vertical light bar will automatically turn on and off as the door opens and closes.

③ Motion Sensor Night Light.

The top view of cabinet



The bottom-up view of cabinet



When the ambient brightness decreases, the night light will turn on.

The rocker switch allows you to toggle the night light function on or off.


Don't cover the light sensor.

5X MAGNIFYING MIRROR

Cabinet Door

① 5X Magnifying Mirror

② Magnifying Lighting

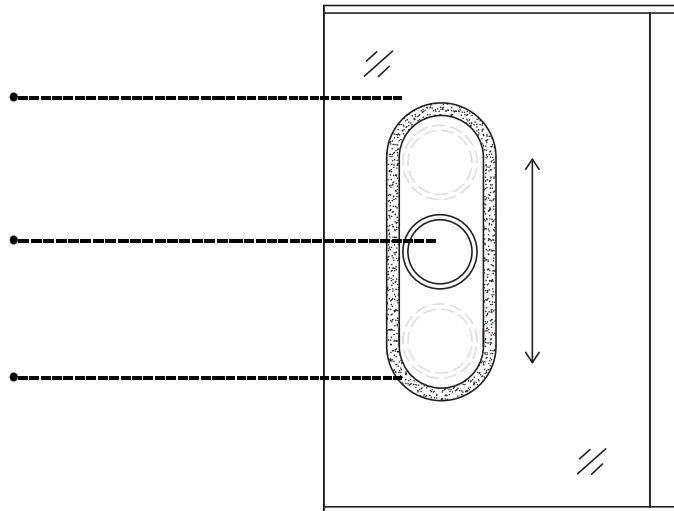

① Movable and Detachable Magnifying Mirror

The magnifying mirror can be placed anywhere within the illuminated area on the inside mirror of the door, allowing you to adjust its position according to your preferences.

② Magnifying Mirror Lighting


The lighting of the magnifying mirror is synchronized with the main cabinet lighting in both brightness and color temperature. Both can be adjusted simultaneously via the touch switch located on the cabinet door, ensuring a consistent and comfortable lighting experience.

REMOVING THE CABINET DOOR

155° DTC Hinge.

The cabinet is equipped with DTC 155° quick-release hinges, allowing the door to be removed and reinstalled easily for maintenance or replacement as needed.

When removing the cabinet door, be sure to first loosen and unplug the quick-connect wire terminal attached to the cabinet body to avoid damage.

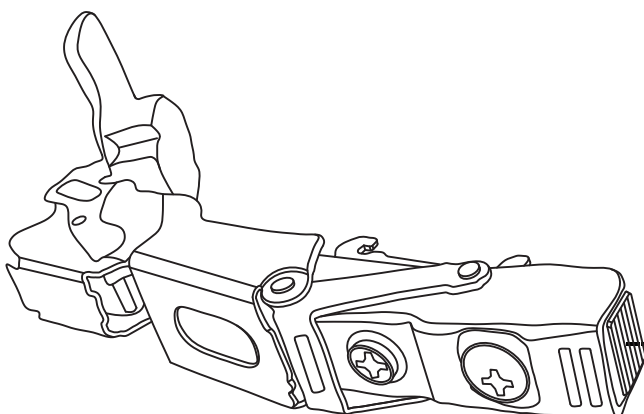


As shown in the diagram, press the indicated area to detach the door.



Cabinet Door Installation

*Taking MCALP3632 as an example.

1.Insert the hinges to the base ,then connect the doors with the cabinet.

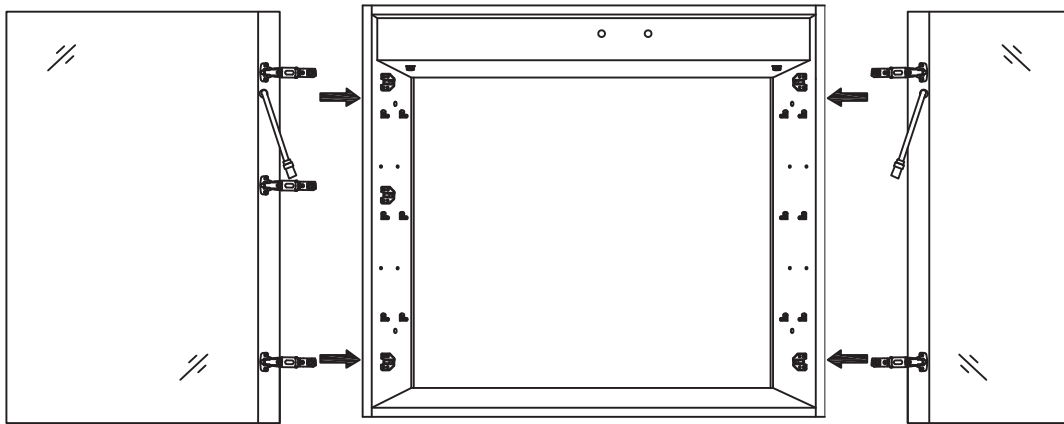


2.If necessary, adjust corresponding screws on the hinge to align the doors, ensure that gaps are even and the doors open and close smoothly.

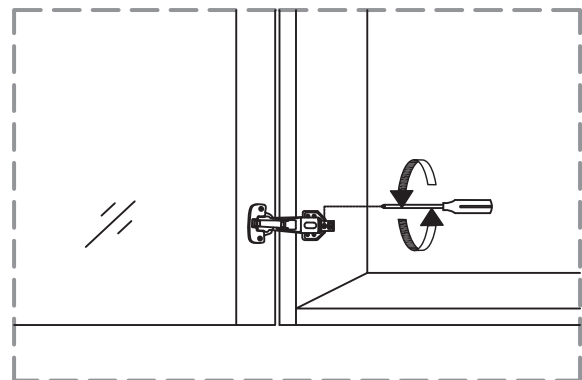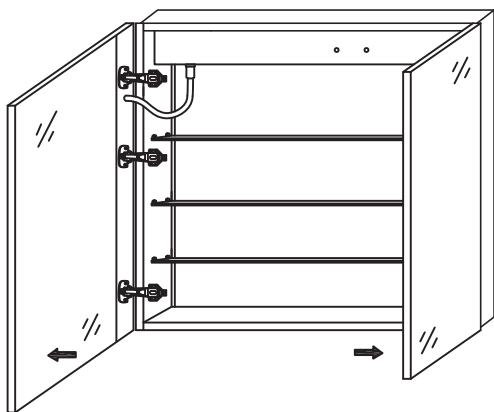

HYDRAULIC HINGE ADJUSTMENT METHOD





- ①: Adjust the door counterclockwise to move to the right,
Turn clockwise to adjust the door to move to the left.
- ②: Twist counterclockwise to loosen it, You can adjust the front and rear direction of the door.
Tighten clockwise after adjustment.

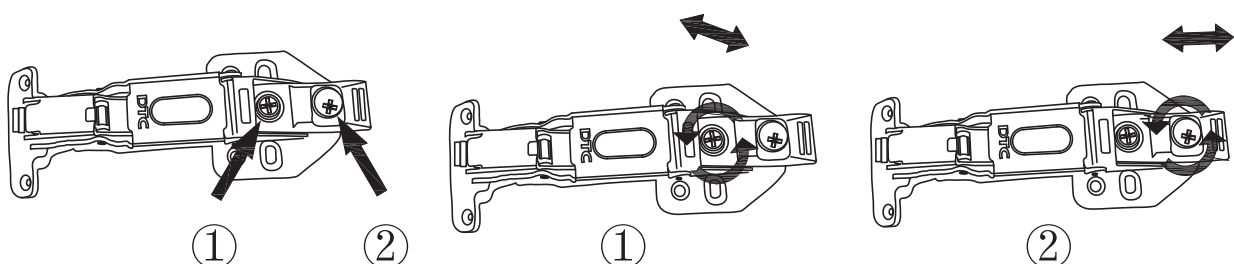


ATTENTION



Not Offering


 Electric Drill	 Hammer	 Marker Pen	 Tape Measure
 Level	 Phillips Screwdriver	 Safety Goggles	

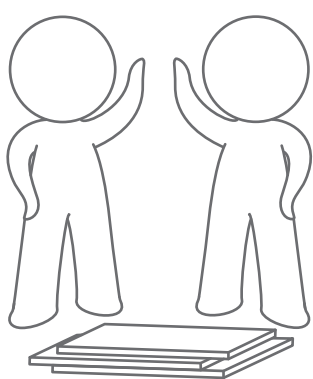

homefixassist@outlook.com



KEEP DRY


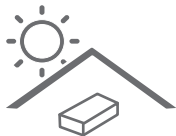


NO SUN EXPOSURE



SOFT DRY CLOTH

PARTS LIST-ARCHED

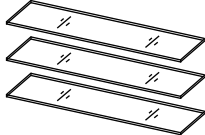 Medicine Cabinet x 1	 Bracket x 1	 Tempered glass shelf x 3	 Shelf Clip x 8
 Wire Nuts x 3	 Lower Bracket x 2	 1/4" (φ6*40mm) A x (4+2+1)	 5/32" (φ4*40mm) B x (4+2+1)

*Taking MCALP2432 as an example.

*The quantity of A/B screws varies according to the size of the product.

* MCALP3032 needs 7+1 screws,

MCALP3632needs 8+1 screws,

MCALP4232/4832 needs 10+1 screws,

MCALP5432 needs 12+1 screws, MCALP6032/MCAL7232 needs 14+1 screws.

*We offer additional 1 screws to prevent screw missing in case.

⚠ BEFORE INSTALLATION

- For safety and ease of mounting, installation is recommended using two people.
- Please confirm the installation position and installation height of the hang racket supplied, and use a spirit level to make sure the bracket be leveled. Then mark the hole positions on the wall.

METHOD 1: FOR SURFACE-MOUNTING

Method 1.1 : For Solid or Concrete Walls.


(Please refer to step 1 to step 4、 8、 9, P11-P12, P18.)

METHOD 2: FOR RECESSED

(Please refer to step 5 to step 9, P13-P18.)


*Taking MCALP2432 as an example.

*The spacing between each two holes is 4 in (100mm).

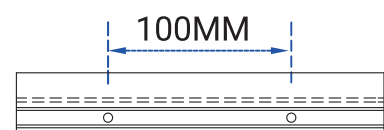




ILLUSTRATIVE GRAPH




MCALP2432/2432R

"Left Skewed Installation"

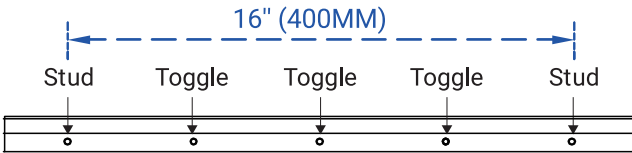


MCALP3032

"Centered Installation"

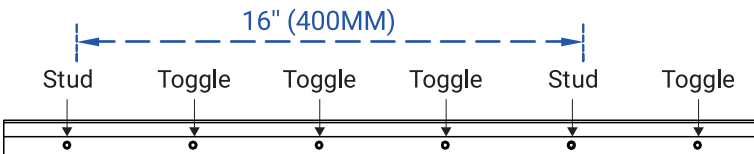

MCALP3632


"Left Skewed Installation"

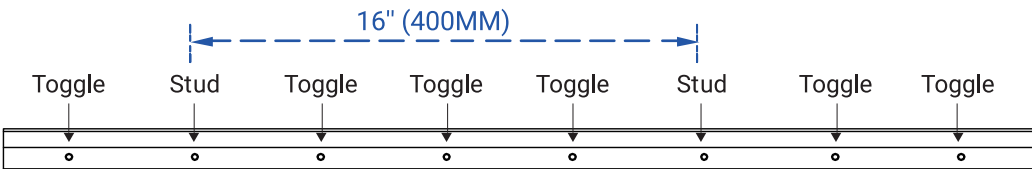

MCALP4232


MCALP4832

"Left Skewed Installation"

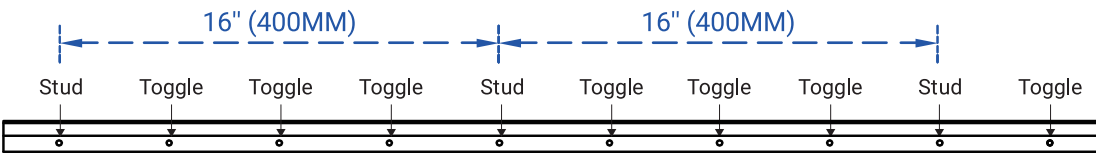


MCALP5432

"Left Skewed Installation"

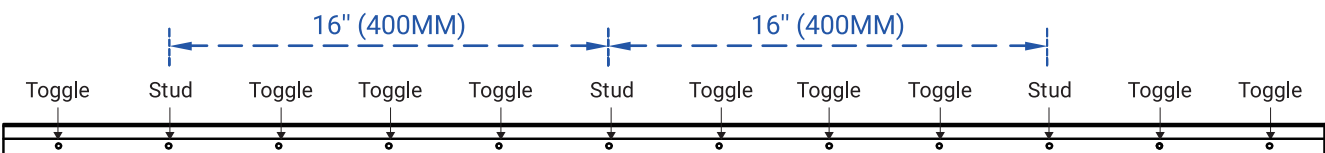

MCALP6032/7232

"Left Skewed Installation"

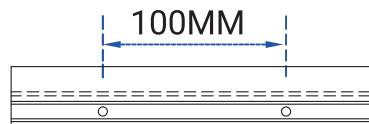

*The spacing between each two holes is 4 in (100mm).

- If walls are stud or dry Wall, or use toggle anchor please consult a licensed contractor and your local hardware store for assistance.
 - Using the electronic stud finder and mark stud locations using the pencil.
- (Note: It is best to mount the bracket to at least (1) stud, using the illustrative graph shown below for reference. Wood studs are typically located every 16", on center.)

METHOD 1: FOR SURFACE-MOUNTING


Method 1.1 : For Solid or Concrete Walls.

1




ATTENTION

- The distance between the bottom of bracket to the top of the mirror is 2 inch (50mm).
- The recommended installation safety distance is 3 inch (at least) from the faucet.

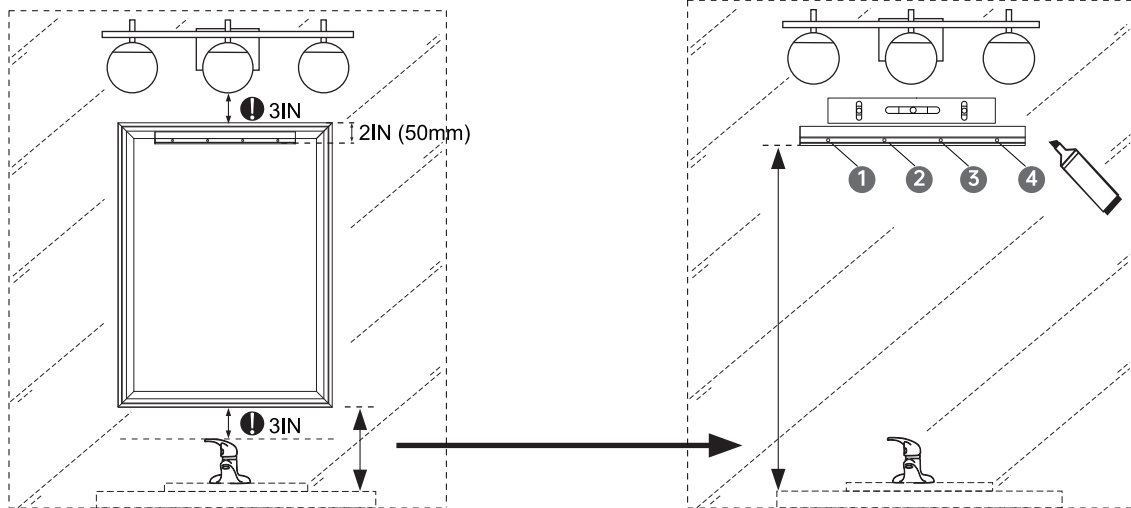


2

Use a 1/4" (6mm) drill to drill holes at the marked points to a depth of 1 3/4" (45mm), then apply the wall anchors with a hammer. Mount the lower bracket to the wall with screws.

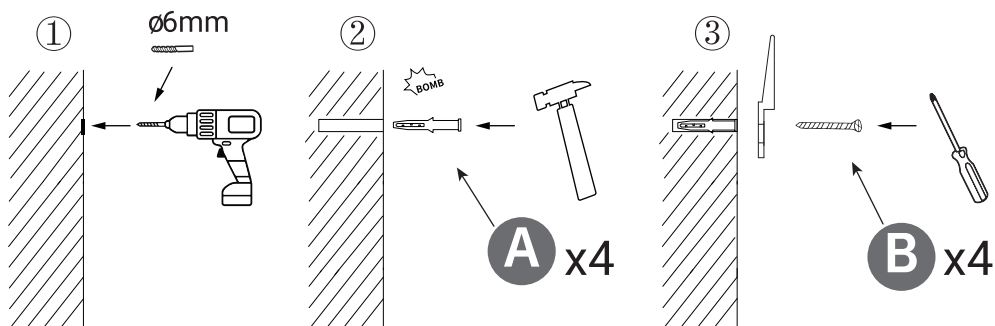

A  4 PCS


B  4 PCS



Note: Please wear goggles and pay attention on your safety.

3

Lift the medicine cabinet and place it securely in the upper bracket. Holding the cabinet in an upright position, secure the lower bracket in the grooves on the bottom of the cabinet.

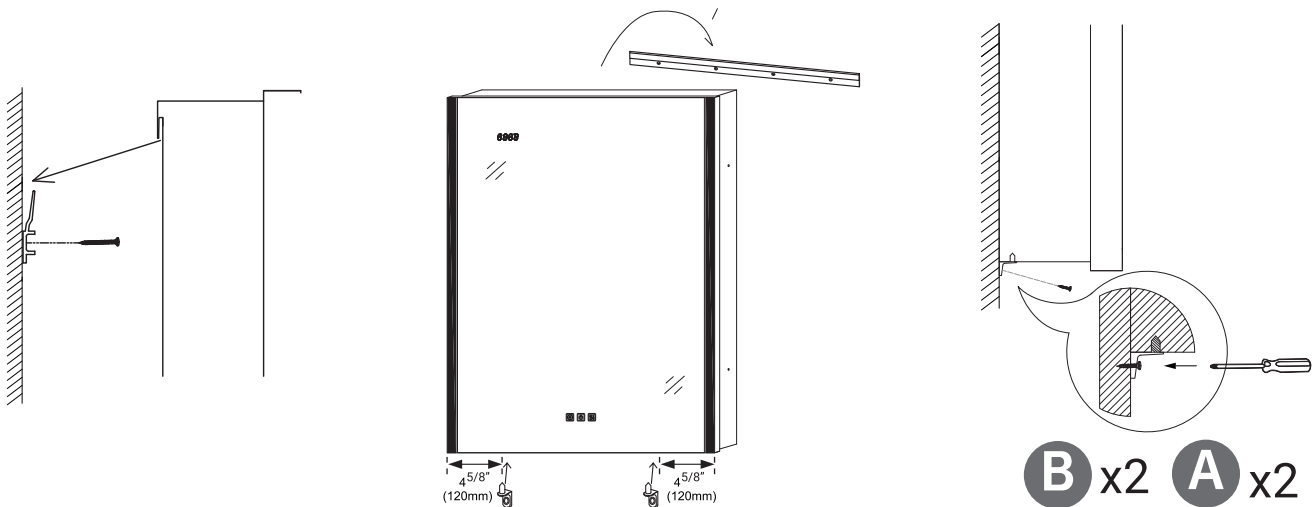


Lower brackets:



a. 4" (100mm) from cabinet edge,
b. 4 4/8" 120mm from door edge.

Note: Gently shake the mirror to ensure that the mirror is securely installed.

A  2 PCS

B  2 PCS

4

Connect the medicine cabinet to the power supply using hardwiring. This product is equipped with a built-in 14-gauge wire rated for 15A. It can be directly connected to a standard wall switch-controlled lighting circuit, ensuring stable power delivery to the outlet located at the top of the cabinet.


● Hardwire Installation

Connect the mirror's wire to the power by the wire connectors.



DANGER: Before installation, make sure the main power is cut off.

BLACK WIRE --- POWER SUPPLY L (LIVE)
WHITE WIRE --- POWER SUPPLY N (NEUTRAL)
GREEN WIRE --- POWER SUPPLY E (EARTH)

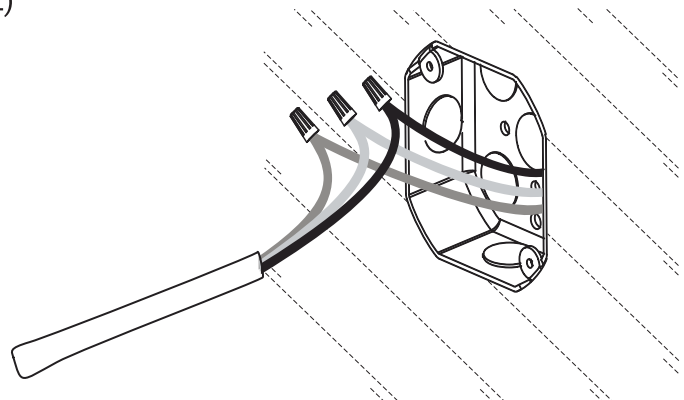


METHOD 2: FOR RECESSED


5

- The wall space is set aside in advance based on the size of the recessed led medicine cabinet



Single door

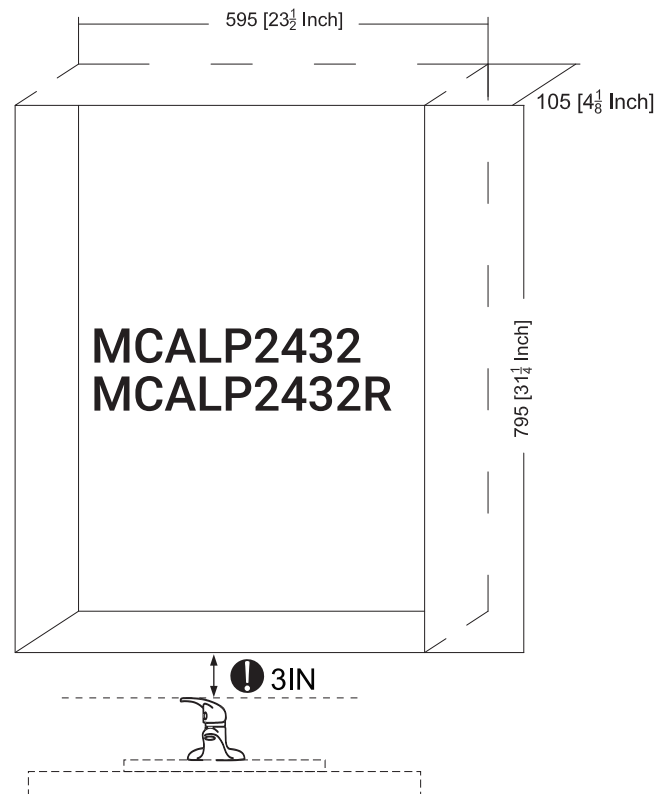


Double door

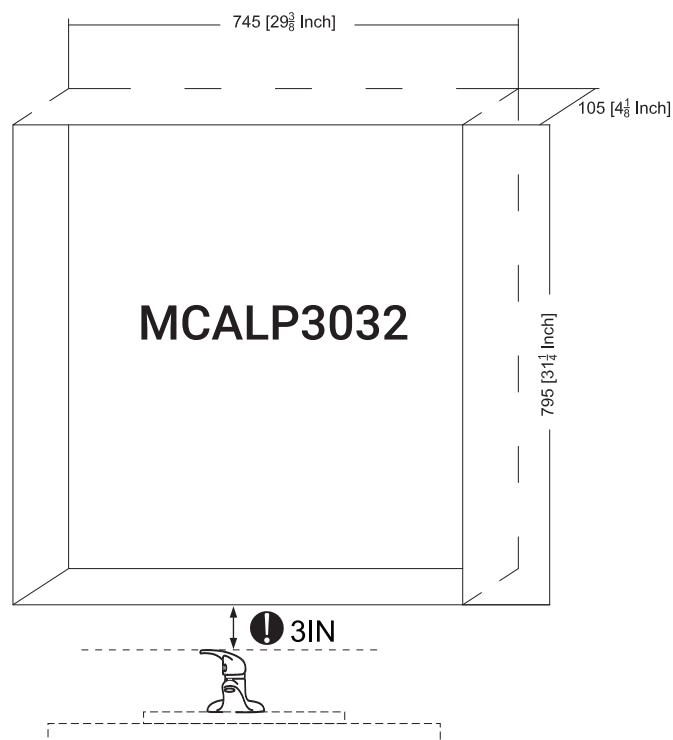


Double door

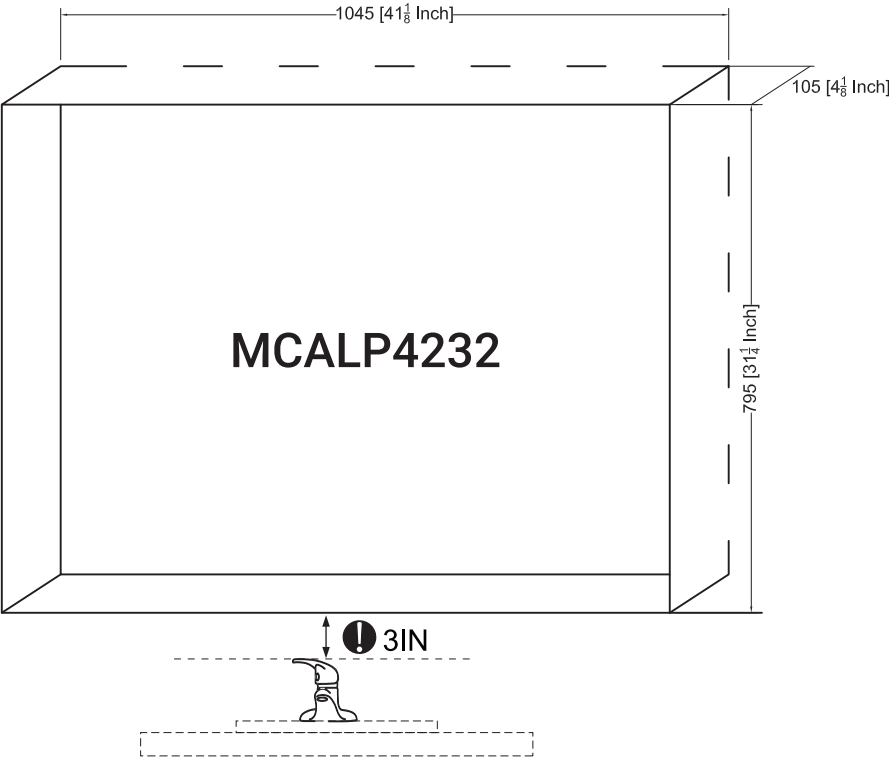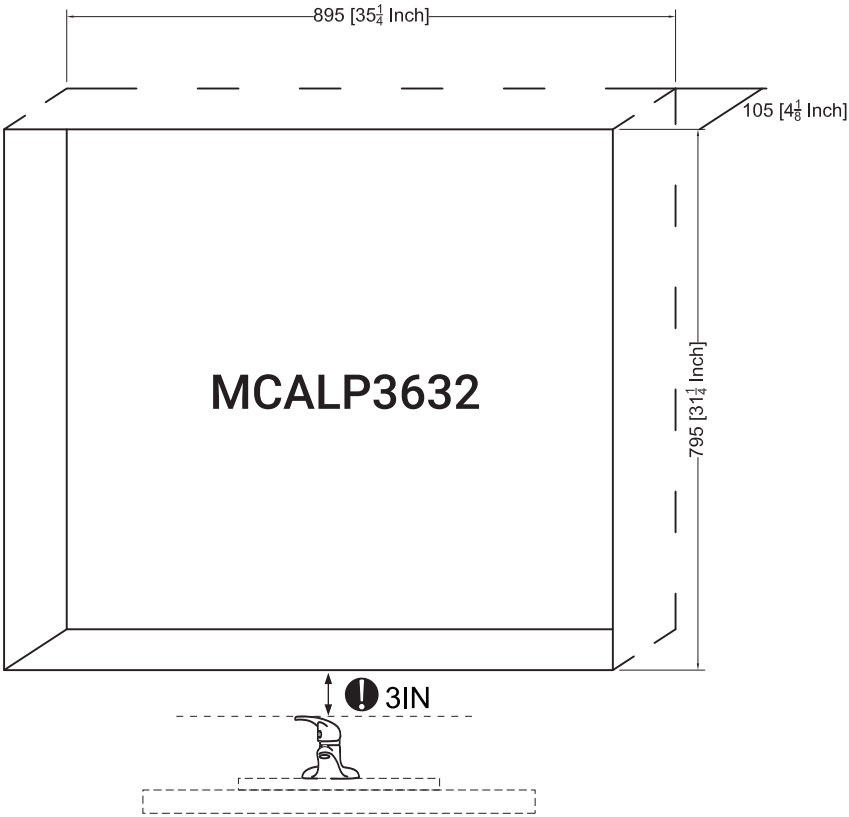



Double door

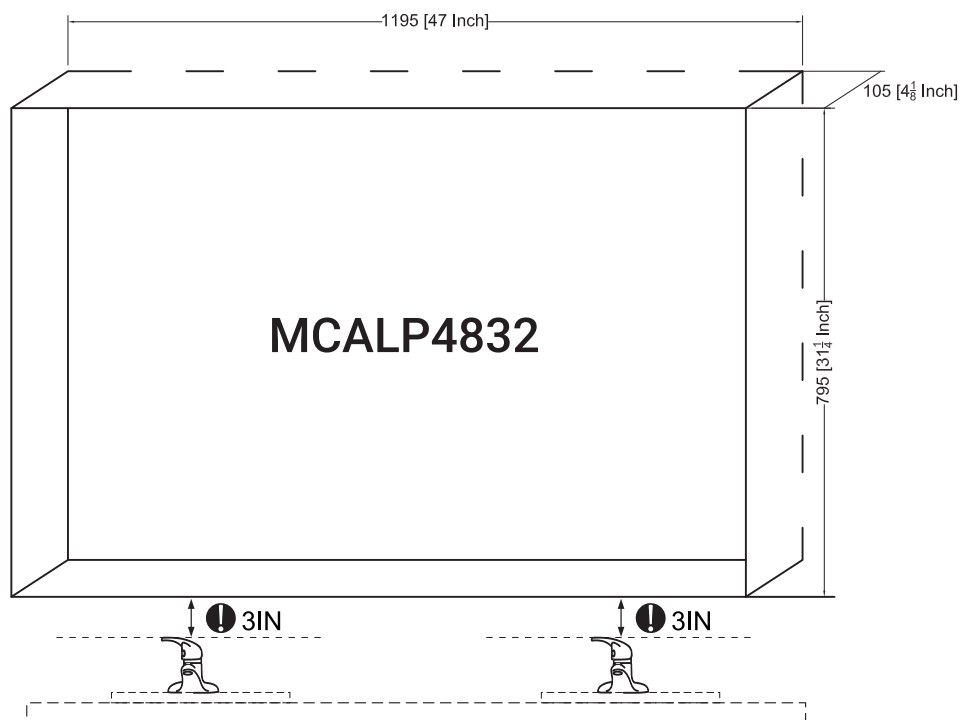

Three door

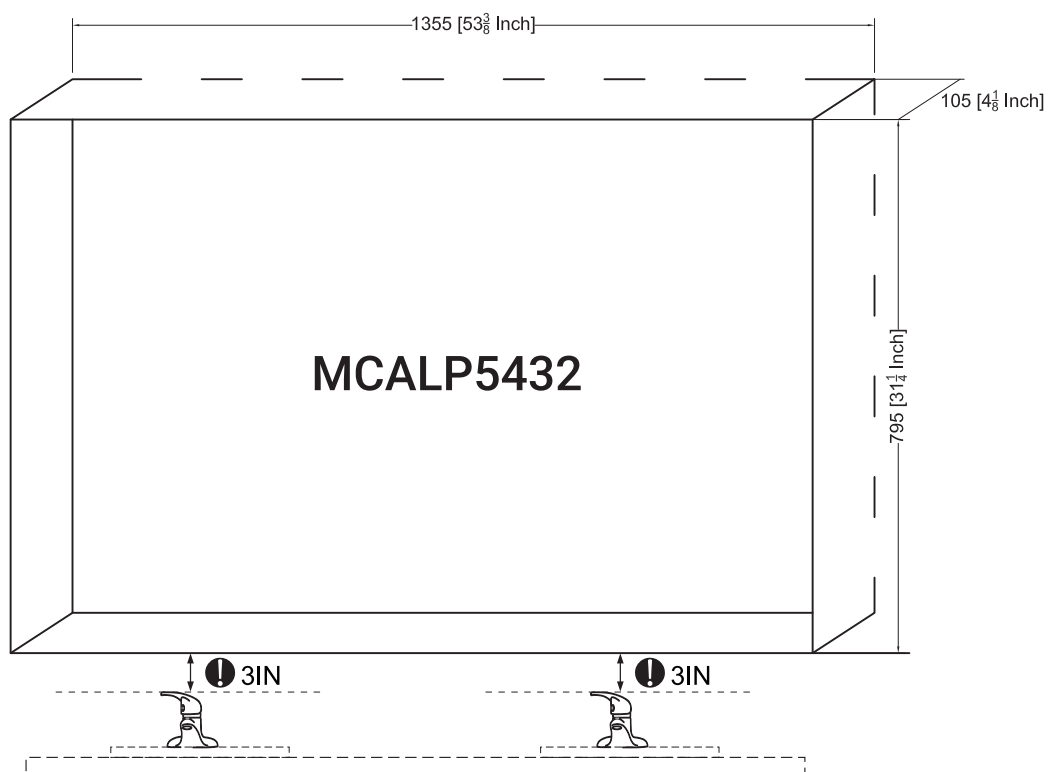

Three door

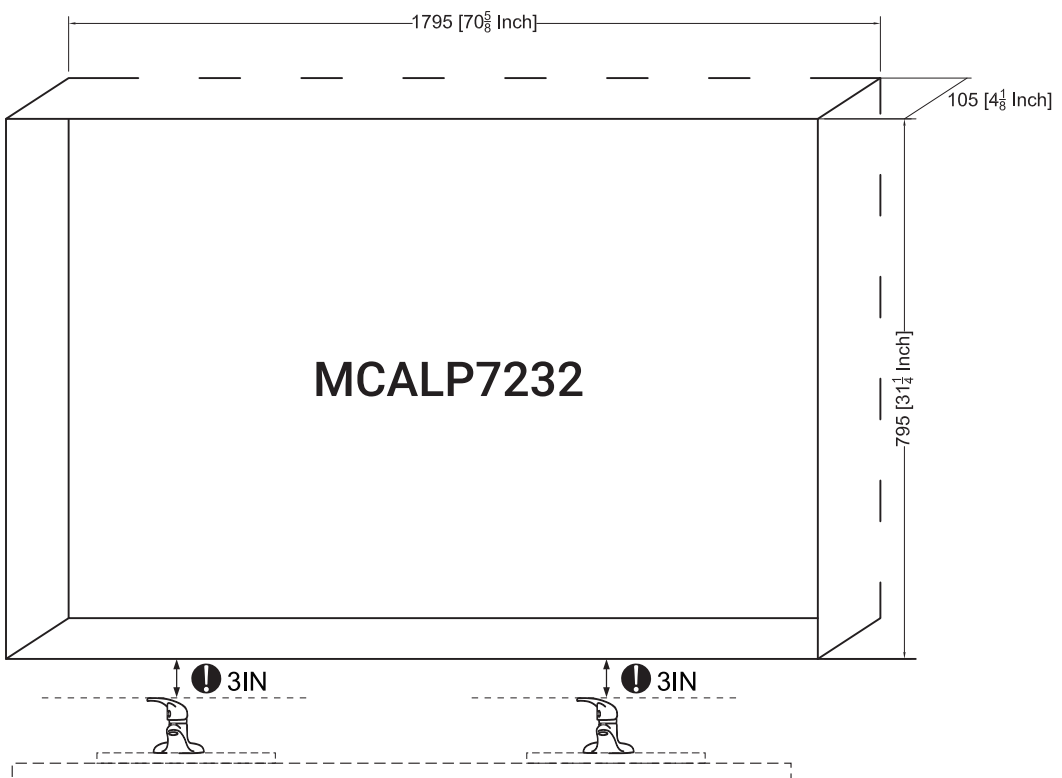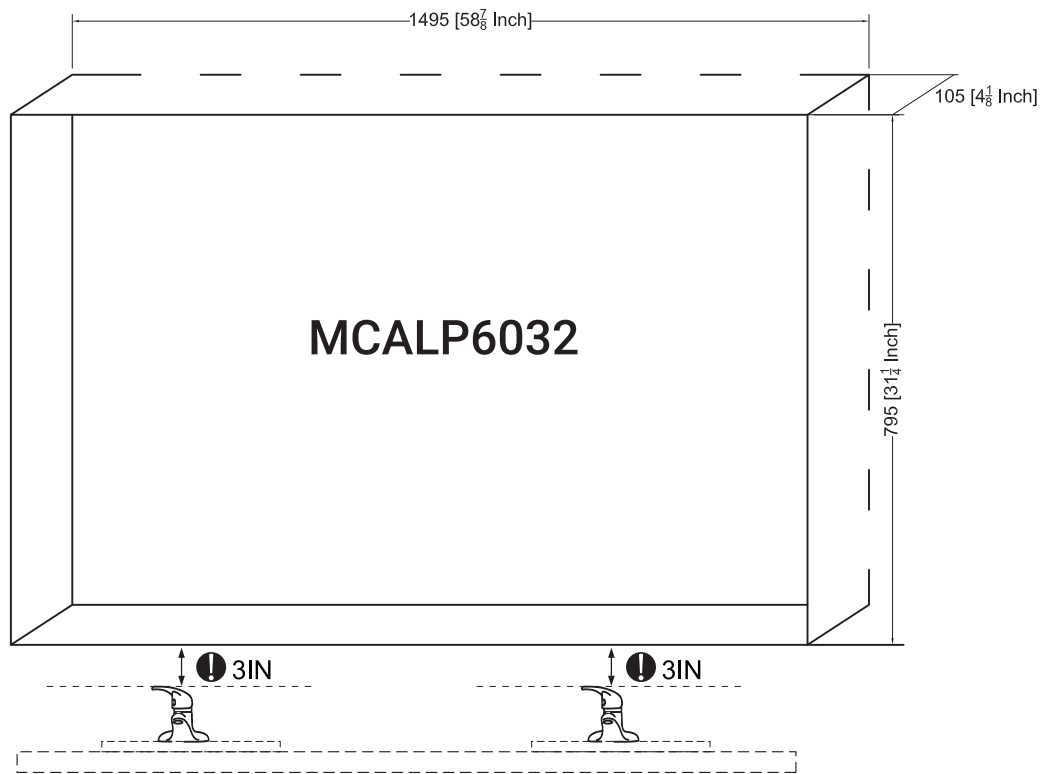

6


Connect the medicine cabinet to the power supply using hardwiring. This product is equipped with a built-in 14-gauge wire rated for 15A. It can be directly connected to a standard wall switch-controlled lighting circuit, ensuring stable power delivery to the outlet located at the top of the cabinet.

●Hardwire Installation

Connect the medicine cabinet's wire to the power by the wire connectors.


⚠ DANGER: Before installation, make sure the main power is cut off.

BLACK WIRE --- POWER SUPPLY L (LIVE)
WHITE WIRE --- POWER SUPPLY N (NEUTRAL)
GREEN WIRE --- POWER SUPPLY E (EARTH)

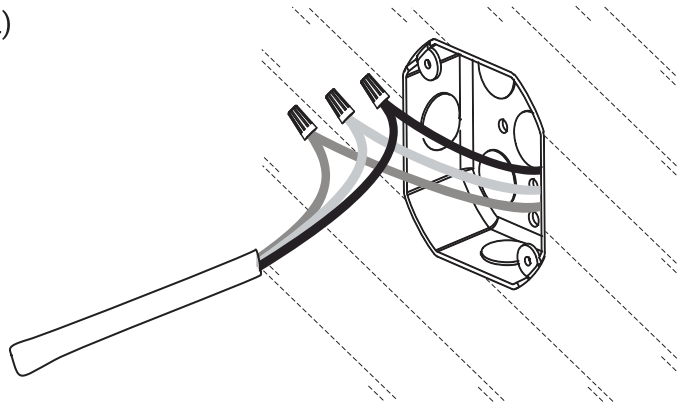

7


Install the recessed led medicine cabinet.

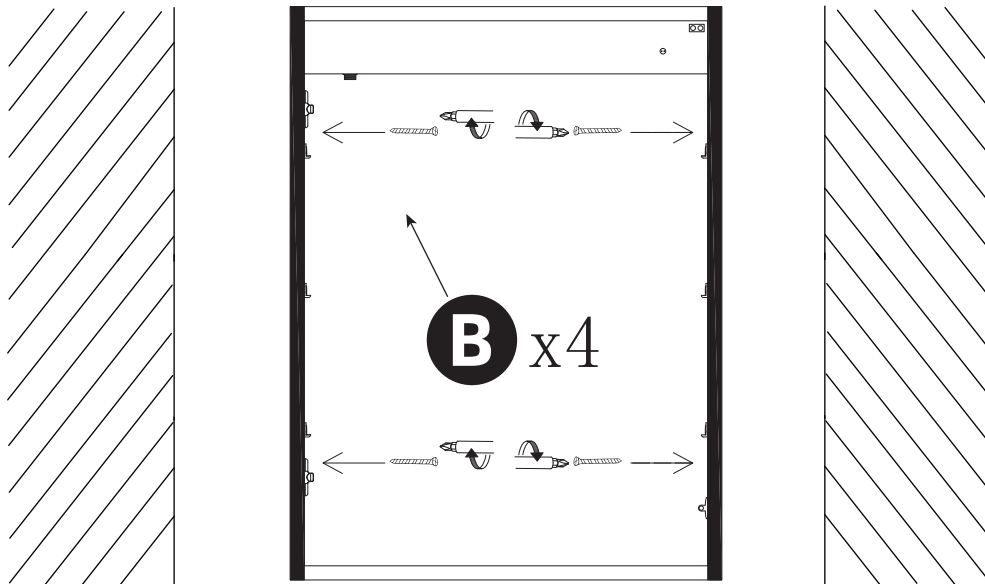

Note: Gently shake the mirror to ensure that the mirror is securely installed.


8

Insert the glass shelves

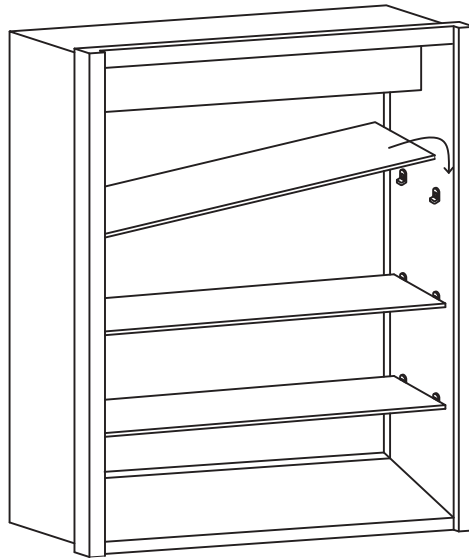

9

The installation has completed!

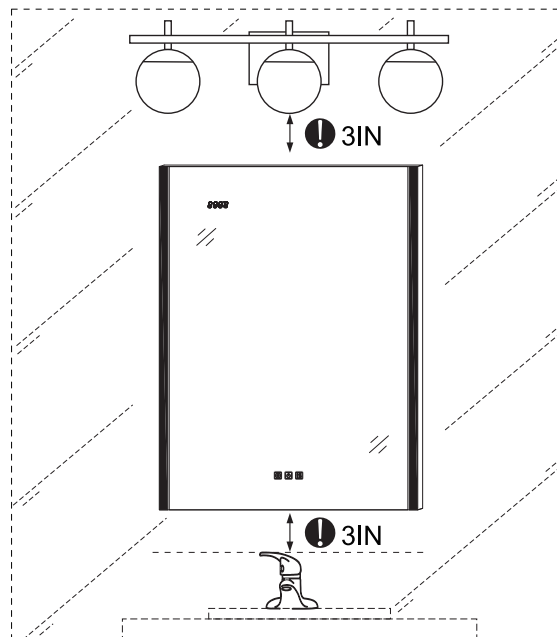


Congratulations!

PRODUCT POWER AND LUMEN OUTPUT

ITEM NO.:	Dimension	Watts	Lumens
MCALP2432	24 x 32 x 5 in	48W	3,800
MCALP2432R	24 x 32 x 5 in	48W	3,800
MCALP3032	30 x 32 x 5 in	60W	3,800
MCALP3632	36 x 32 x 5 in	60W	3,800
MCALP4232	42 x 32 x 5 in	60W	5,600
MCALP4832	48 x 32 x 5 in	60W	5,600
MCALP5432	54 x 32 x 5 in	85W	7,000
MCALP6032	60 x 32 x 5 in	85W	7,000
MCALP7232	72 x 32 x 5 in	85W	7,000

PRODUCT SPECIFICATION

PARAMETER	SPECIFICATION
Wiring Method	Hardwired / Plug In
Input Voltage	AC100-120V
Output Voltage	12V DC
Switch	Touch Sensor Switch
Color Temperature	6000K-3000K
CRI	≥ 90 Ra
Nema Rate	3
Anti-fog	Yes\Automatically Powers Off
Life Span	25000 hours
Working Temperature	14~113°F

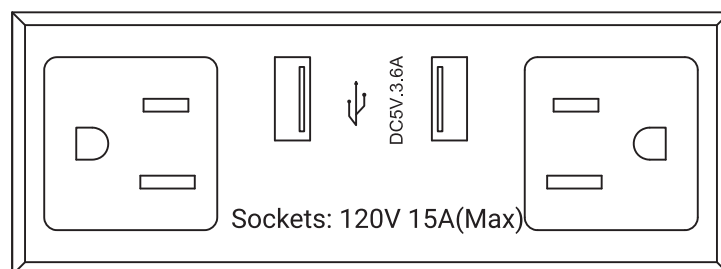


Note: Sockets: 120Vac, 15A(Max), 1800W; Usb: 5Vdc, 3.6A(Max), 18W;



Additional Accessories

Install side mirrors
Not offering: Side Mirror Kits

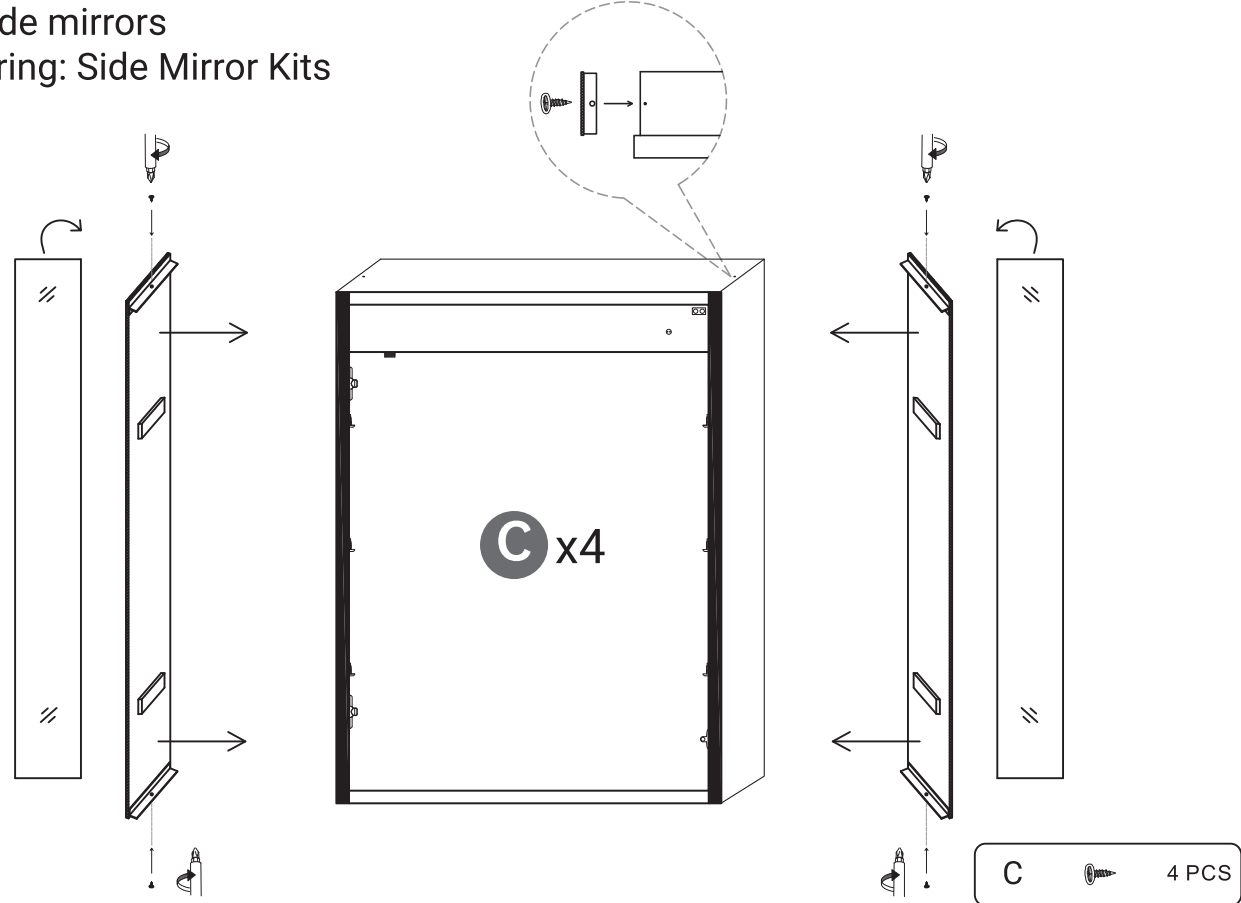

Note: a.No need to install side mirrors if recessed.
b.Our side kits can be purchased separately if needed.

SURFACE-MOUNT SIDE MIRROR KITS

*When performing surface mounting,
The side mirror kits will make the entire room brighter.
*Our side kits can be purchased separately if needed.
Feel free to contact our customer service at any time for any questions.

SK ITEM NO.:	AM ITEM NO.:	Side kits Size	Side Kits Parts List	
MCALSK0432	MCALP2432	32"H x4"D		 Φ4*8  x (4+1)
	MCALP3032/3632			
	MCALP4232/4832		Side mirror	
	MCALP5432/6032		x 2	
	MCALP7232			