


Mysto™ Ultrasonic Essential Oil Diffuser INSTRUCTIONS

PARTS

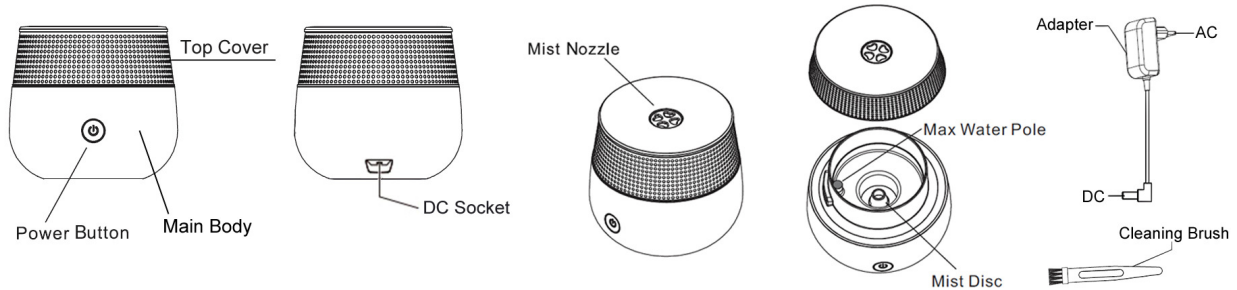

FEATURES

Ultrasonic vibrations transform water and essential oil into fragrant mist.

1. Water Capacity: 140 mL (4.7 fl oz)
2. Suggested Area: Up to 200 sq ft
3. Continuous Operation: Up to 5 hours*
Intermittent Operation: Up to 10 hours*

** Run time will vary depending on humidity levels and other external factors.*

4. Light Mode: Bright white or soft white glow
5. Automatic safety shut-off
6. Power: Includes c ETL us approved AC Adapter

CARE & MAINTENANCE

Only use the power cord supplied with the unit. Always remove the power cord before cleaning. Essential oil should not come in contact with the exterior surface of the unit.

TO CLEAN:

Remove Top Cover. Empty the water from the Main Body away from the Air Outlet.

The Ceramic Disc inside the bottom of the unit should not come in contact with any hard or sharp objects.




To remove possible buildup, gently use a cotton swab dipped in white vinegar to wipe out the inside. A cleaning brush is included.

Dry with a soft cloth to avoid mineral buildup.

Do not use strong cleaning agents.

INSTRUCTIONS FOR USE

1. Remove Top Cover from the Main Body.
2. Pour tap water into the Water Tank up to the Max Fill Line. Add 5-8 drops of essential oil (not included) directly into the Water Tank.
3. Replace Top Cover onto the top of the Main Body.
4. Insert the Adapter's DC connector into the DC Socket input located on the back of the Main Body. Plug the AC end of the Adapter into an electrical wall outlet.
5. **Power Button Functions:**
 - 1st Push = Continuous mist and bright white light
 - 2nd Push = Continuous mist and soft white glow
 - 3rd Push = Intermittent mist and bright white light
 - 4th Push = Intermittent mist and soft white glow
 - 5th Push = Turns unit off completely

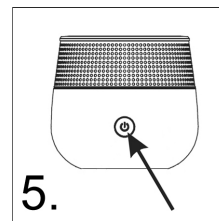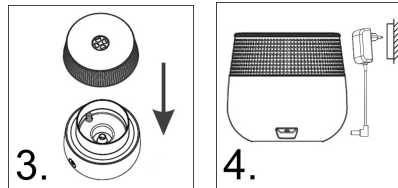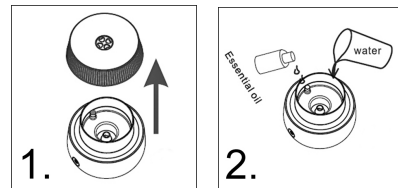

NOTES:

- The unit will automatically shut off completely when water level becomes too low.
- Disconnect Adapter from electrical outlet when not in use.