


USE AND CARE GUIDE

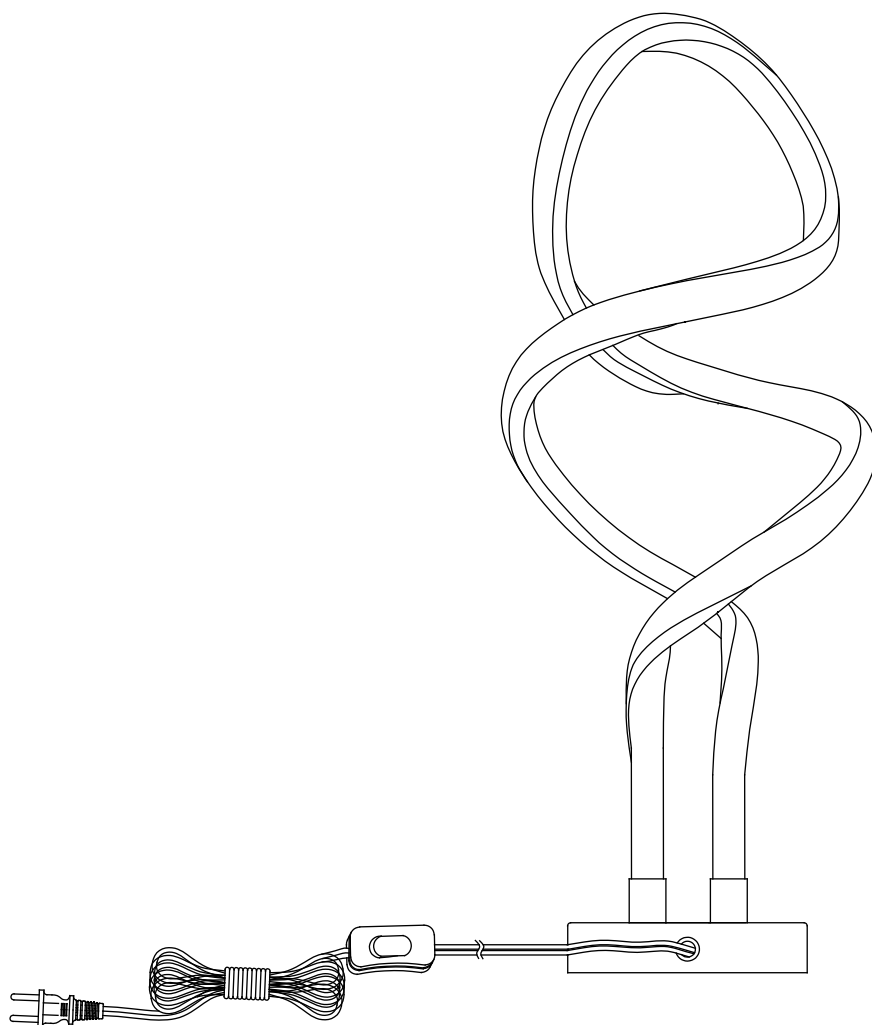


——— DESK LAMP ———

Operation

Adjusting the color Temperature of the Light

Choose your favorite correlated color temperature (CCT) from three options: 3000K, 4500K or 6000K.

- ❑ The factory default setting of this LED table light is 3000K.
- ❑ Using on/off switch when the power is on.
 - a. While the light is on, turn off and then turn on the on/off switch within 7 seconds to change color temperature. The sequence of color temperature is 3000K, 4500K and 6000K.
 - b. If the light turns off for more than 7 seconds, it will remember the light temperature of last use when turn on again.

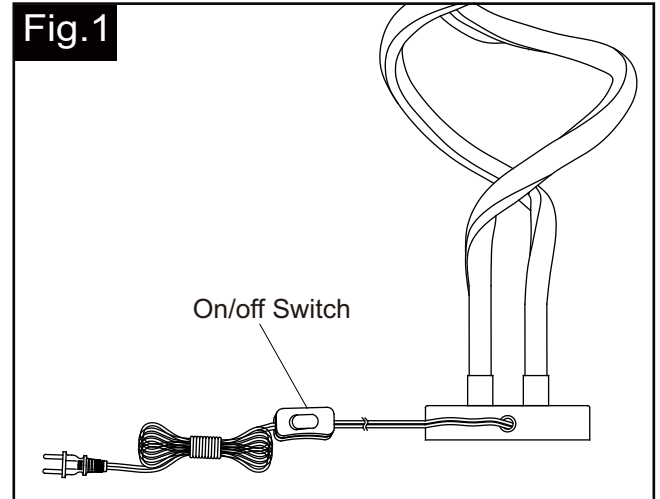

Tips

- ❑ For daily cleaning, you can use a damp cloth to wipe the surface without using corrosive chemicals.
- ❑ Electrical products must be discarded in an environmentally friendly area.

Troubleshooting

1) If the light does not work:

Make sure the switch and circuit breaker are on.

2) Fuse blows or circuit trips when light is turned on.

Check for crossed wires, ensure wiring is correct.

3) If the lens slides out.

Disconnect the plug before insert the lens properly.