

TV STAND

Assembly Instructions - Please keep for future reference


NOTE:

Comes with TWO PACKAGES with TWO TRACKINGS,may NOT be delivered at the same time.

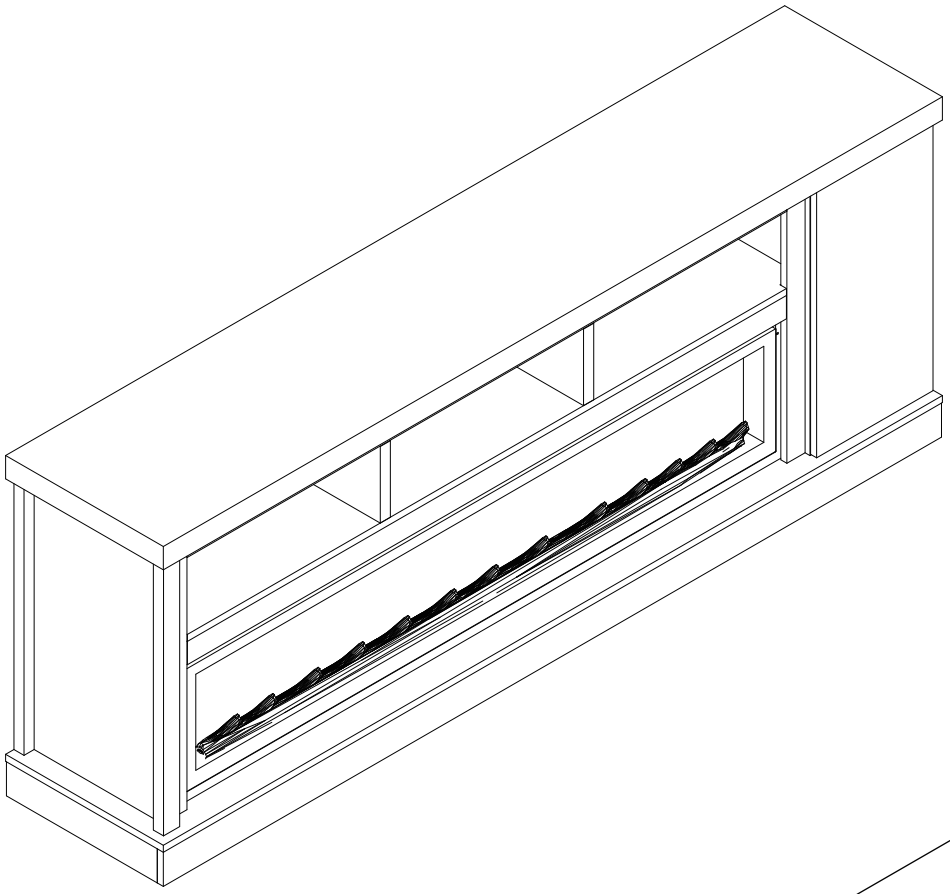

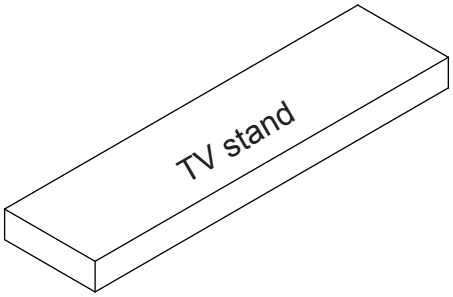

Carton 1 of 2

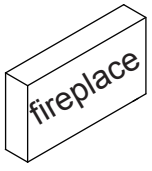

Carton 2 of 2

Dimensions
Width - 75.8inch
Depth - 15.4inch
Height - 28.7inch

Important – Please read these instructions fully before starting assembly

Issue 1 - 30/08/2025

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• During assembly do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts

• Regularly check and ensure that all bolts and fittings are tightend properly.

WARNING
In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-





Use the anti tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Please note that only the anti tip strap is provided.
You will need to provide wall plugs and screws applicable for your wall type

Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.


A  Cam Bolt x 54	**B**  Cam Lock x 54	**C**  Wooden Dowel x 57
D  3.5*15mm Screw x 14	**E**  4*50mm Screw x 14	**F**  4*12mm Screw x 8
G  Adjustable Foot x 1	**H**  L Shape Bracket x 2	**I**  Wall Fixing Pack x 2
J  Push-open Latchx 1	**K**  Shelf Support Pin x 4	**L**  Protective Feet x 7
M  Hinge x 2	**N**  Fireplace positioning panel x 1	

Tools required



Phillips screwdriver
(medium & large)

Ruler - Use this ruler to help correctly identify the screws






The screws length is measured from the head to the point (30mm screw shown).

Using Camlocks


Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

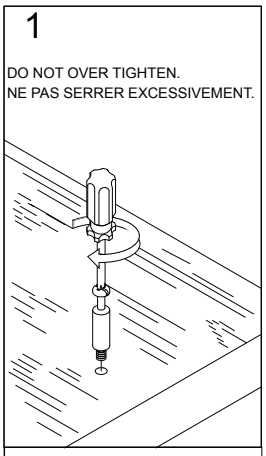

Step 2


Push the male camlock into the entry hole.

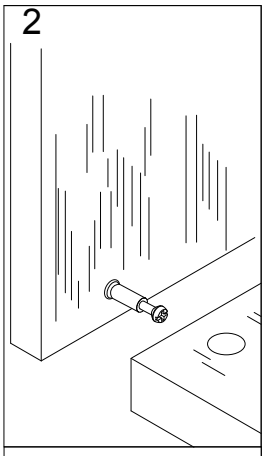

Step 3

Insert the female camlock as shown in the instructions.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

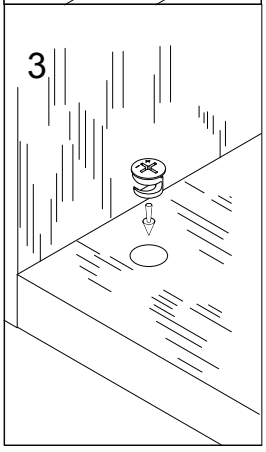


Step 4

Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

The joint is now secure.

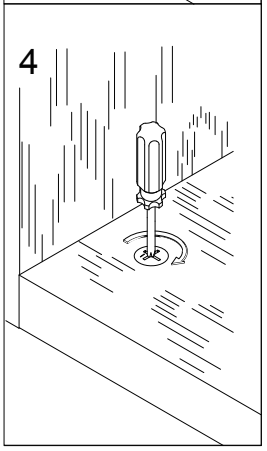

Adjusting Hinges

Hinge adjustment:


a: To move the top panel up or down, loosen screws shown and move door to suit


b.To move the top panel in or out, loosen screws shown and move door to suit.

Retighten screws


C:To move the door left or right, adjust screws shown.


a:

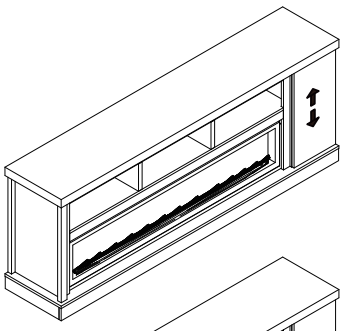

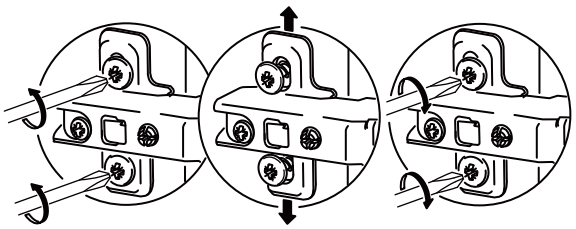


b:

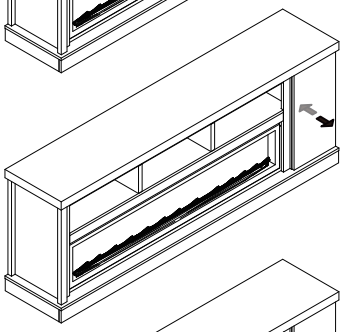

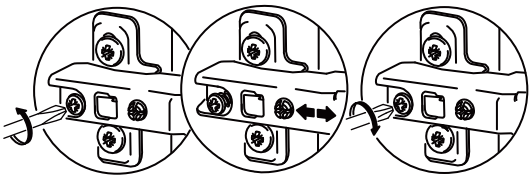


c:

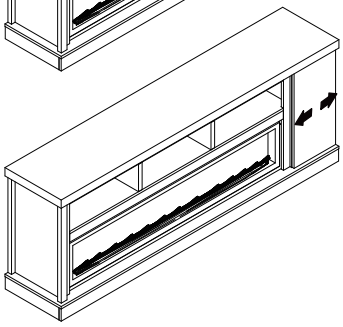




Components - Panels


Please check you have all the panels listed below

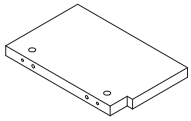


1 (328 x 215 x 25mm) x1

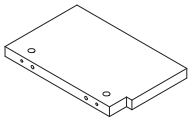


2 (328 x 215 x 25mm) x1

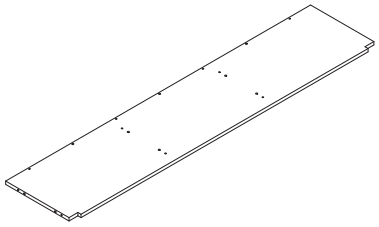


3 (1544 x 344 x 14mm) x1

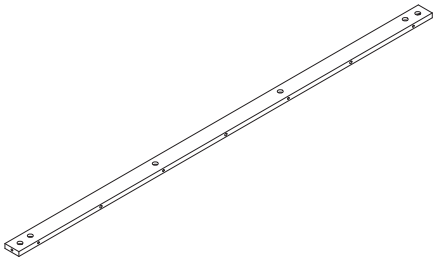


4 (1484 x 50 x 14mm) x1

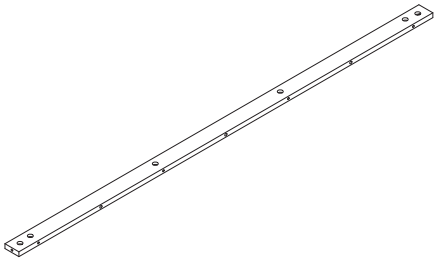


5 (1484 x 50 x 14mm) x1

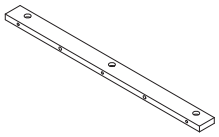


6 (590 x 45 x 14mm) x1

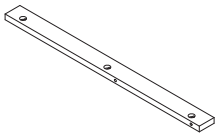


7 (590 x 45 x 14mm) x1

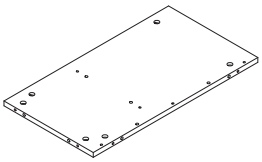


8 (590 x 322 x 14mm) x1

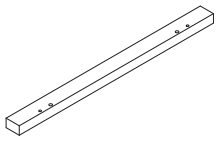


9 (590 x 40 x 24mm) x1

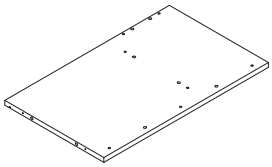

10 (590 x 355 x 14mm) x1

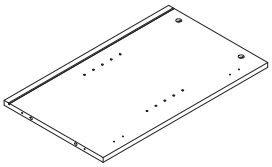


11 (590 x 355 x 14mm) x1

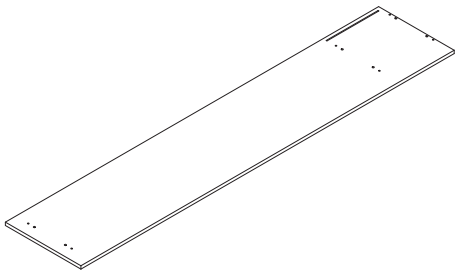


12 (1927 x 390 x 14mm) x1

Components - Panels


Please check you have all the panels listed below




13 (375 x 78 x 14mm) x1




14 (375 x 78 x 14mm) x1

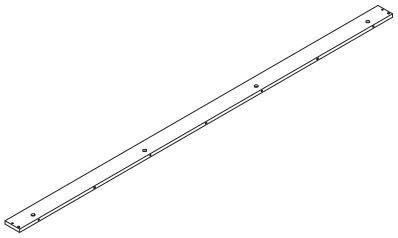


15 (1909 x 78 x 14mm) x1

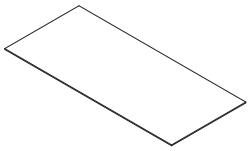


16 (589 x 269 x 2.5mm) x1

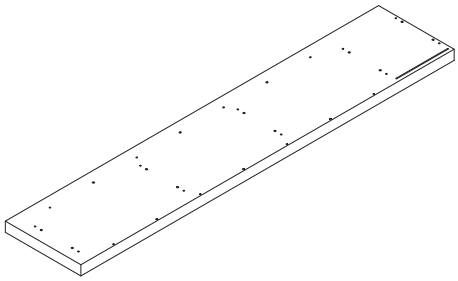


17 (1927 x 390 x 50mm) x1




18 (330 x 259 x 14mm) x1

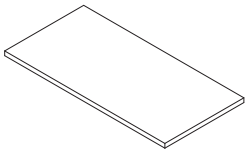

19 (584 x 289 x 14mm) x1

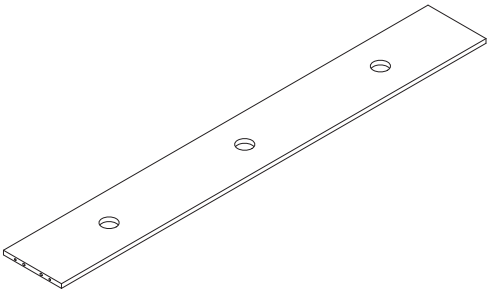


20 (1574 x 215 x 14mm) x1

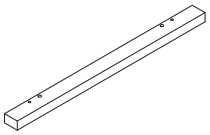


21 (590 x 40 x 24mm) x1


Assembly Instructions

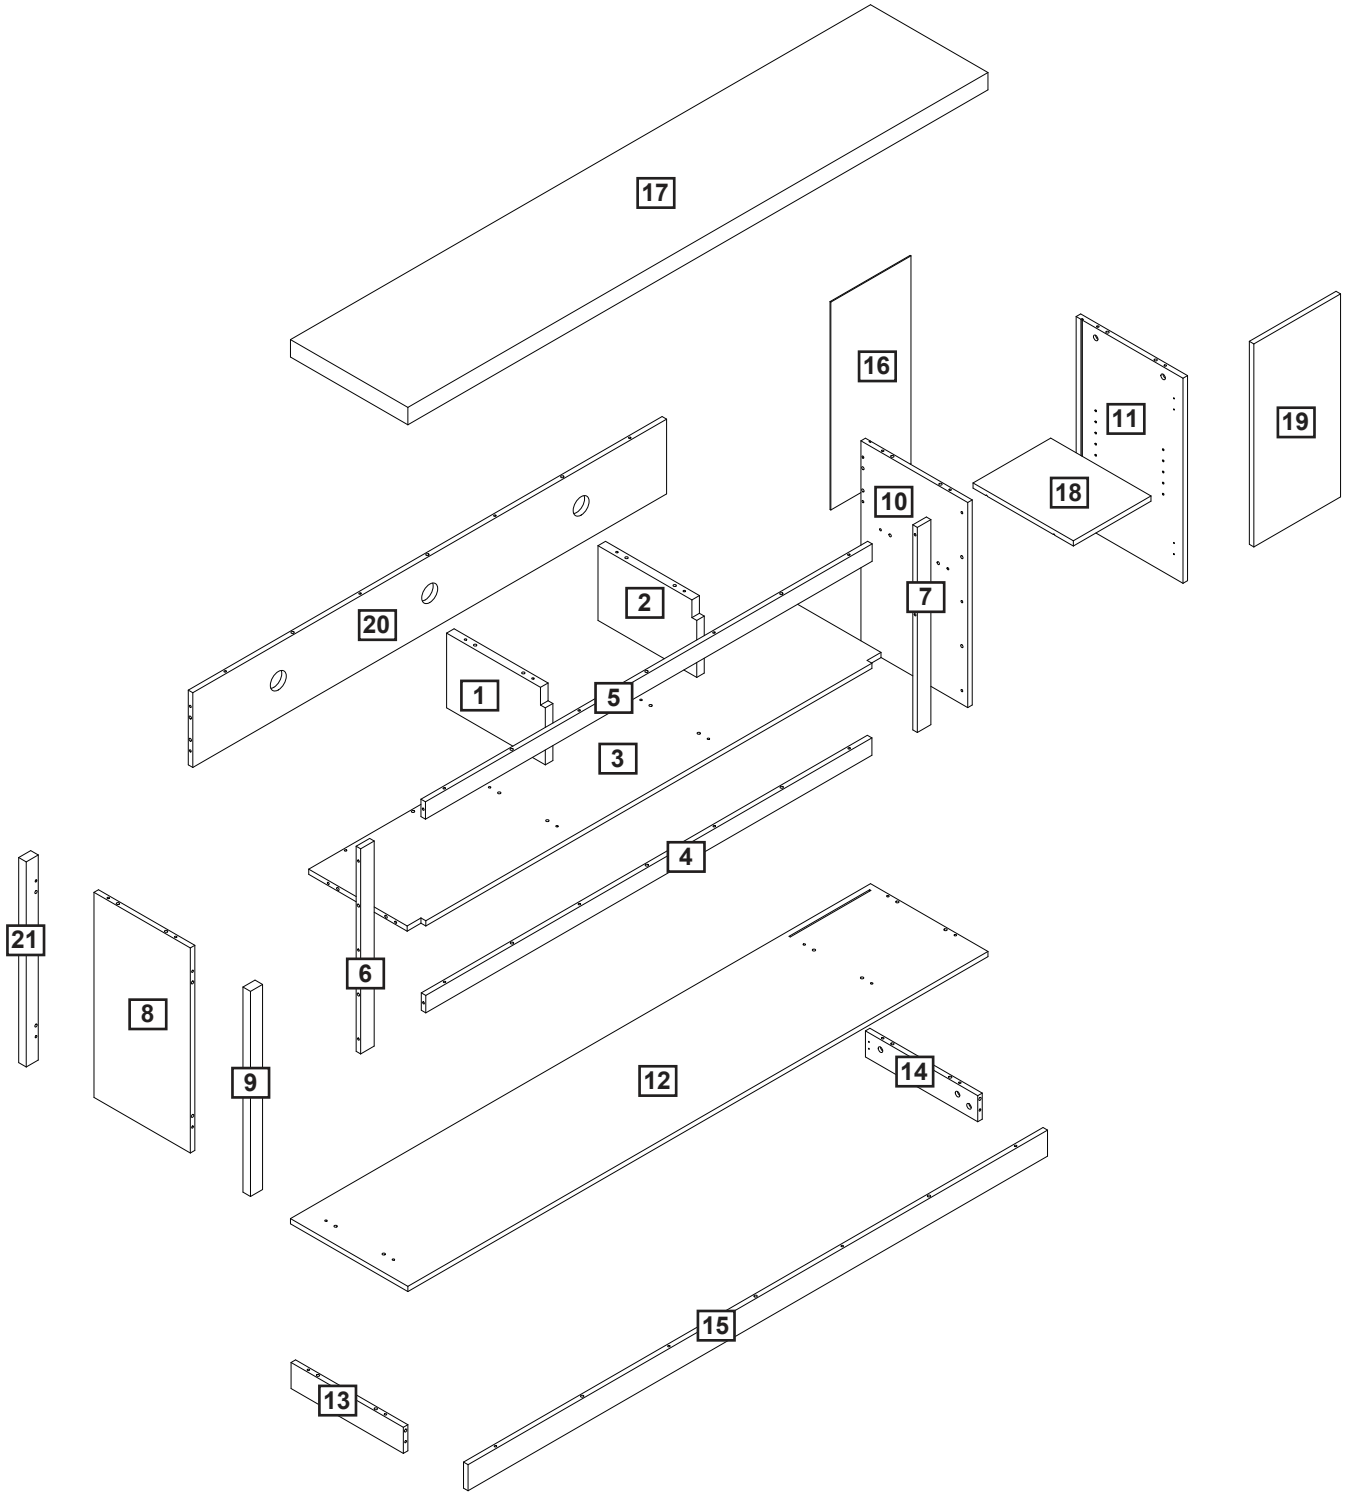

Assembly Instructions


Step 1

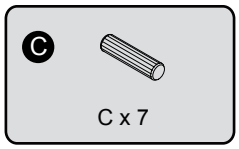


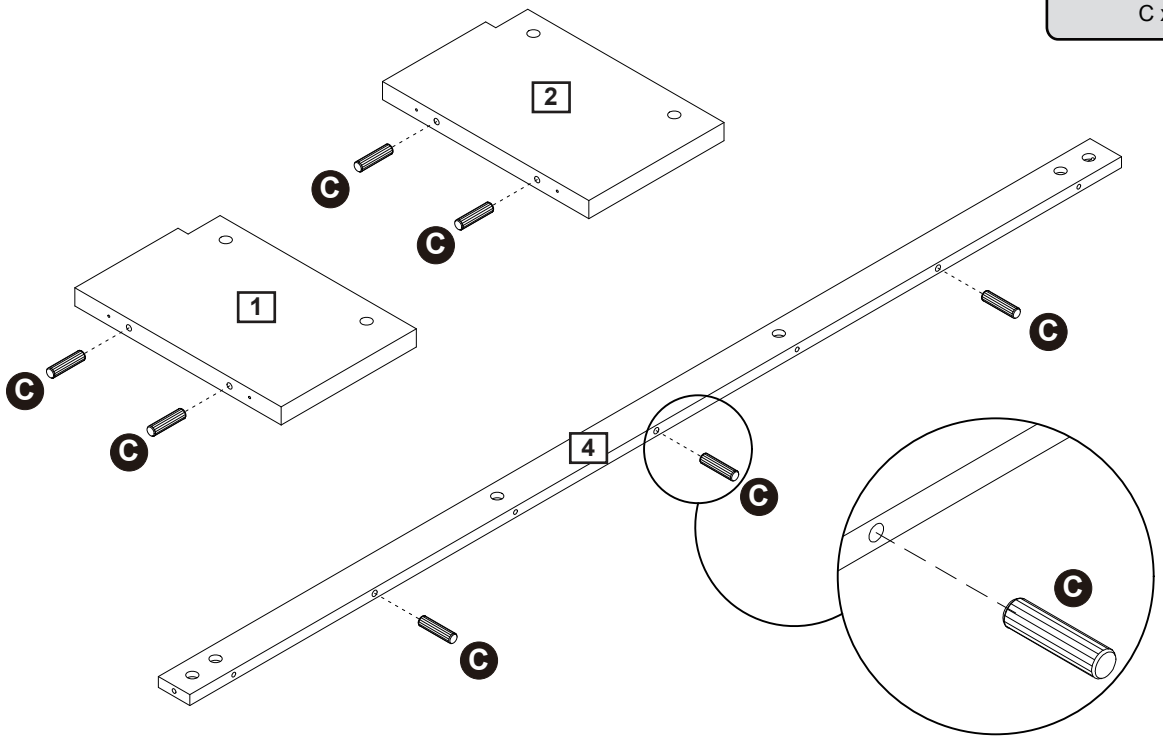

Insert Wooden dowel (C) into Parts (1, 2, 4).

Step 2

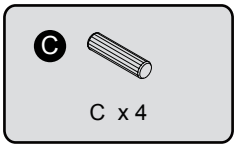


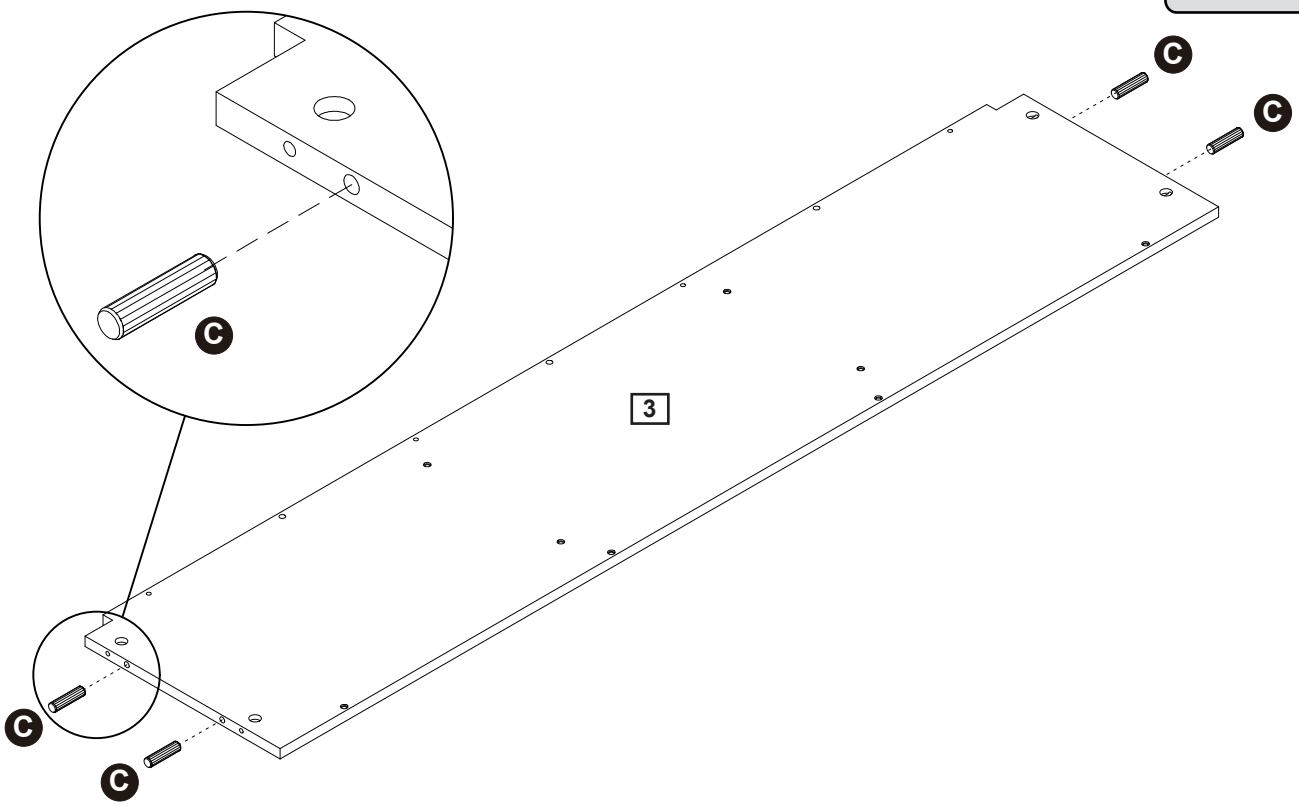


Insert Wooden dowel (C) into Part (3).


Assembly Instructions

Step 3

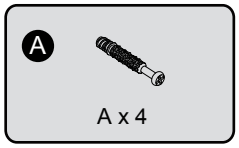

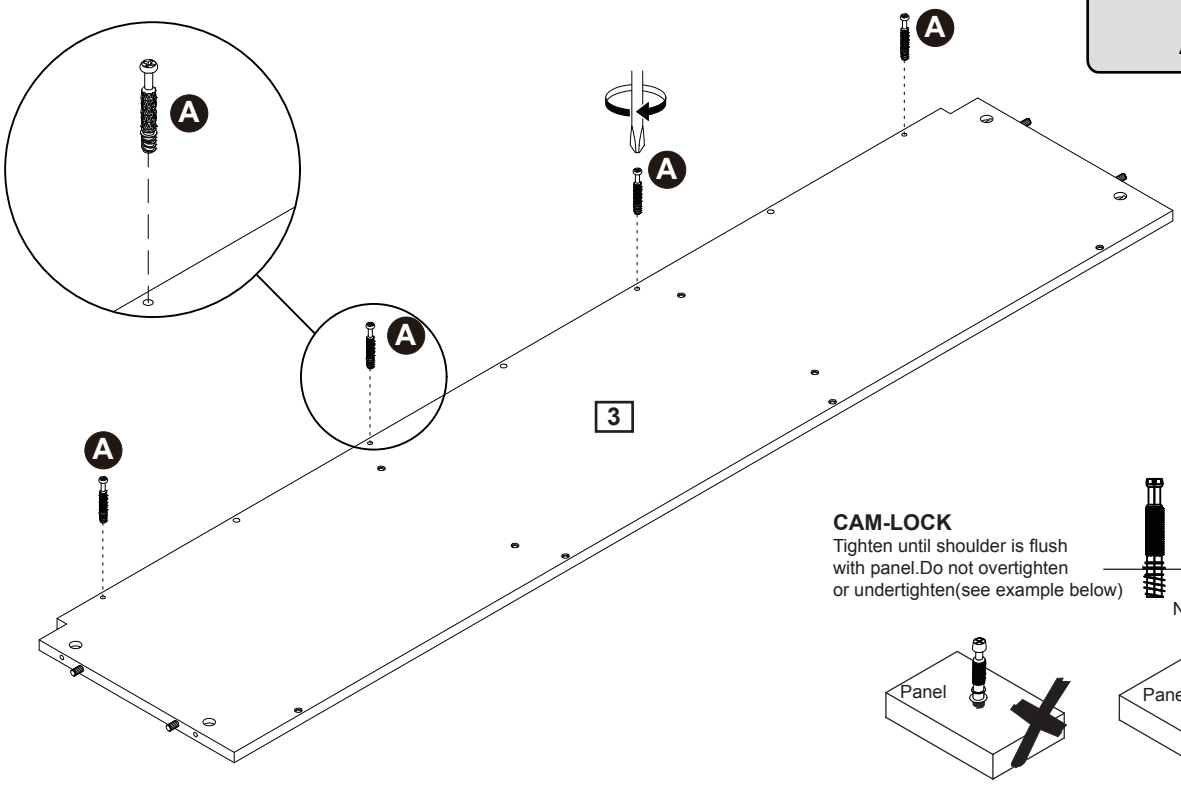



CAM-LOCK
Tighten until shoulder is flush with panel.Do not overtighten or undertighten(see example below)

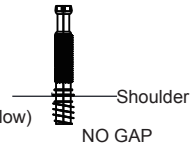


Attach Cam bolt (A) to Part (3) with a screwdriver.

Step 4

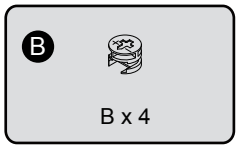

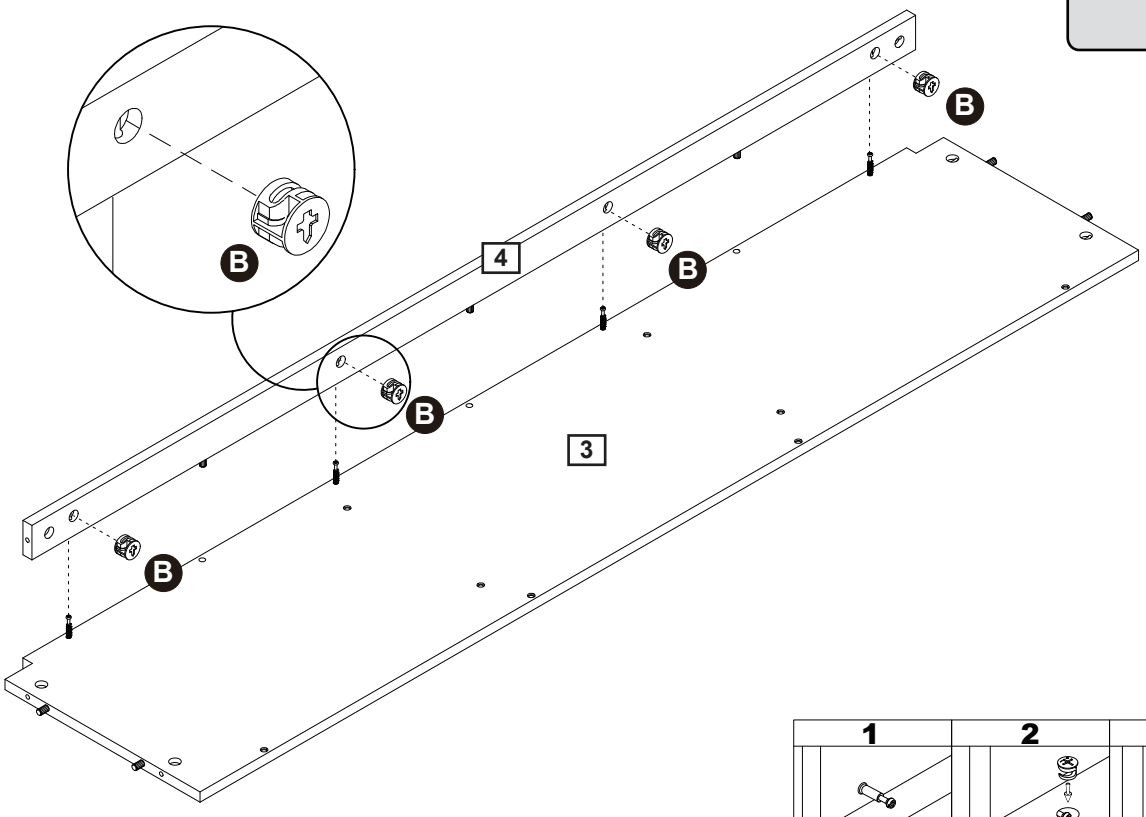


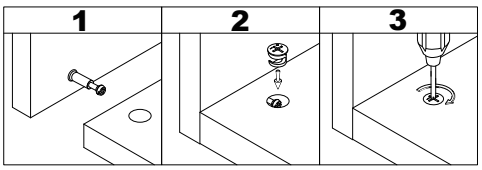

Attach Part (4) to Part (3), then insert Female Cam lock (B) to Part (4) and twist to secure.


Assembly Instructions

Step 5

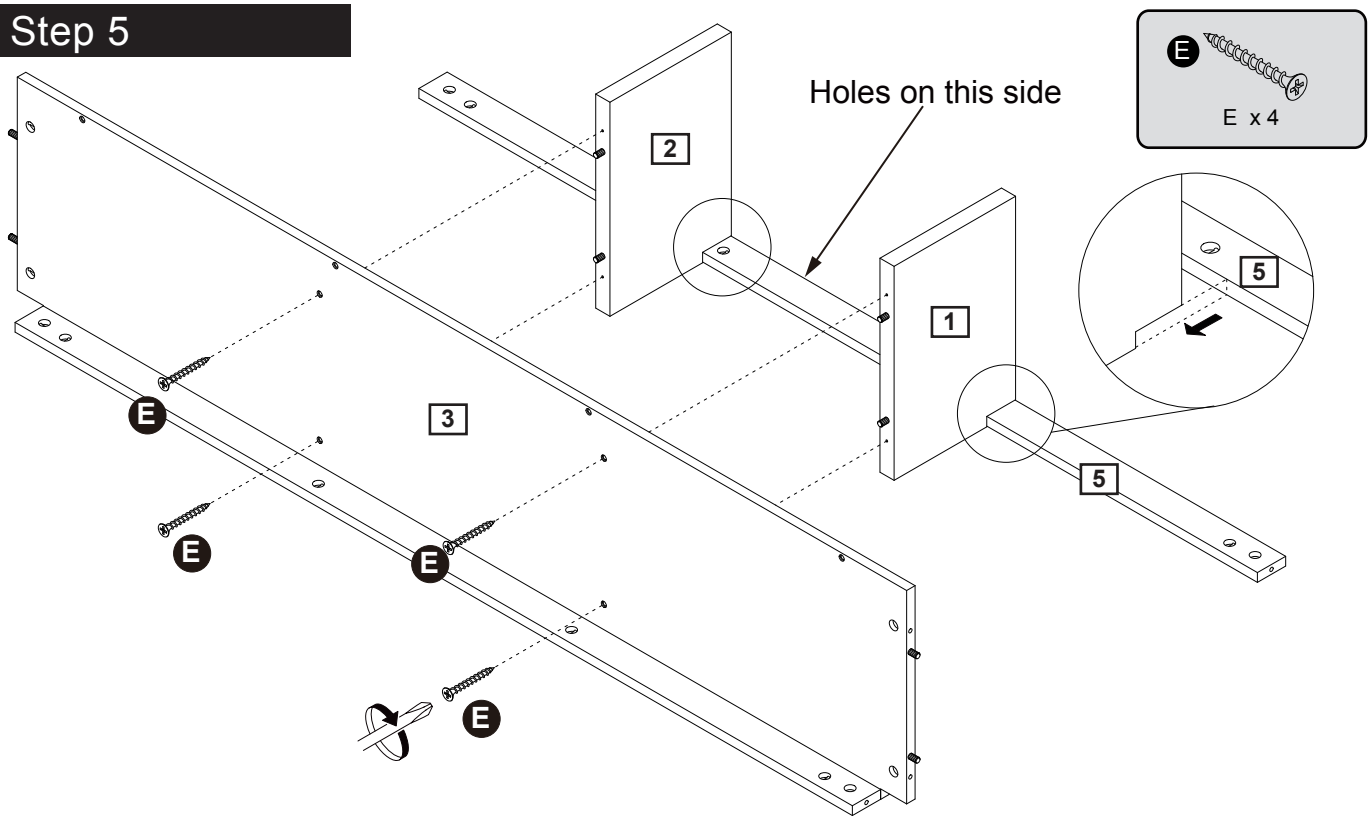

Attach Parts (1, 2) to Part (3) using Screw (E) with a screwdriver, then place Part (5) under Parts (1, 2).


Step 6

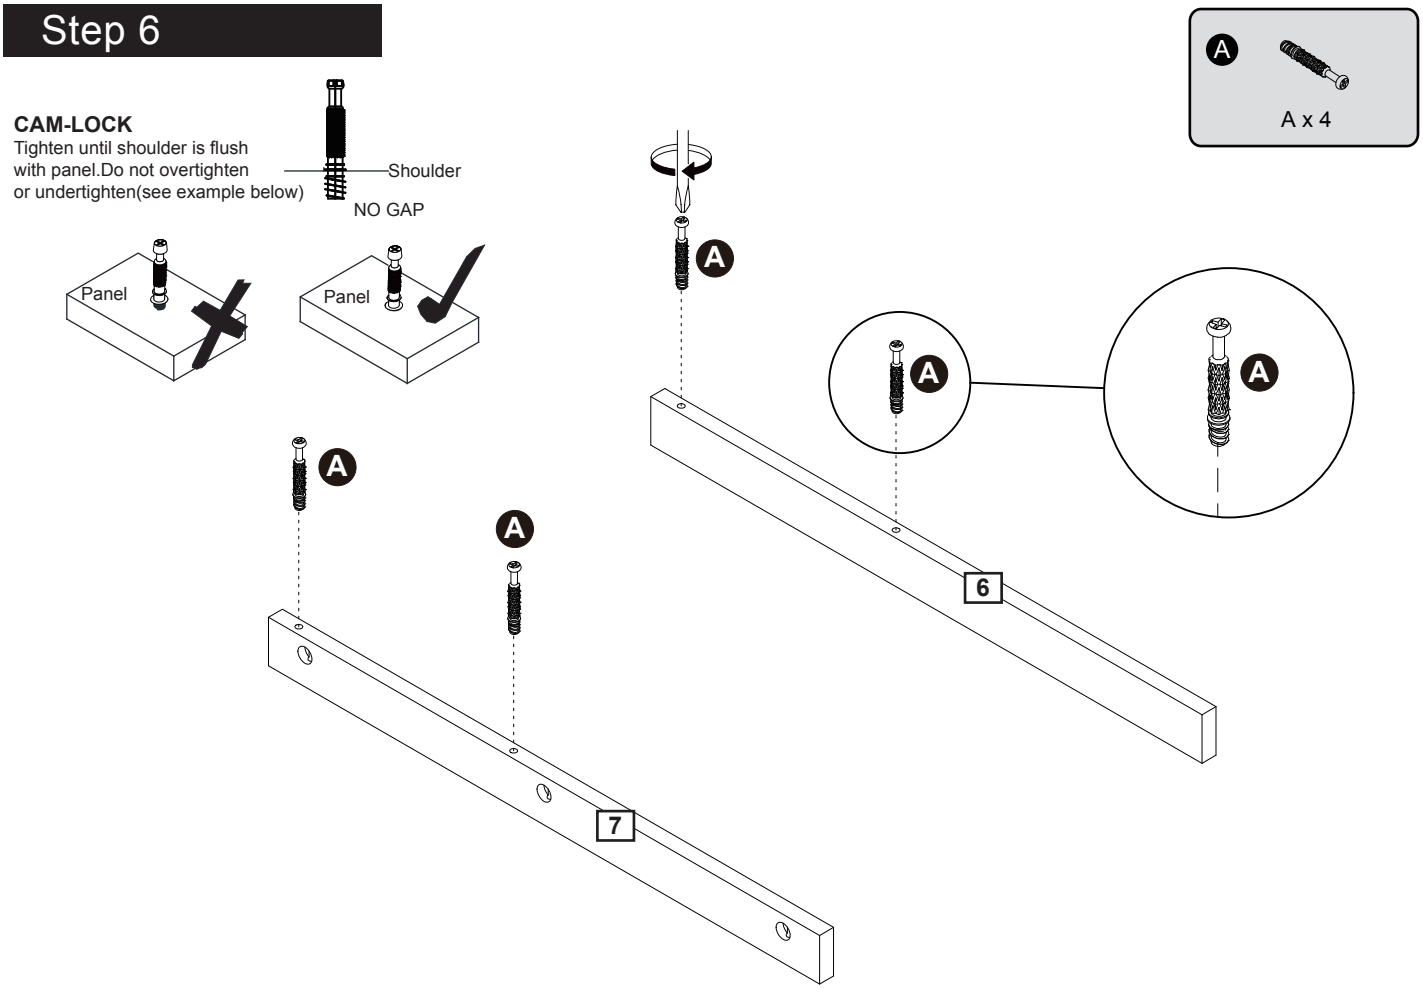



Attach Cam bolt (A) to Parts (6, 7) with a screwdriver.

Assembly Instructions

Step 7

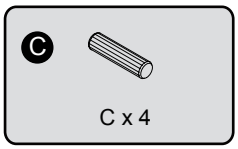


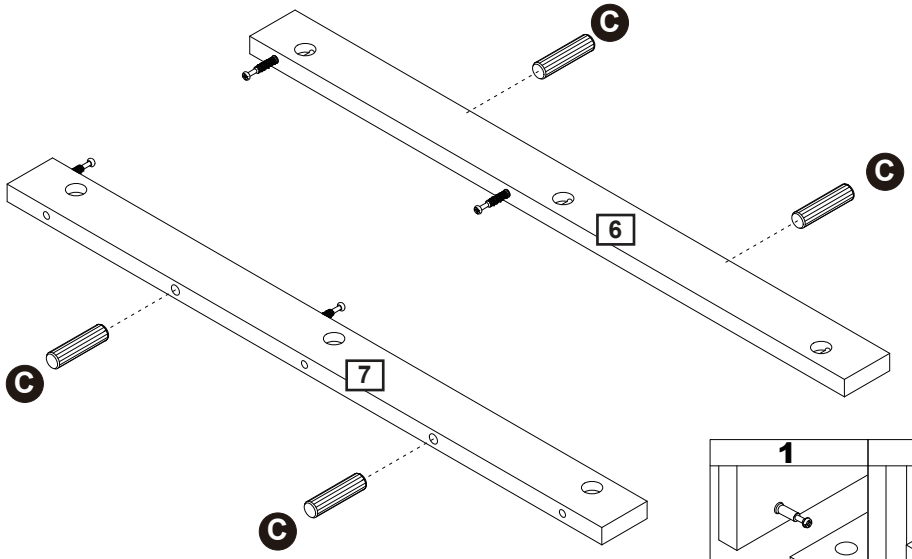


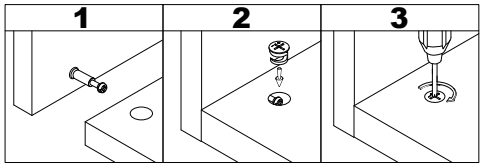


Insert Wooden dowel (C) into Parts (6, 7).

Step 8

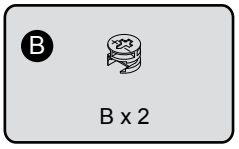

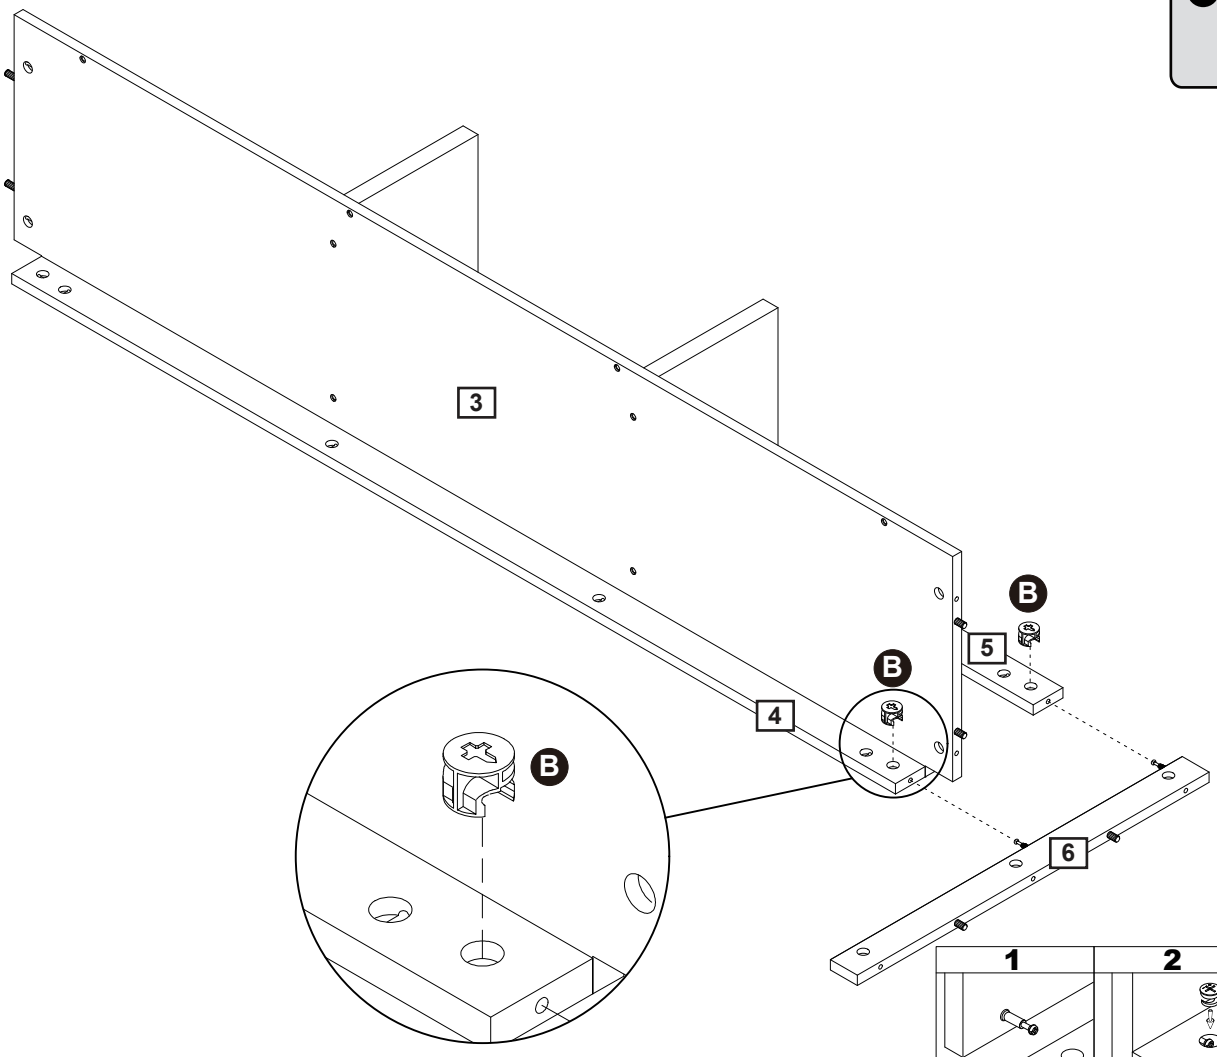


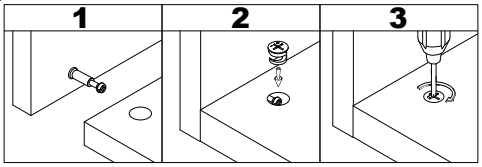

Attach Part (6) to Parts (4, 5), then insert Female Cam lock (B) to Parts (4, 5) and twist to secure.


Assembly Instructions

Step 9

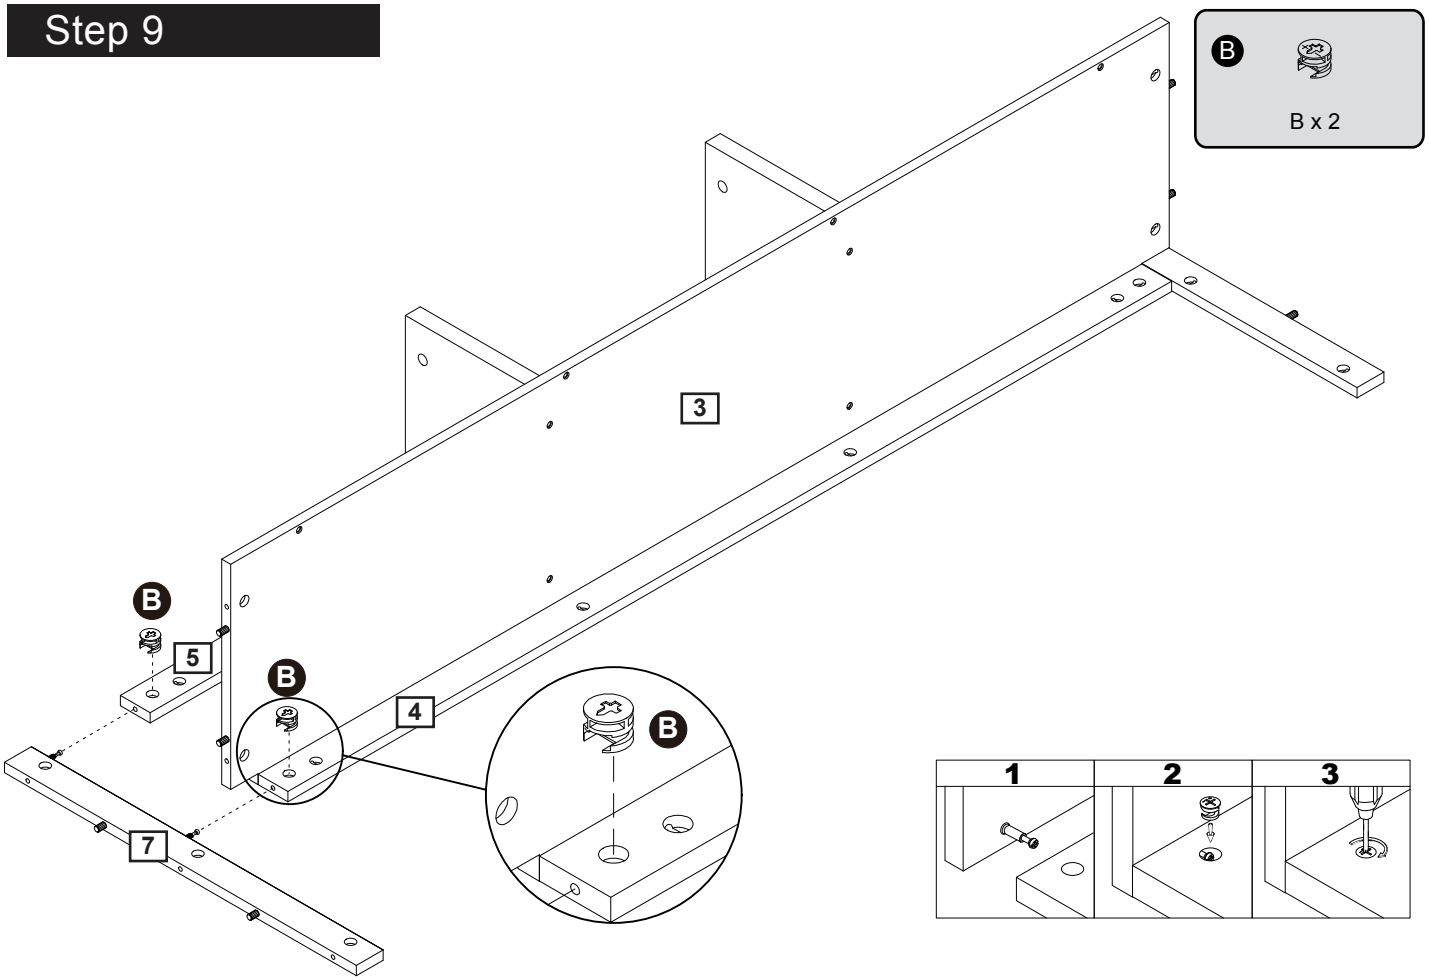

Attach Part (7) to Parts (4, 5), then insert Female Cam lock (B) to Parts (4, 5) and twist to secure.


Step 10

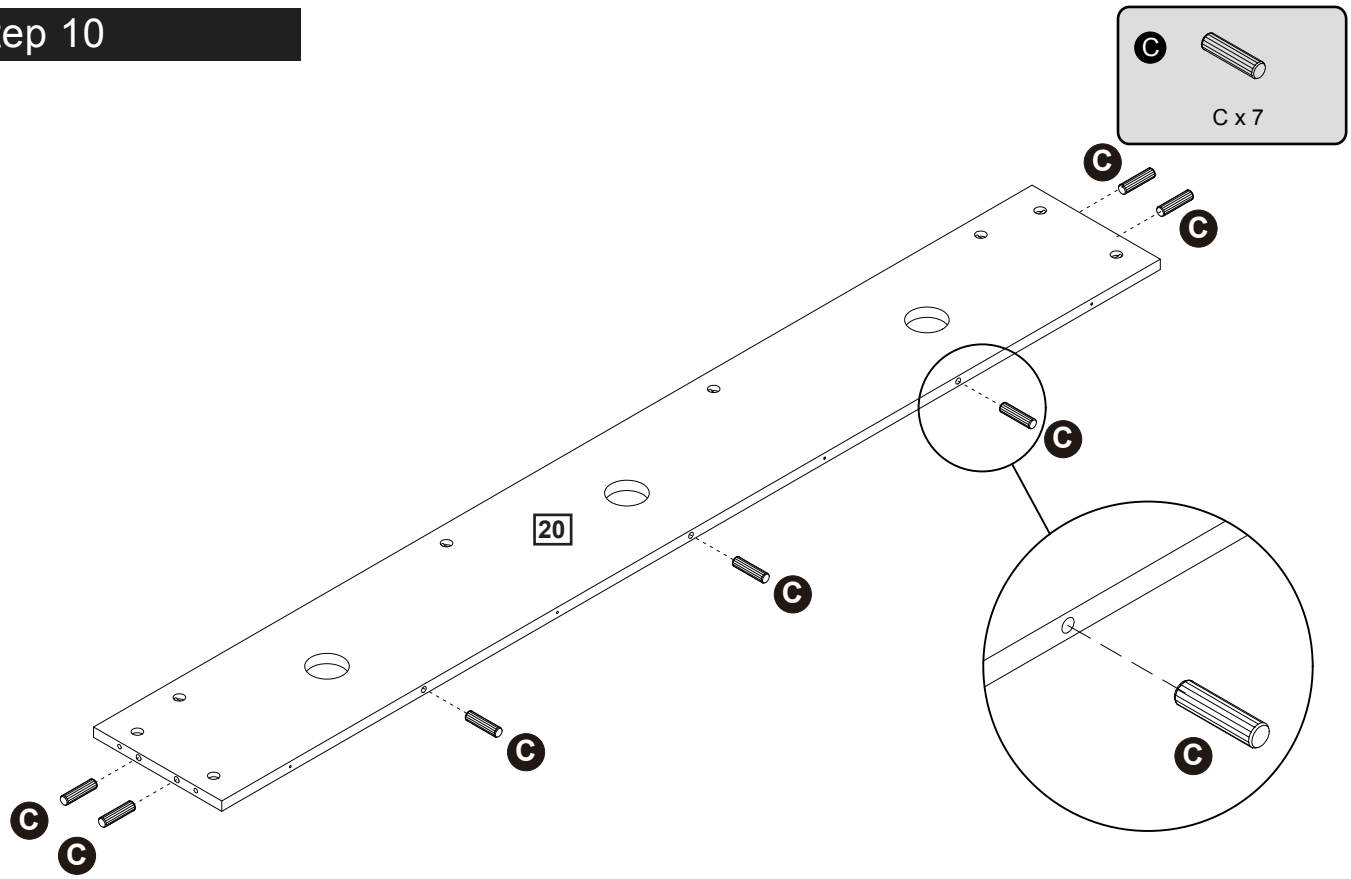

Insert Wooden dowel (C) into Part (20).


Assembly Instructions

Step 11

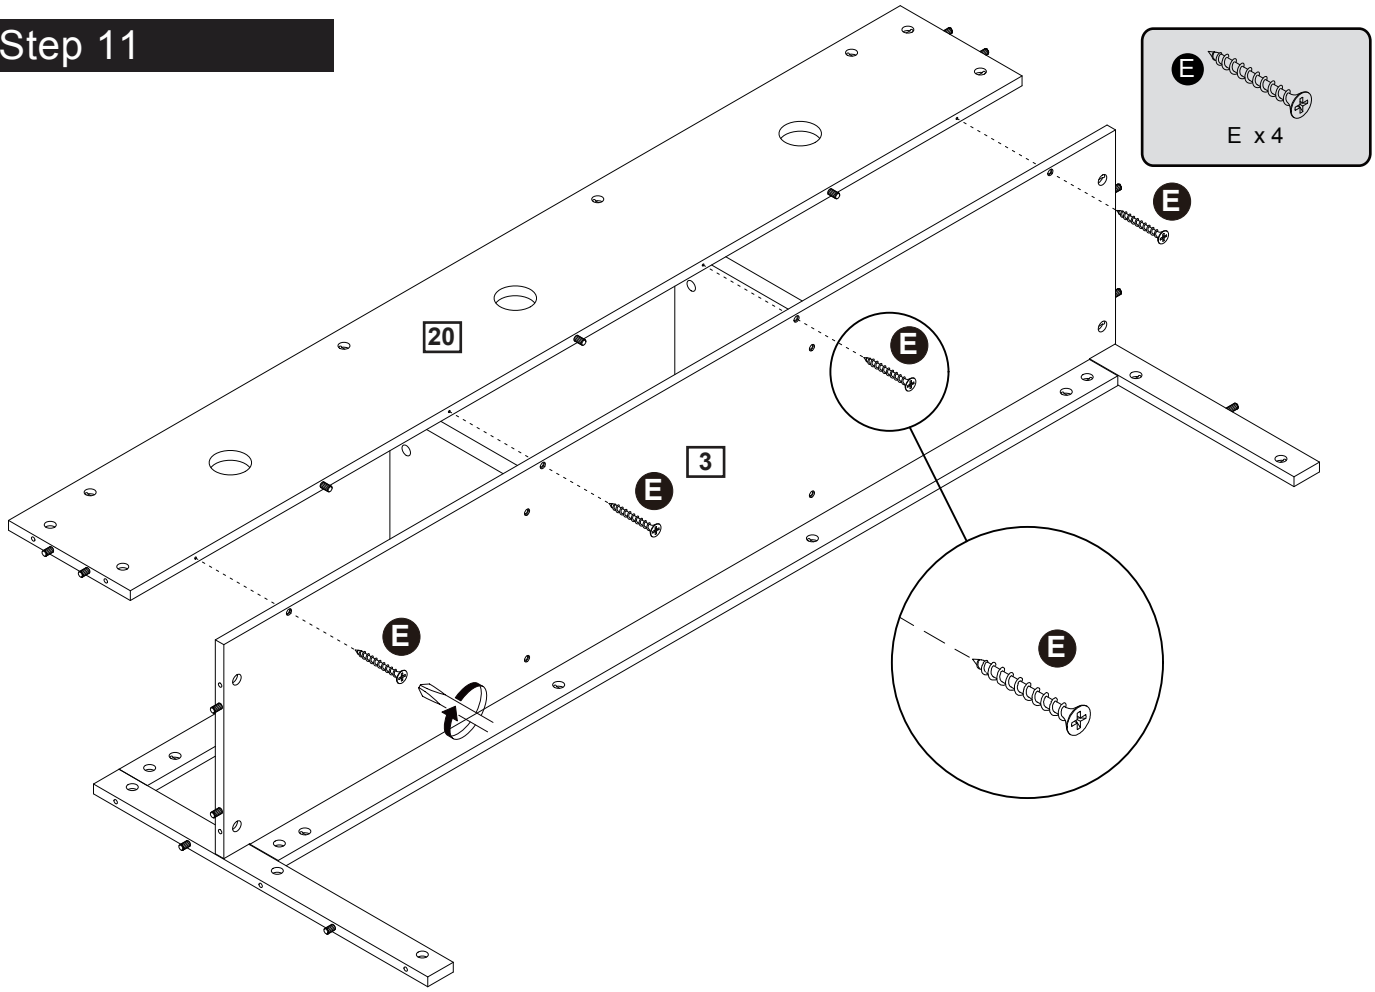

Attach Part (20) to Part (3) using Screw (E) with a screwdriver.


Step 12

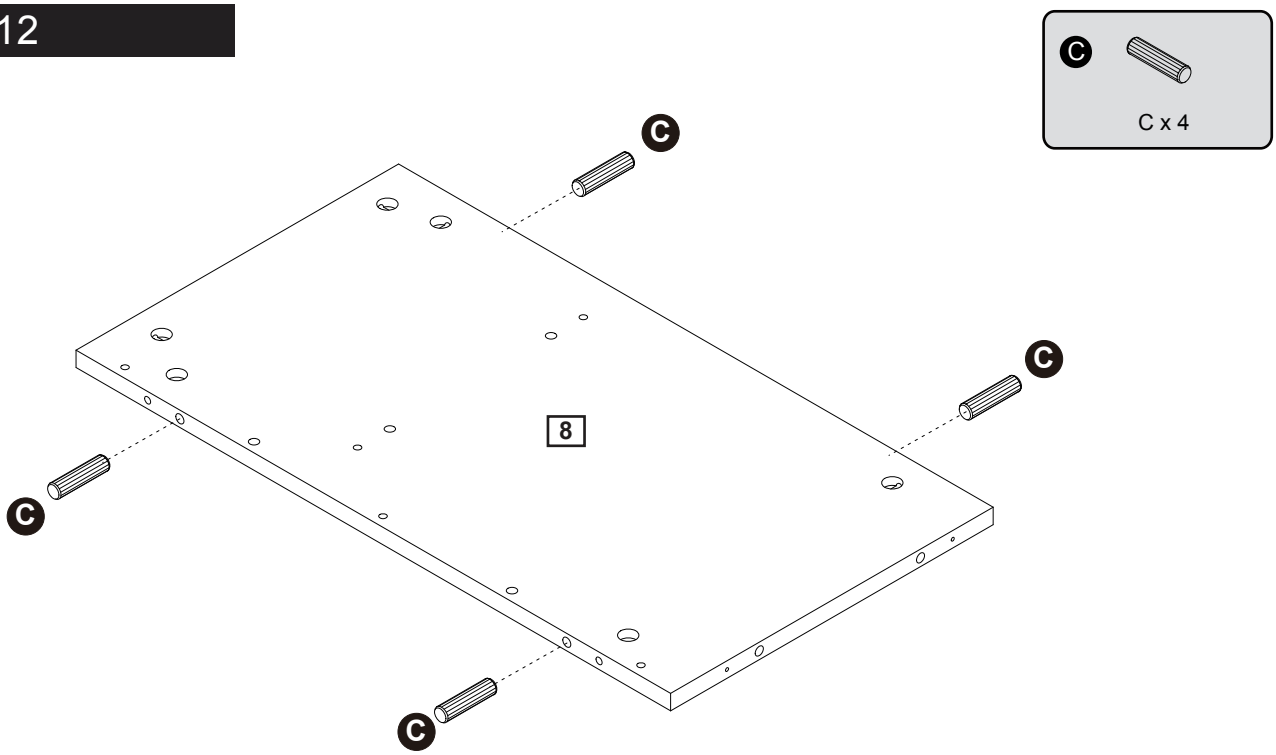


Insert Wooden dowel (C) into Part (8).

Assembly Instructions


Step 13

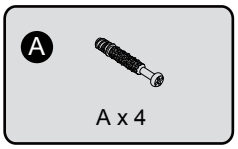


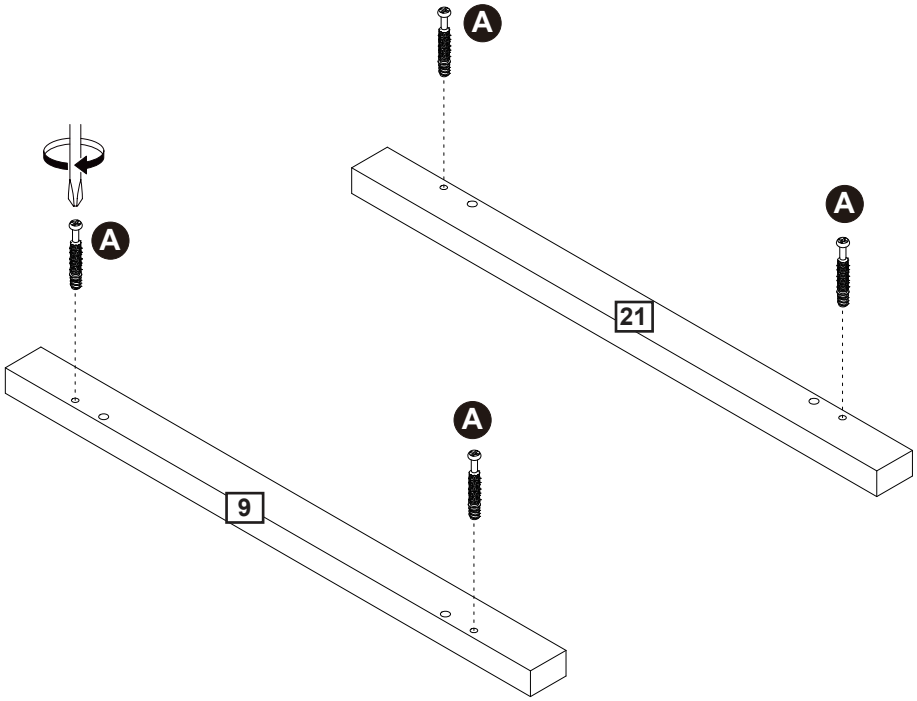

Attach Cam bolt (A) to Parts (9, 21) with a screwdriver.

Step 14

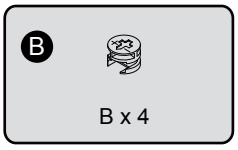


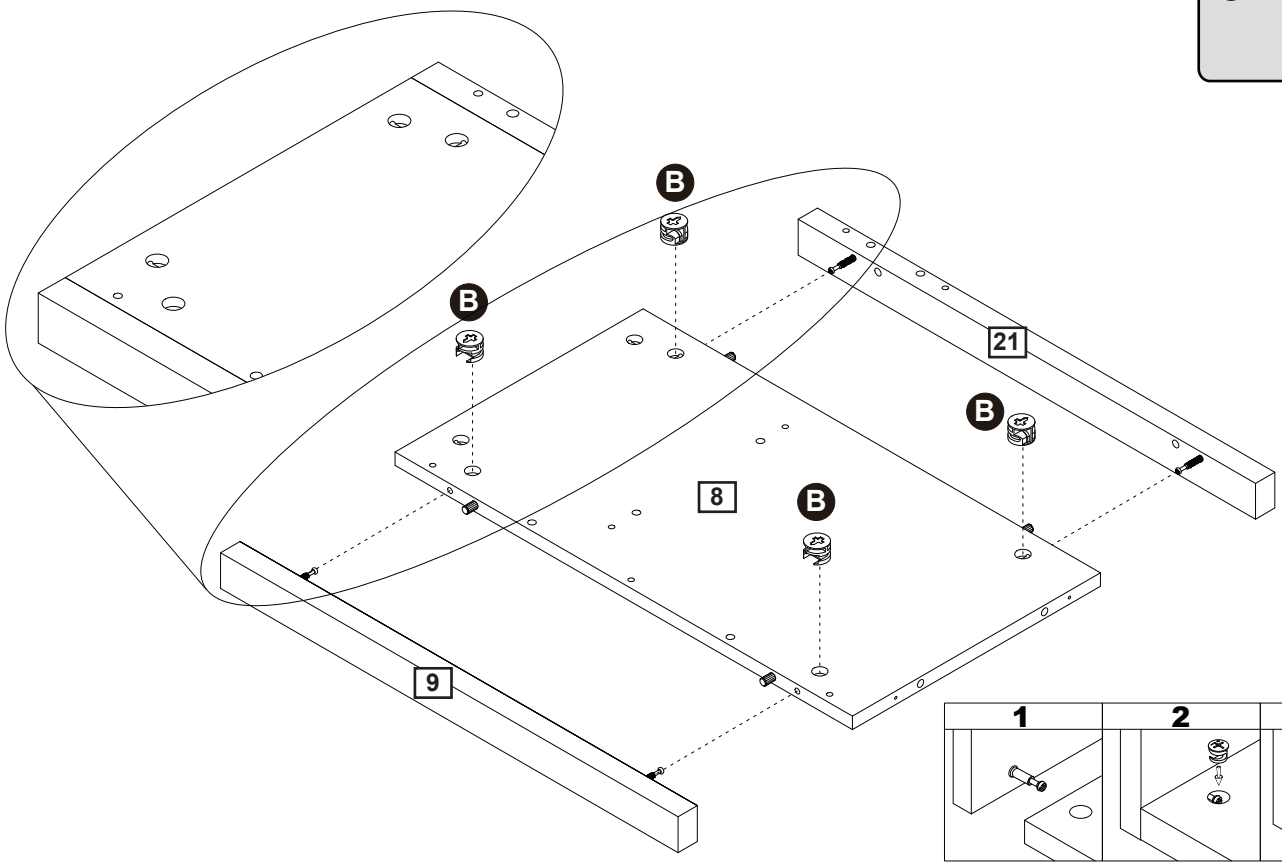

Attach Parts (9, 21) to Part (8), then insert Female Cam lock (B) to Part (8) and twist to secure.


Assembly Instructions

Step 15

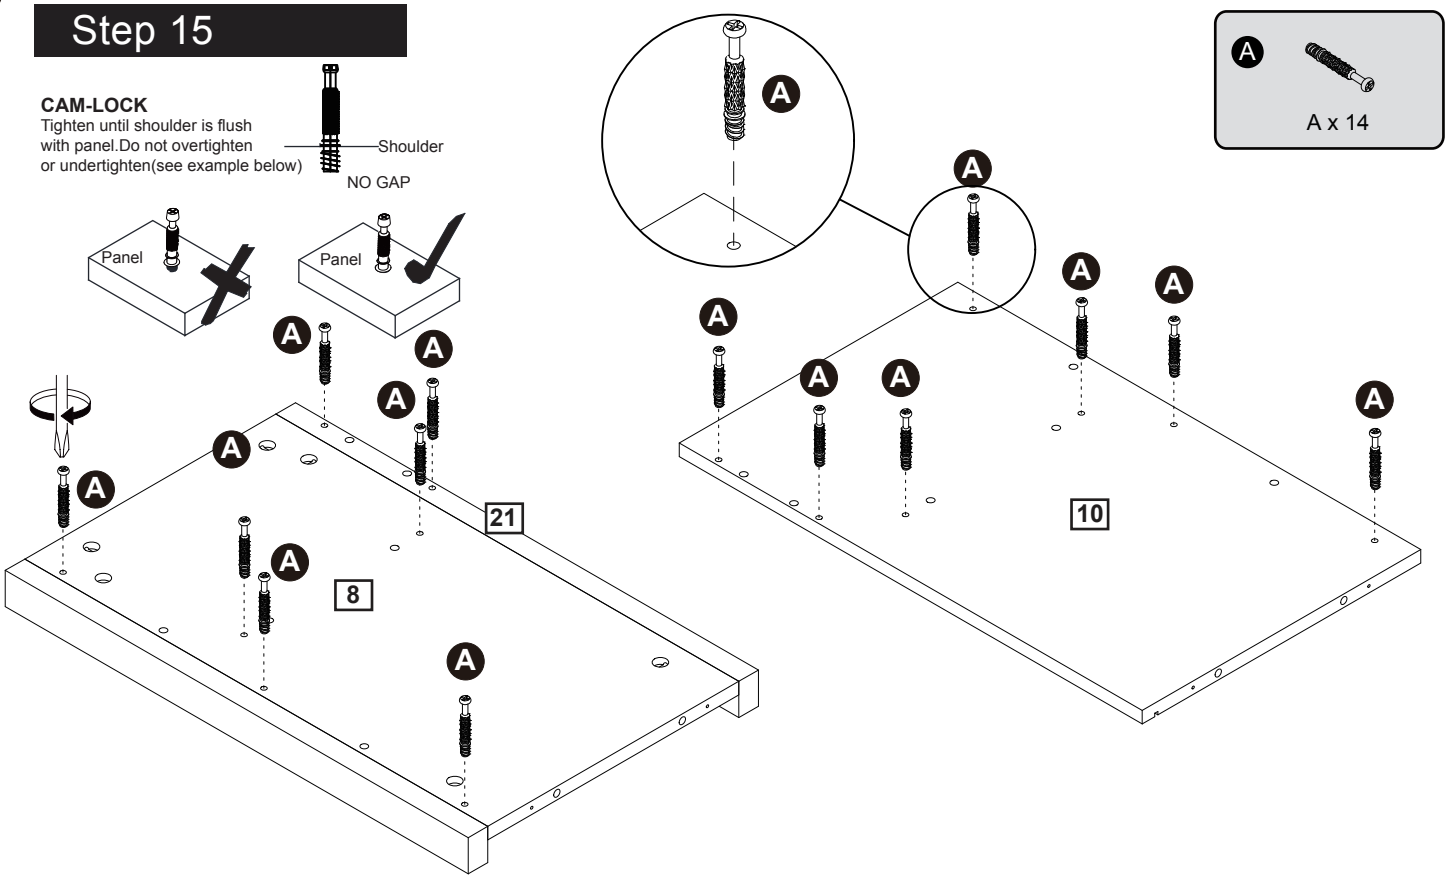

Attach Cam bolt (A) to Parts (8, 10, 21) with a screwdriver.


Step 16

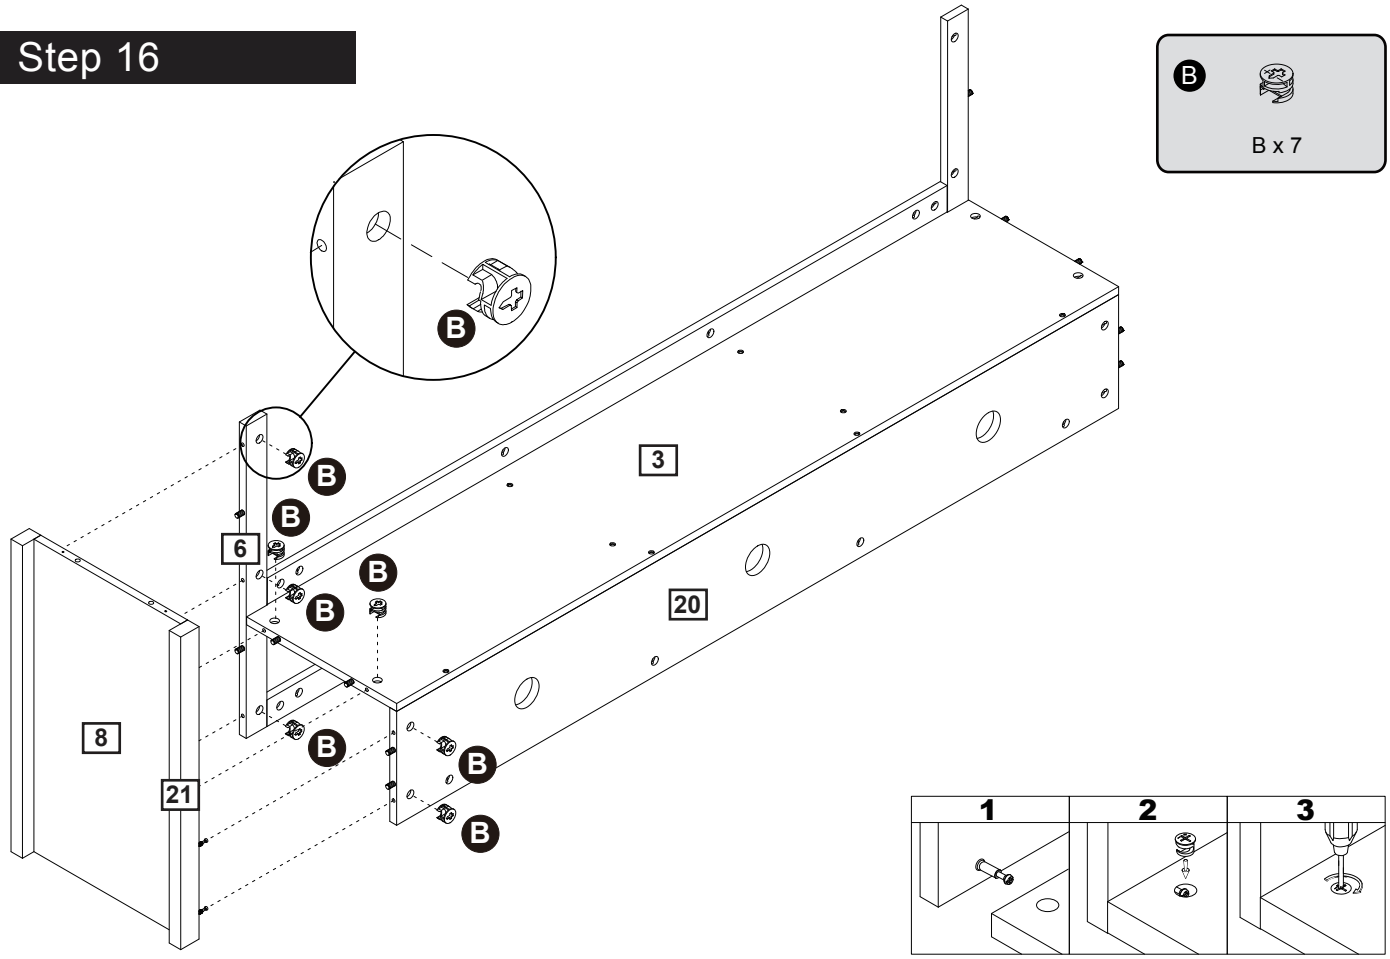


Attach Part (8) to Parts (3, 6) and attach Part (21) to Part (20), then insert Female Cam lock (B) to Parts (3, 6, 20) and twist to secure.

Assembly Instructions


Step 17

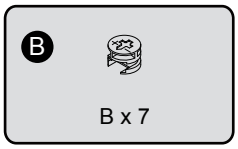

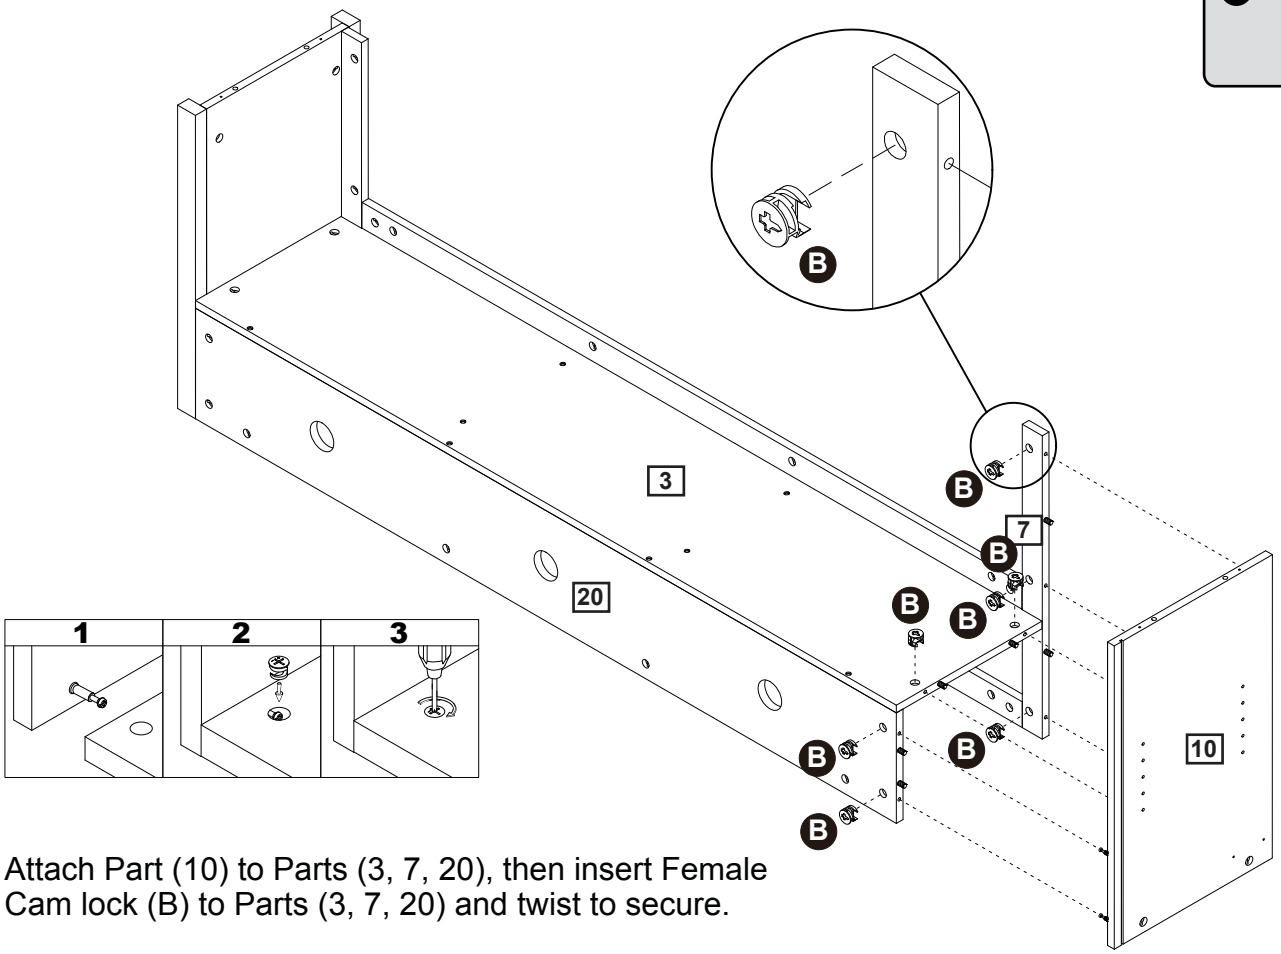

Attach Part (10) to Parts (3, 7, 20), then insert Female Cam lock (B) to Parts (3, 7, 20) and twist to secure.


Step 18

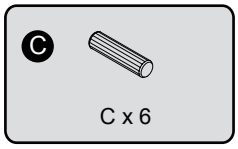

Insert Wooden dowel (C) into Parts (8, 10, 11).


Assembly Instructions

Step 19

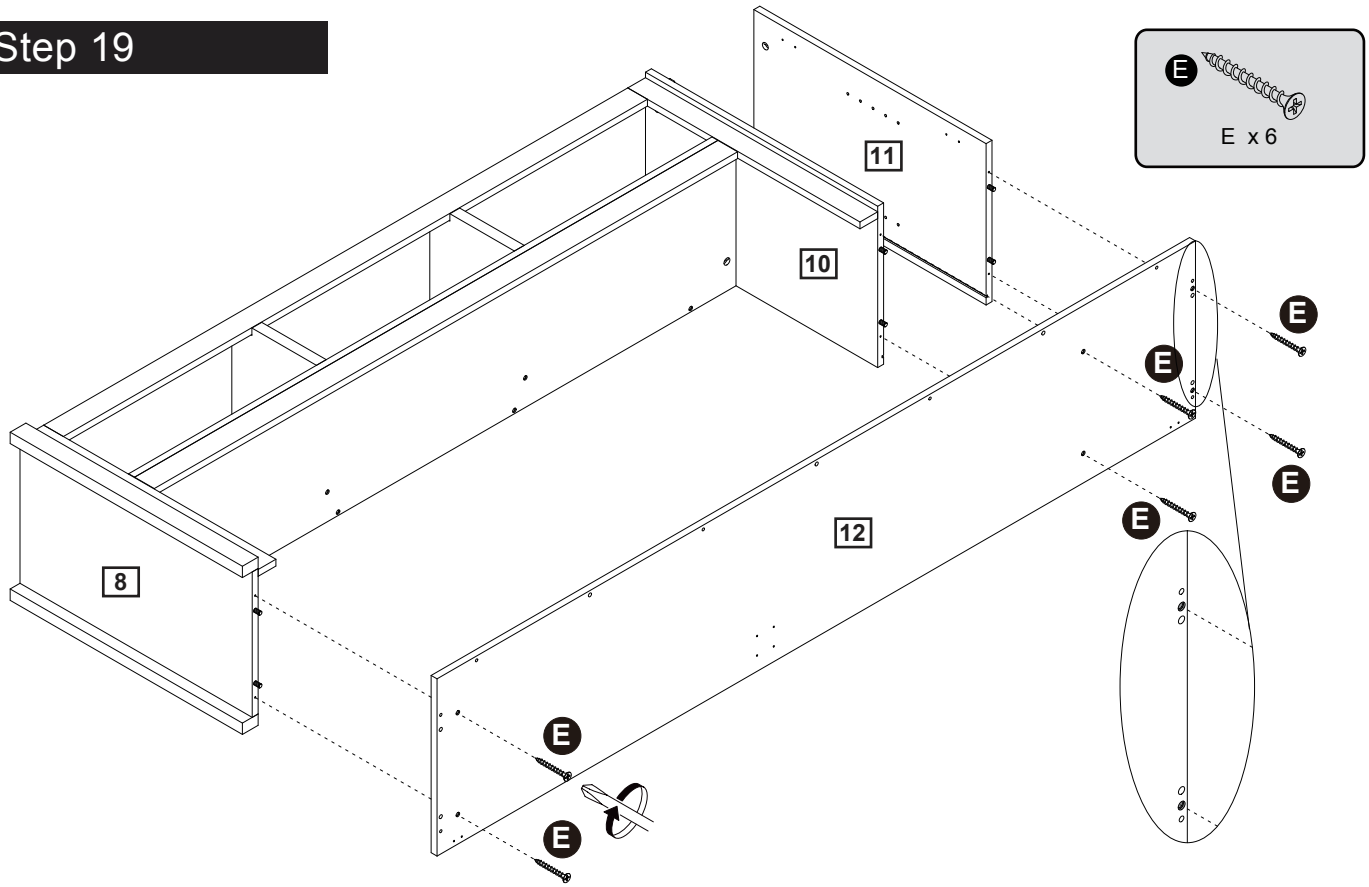

Attach Parts (8, 10, 11) to Part (12) using Screw (E) with a screwdriver.


Step 20

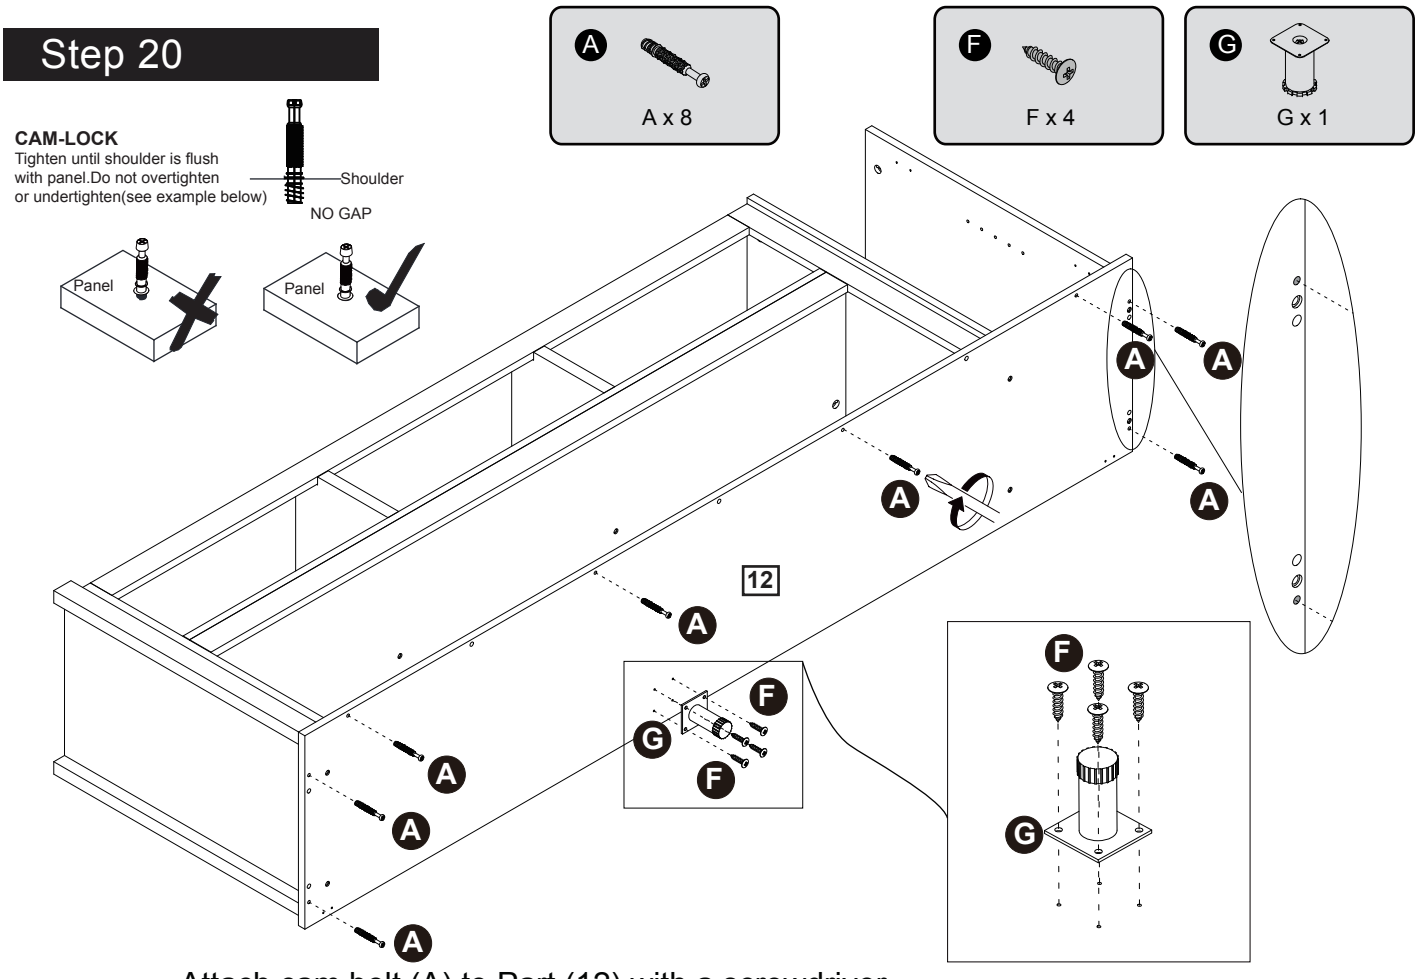

Attach cam bolt (A) to Part (12) with a screwdriver.
Use Screw (F) to secure adjustable foot (G) to Part (12) with a screwdriver.

Assembly Instructions


Step 21

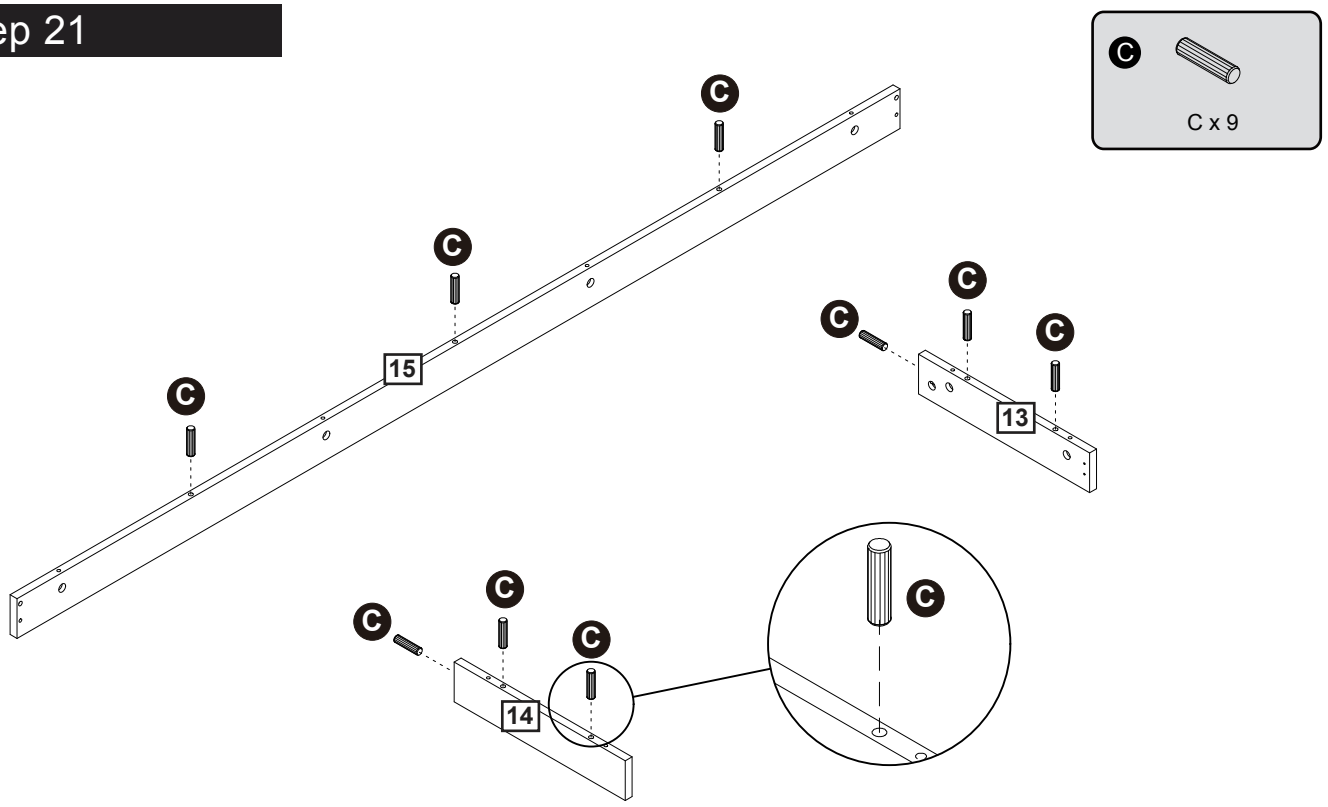


Insert Wooden dowel (C) into Parts (13, 14, 15).


Step 22

CAM-LOCK
Tighten until shoulder is flush with panel.Do not overtighten or undertighten(see example below)

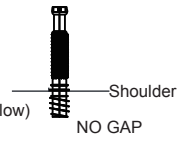

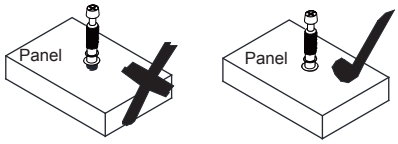

Step 22-1

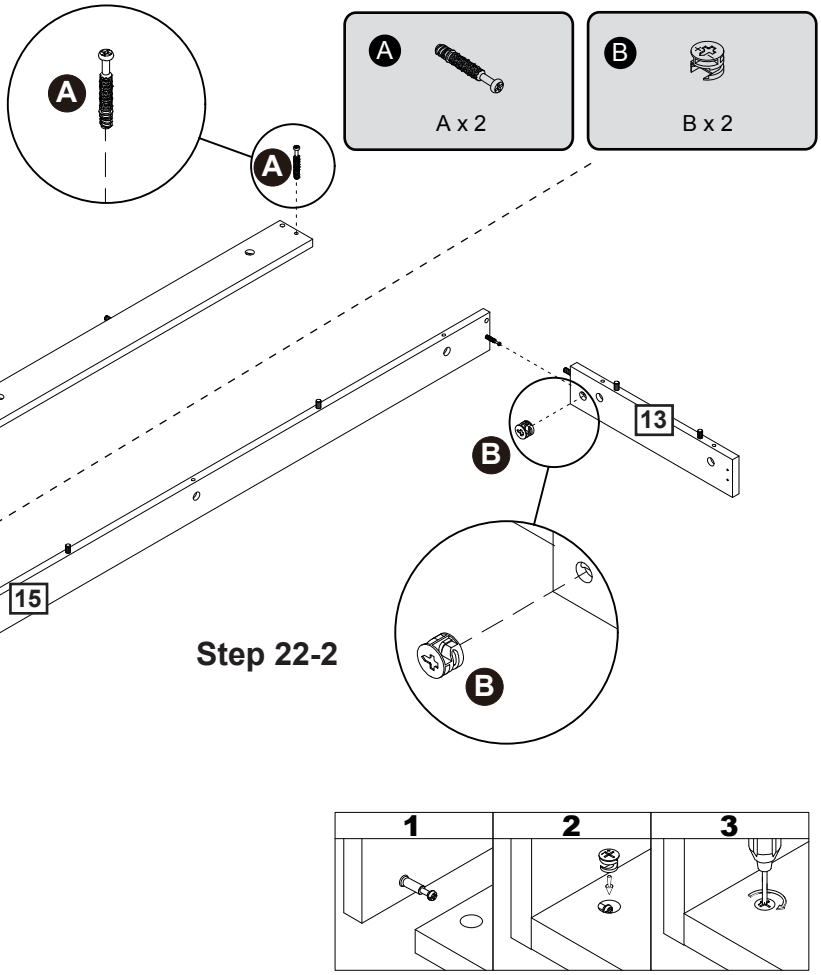


Step 22-2

Attach Cam bolt (A) to Part (15) with a screwdriver.
Attach Parts(13,14) to Part(15), then insert Female Cam lock(B) to Parts(13,14) and twist to secure.


Assembly Instructions

Step 23

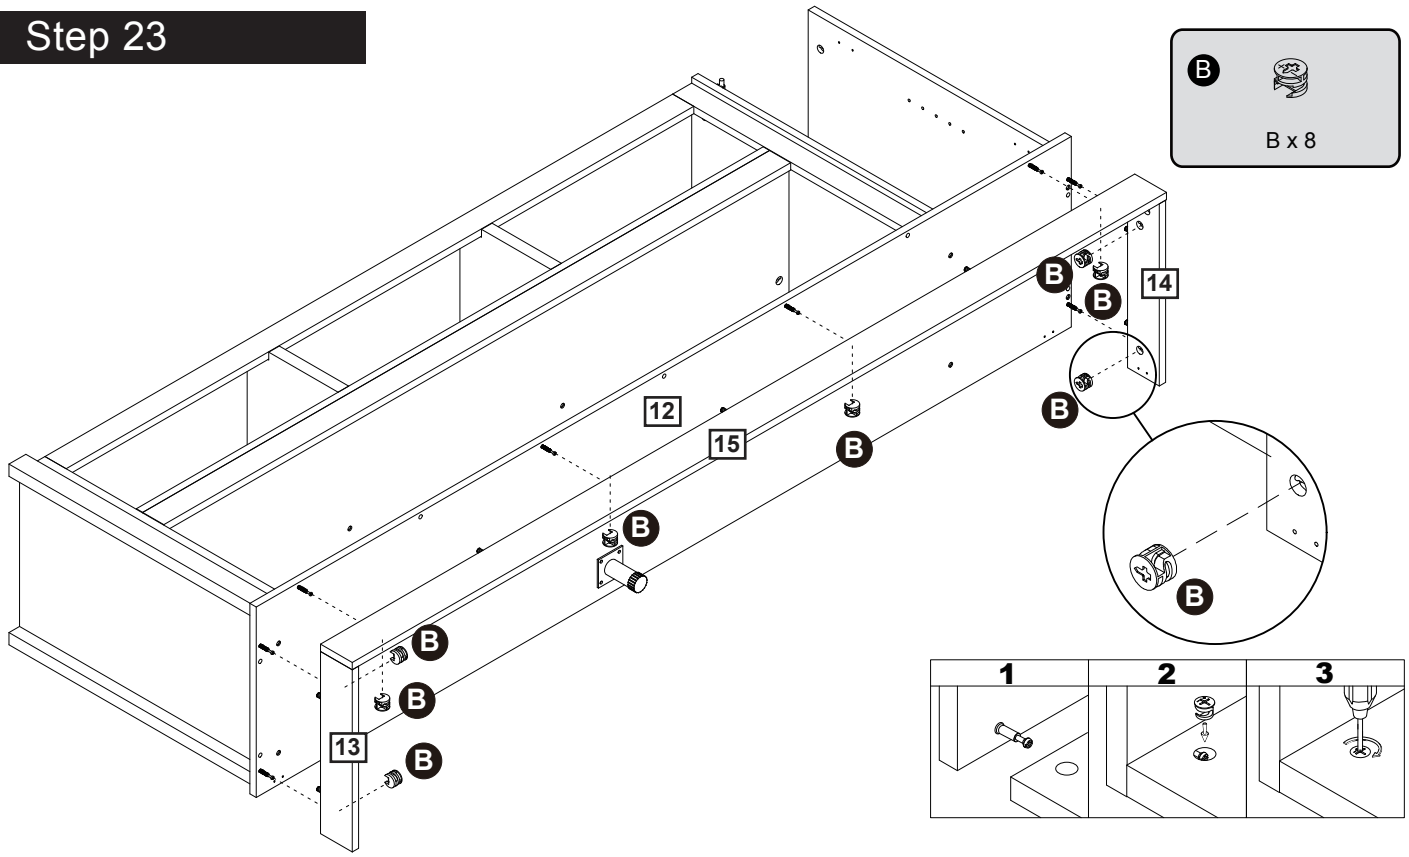

Attach Parts (13, 14, 15) to Part (12), then insert Cam lock (B) to Parts (13, 14, 15) and twist to secure.


Step 24

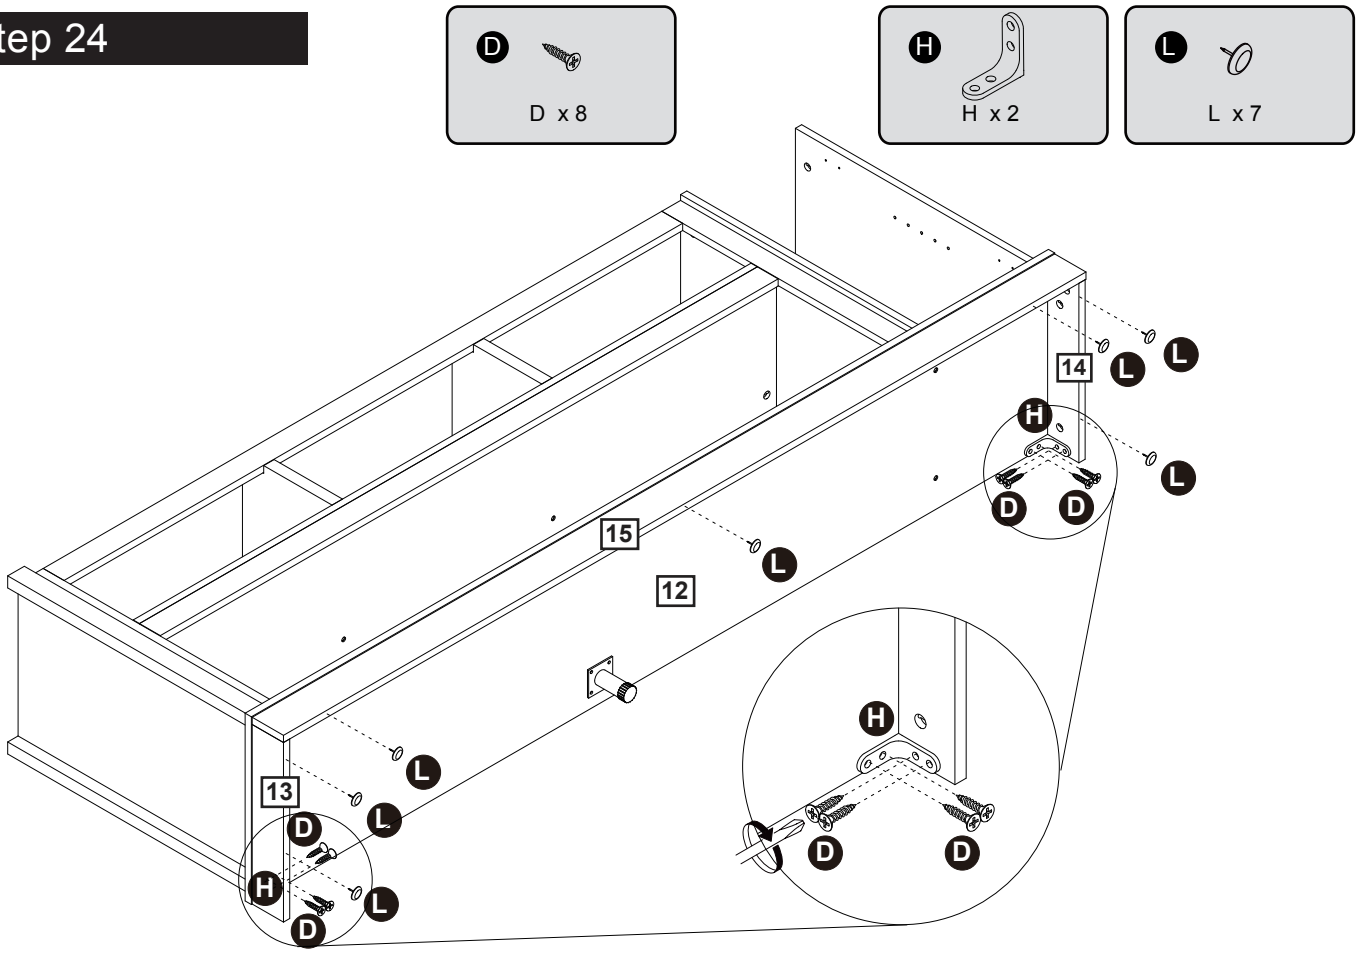



Attach L Shape bracket (H) to Parts(12,13,14), using screw(D) with a screwdriver.
Insert Protective feet (L) to the panels.

Assembly Instructions


Step 25

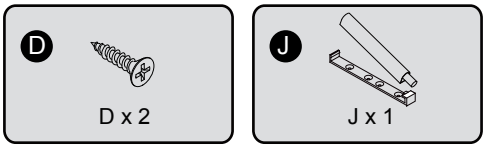


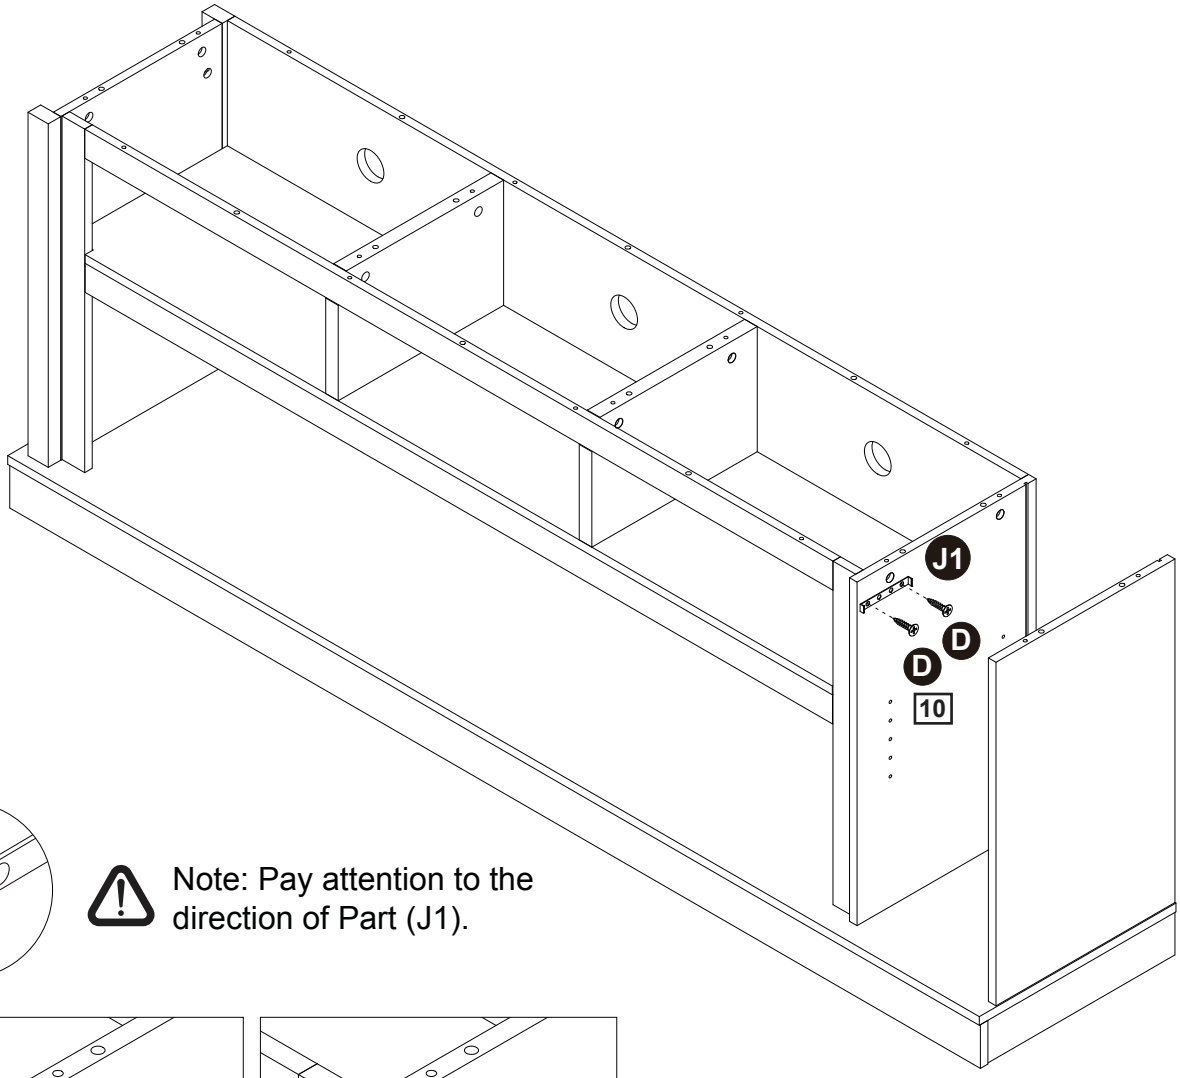

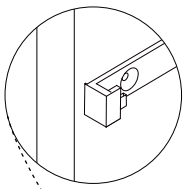

Note: Pay attention to the direction of Part (J1).

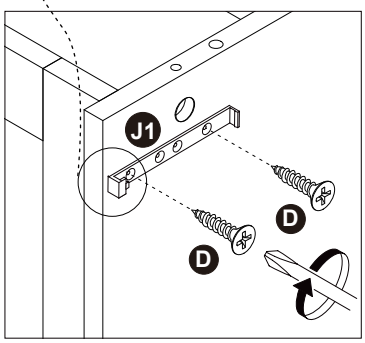


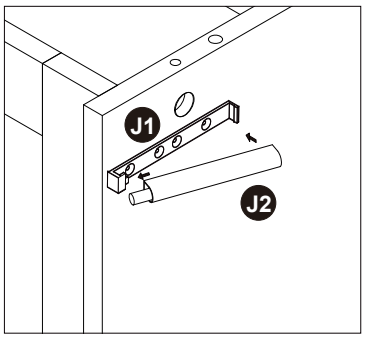

Use Screw (D) to secure (J1) to Part (10) with a screwdriver, and then snap (J2) into the (J1).


Assembly Instructions


Step 26

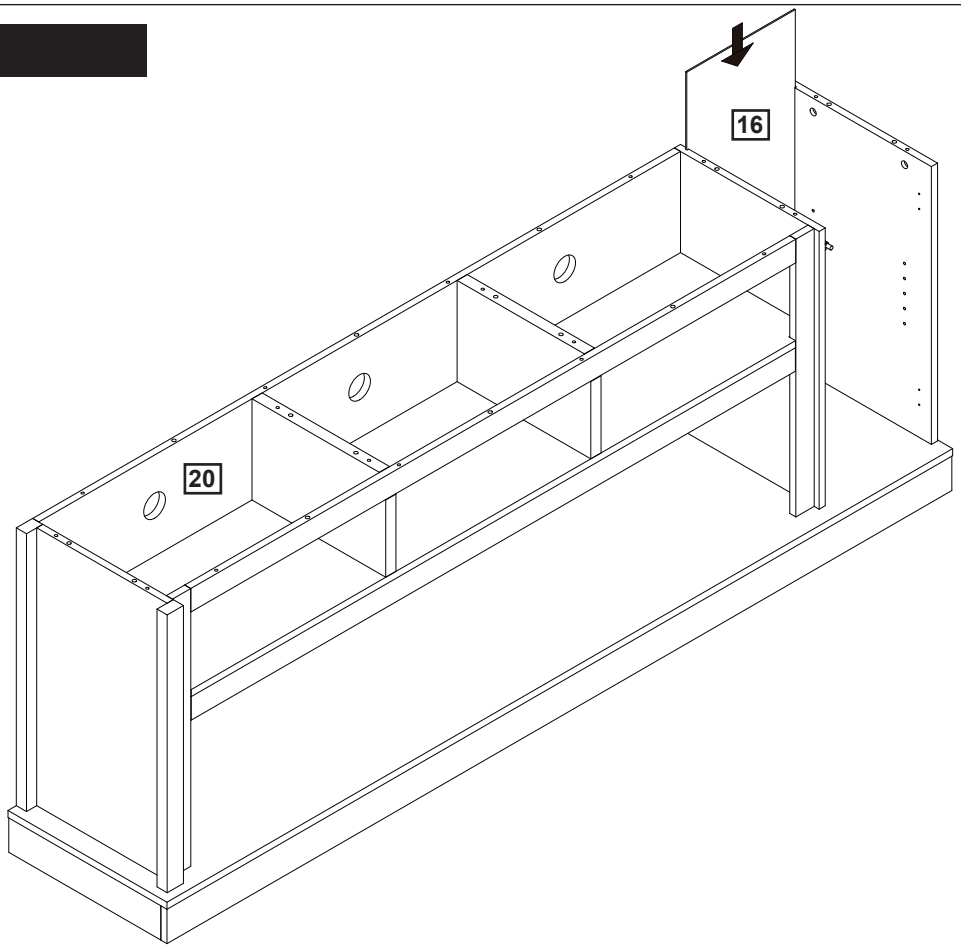

Slide the Back panel (16) into grooves as per diagram.

Step 27

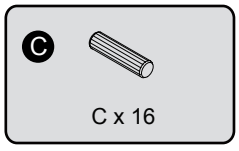


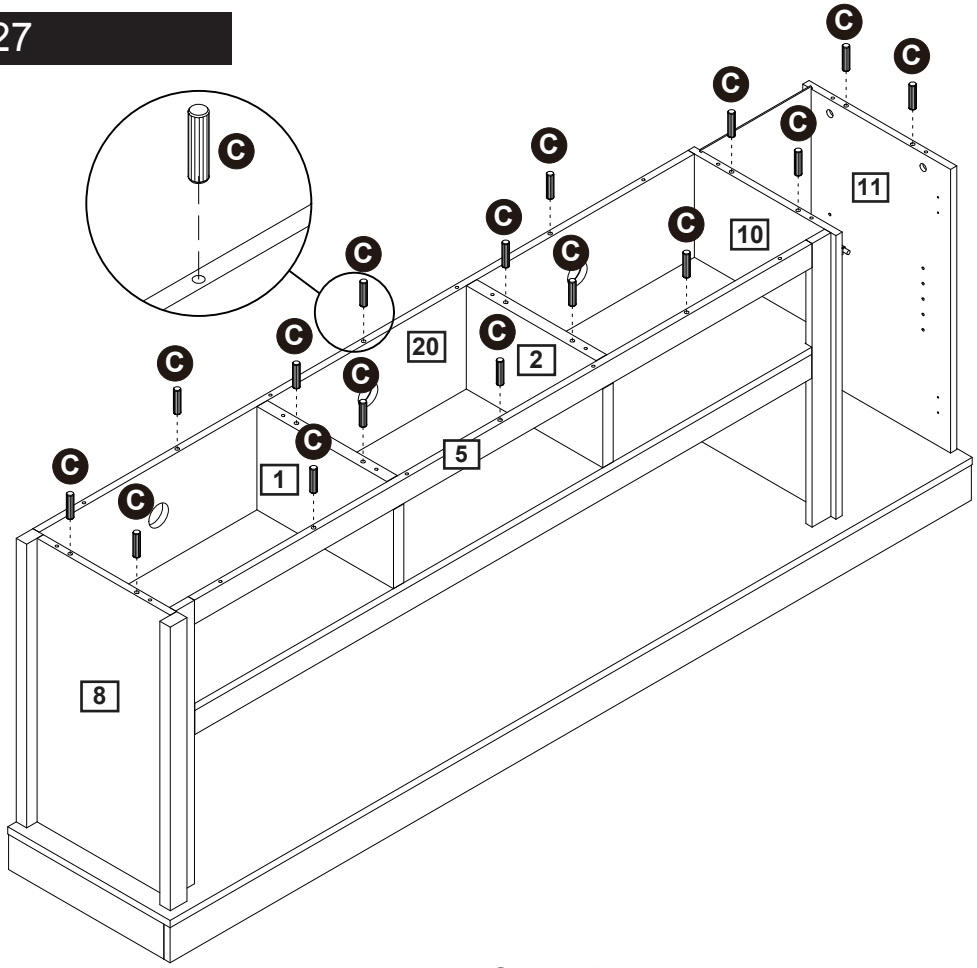


Insert Wooden dowel (C) into Parts (1, 2, 5, 8, 10, 11, 20).


Assembly Instructions


Step 28

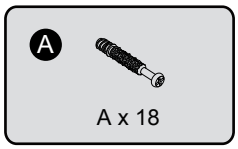

CAM-LOCK
Tighten until shoulder is flush with panel.Do not overtighten or undertighten(see example below)

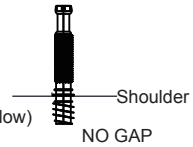

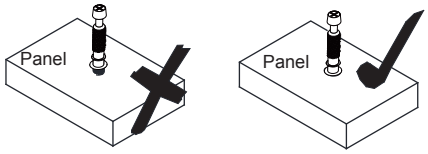

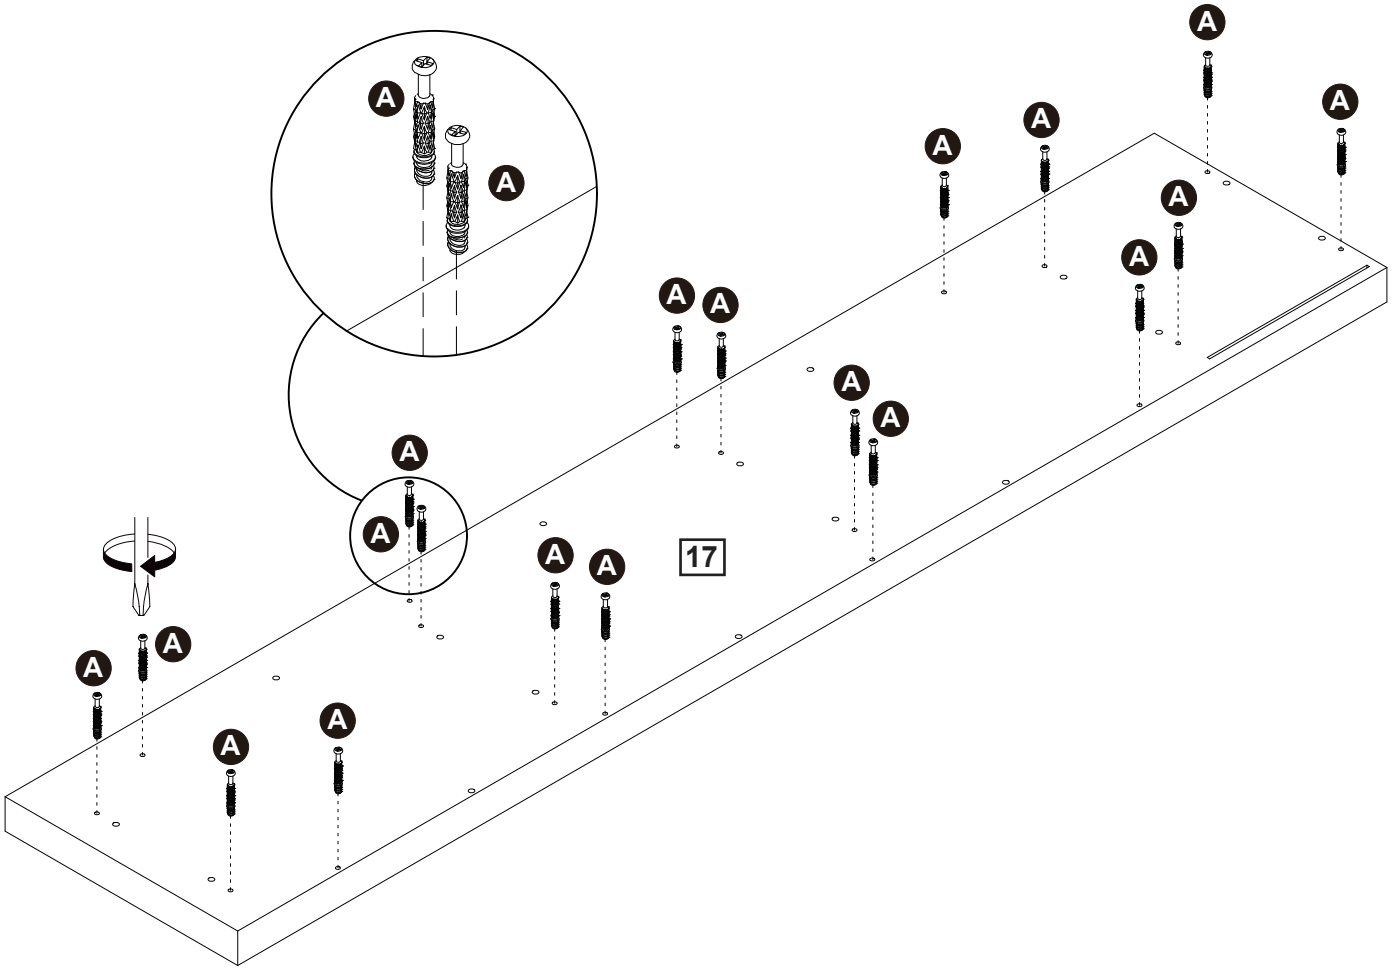


Attach Cam bolt (A) to Part (17) with a screwdriver.

Assembly Instructions

Step 29

TWO PEOPLE REQUIRED


B x 18

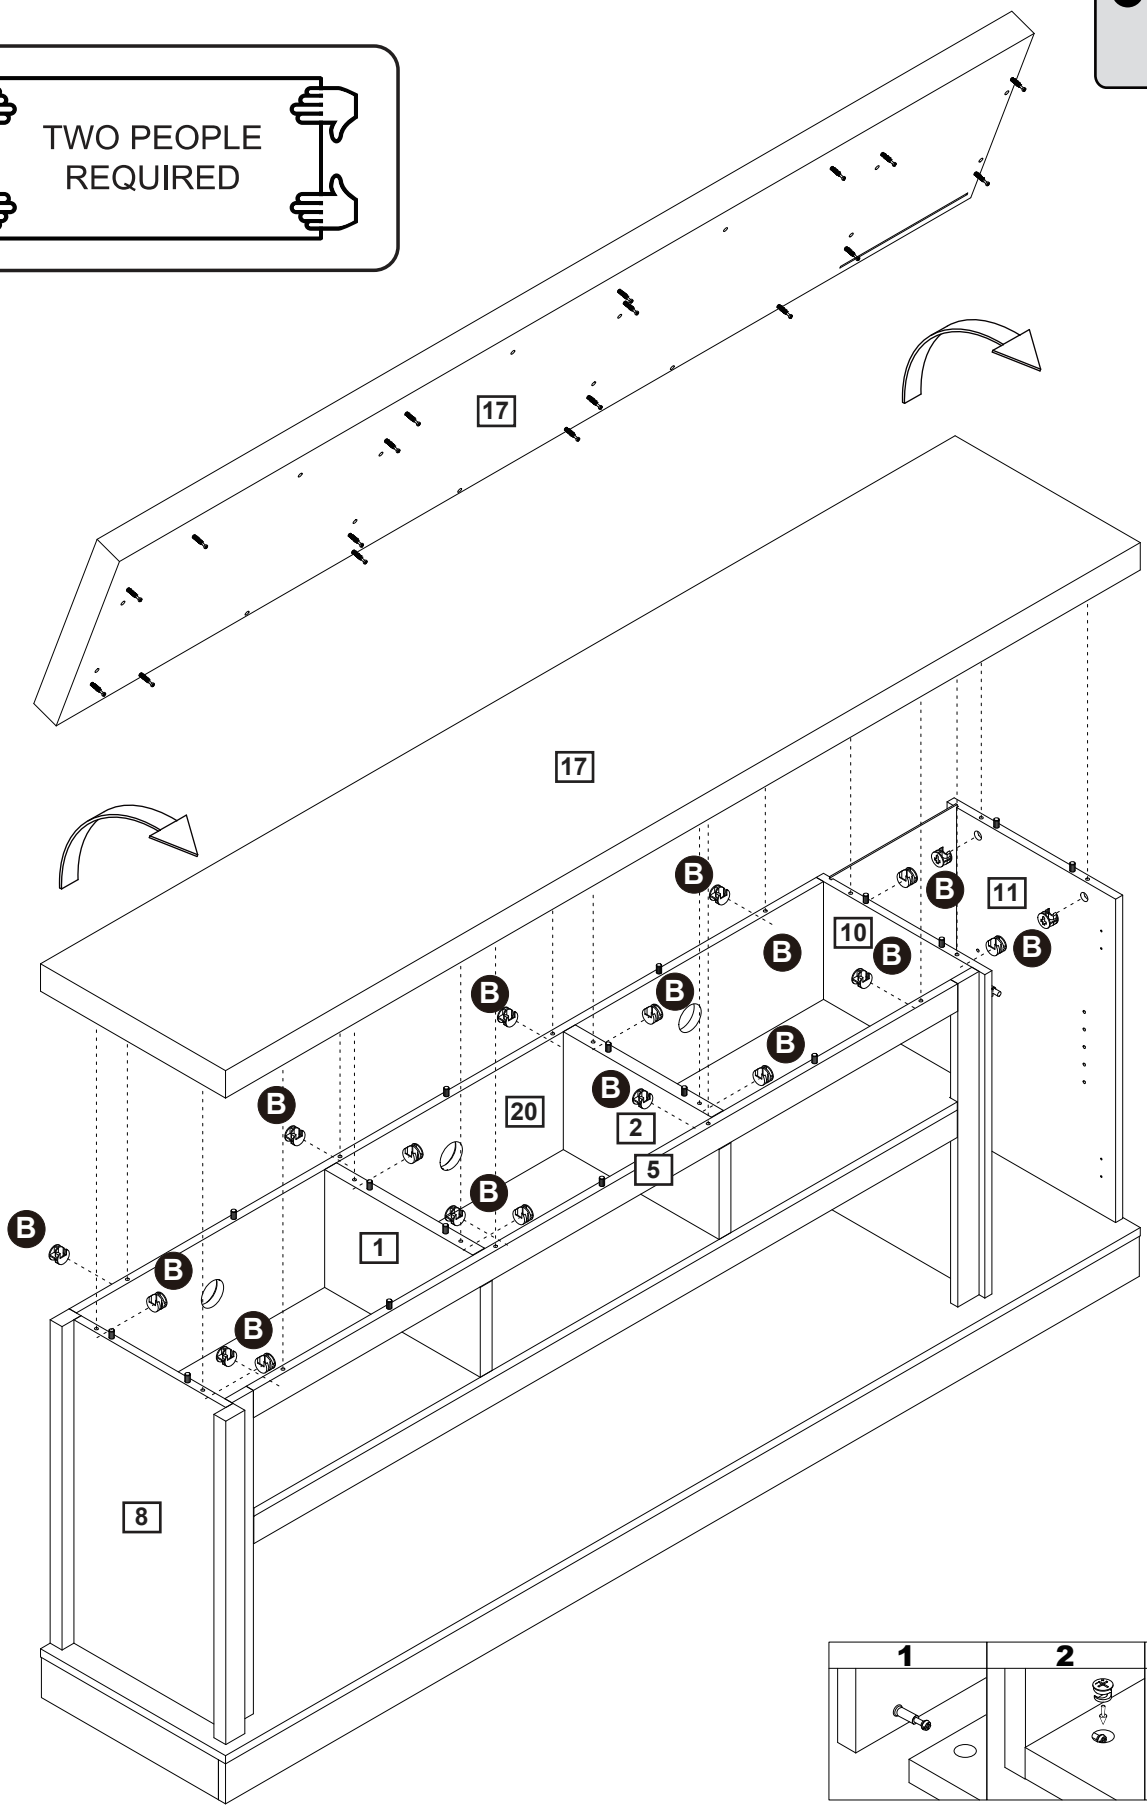



Attach Part (17) to Parts (1, 2, 5, 8, 10, 11, 20), then insert Female Cam lock (B) to Parts (1, 2, 5, 8, 10, 11, 20) and twist to secure.

Assembly Instructions

Step 30

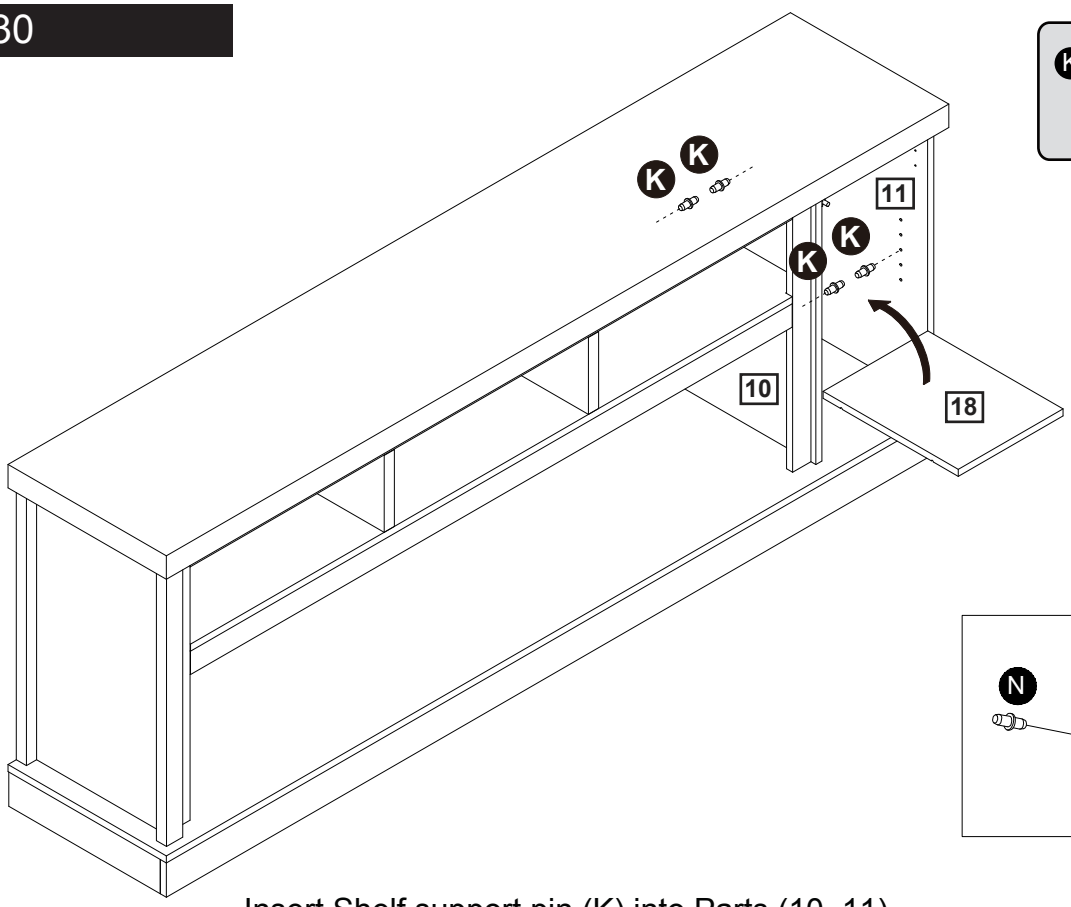


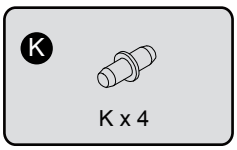


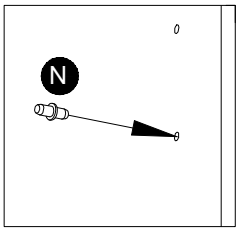

Insert Shelf support pin (K) into Parts (10, 11).
Place Part (18) on the top of Support pins.

Step 31

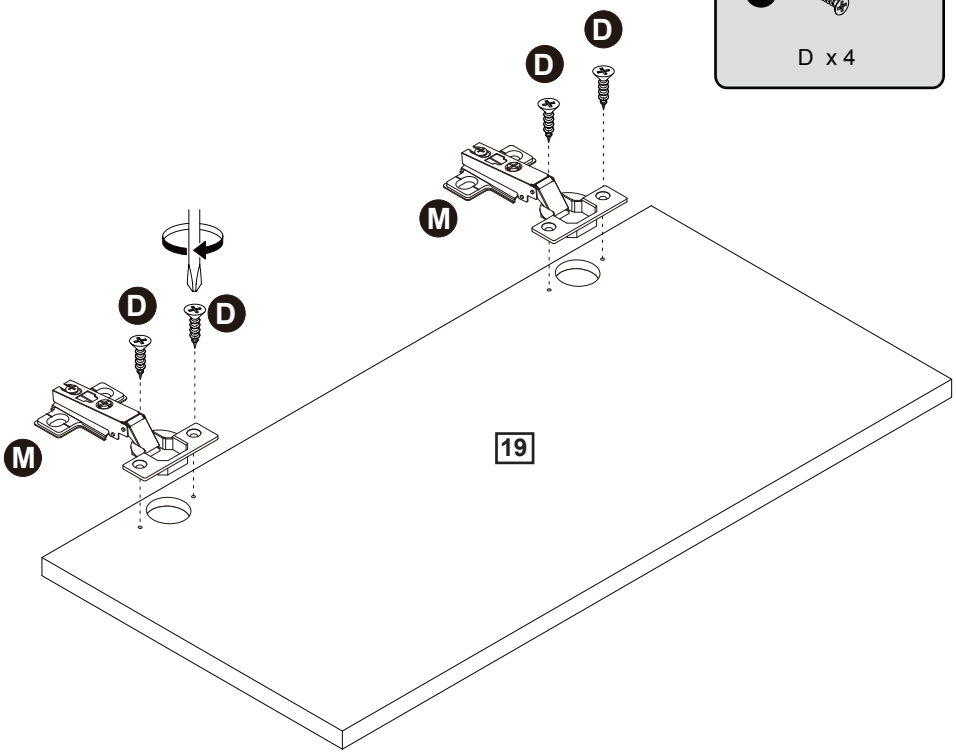


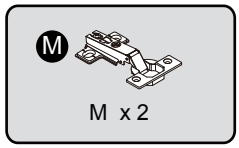


Use Screw (D) to secure Hinge (M) to Part (19).

Assembly Instructions


Step 32

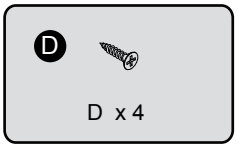

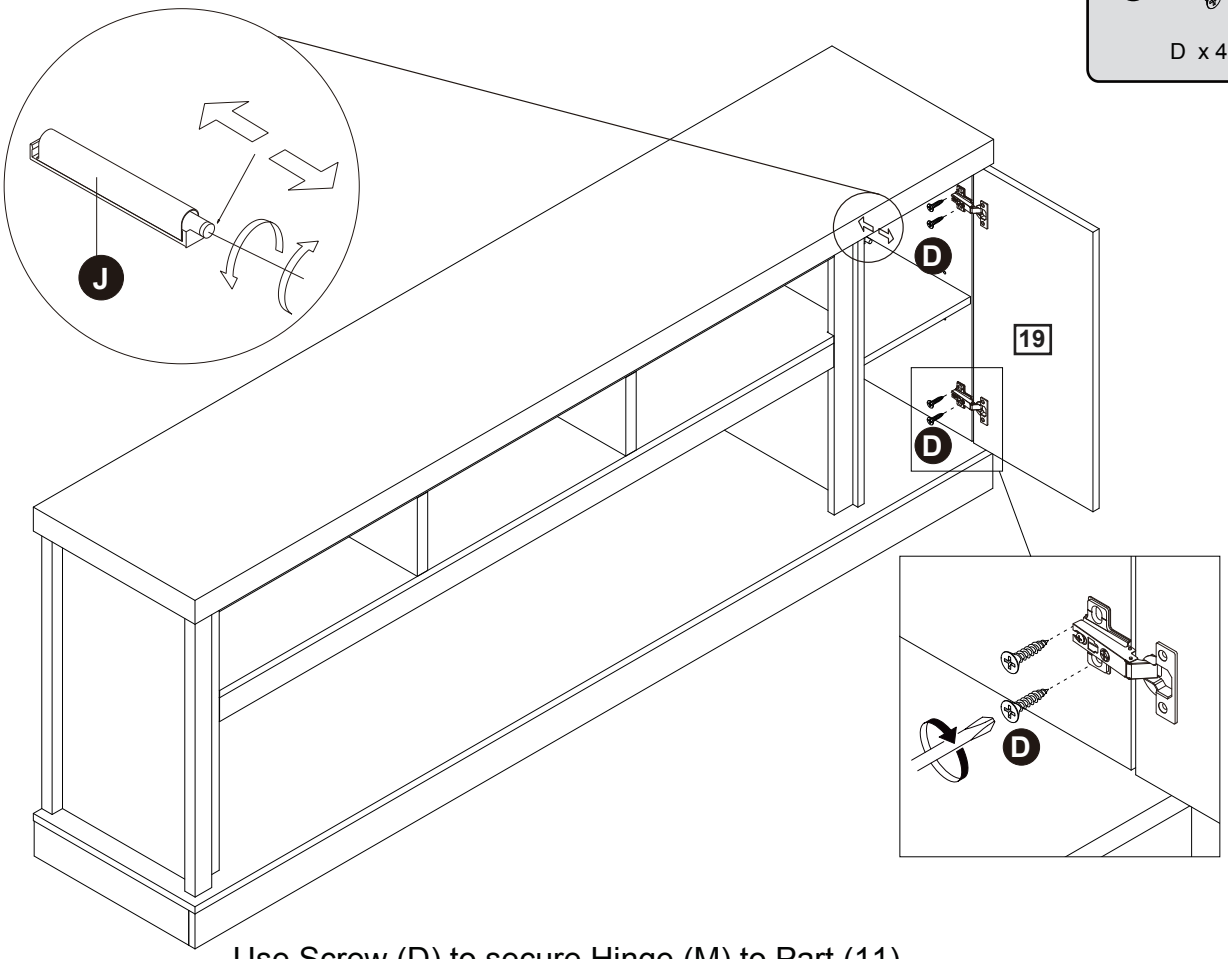

Use Screw (D) to secure Hinge (M) to Part (11).
Adjust push-open latches so that the doors can close tightly.


Step 33

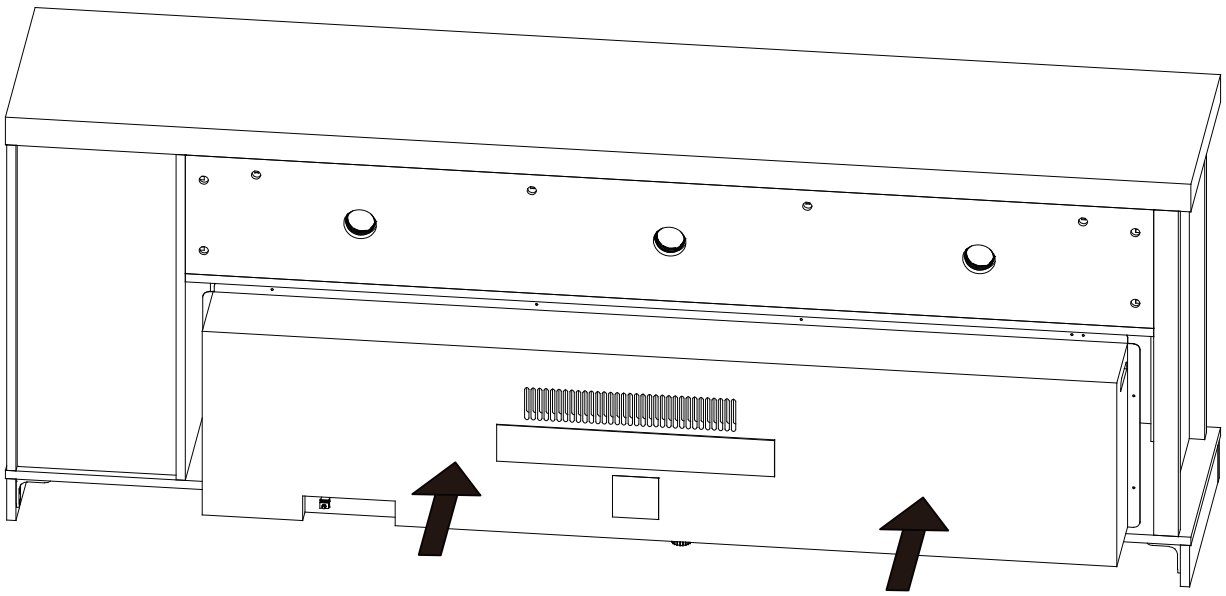


Insert the fireplace from the back of the TV Stand.

Assembly Instructions


Step 34

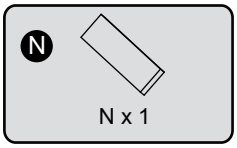


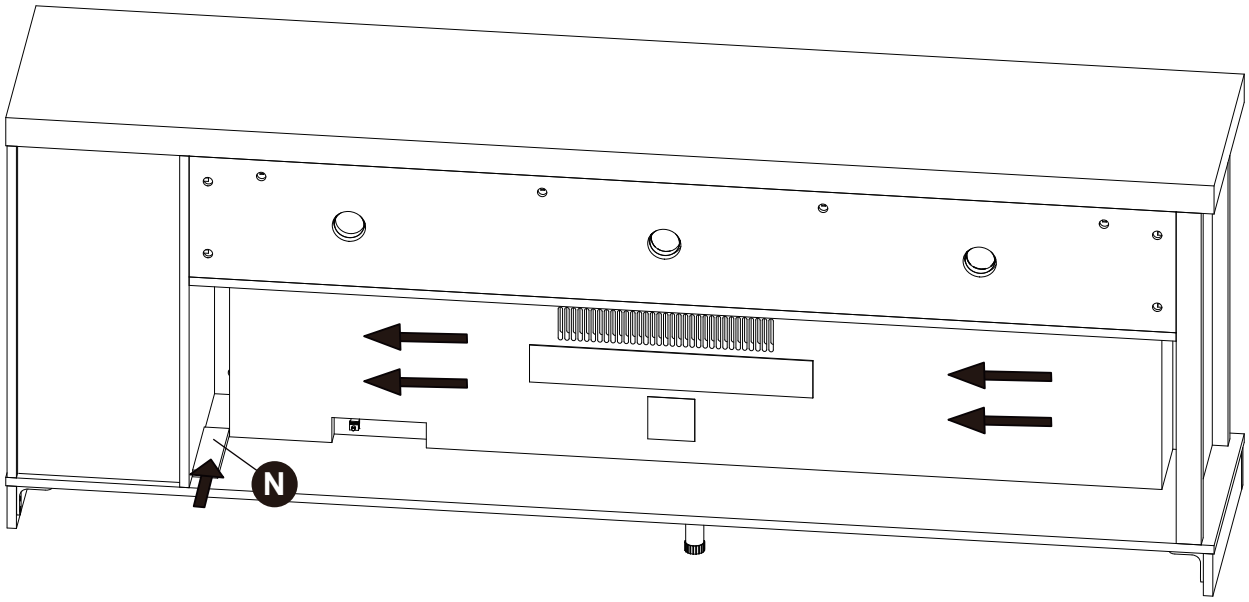

In order to center the fireplace, insert the positioning panel(N) into the gap between the fireplace and the TV stand, and push the fireplace to the left until it cannot be pushed.

Step 35

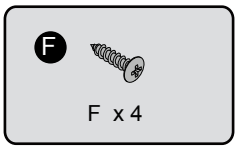


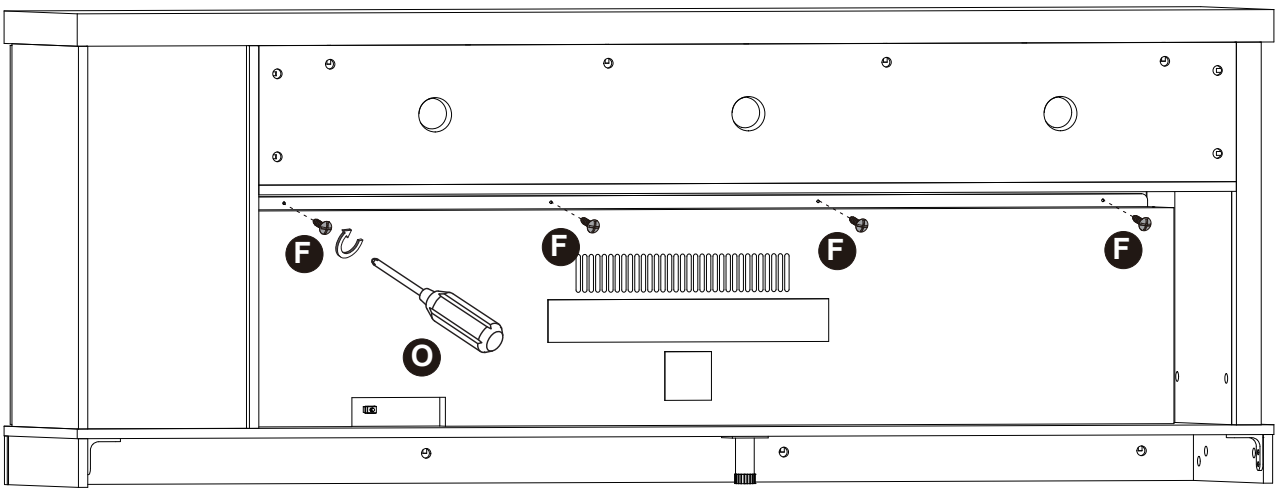


Attach fireplace insert to TV stand using screw (F) with a screwdriver .
Note: A screwdriver with a length of 260 mm is required .

Assembly Instructions

Step 36

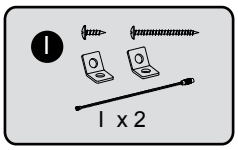

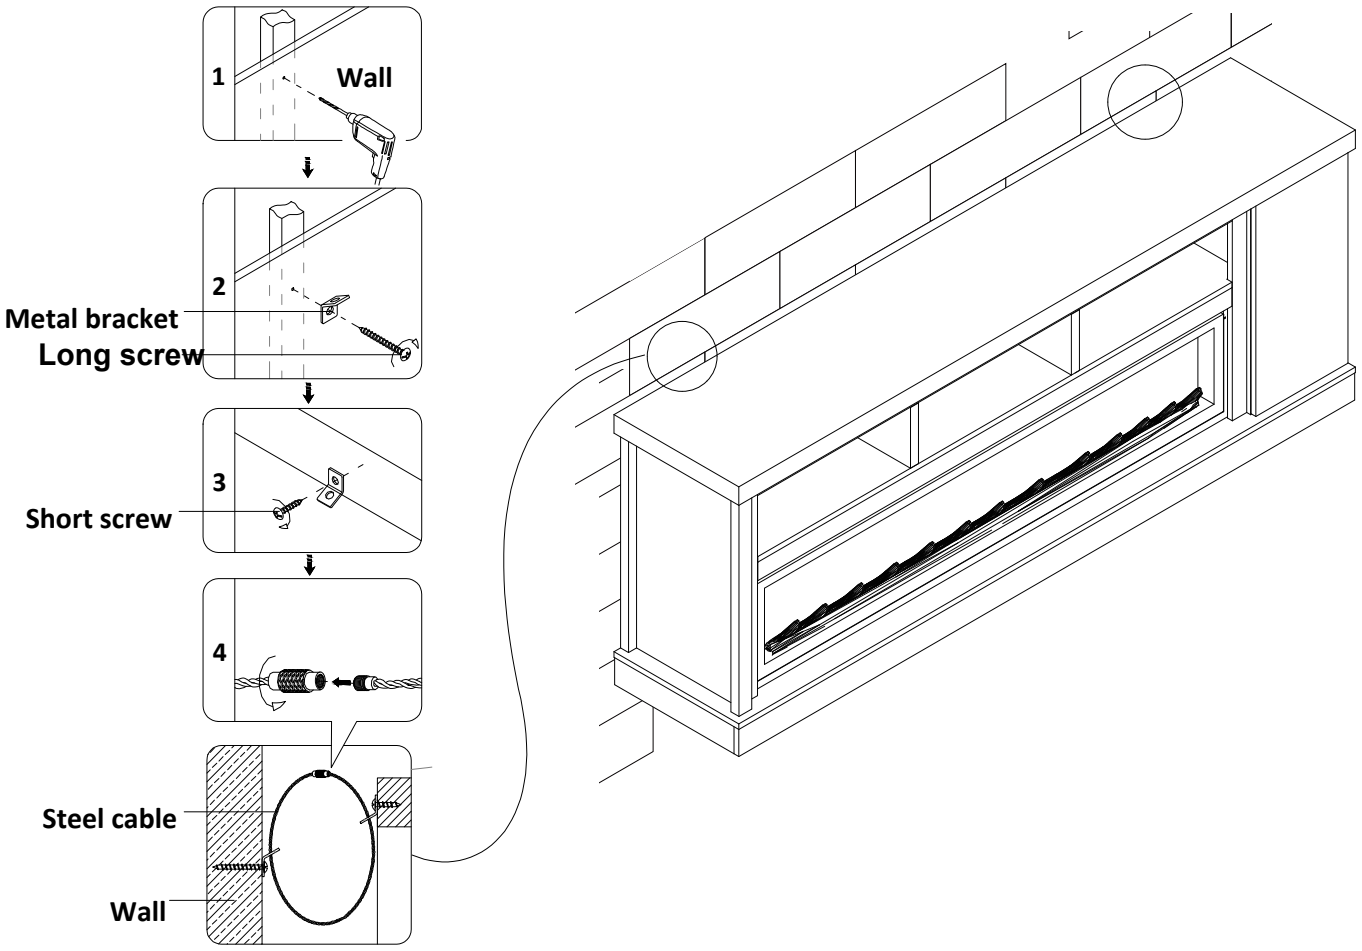

Follow the instructions printed on the plastic bag containing the Tipping Restraint Hardware to attach the tip-over restraints to the unit and the wall.

Assembly is complete.

A Guide to Wall Mounting & Fixings

Important note:

If plastic wall plugs (rawl plugs) are supplied with your product, e.g.:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using the incorrect fixings is the responsibility of the installer.

Important: when drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for **supporting your unit. Consult a qualified tradesperson if you** are unsure.


Hints:

1: General rule: always use a larger screw and wall plug if you are not sure.
2: Ensure you use the recommended drill bit to match the wall plug and hole size.
3: Ensure you drill the hole horizontally; do not force the drill or enlarge the hole.
4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 “General Purpose” wall plug

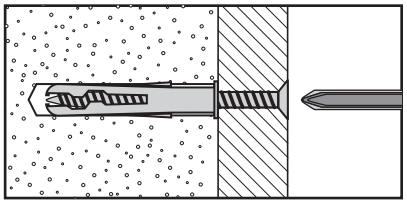


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.3 “Cavity Fixing” wall plug

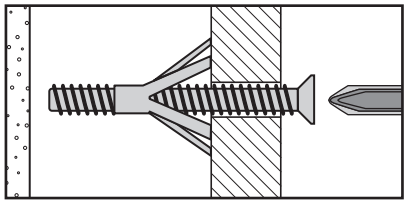


For use with plasterboard partitions or hollow wooden doors.

No.5 “Hammer Fixing” wall plug

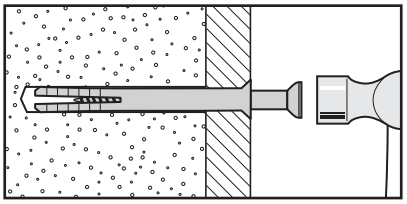


For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.2 “ Plasterboard” wall plug

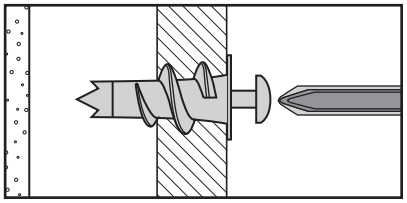


For use when attaching light loads onto plasterboard partitions.

No.4 “ Cavity Fixing – Heavy Duty” wall plug

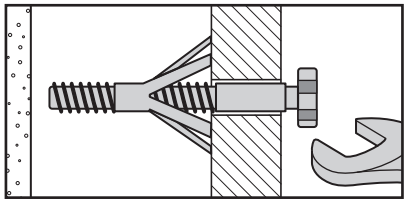

For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.6 “ Shield Anchor” wall plug – heavy loads

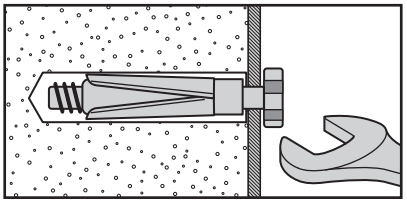

For use with heavier loads such as TV and HiFi speakers and satellite dishes etc.

Care & Maintenance

Safety: always check the fitting and location to ensure your safety in and around the home.

Fitting: from time to time check the fitting to ensure the wall plugs or screws do not become loose.