


INSTALLATION INSTRUCTION

Warning!!! Shut Power Off At Fuse or Circuit Breaker .

Safety:

FOR YOUR SAFETY WARNING: BE SURE THE ELECTRICITY TO THE WIRES YOU ARE WORKING ON IS SHUT OFF; EITHER THE FUSE IS REMOVED OR THE CIRCUIT BREAKER IS SHUT OFF.

Generally, you don't need special tools to install this fixture. Be sure to follow the steps in the order given. Under no circumstances should a fixture be hung on house electrical wires, nor should a swag type fixture be installed on a ceiling which contains a radiant type heating system. Read instructions carefully. If you are unclear as to how to proceed, consult a qualified electrician. NOTE: Proper wiring is essential for the safe operation of this fixture.

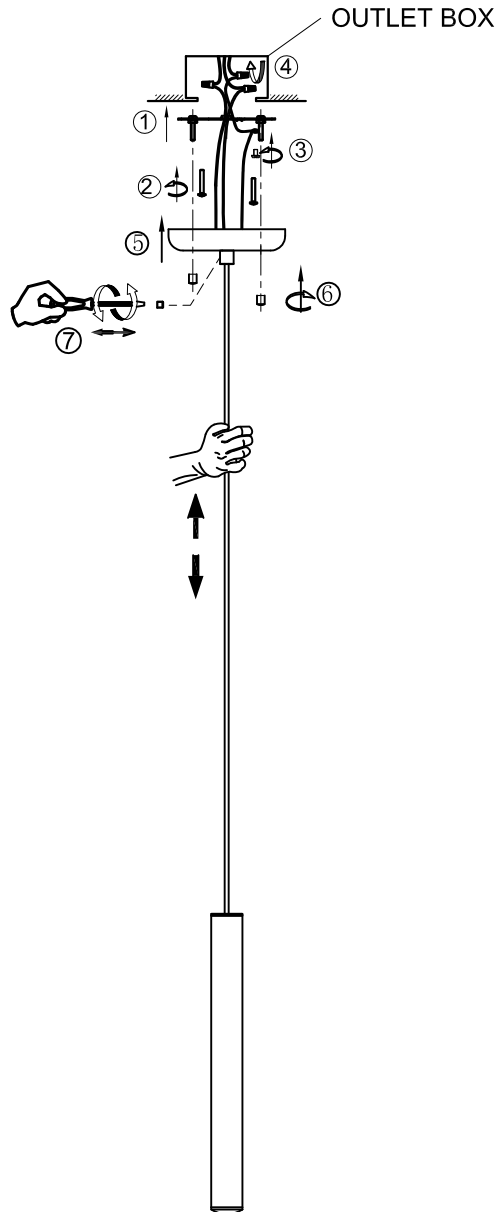


FEATURE

- 120V ~ 60Hz
 - Lamp Type: AC LED 1 x 5W(450Lm)
- The lamp is for indoor use only
Turn power off to outlet before beginning installation

Wire Connections:

Connect the fixture wires to the Outlet Box wires as follows. Connect the White Fixture wire to the White Supply Wire, Connect the Black Fixture Wire to the Black Supply Wire. Make sure all wire Connectors are secure and do not easily pull off with the slight tug. If there is no Green Ground Wire from the Outlet Box, Connect the Fixture Ground Wire to the Cross Bar with the Green Grounding Screw provided. Once all wires are connected, tuck them carefully into Outlet Box.

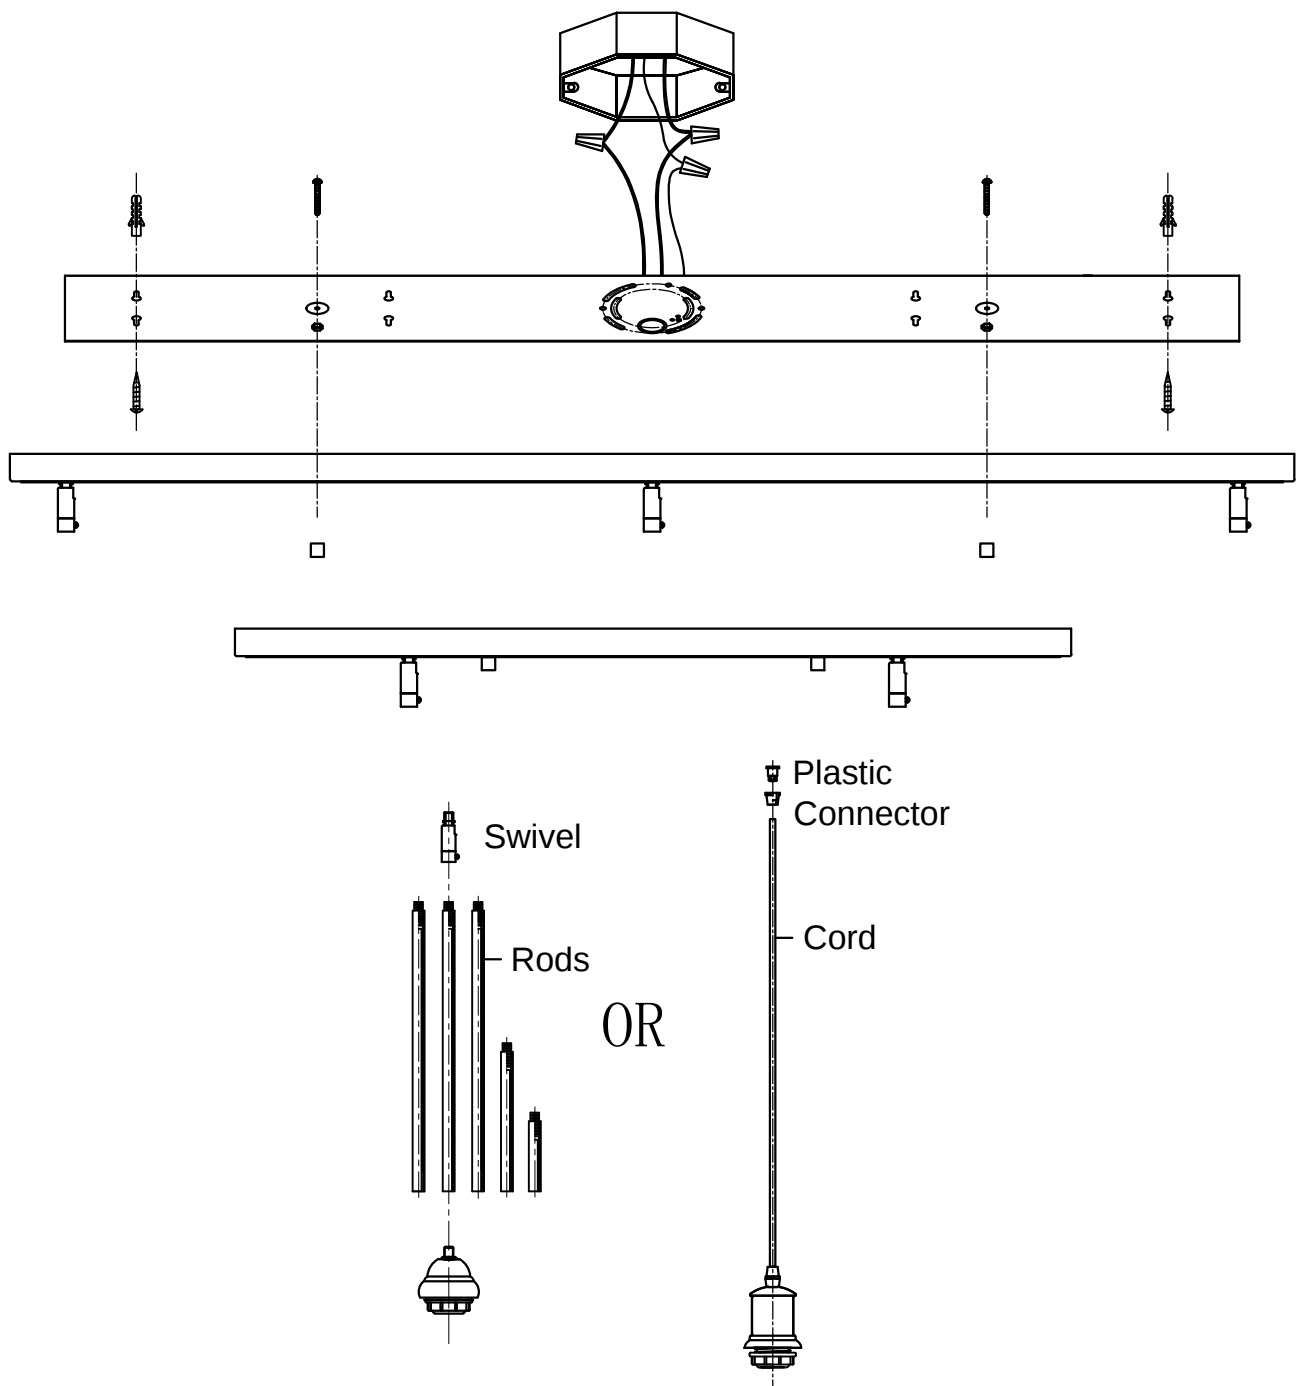

Rod mount fixture: Use the swivel included or the swivel from your fixture kits. Do not use plastic connectors.

Cord mount fixture: Use the plastic connectors included or use the plastic connectors from your fixture kits. Do not use the swivels.

1-Fasten mounting plate to the outlet box and to the building structure at ends of the mounting plate prevent sagging.

2-Estimate height of fixtures and rods or cord needed to achieve this height.

3-Follow fixture directions for cord or rod preparation and installation.

4-For Rod installation fasten swivel to top of rod set.

5-thread wires or cord through the face plate of the ceiling plate.

6-prepare wires and connect them to building wiring as per instructions included with fixture kits.

7-Once wire connections are finished carefully tuck in wires and lift the face plate up to slide onto the two studs sticking down allowing them to protrude through the face plate.

8-Fasten the faceplate to the two studs protruding through it with the cylinder nuts.