




# Gazebo GZH3-1212BK

## Aluminium Composite Roof Panels

### Assembly Instructions

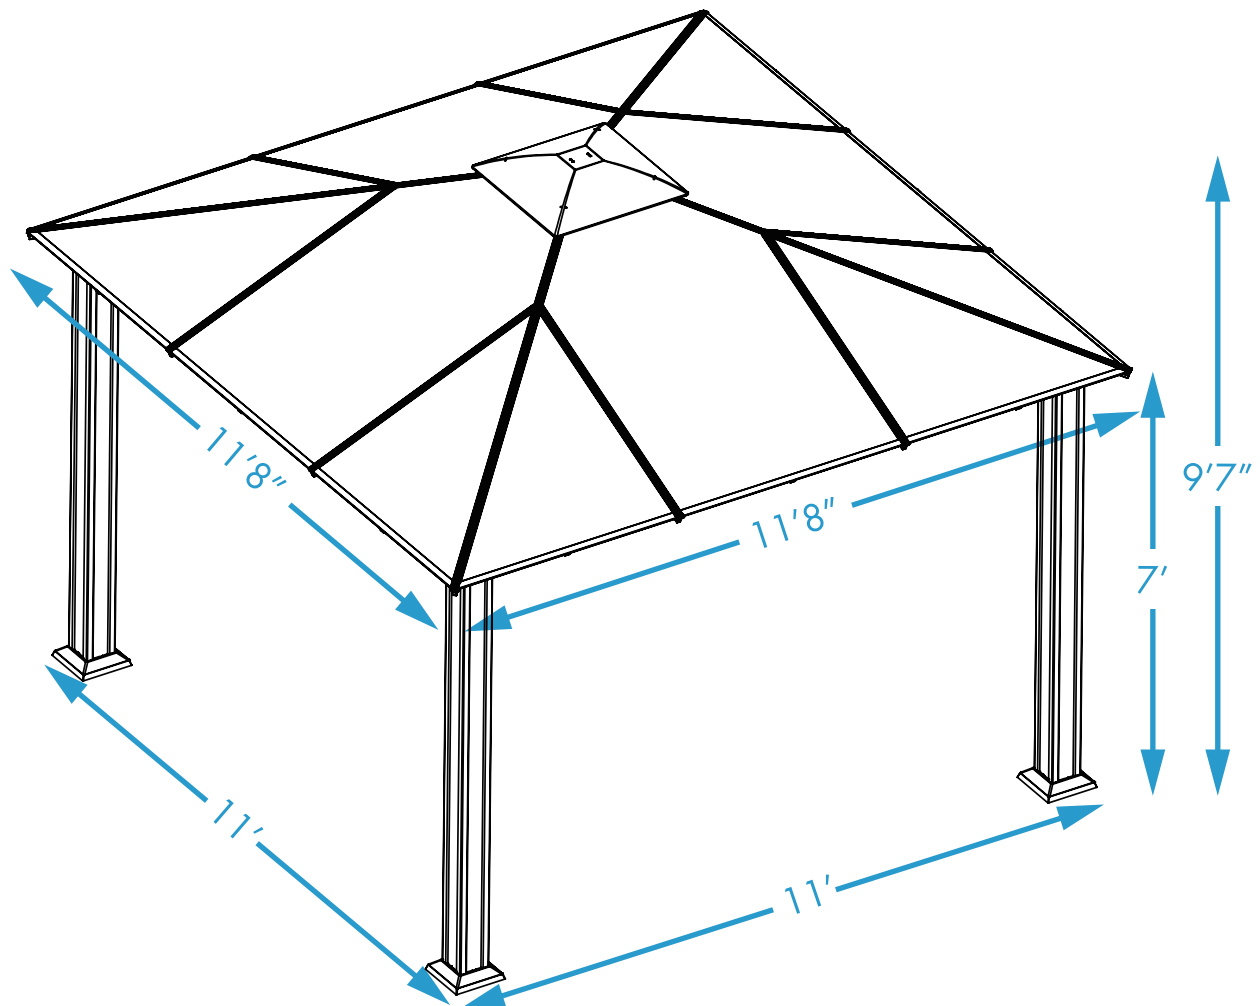


Instagram Facebook @paragonoutdoorcompany

Paragon Group USA

Customer Service: (877) 782 4482 Email: cs-outdoors@paragongroupusa.com

# Introduction

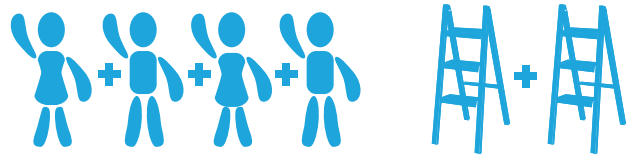

Thank you for purchasing the Gazebo GZH3-1212BKA.

When properly assembled and maintained, this gazebo will provide many years of enjoyment!

These instructions include helpful hints and important information needed to safely assemble and properly maintain the gazebo. Please read these instructions completely before you begin.

Our patented gazebo has been designed for easy assembly. All steps can be completed by a team of four people.

## Before Starting Assembly:

CAREFULLY READ ALL THE INSTRUCTIONS BEFORE YOU BEGIN AND FOLLOW THE STEPS IN THE ORDER THEY ARE PRESENTED.

### 1. Make sure you have all the necessary parts:

Compare the contents of all cartons to the List of Parts. If any parts are missing or damaged, or you have any questions, please contact Customer service: (877)782 4482 before beginning assembly.

### 2. Lay the parts out in separate staging areas:

The List of Parts has the corresponding step number referenced to each part. We recommend that while you go through the list, make staging areas for each step and place the parts necessary for each step in these areas. This will save you time and effort during assembly.

### 3. Select a Location:

When selecting a location for your gazebo, a flat level area is essential and if possible with proper water drainage and easy access to power and water, if necessary.

Choose a sunny, level position away from overhanging trees and power lines and protected from the wind as much as possible. Locate underground pipes or cables before preparing the site or anchoring the gazebo.

Note: You may assemble the gazebo on a hard level surface and move it to its final location when finished. Make sure that there are no obstacles between the assembly area and the final position.

### 4. Prepare a Foundation:

After choosing a location, proper preparation of the site is recommended. The site must be level.

If the site is not level, create a base slightly larger than the outside dimensions of the gazebo using a perimeter of two by fours filled with either soil, sod or gravel.

Make sure the base is square by measuring the diagonals from both directions and making sure they are equal. The gazebo is secured with pegs into holes cast with concrete.

If you decide to have a concrete base, it is best to contact a reliable contractor to make sure it is flat and level. Make sure you have checked with your local authorities regarding any required building permits.

### 5. Make sure you have the proper tools:

- Tape Measure
- Work Gloves
- Safety goggles
- Phillips Screwdriver
- Spirit Level
- 3/8" masonry drill bit to drill holes for the concrete anchors supplied.
- 2 Small Step Ladders
- Wooden Mallet
- Scissors and knife
- Liquid soap or WD40 Lubricant
- Hex Key

NOTE: A cordless drill with Phillips head bit is highly recommended but not essential.

## Safety Advice

- The gazebo must be positioned and fixed on a flat level surface.
- Dispose of all plastic bags safely. Keep them out of the reach of children.
- Keep children and pets away from the assembly area until the work is completed.
- Always wear shoes, gloves and safety goggles when working.
- Take special care not to touch overhead power lines with the aluminium profiles.
- Do not attempt to assemble the gazebo in windy or wet conditions.
- Do not position your gazebo in an area exposed to excessive wind.
- If using power tools or a ladder, always follow the manufacturers safety instructions.
- Hot items such as recently used grills, blowtorches etc. must not be stored in the gazebo.
- Make sure the gazebo complies with local building codes.




**ATTENTION:** DO NOT  
ATTEMPT TO ASSEMBLE  
THE GAZEBO ALONE!

## Table of Contents

Introduction.....	2
Table of Contents.....	3
List of Parts.....	4
<b>Step 1</b> : Assembling the Corner Profiles .....	6
<b>Step 2</b> : Assembling the Rails.....	8
<b>Step 3</b> : Attaching the Rails to the Corner Profiles .....	10
<b>Step 4</b> : Securing the Gazebo to the ground .	12
<b>Step 5</b> : Installing the Lower Roof Gable Profiles	13
<b>Step 6</b> : Installing the Roof Panels and Upper Roof Profiles.....	18
<b>Step 7</b> : Installing the Plastic Caps .....	22

## General Order of Assembly






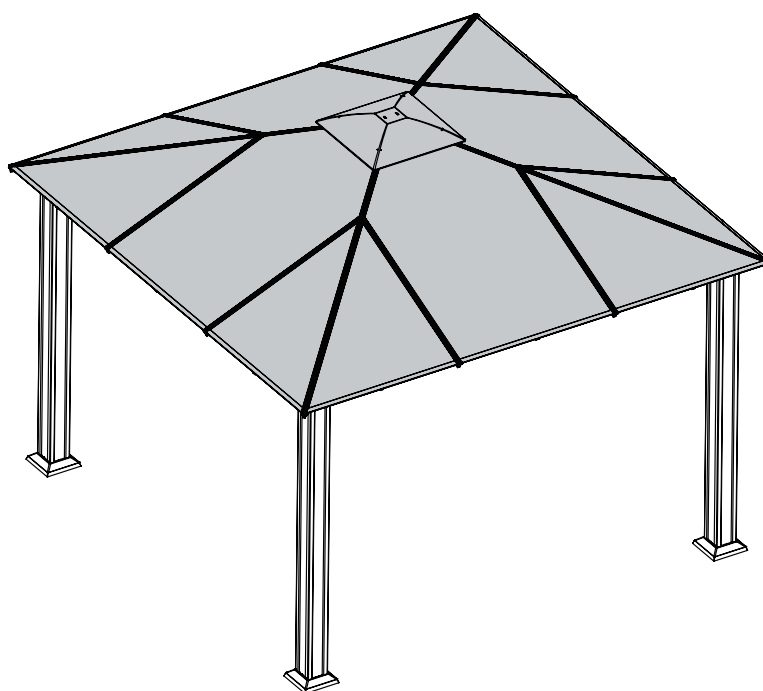




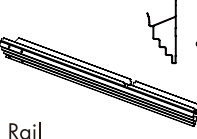


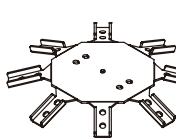


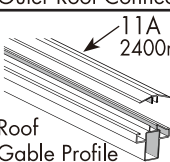

- Step 1** : Assembling the Corner Profiles
- Step 2** : Assembling the Rails
- Step 3** : Attaching the Rails to th Corner Profiles
- Step 4** : Securing the Gazebo to the ground
- Step 5** : Installing the Lower Roof gable Profiles
- Step 6** : Installing the Roof Panels and  
                  Upper Roof Profiles
- Step 7** : Installing the Plastic Caps





















# List of Parts

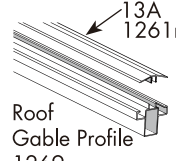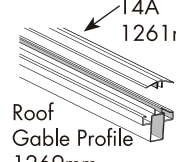

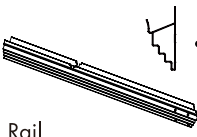The gazebo is shipped in four cartons. These cartons are heavy. Be careful when lifting them. Wear proper safety gear including work shoes, gloves and goggles. The parts are identified by removable stickers. Place all the parts for each step in staging areas, checking that you have all parts as you go. If any parts are missing or damaged, contact customer service before beginning assembly:  
Customer Service:(877) 782 4482 Email:cs-outdoors@paragongroupusa.com

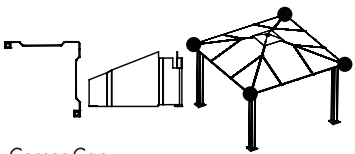
No.	Profile	Qty	Step	Box	No.	Profile	Qty	Step	Box
1	 Corner Profile 2190mm	4	1	2	12	 Roof Profile 1657mm	4	5	1
2	 Support Frame	4	1	3	13	 Roof Gable Profile 1269mm	4 4	5,6	2 1
3	 Support Plate	4	1	3	14	 Roof Gable Profile 1269mm	4 4	5,6	2 1
4	 Corner Roof Connector	4	1	3	15	 Aluminium Composite Roof Panel	4	6	4
5	 Rail 1678mm	4	2	2	16	 Aluminium Composite Roof Panel	4	6	4
6	 Rail 1678mm	4	2	1	17	 Aluminium Composite Roof Panel	4	6	4
9	 Inner Roof Connector	12	2	3	18	 Roof top Connector	1	5	3
10	 Outer Roof Connector	12	2	3	19	 Roof top Cover	1	5	3
11	 Roof Gable Profile 2507mm	4 4	5,7	2	23	 U-shaped Connector	2	5	3

No.	Profile	Qty	Step	Box
27	 Corner Cap	4	5	3
28	 Screw M6x8mm	32	2	3
29	 Screw M6x18mm	128	2,3,5	3
30	 Screw M6x25mm	32	1,5	3
31	 Screw M6x33mm	8	5	3
32	 Screw M6x38mm	56	6	3
34	 Screw ø4x8mm	12	6	3
35	 Nut M6	8	5	3
36	 Plastic Cap #3	32	3	3

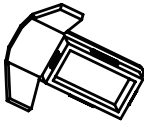No.	Profile	Qty	Step	Box
37	 Plastic Cap #1	8	7	3
38	 Plastic Cap #2	4	7	3
39	 Ground Spike	16	4	3
40	 Concrete Bolt M8x70mm	16	4	3
41	  Spanner      Magnetic Hex Key	1		3
42	 Hook	1	5	3
43	 Y - connector	4	5	3
51	 Rail connector	4	2	3


We included some extra screws and bolts for your convenience.

# STEP 1 Assembling the Corner Profiles

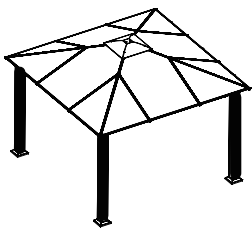


Place all the parts on a level surface.  
Make sure the pieces are in the correct positions before assembling.  
Carefully follow the order of assembly to ensure an easy installation.  
Wear proper safety gear including work shoes, gloves and goggles.


## Components

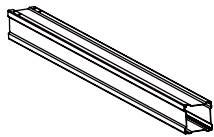

Corner profile (1)  
x 4




Support frame (2)  
x 4



Support plate (3)  
x 4



Corner roof connector (4)  
x 4




Screw (30)  
x 24




**ATTENTION:** The corner profile (1) has two screw holes to connect it to the roof connector (4) and 8 pre-drilled screw holes to attach rails (5,6) in step 3 at its top end. It has two screw holes to connect it to the support plate (3) at its bottom end.

1

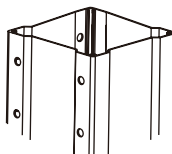

Top end



1

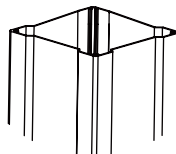


Bottom end

## 1.A

Place corner profiles (1) parallel to each other on the ground. Attach one Corner roof connector (4) to each top end as shown and fasten with screws (30).

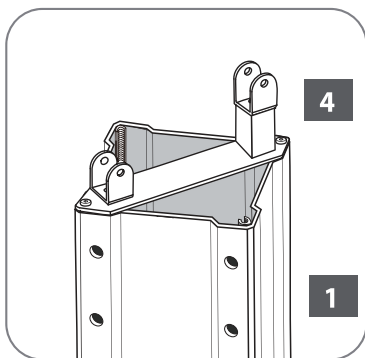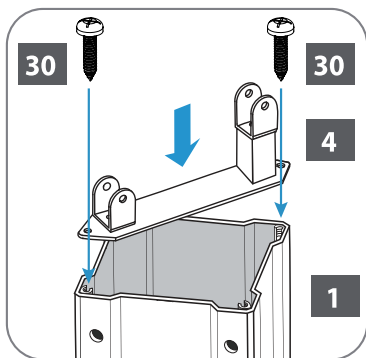

x 4



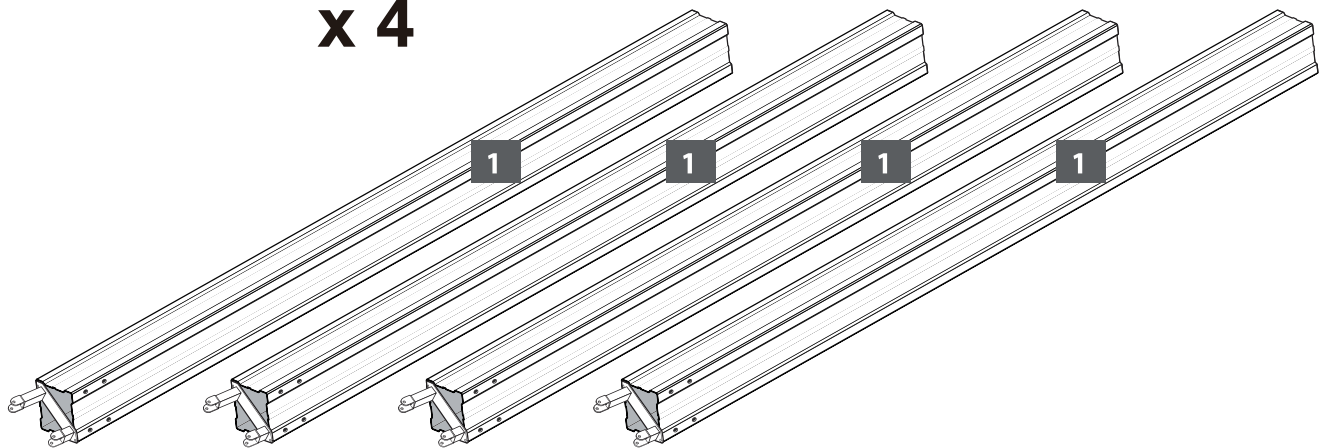






**ATTENTION:** Do not need to assemble support frame (2) if you purchased the screen netting.

### 1.B


Slide support frames (2) over lower end of corner profiles (1). Attach support plates (3) to corner profiles as shown, using two screws (30) for each plate, make sure all screws are perpendicularly into the profile holes.

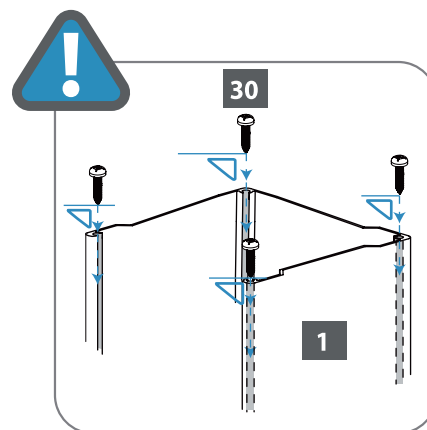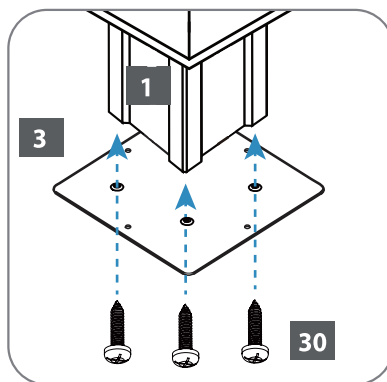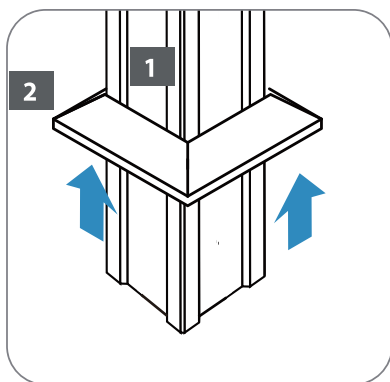








Leave support frames (2) about 10" over lower end of corner profiles (1) until step 4 (Securing the gazebo to the ground)

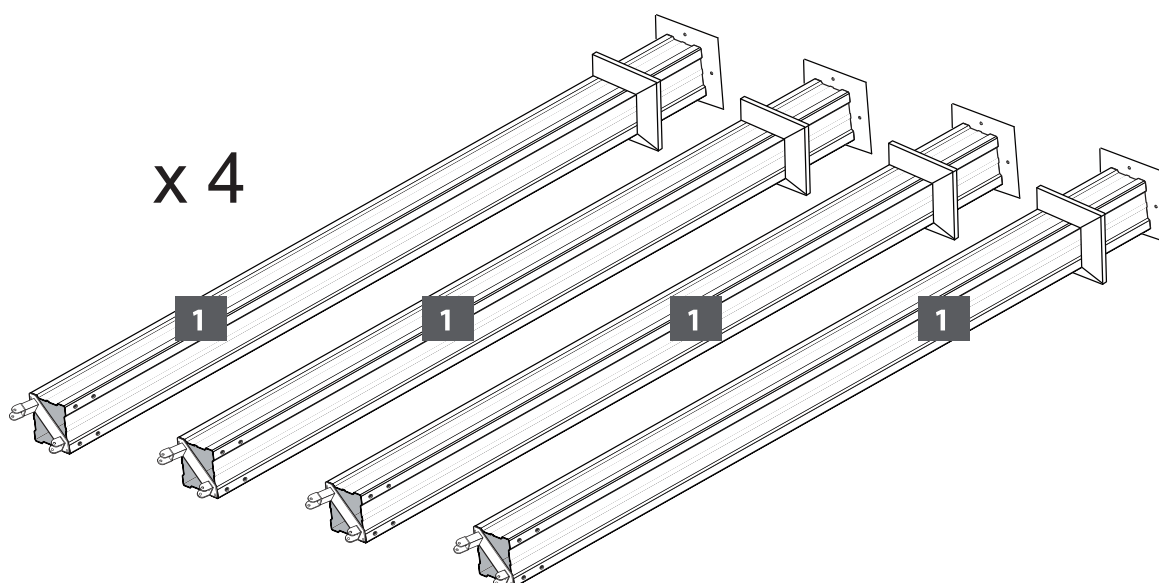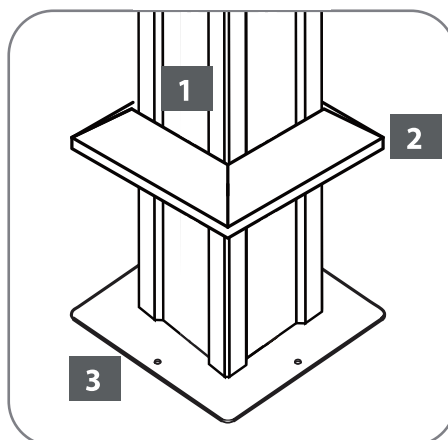



# STEP 2 Assembling the Rails

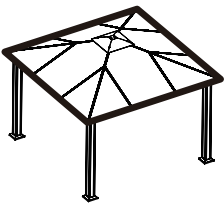

## Components

 Rail (5) x 4	 Inner Roof Connector (9) x 12	 Screw (28) x 32	 Rail connector(51) x 4
 Rail (6) x 4	 Outer Roof Connector (10) x 12	 Screw (29) x 48	



**2.A** Insert rail connector (51) into blunt end of the rail (5) secured with screws (28).  
Insert rail (6) secured with screw (28) as shown.  
Repeat to create four sets (5+6).

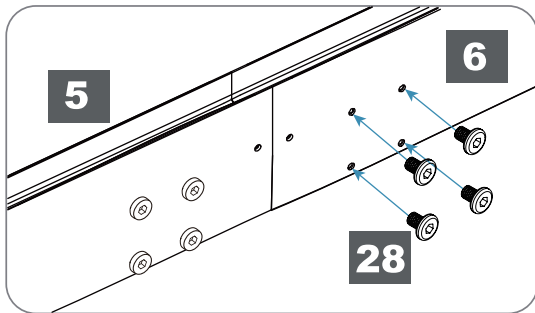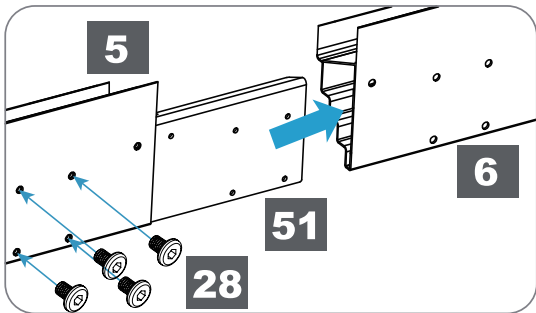




## 2.B

Attach three outer roof connectors (10) and three inner roof connectors (9) to each rail set at pre-drilled screw holes, using screws (29).

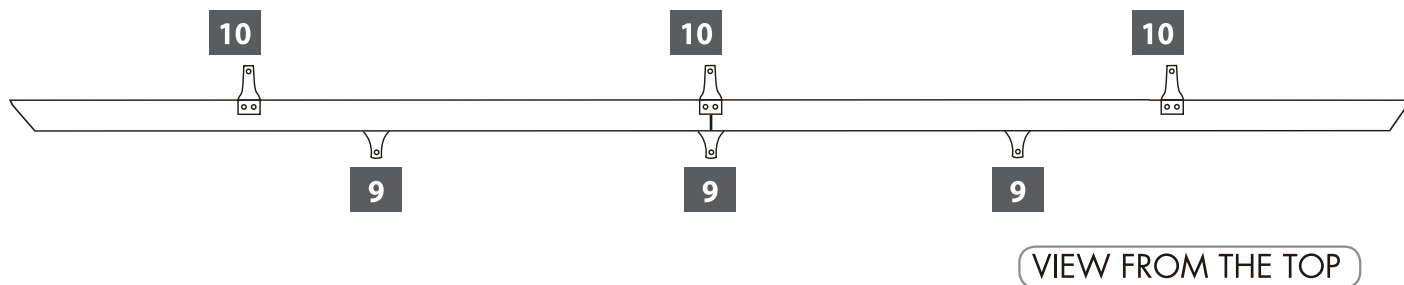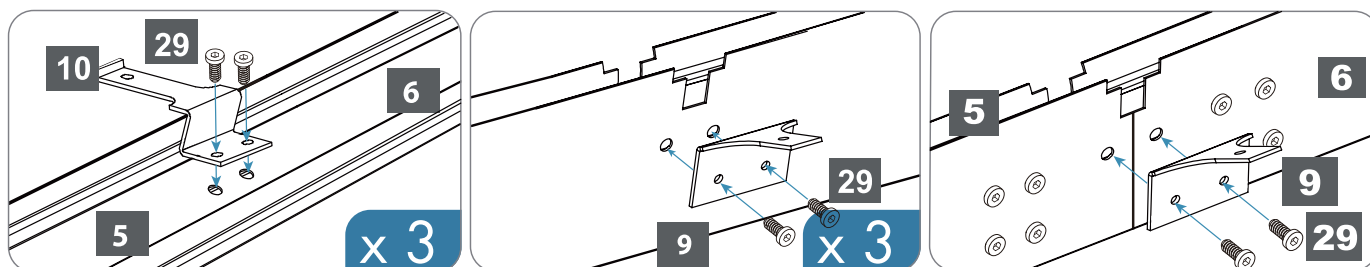

**ATTENTION:** Attach roof connectors facing exactly in the directions shown.

x 4

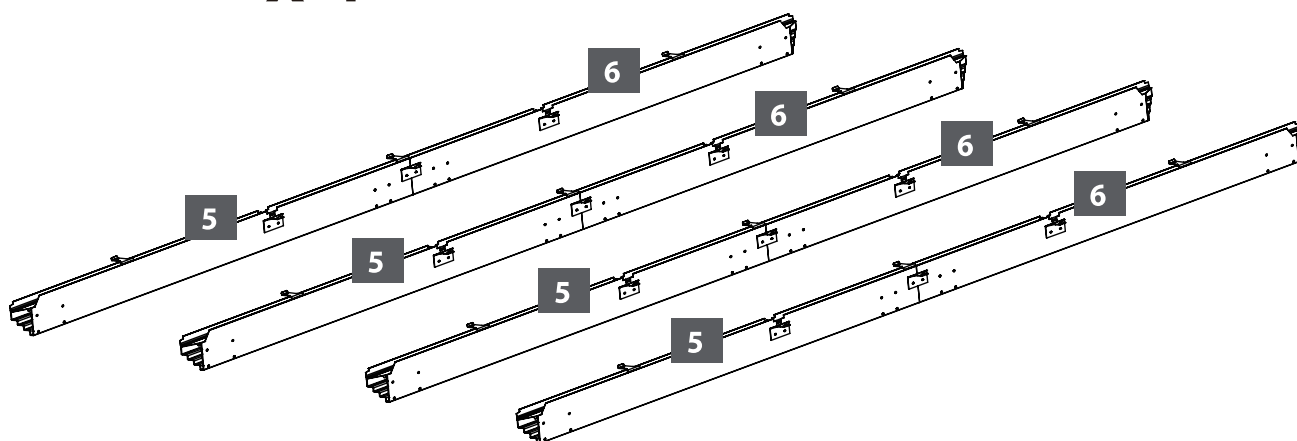



# STEP 3 Attaching the Rails to the Corner Profiles




**3.A** Attach one roof profile set (5+6) to two corner profiles (1) as shown, using screws (29) and supplied magnetic hex key (41) through holes in profile set.

Components


Screw (29)	Plastic Cap #3 (36)	Magnetic Hex Key (41)
x 32	x 32	x 1

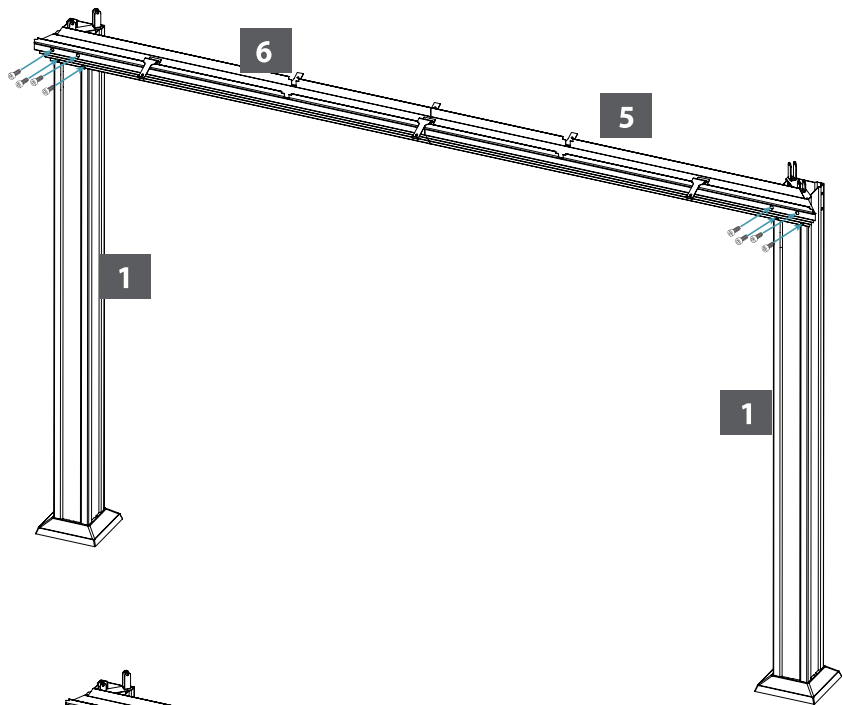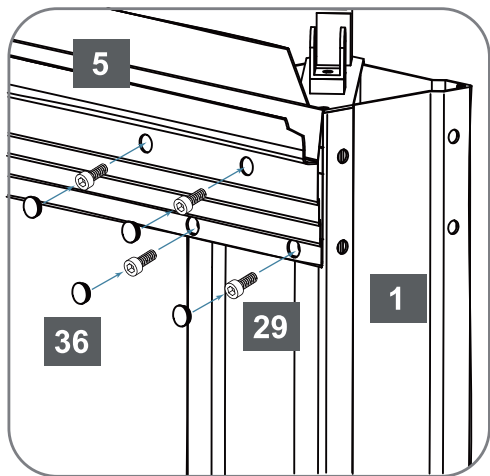

**3.B** Close holes in profile set with plastic caps #3 (36).

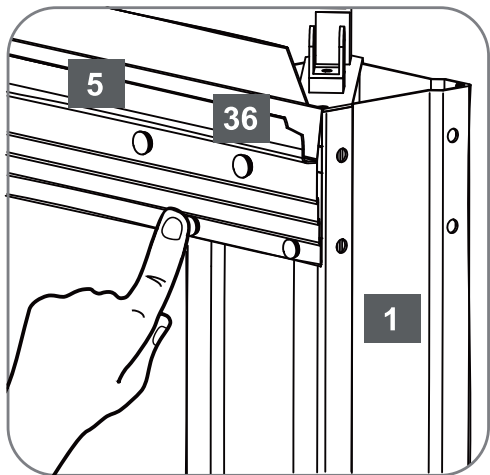

Repeat step 3.A and 3.B to create two sets.


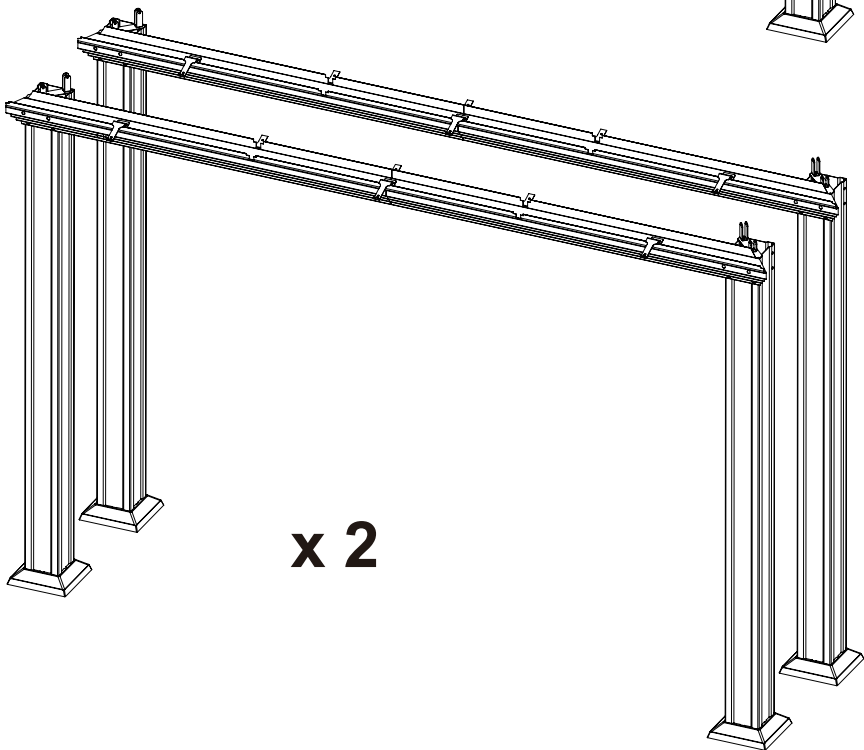


### 3.C


Using at least 3 people, attach the remaining two roof profile sets (5+6) to corner profiles (1), connecting all four corner profiles (1).

Fasten with four screws (29) and supplied magnetic hex key (41) on each side.


Close holes in profile sets with plastic caps #3 (36).

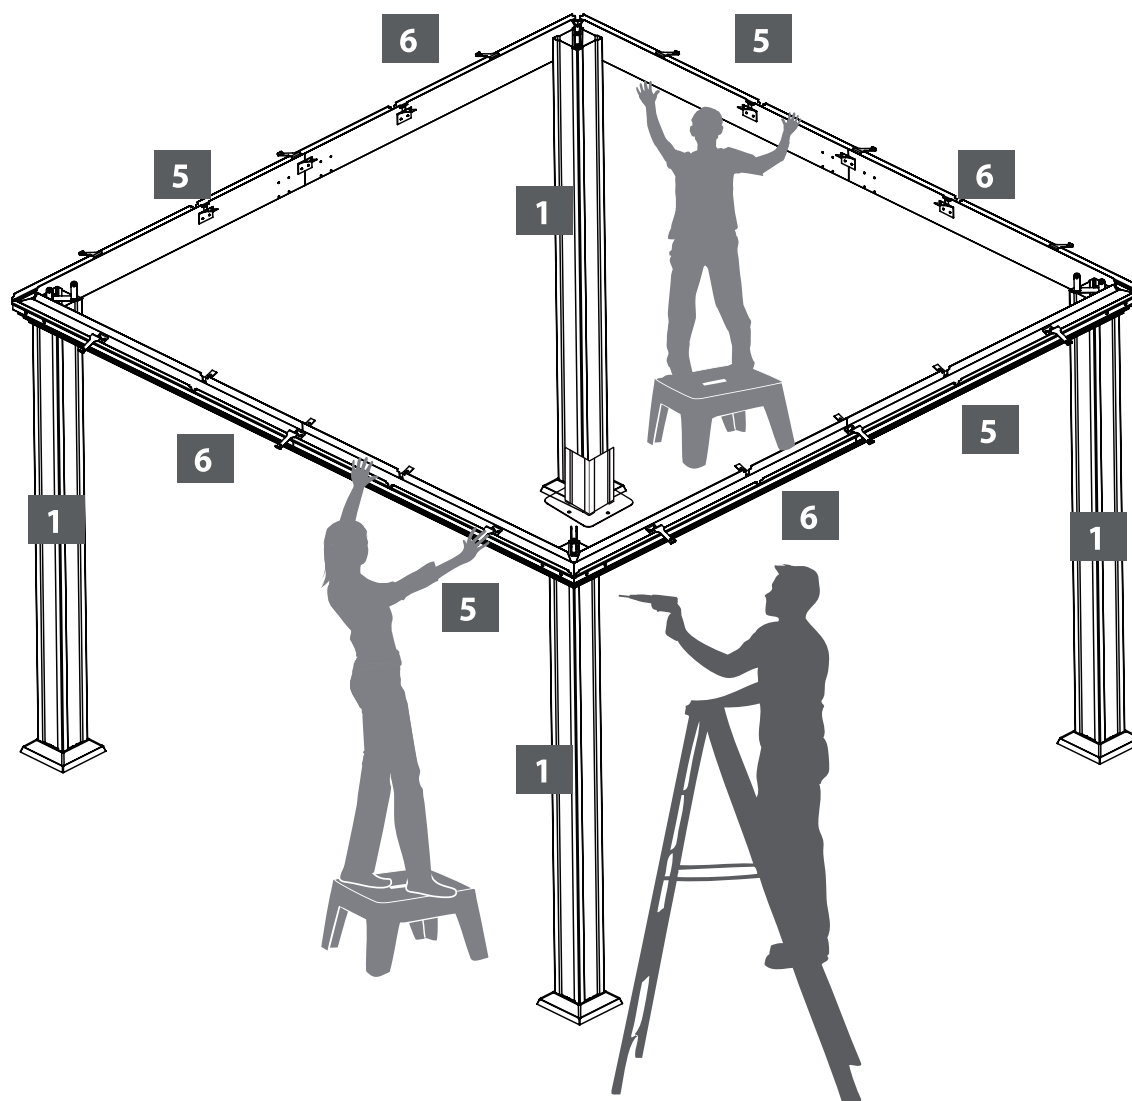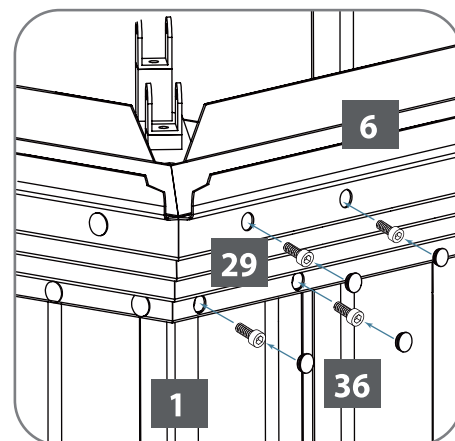




**IMPORTANT:** After this step you should place the gazebo frame in its desired location. Make sure all corners are squared at 90 degrees.

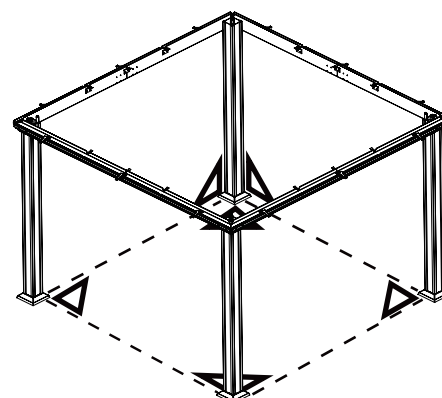

# STEP 4 Securing the Gazebo to the Ground

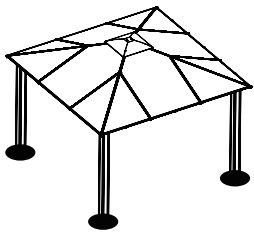





- 4.A** Fasten the gazebo frame to the ground, using four spikes (39) for each support plate.  
Lower support frames (2) to cover support plates (3).

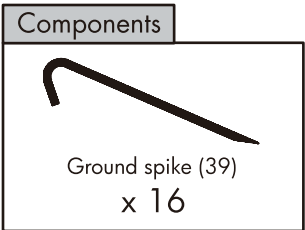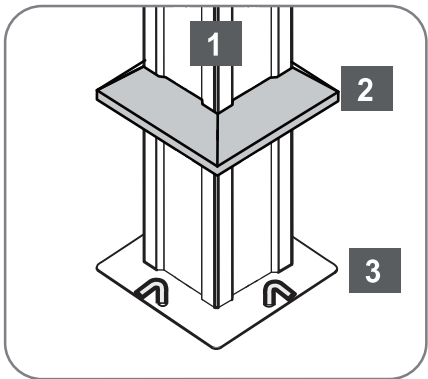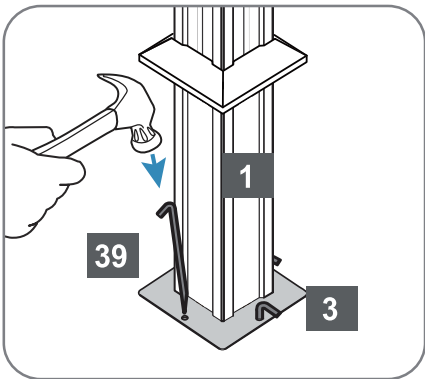

## Optional Securing the Gazebo to a Concrete Floor or Wood Deck

### Concrete Floor:

1. Drill holes approx. 3.00 inches deep and use a mallet to set up.
2. 3/8" masonry drill bit to drill holes for the concrete anchors supplied.
3. Using a concrete drill, drill holes into the concrete floor, corresponding to the holes in support plates (3).
4. Insert concrete bolts (40) into the holes and hammer into place, using a mallet.
5. Fasten concrete bolts with washers and nuts.

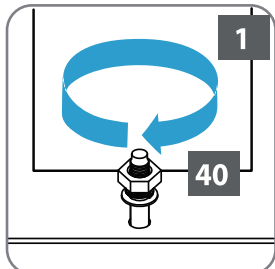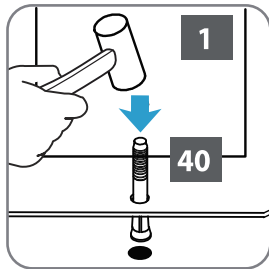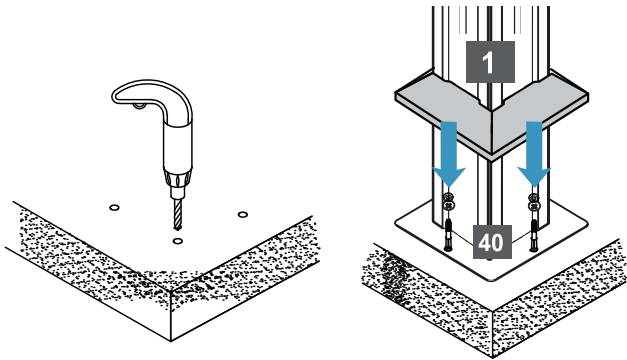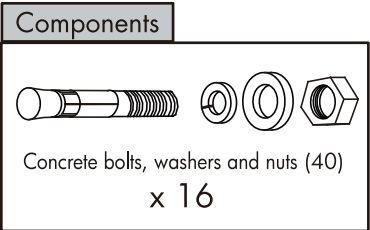


### Wood Deck:


1. Using an electric wood drill, drill holes into the wood floor, corresponding to the holes in support plates (2).  
corresponding to the holes in support plates (3).
2. Insert wood screws with washers (not supplied) into the holes and fasten, using an electric screw driver.



**NOTE:** After securing the gazebo to the ground, we highly recommend filling the corner profiles (1) with 2 bags (20LBs each) of Pea Gravel each for extra stability, as shown.

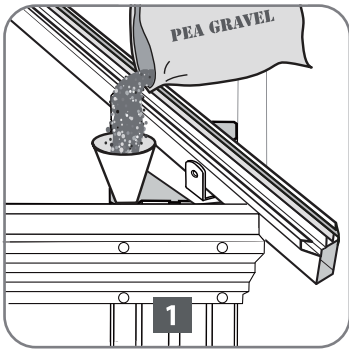

# STEP 5 Installing the Lower Roof Gable Profiles

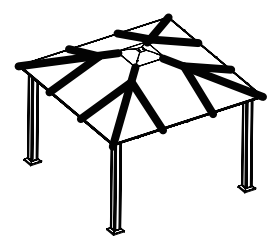


**ATTENTION:**  
DO NOT ATTEMPT TO ASSEMBLE THIS ALONE !

Components

Roof gable profile (11) 2507mm x 4	Roof profile (12) 1657mm x 4	Roof gable profile (13) 1269mm x 4	Roof gable profile (14) 1269mm x 4	Roof Top Connector (18) x 1	Corner cap (27) x 4
Roof Top Cover (19) x 1	Y-connector (43) x 4	U-shaped Connector (23) x 2	Screw (29) x 48	Screw (30) x 8	Screw (31) x 8
				Nut M6 (35) x 8	Hook (42) x 1

Using at least three people, install the roof gables (11,12,13,14) in the following order:


VIEW FROM BELOW  
(from inside gazebo)

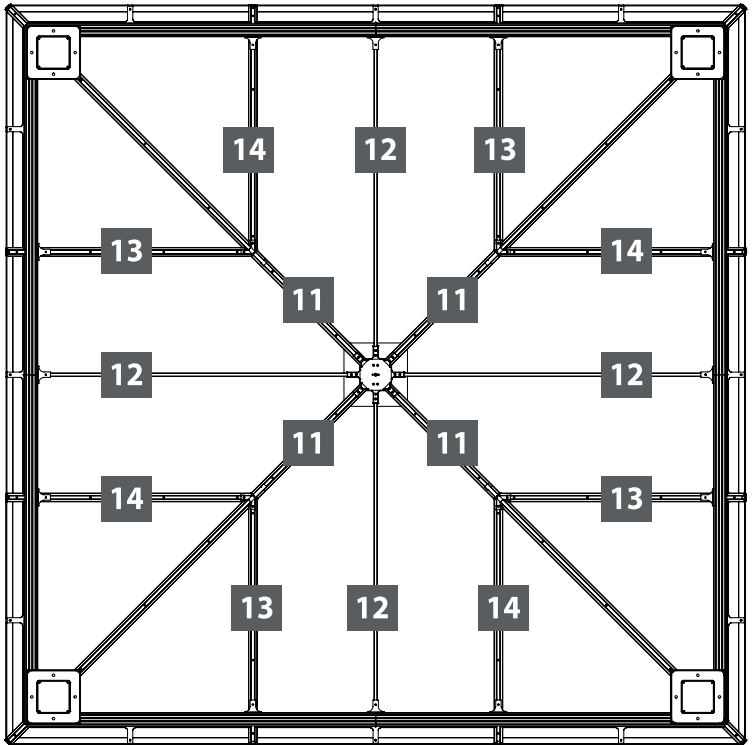

**ATTENTION:** Roof Profiles, roof panels and gables must be aligned properly during assembly to minimize any possibility of leaking.

**IMPORTANT:** Make sure that roof gable profiles (11,12,13,14) are installed exactly as shown so that the pre-drilled screw holes will align properly with screw holes on the roof panels.

BOTTOM VIEW OF PROFILES



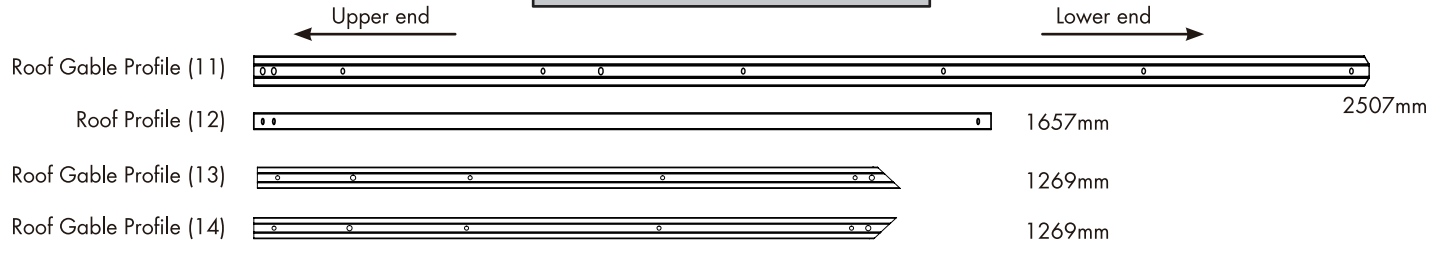


## 5.A





Using screws (29), connect U-shape connector (23) to roof top cover (19) as shown.

Using screws (31) and nuts (35), connect roof gable profiles (11) to roof connectors (4) on top of corner profiles (1).

Using screws (28), connect roof gable profiles (11) to roof top connectors (18) exactly as shown.

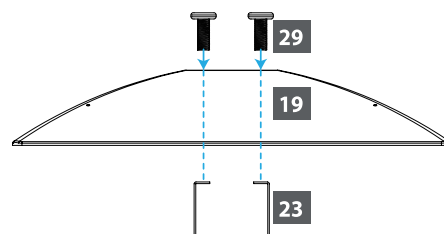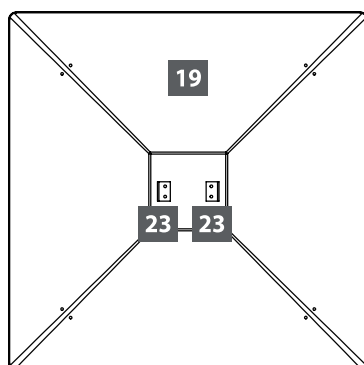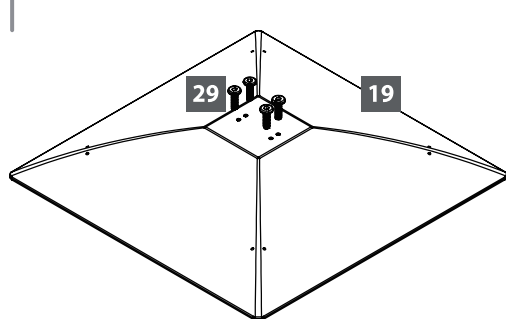



VIEWS FROM INSID

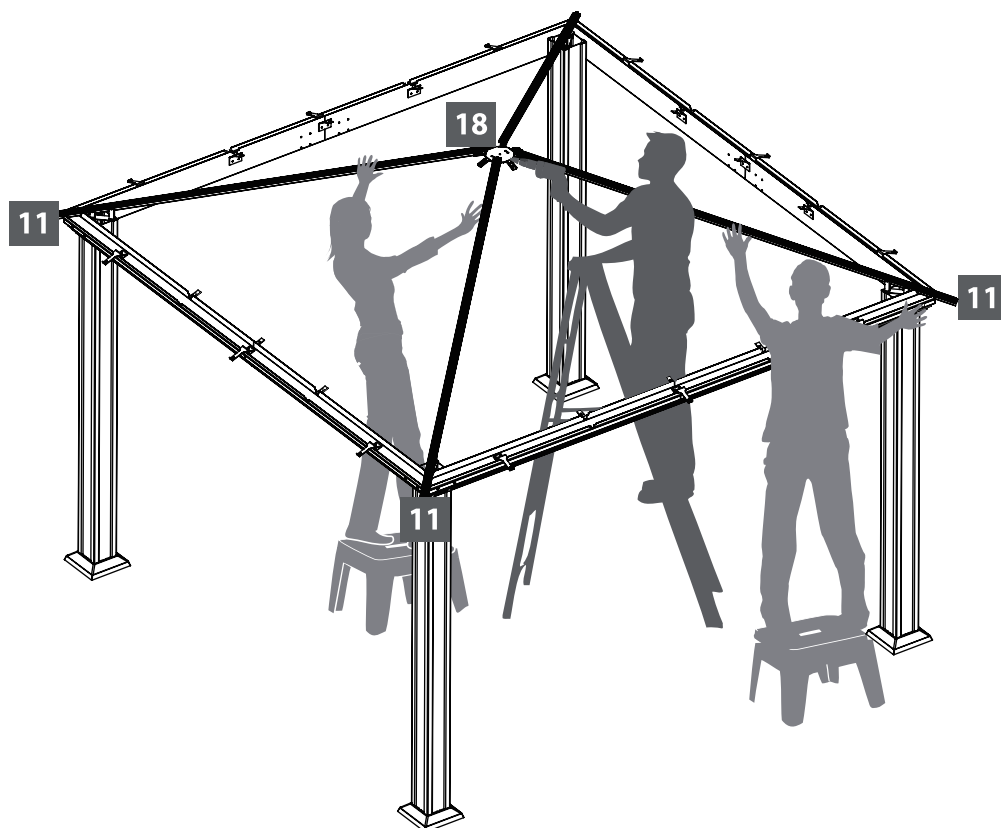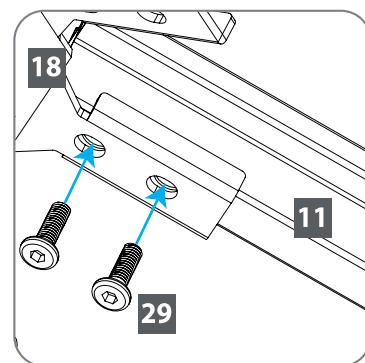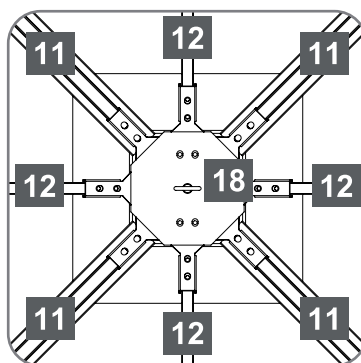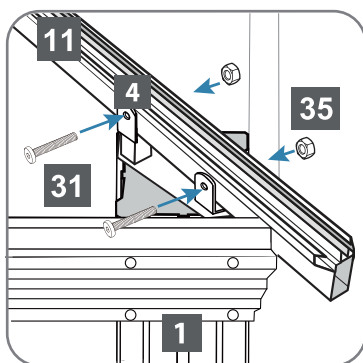



ILLUSTRATION

## 5.B


Using screws (29) connect roof top cover set (19+23) from underneath of roof top connector (18) as shown.

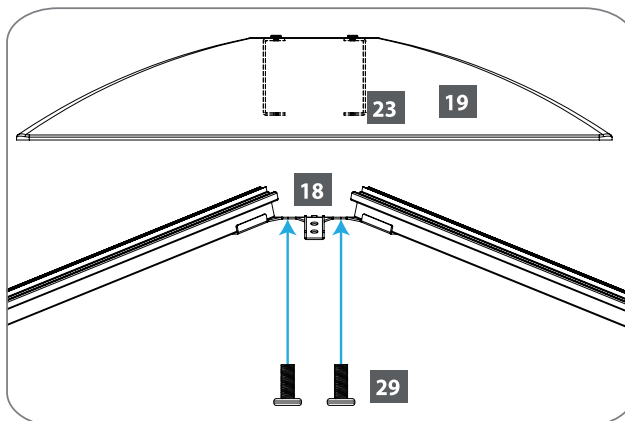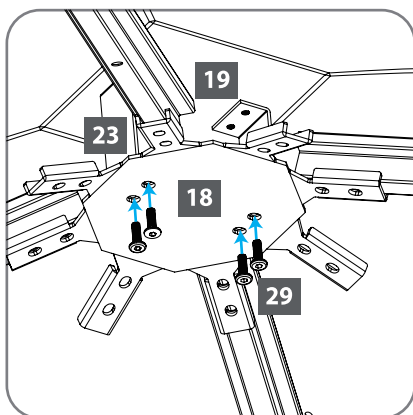

Using screws (29), connect roof profile (12) to roof top connector (18) from below; the other end to inner roof connector (9) by screw (29) as shown.

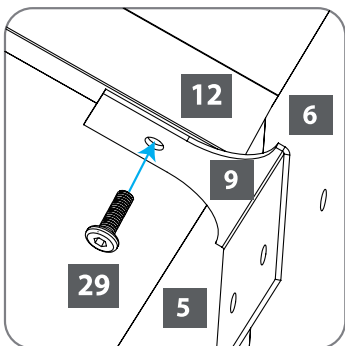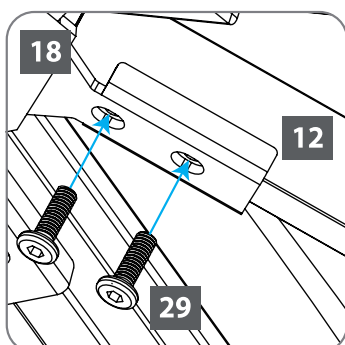


VIEW FROM BELOW

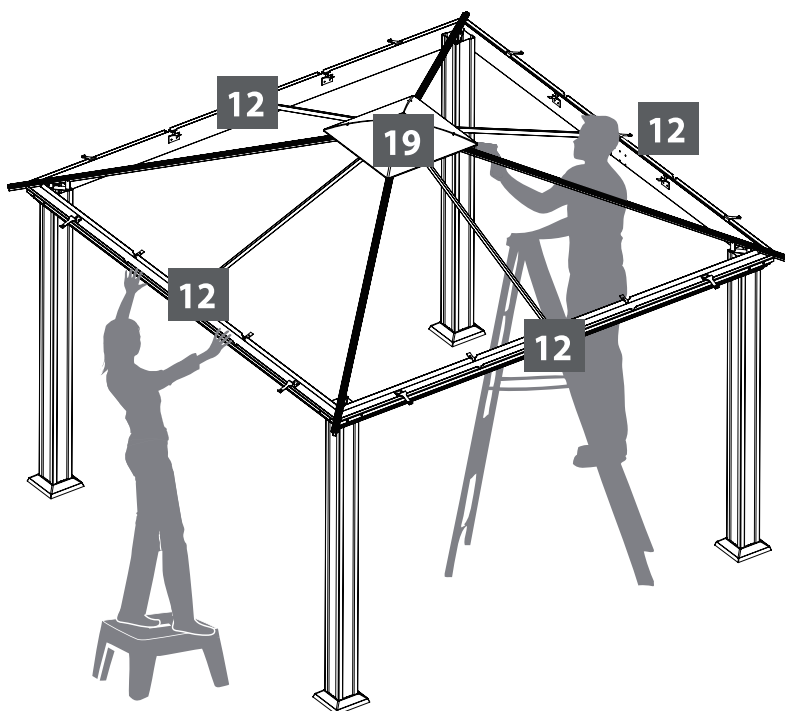


## 5.C

Attach Y-connector (43) underneath of roof gable profiles (11), using screw (29) as shown. Connect profile (13,14) to Y-connector (43) and other end to inner roof connector (9) using screws (29).

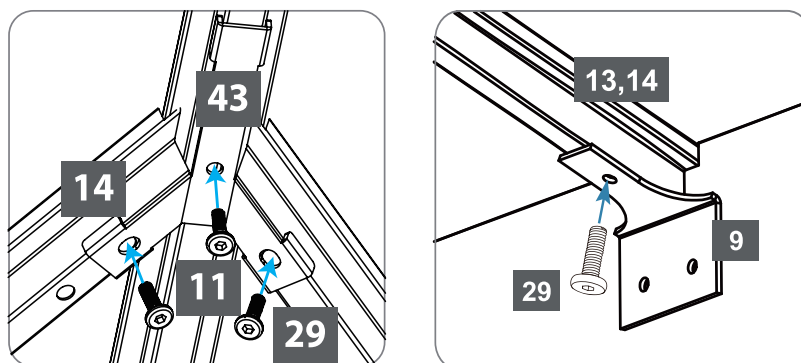


VIEWS FROM BELOW

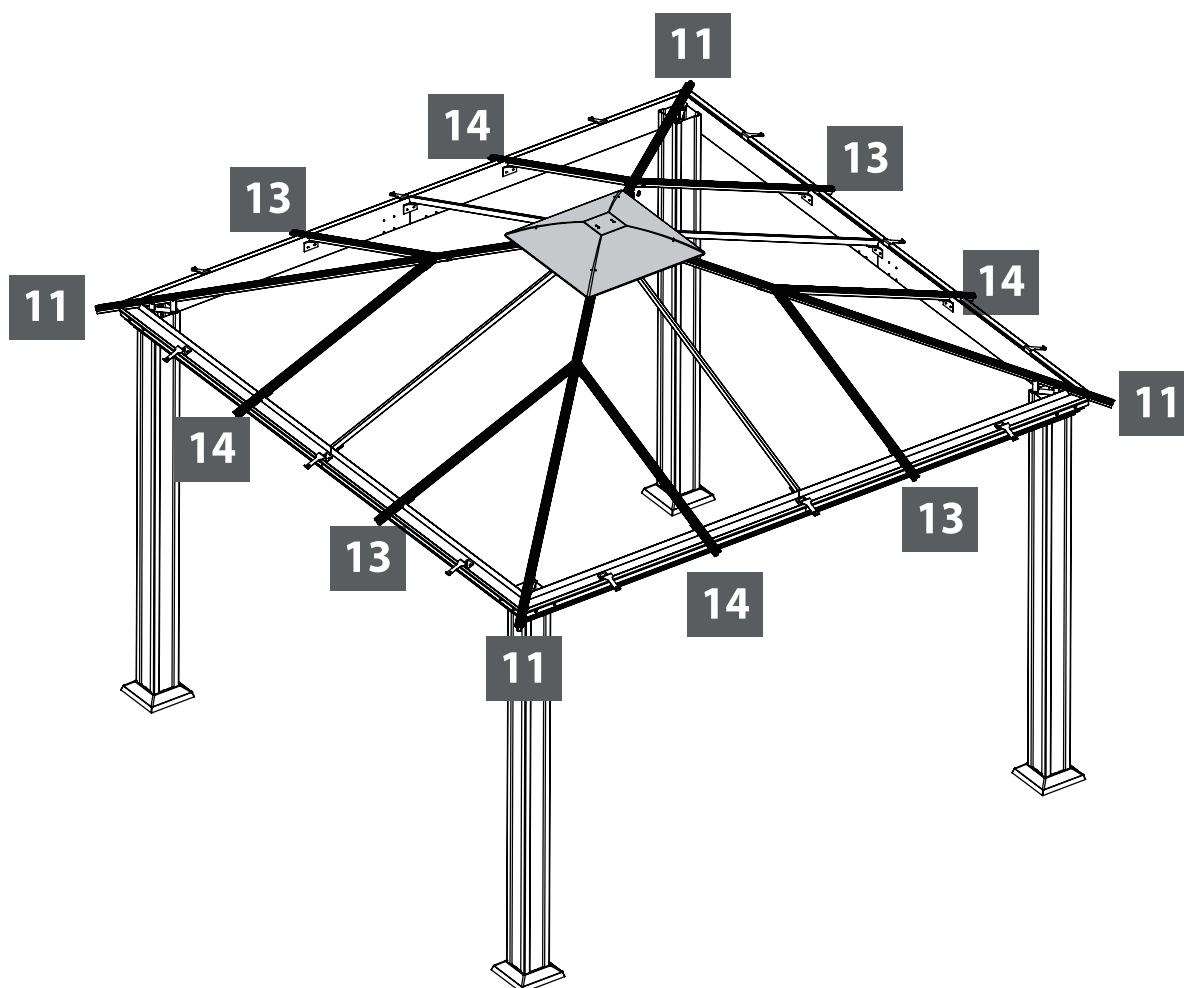




## 5.D


Attach hook(42) on the roof top connector (18).  
Place corner cap(27) on the top of corner profiles(1)  
and fasten with screws(30).

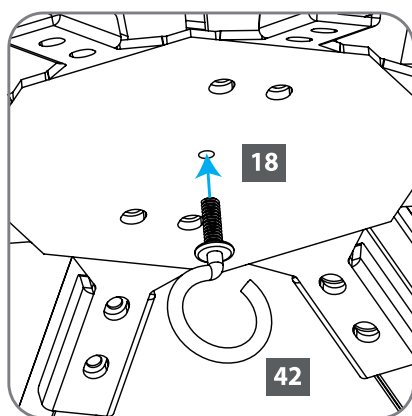

VIEWS FROM BELOW

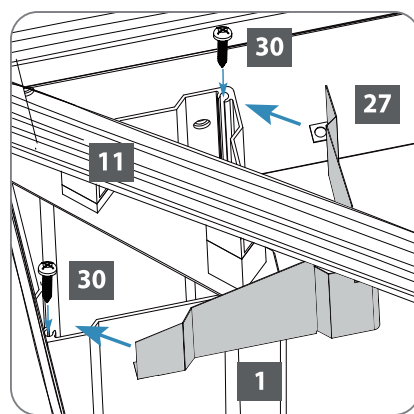


VIEW FROM TOP

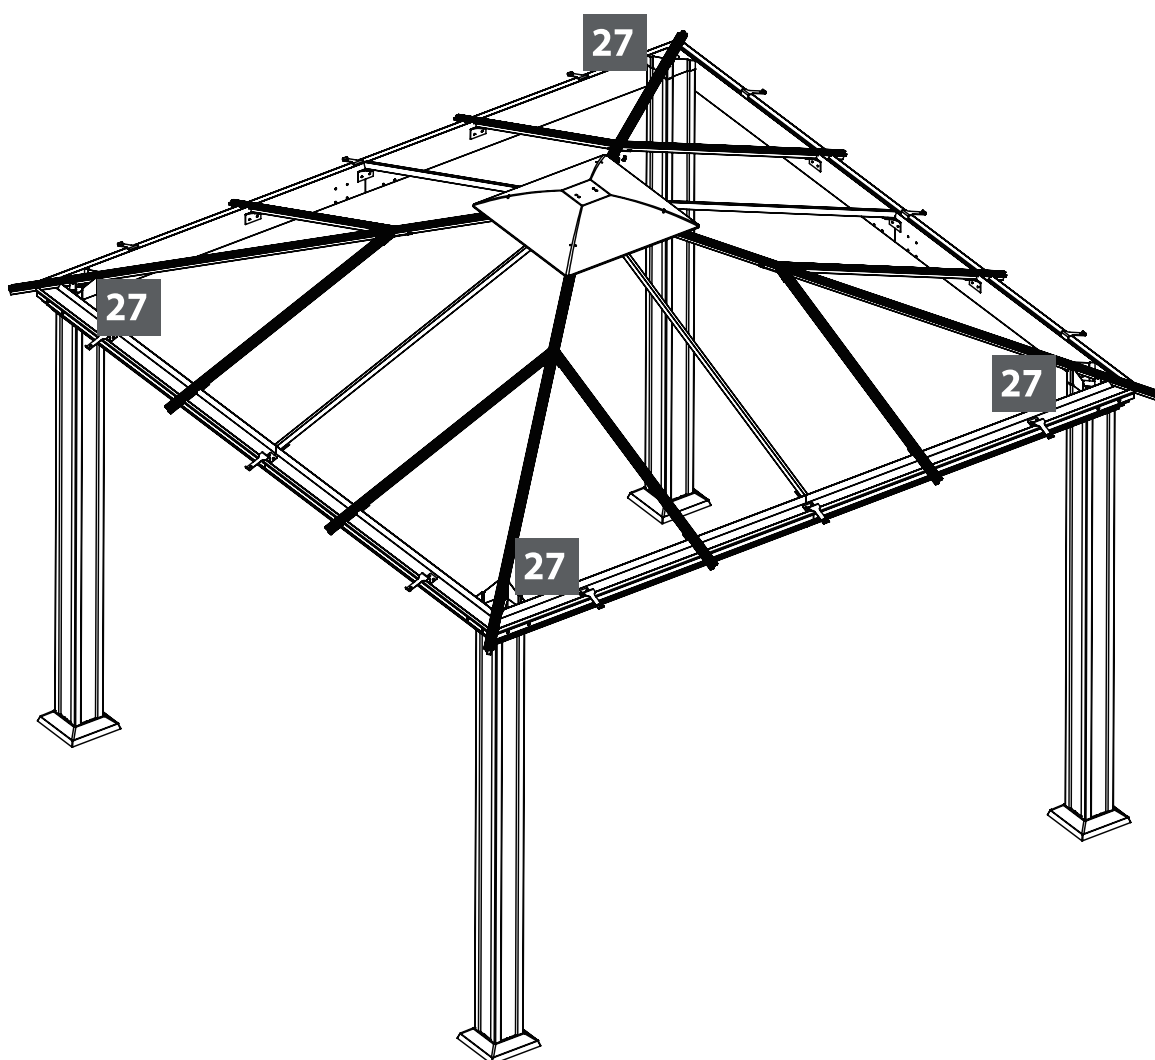









# STEP 6 Installing the Roof Panels and Upper Roof Profiles

**IMPORTANT:** Gently cut on the edge of the panels on both side with knife and remove protective plastic of roof panels. Place with black surface toward the sun facing out when installing.


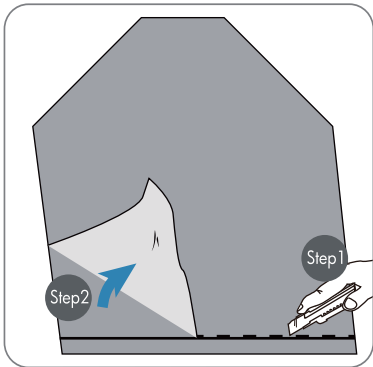
**6.A** Gently cut the film in order to avoid breaking on the panels.




Components		
		
Aluminium Composite Roof Panel (15) x 4	Aluminium Composite Roof Panel (16) x 4	Aluminium Composite Roof Panel (17) x 4
		
Roof profile(11A) 2400mm x 4	Roof profile(13A) 1261mm x 4	Roof profile(14A) 1261mm x 4
		
Screw(32) x 56	Screw (34) x 12	

Fit roof panel (15) on top of roof profiles (11,13 and 14) as shown and fasten with one screw (34) from below to outer roof connector (10).

Fit roof panel (16) on top of roof profiles (11,14) as shown and fasten with one screw (34) from below to outer roof connector (10).

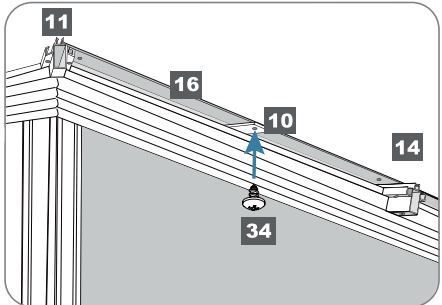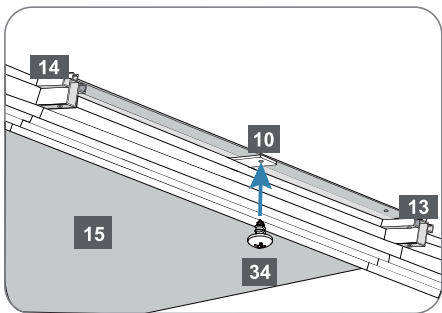


VIEWS FROM BELOW

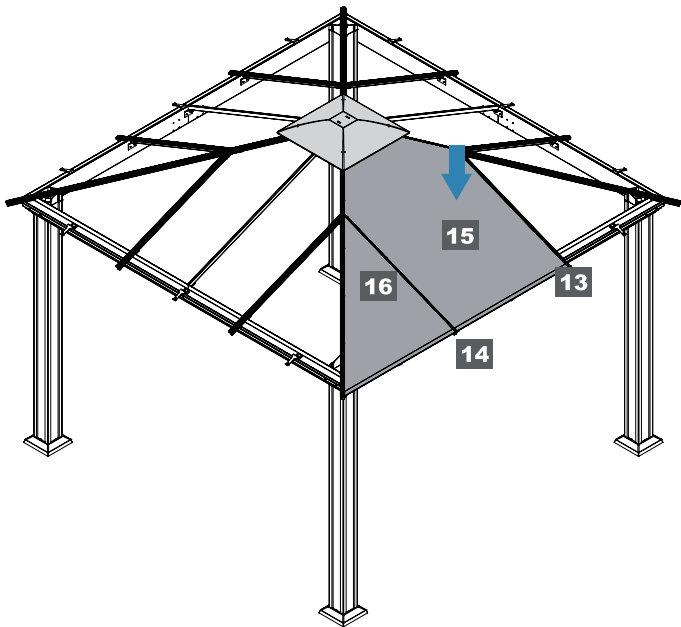


## 6.B


Place roof profile (14A) on top of roof profile (14) as shown. Align both profiles. Fasten with screws (32) from below (inside gazebo).

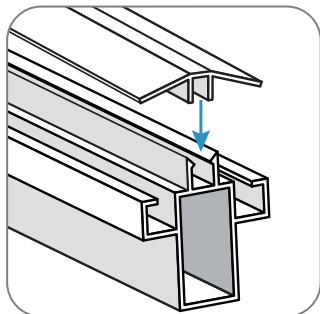


Connecting the upper and lower profiles

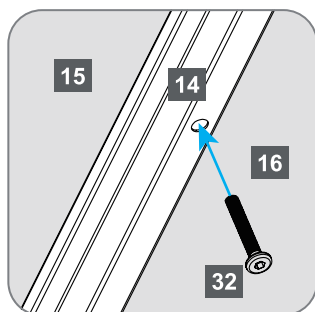

VIEW FROM BELOW  
(from inside gazebo)

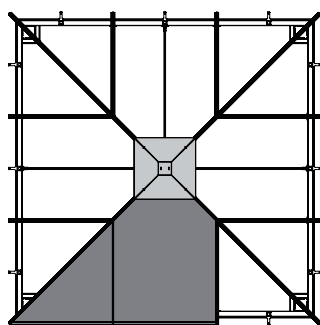

VIEW FROM TOP


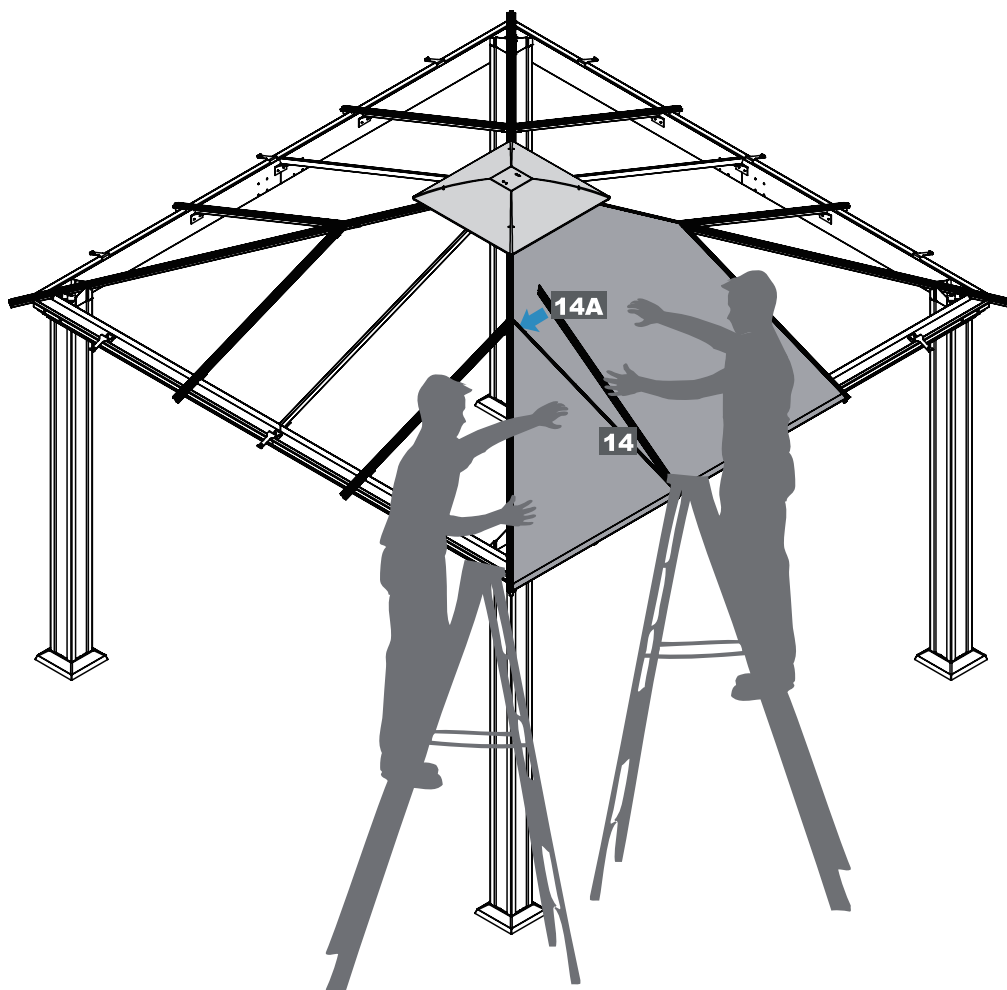


**ATTENTION:** Roof Profiles, roof panels and gables must be aligned properly during assembly to minimize any possibility of leaking.

## 6.C




Fit roof panels (15,17) on top of roof profiles (11,13,14), fasten with screw (32) from below to outer roof connector (10).

Place roof profile (11A,13A) on top of roof profile (11,13) and fasten with screws (32) from below.

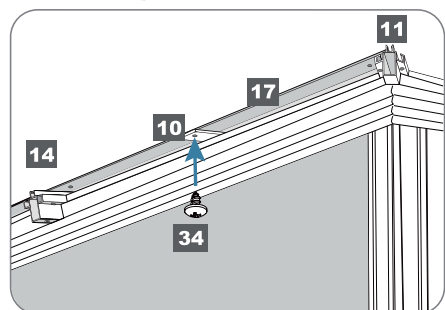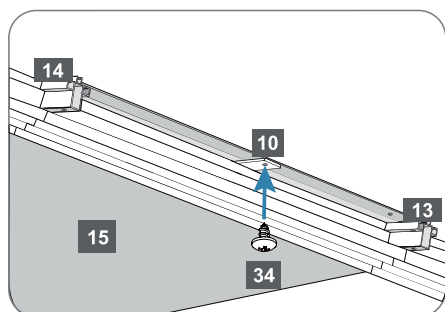


VIEWS FROM BELOW

Place roof profile (13A) on top of roof profile (13) as shown. Align both profiles. Fasten with screws (32) from below (inside gazebo).

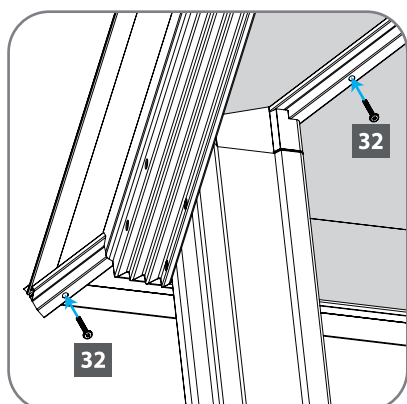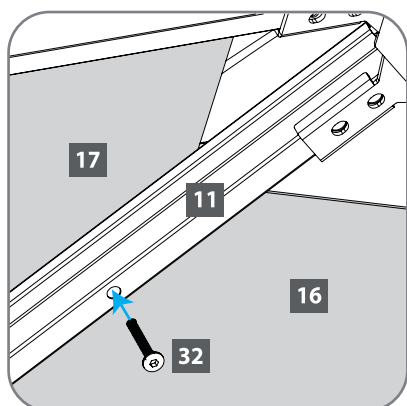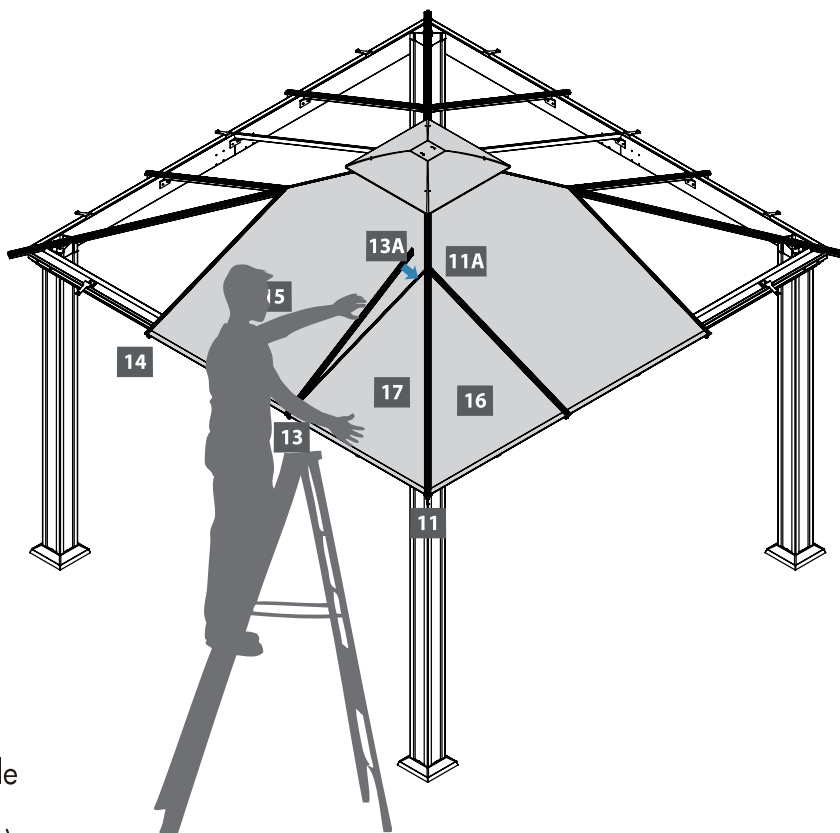

VIEWS FROM BELOW


● Positions of screws (32) from below roof.

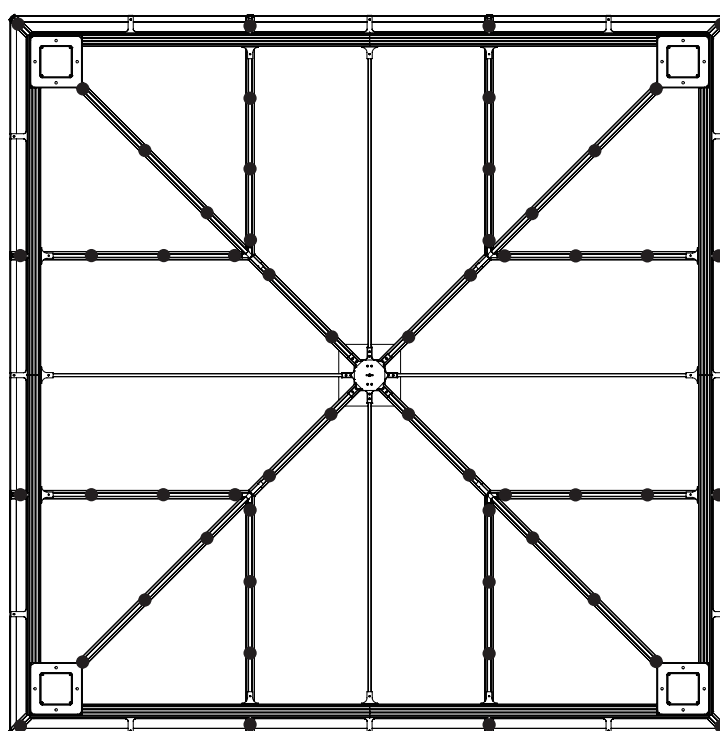

VIEW FROM BELOW  
(from inside gazebo)




## 6.D

Continue in a clock-wise direction as shown, until the last two panels:

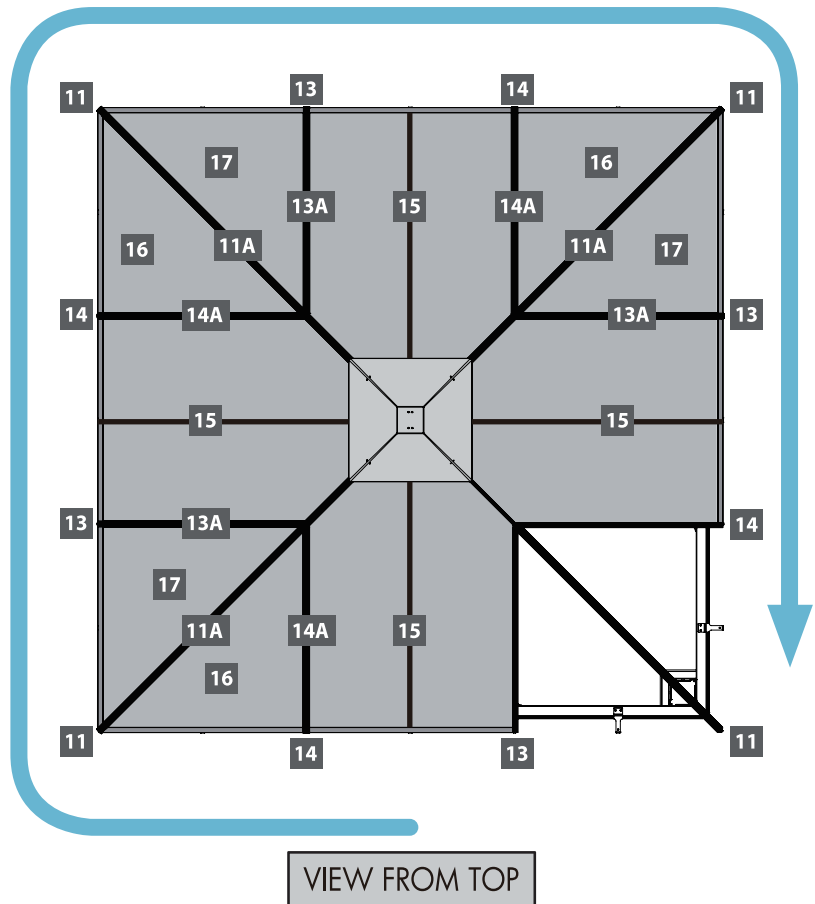

## 6.E


Place the roof panel (16,17) on top of profiles (11,13,14), fasten with screw (34) from below to outer roof connector (10).

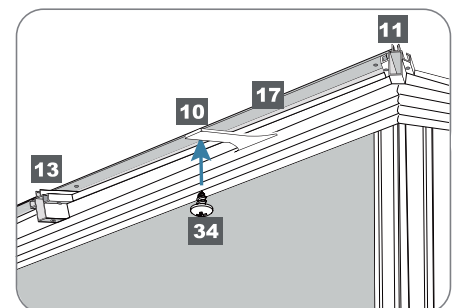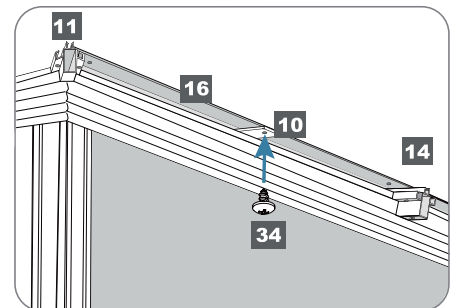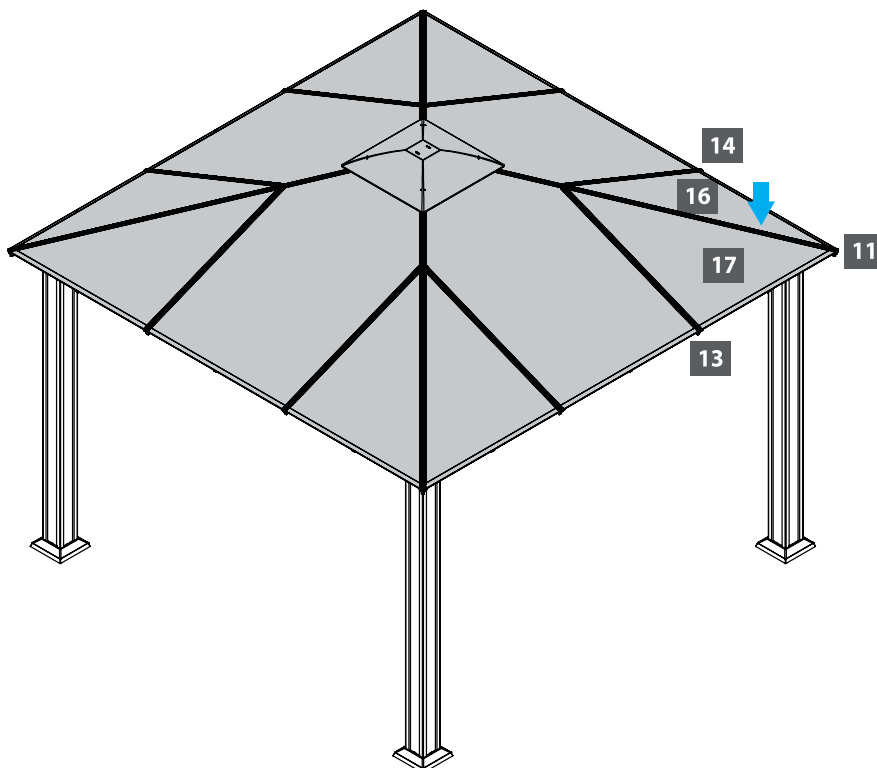

VIEWS FROM BELOW



## 6.F

Place roof profile (11A,13A,14A) on top of roof profile (11,13,14) as shown, fasten with screws (32) from below(inside gazebo).

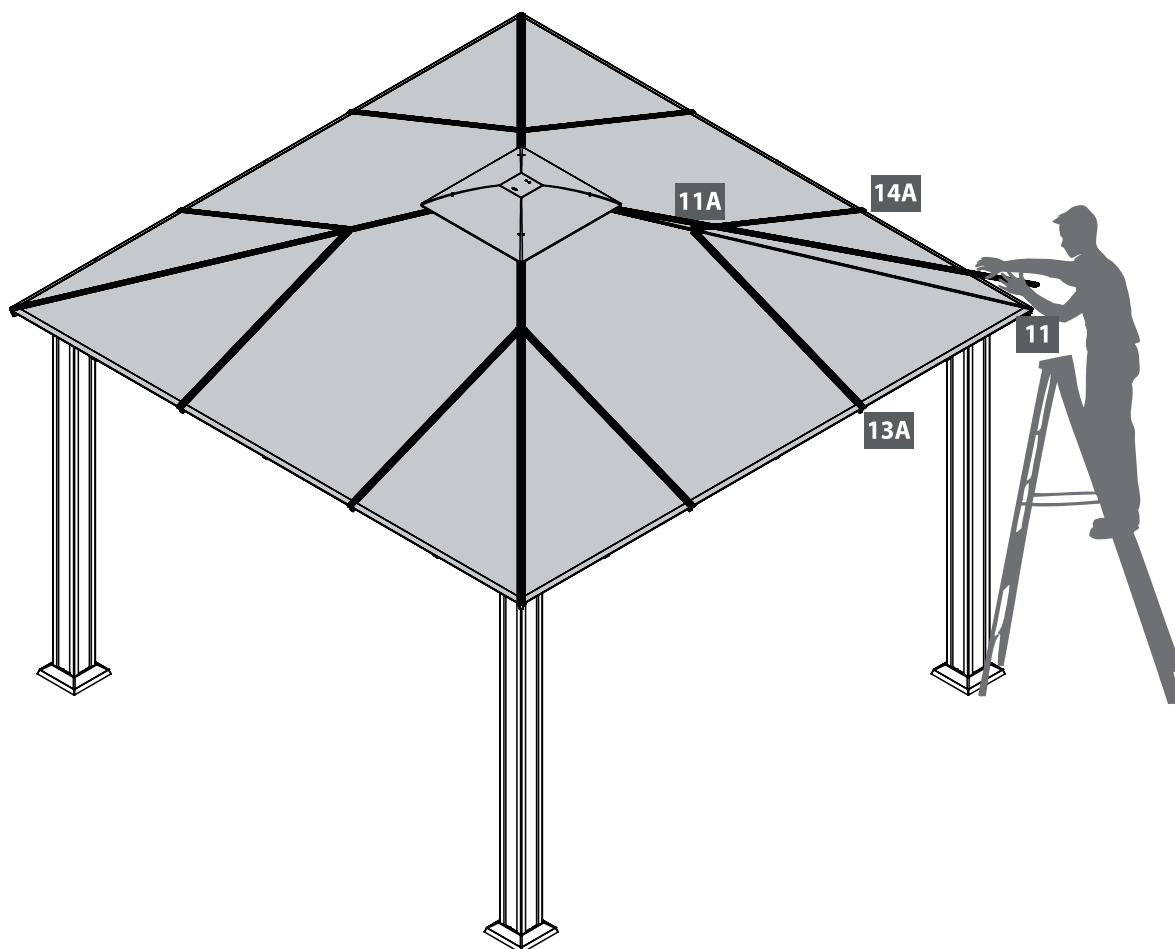


## STEP 7 Installing the Plastic Caps


Close off roof profiles (13,14) with plastic caps #1 (37) and roof profiles (11) with plastic caps #2 (38).

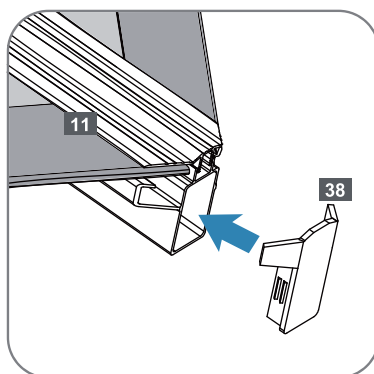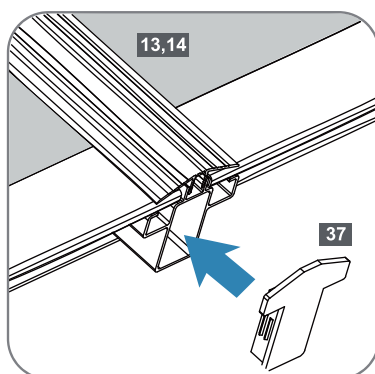




### Components

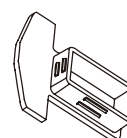

Plastic Cap #1 (37)  
x 8

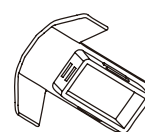

Plastic Cap #2 (38)  
x 4

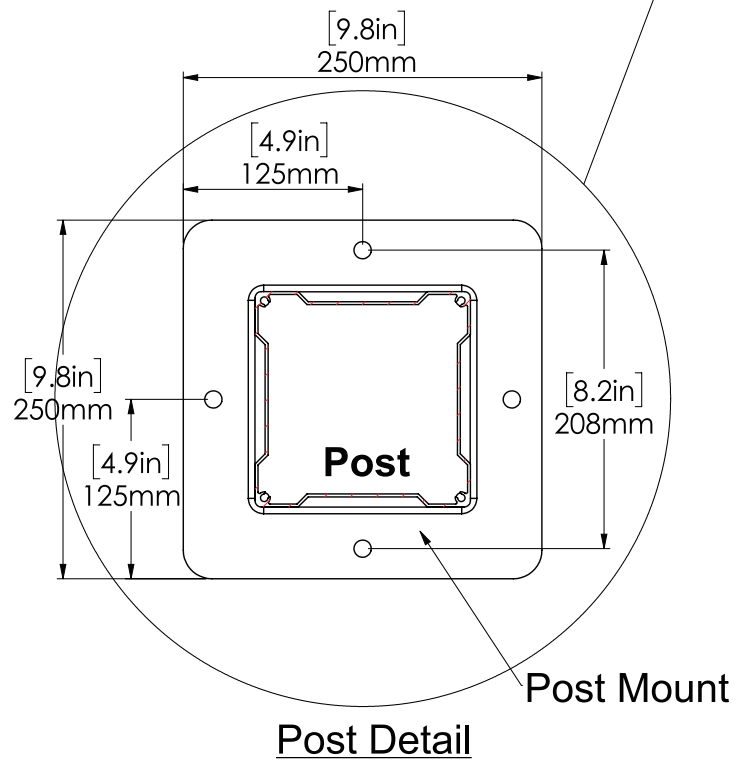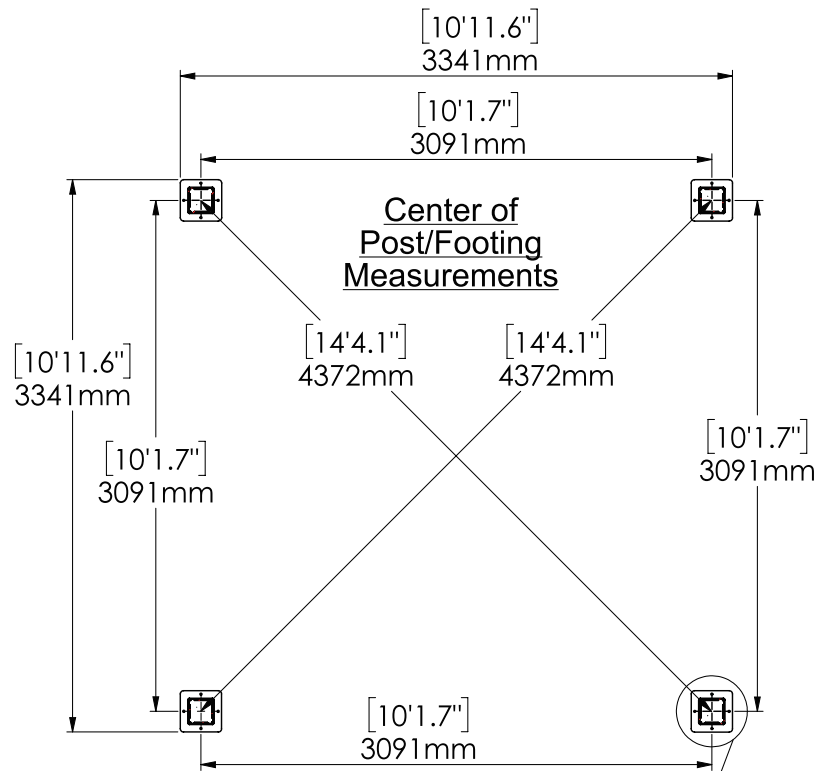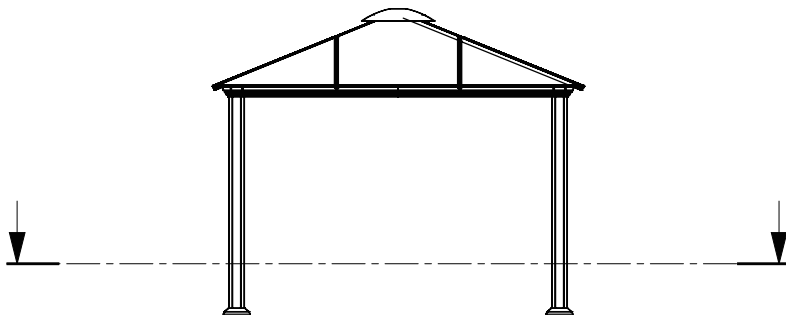



# Gazebo GZH3-1212BK


## Aluminium Composite Roof Panels

### Assembly Instructions


#### WARRANTY:

Warranty covers damage due to manufacturing defects only for a period of 5 years on the structure, and 5 years on the Aluminum Shell from date of purchase. Warranty does not cover weather inflicted damage and/or damages caused by not following assembly instructions and adhering to warnings in manual. Warranty does not cover user error, negligence, or misuse.

**ATTENTION:** Roof profiles, roof panels and gables must be aligned properly during assembly to minimize any possibility of leaking.

 **WARNING:** Cancer and Reproductive Harm - [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

 **AVERTISSEMENT:** Cancer et Troubles de l'appareil reproducteur - [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

 **ADVERTENCIA:** Cáncer y Daño Reproductivo - [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).



  @paragonoutdoorcompany

Paragon Group USA

Customer Service: (877) 782 4482 Email: [cs-outdoors@paragongroupusa.com](mailto:cs-outdoors@paragongroupusa.com)