


ASSEMBLY INSTRUCTIONS

Pantry Cabinet

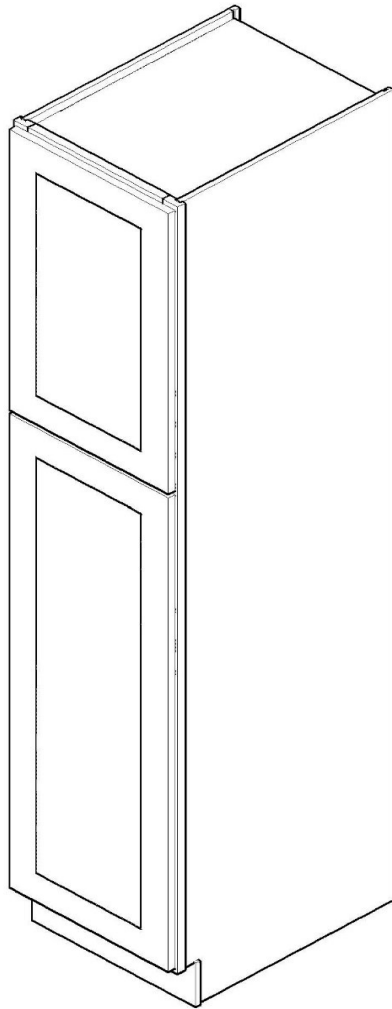

Unpacking Precautions

If using a sharp object to unpack the cabinet components and the packing materials, be careful to avoid scratching or damaging the cabinet components. The various packing materials may be used to protect the cabinet components during assembly. During the unpacking process, place the various components away from and to the side of the work area so that they will not be inadvertently knocked over or otherwise damaged.

Wall Cabinet Model Variations

These assembly instructions include all the steps required to assemble a Wall Cabinet with or without a Shelf/Shelves.

Required Tools

Phillips Screwdriver

Rubber Mallet

Wood Glue



Hardware Considerations/Screw Size Clarification

(I) Small 1/2"


(K) Large 1 1/4"

(M) Larger 2 3/8" (Optional)




Step 1:

Lay the face frame with doors(A) on a soft surface, doors facing down.

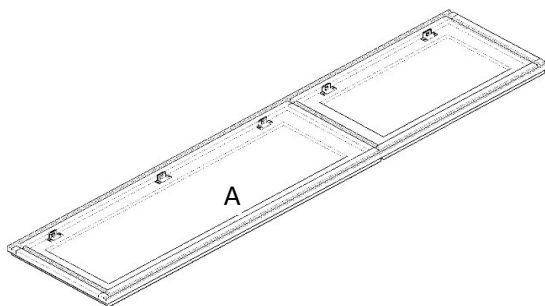

Step 2

Attached rubber bumpers to both the top and bottom of each door where they make contact with the face frame to prevent damage and reduce noise.

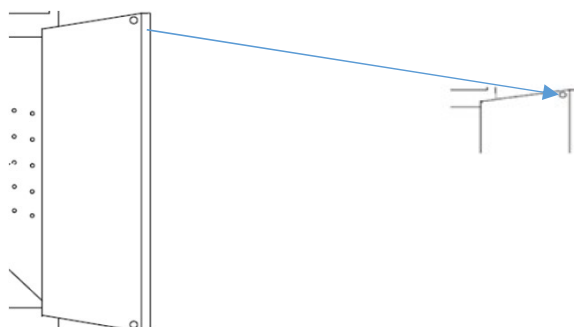


Step 3

Using the wood glue, squeeze a small bead of glue in all grooves before assembling the cabinet sides, bottom, top and back panels. Be careful not to use too much glue, this could cause excess glue to squeeze out and onto the panels, if this should happen, be sure to remove quickly.


Step 4

Slide the left and right side panels into the grooves of the face frame, and mount the male clip to the face frame with a screwdriver. Each male clip will need 2 small screws (I).

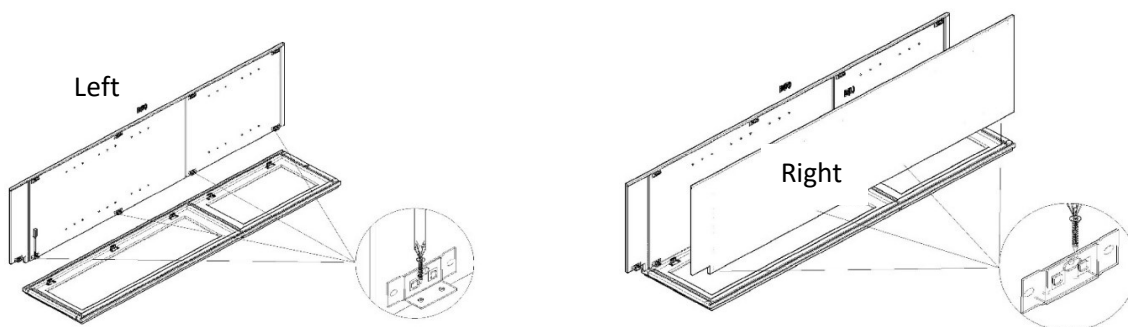


Step 5

Slide the top(T), Middle panel(M) and bottom panel(B) into the grooves of the right and left side panels, and then into the groove in the frame below until it is fully seated.

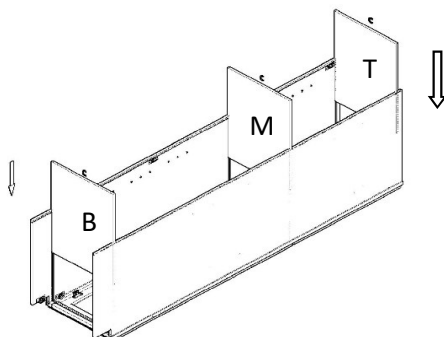


Step 6

Slide the Back panel into the grooves in the side panels and attach the male clips to the back panel. Four clips on the left side and four clips on the right side. Each male clip will need 2 small screws (I).

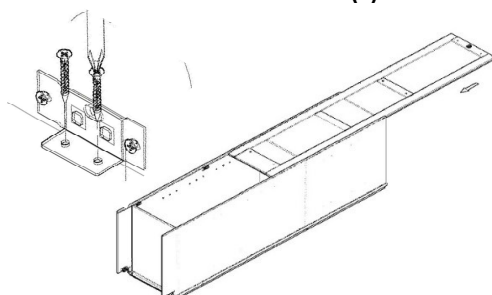


Step 7

Use the long screws(K), and the pre-drilled holes , to attach the back panel to the edges of the bottom panel.

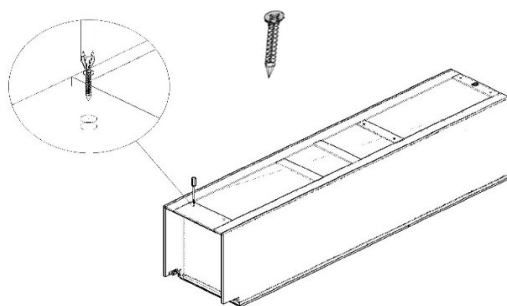

Step 8

Secure the toe kick into the bottom of the cabinet (using two small screws(I) in each of the two clips).

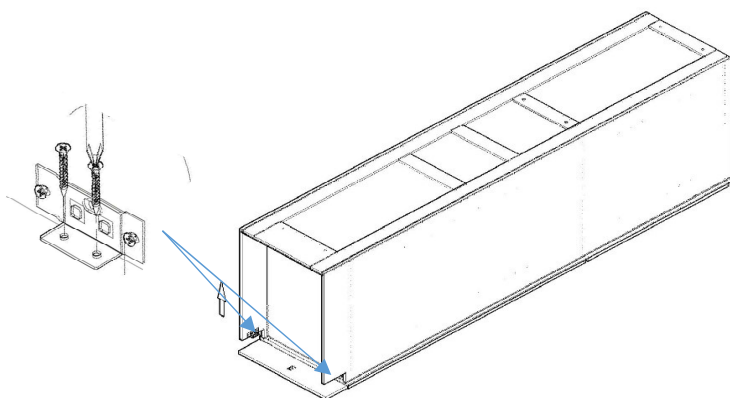

Step 9

Put the shelf pins on the left and right side panels using the holes provided. Be sure the pegs on the right & left are in the same position on each side to insure a level fit.

The larger screws are optional. They can be installed at the top and middle of the inside of the cabinet prior to mount to the wall. The Larger screws(M 2 3/8") are needed.

