


**ASSEMBLY INSTRUCTIONS**  
**Single Drawer End Table / Nightstand**  
**Matte Black Finish**

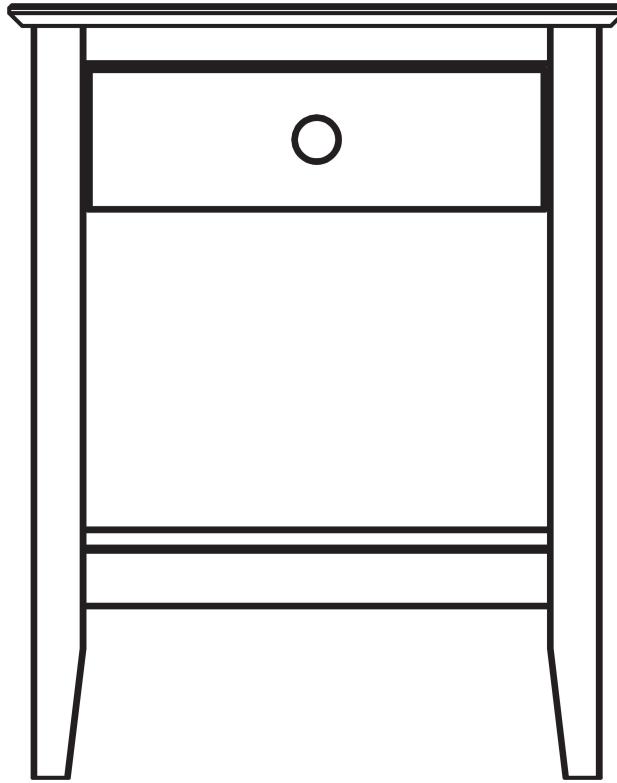

**CUSTOMER SERVICE AND REPLACEMENT PARTS:**

FOR FASTER SERVICE ON PARTS, PLEASE GO TO OUR WEBSITE  
OR CALL TOLL FREE FOR ASSEMBLY QUESTIONS.

**IF YOU CALL, PLEASE HAVE ON HAND:**

- PRODUCT NAME AND STOCK NUMBER
- WHEN AND WHERE THE UNIT WAS PURCHASED
- P.O. NUMBER FROM THE BOTTOM OF THIS PAGE

IF WE ARE BUSY HELPING OTHER CUSTOMERS, PLEASE LEAVE YOU NAME AND NUMBER  
TO RECEIVE A RETURN CALL.

YOUR RETAILER MAY ALSO PROVIDE SERVICE OR PARTS.

**HELPFUL OVERALL:**

- SAVE THESE INSTRUCTION SHEETS AND THE BOX UNTIL YOU ARE SATISFIED WITH THE ASSEMBLY.
- DO NOT GLUE THE PARTS OF THE UNIT TOGETHER UNLESS YOU HAVE TESTED THE ASSEMBLY FIRST.
- PERFORM THE ASSEMBLY ON A CLEAN HARD SURFACE USING THE FLATTENED CARTON OR A TOWEL TO PROTECT THE SURFACE AND THE FINISH OF THE UNIT. DO NOT ASSEMBLE ON CARPET.

**THANK YOU FOR YOUR PURCHASE AND WELCOME !**

NOTICE: THE WRITTEN INSTRUCTIONS CONTAINED HEREIN ARE COPYRIGHTED. © copyright all rights reserved

# Many People, One Thought

PROVIDING QUALITY SOLID WOOD FURNITURE AT AN AFFORDABLE PRICE HAS BEEN A GROUP EFFORT. FROM CONCEPT TO PRODUCT DESIGN, MANUFACTURING AND RETAILING, EACH AREA FOCUSES ON THE DETAILS THAT WILL ASSURE YOU A LOW PRICE. BUT NEVER AT THE EXPENSE OF FUNCTION, STYLING, OR GOOD SENSE.

A "READY - TO - ASSEMBLE" ITEM REDUCES TRANSPORTATION AND WAREHOUSING COSTS WHICH HELP YOUR RETAILER KEEP THEIR PRICES REASONABLE.

WITH THE FINAL STEP, ASSEMBLY.

• YOU ASSEMBLE, YOU SAVE •

---


This is a **SOLID WOOD** product:

We inspect all wood and follow quality assurance guidelines that pass third-party inspections.

**Note:** Real wood has knots, small cracks, and what may look like blemishes. These characteristics are expected when producing furniture from natural material.

We take extra care with our drawer parts:


1. We use real wood drawer sides and drawer backs.
2. Drawer sides and backs are not finished to protect fabrics from any residual paint odor.
3. Drawer parts are finely sanded to prevent snags.




**IMPORTANT**

Perform assembly on a clean, hard surface using the flattened box or a towel to protect the surface & the unit's finish. DO NOT assemble on carpet.

Carpet creates too much bounce making assembly difficult and could lead to damage of the parts.



**DO NOT FORCE OR OVER-TIGHTEN THE SCREWS. DOING SO CAN DAMAGE THE PARTS.**

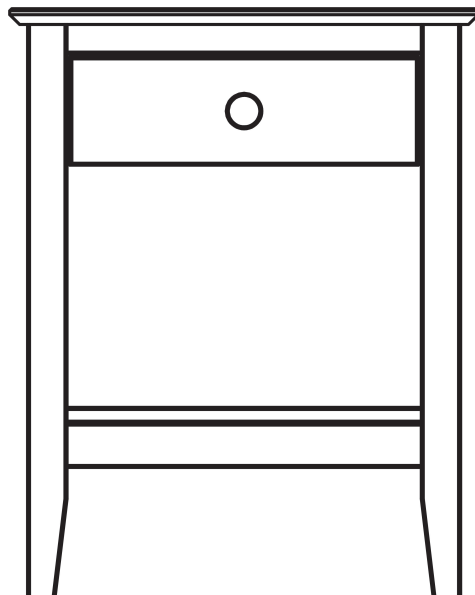

### PLEASE NOTE:




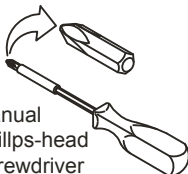
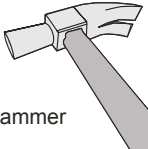
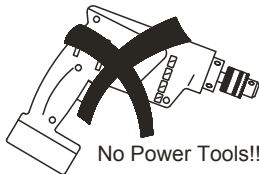
DOWELS (PART A) VARY EVER SO SLIGHTLY. IF A DOWEL (PART A) IS LOOSE, WE PREFER YOU CALL OUR TOLL FREE NUMBER FOR ADDITIONAL DOWELS - VS GLUING THE DOWEL.

IF YOU CHOOSE TO GLUE THE PARTS, COMPLETELY TEST THE ASSEMBLY FIRST. WE DO NOT SUPPLY GLUE.

## Safety and Care Advice


- Check you have all the components and tools listed on pages 3 & 4.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Opened box can be used to protect your floor or counter during assembly.
- Assembly is easier for drawer parts on a counter.
- Parts of the assembly will be easier with 2 people.
- We do not recommend the use of power drill/drivers for inserting screws, as this could damage the unit.
- Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.
- Never sit, stand or allow children to climb on the assembled unit.

**These tools are not supplied by the manufacturer.**










		 60 min	 Manual Phillips-head Screwdriver	 Hammer	 No Power Tools!!
---	---	---	---	--	---
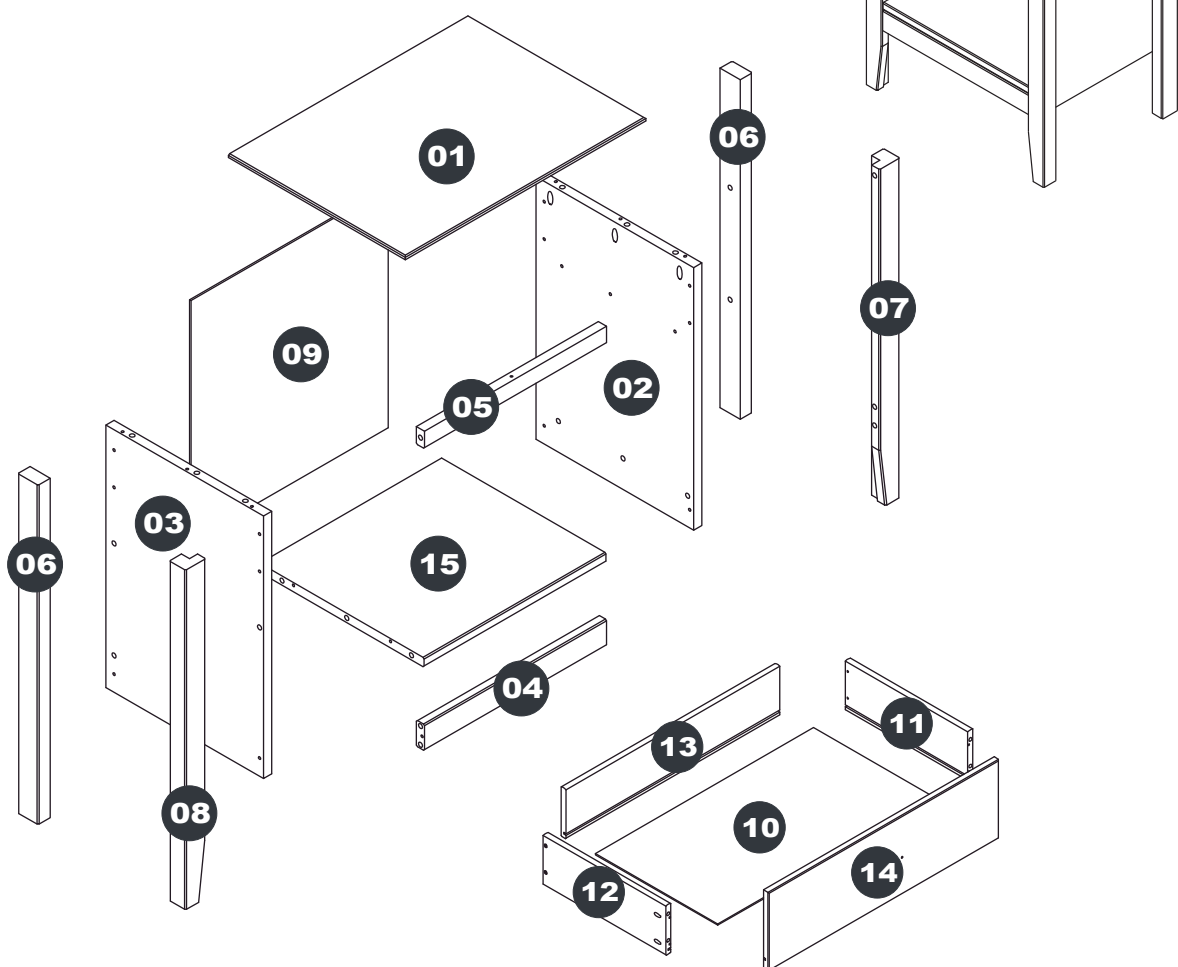
# Single Drawer End Table / Nightstand

## Matte Black Finish

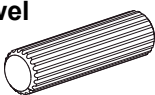

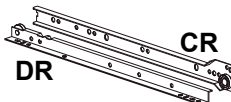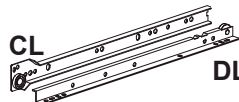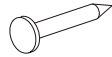01	Top	06	Rear legs	11	Right drawer side
02	Right side panel	07	Right front leg	12	Left drawer side
03	Left side panel	08	Left front leg	13	Drawer back
04	Bottom crossbar	09	Back panel	14	Drawer front
05	Top crossbar	10	Drawer bottom	15	Shelf

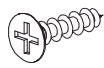
<b>A = 28</b> <b>Dowel</b>  8 x 30 mm	<b>B = 6</b>  <b>Screw (drawer runner to side panel)</b> 6 x 10 mm	<b>C = 33</b>  <b>Screw</b> 3.5 x 30 mm	<b>D = 1 (Right side)</b>  <b>DR CR</b> <b>Drawer runner set</b>	<b>E = 1 (Left side)</b>  <b>CL DL</b> <b>Drawer runner set</b>
<b>F = 14</b>  <b>Back panel nail</b>	<b>G = 01</b>  <b>Knob screw</b> M4 x 25mm	<b>H = 01</b>  <b>Knob</b>	<b>I = 06</b>  <b>Screw (drawer runner to drawer side)</b> 3.0 x 16mm	

# 1

## PREPARE PARTS FOR ASSEMBLY

INSERT DOWELS INTO THE PARTS, AS SHOWN.


IF NEEDED, REFER TO THE NOTE ON PAGE 3 REGARDING DOWELS.

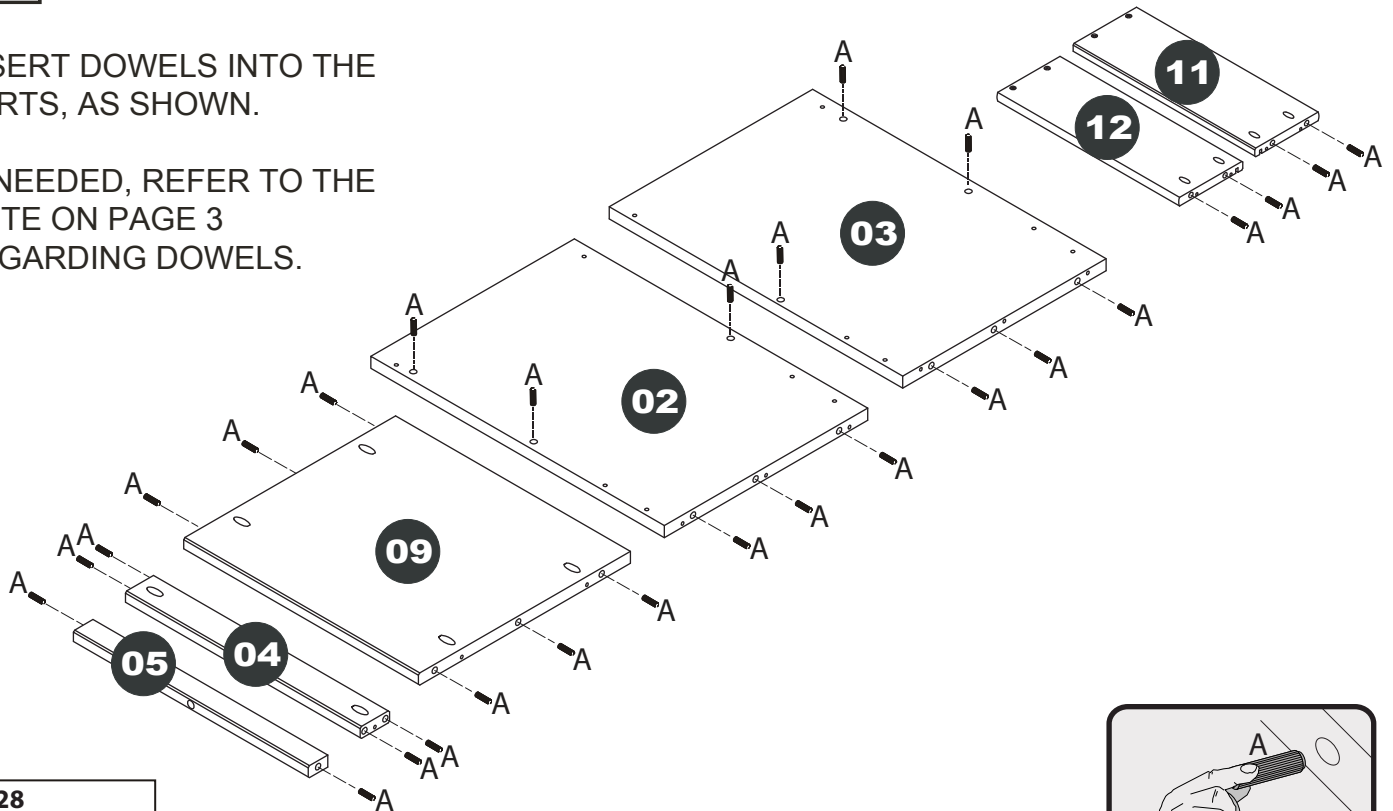

A=28



8.0 x 30mm

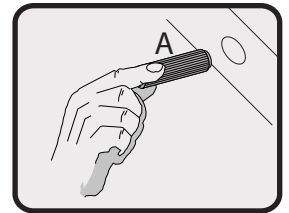


# 2

## ATTACH CABINET RIGHT & LEFT DRAWER RUNNERS

1. WITH THE WHEEL END OF THE RUNNER TOWARD THE FRONT (FINISHED) EDGE OF THE PANEL, ALIGN THE PRE-DRILLED HOLE IN THE PANEL WITH THE SECOND HOLE BACK FROM THE WHEEL.

2. LOOSELY SECURE THE FRONT END OF THE RUNNER USING THE PART B SCREW.



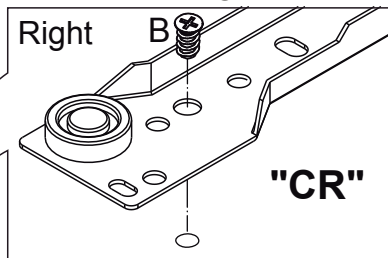


3. ALIGN THE RUNNER SO THE REMAINING 2 PRE-DRILLED HOLES IN THE PANEL ARE VISIBLE THROUGH THE HOLES IN THE RUNNER.

4. LOOSELY SECURE THE 2ND & 3RD SCREWS.

5. RETURN TO THE 1ST SCREW & TIGHTEN. THEN TIGHTEN 2ND & 3RD SCREWS.

6. REPEAT ON OTHER PANEL.

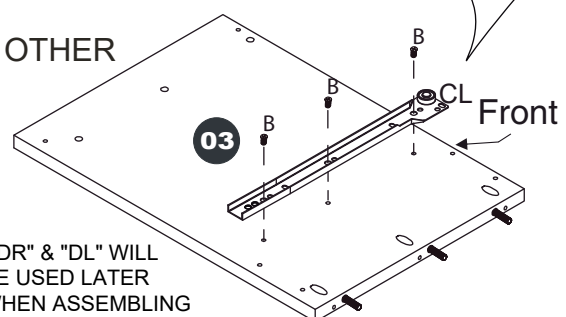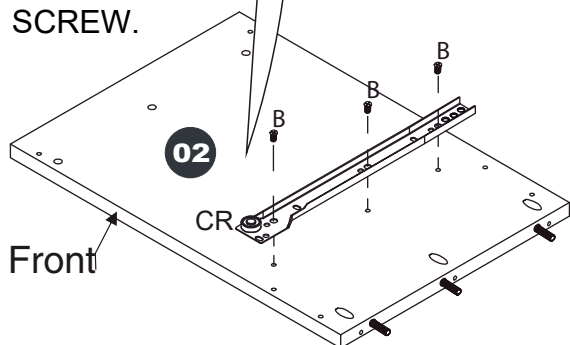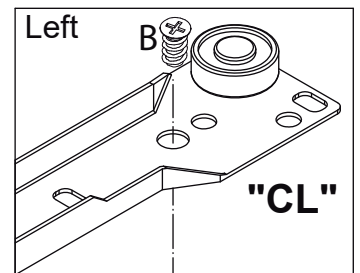


B = 6



Screw (drawer runner to side panel)  
6 x 10 mm

D = 1 (Right side)



Cabinet Right "CR" Runner

E = 1 (Left side)



Cabinet Left "CL" Runner

("DR" & "DL" WILL BE USED LATER WHEN ASSEMBLING THE DRAWERS).



### 3

## ATTACH LEGS TO THE LEFT SIDE PANEL


1. ALIGN THE DOWELS IN THE LEFT SIDE PANEL WITH THE DOWEL HOLES IN THE REAR AND LEFT FRONT LEGS THEN PUSH UNTIL THE PARTS ARE FLUSH.

2. MAKE SURE THE TOP OF THE LEGS ARE FLUSH WITH THE TOP OF THE SIDE PANEL.

3. SECURE THE LEGS TO THE SIDE PANEL USING 3 SCREWS FOR EACH LEG.

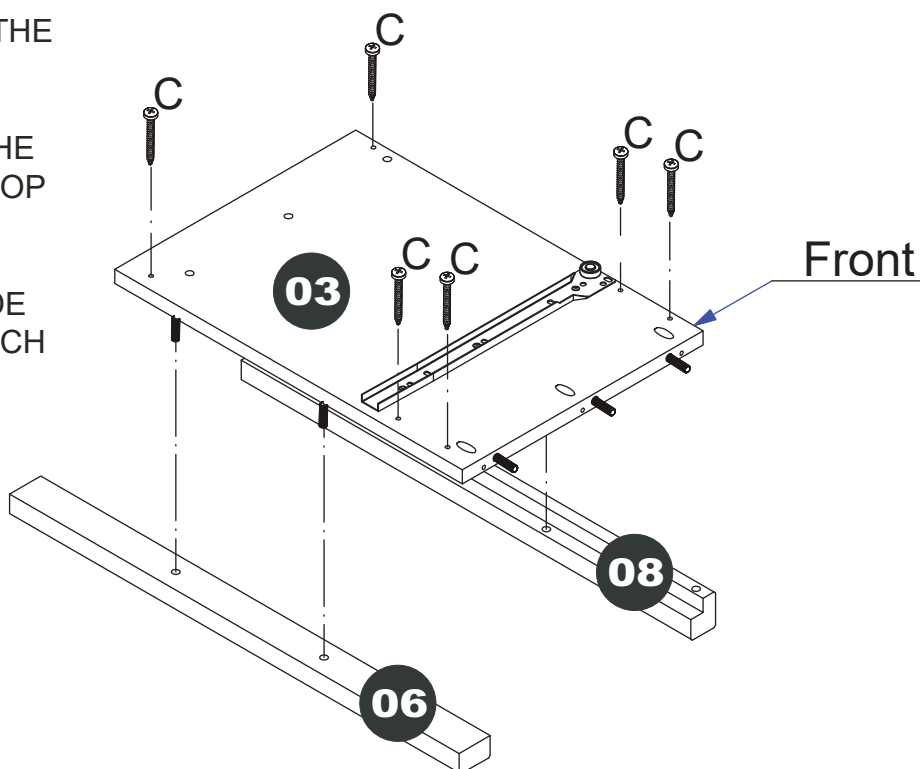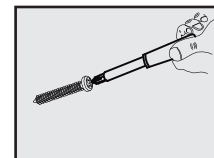

C=06



3.5 x 30mm



### 4

## ATTACH LEGS TO THE RIGHT SIDE PANEL

1. ALIGN THE DOWELS IN THE RIGHT SIDE PANEL WITH THE DOWEL HOLES IN THE REAR AND RIGHT FRONT LEGS THEN PUSH UNTIL THE PARTS ARE FLUSH.

2. MAKE SURE THE TOP OF THE LEGS ARE FLUSH WITH THE TOP OF THE SIDE PANEL.

3. SECURE THE LEGS TO THE SIDE PANEL USING 3 SCREWS FOR EACH LEG.

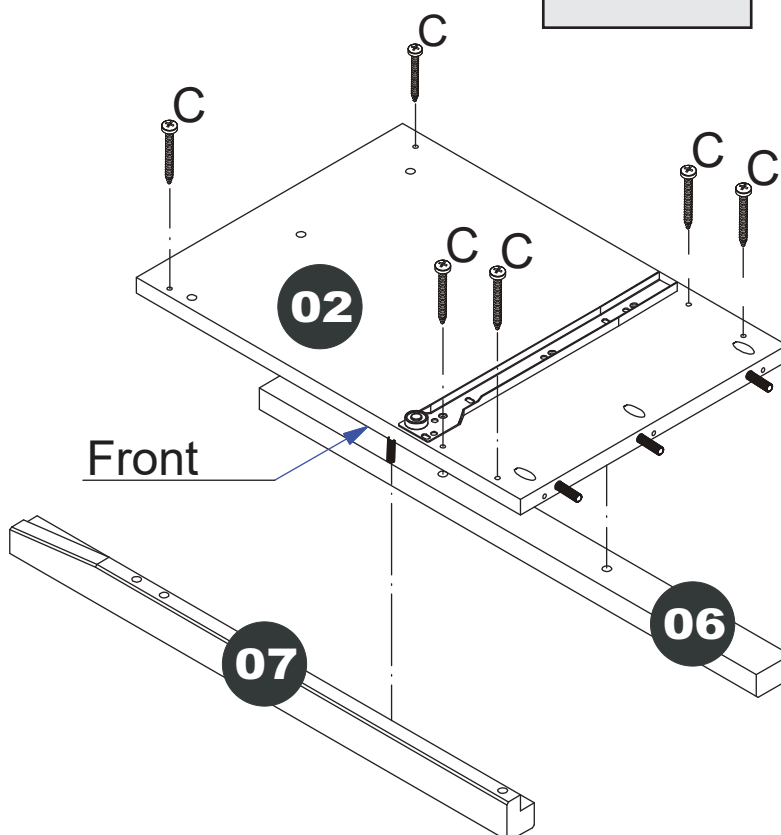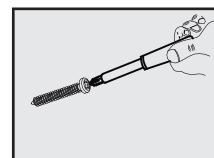

C=06




3.5 x 30mm


7-10

# 7

## SECURE THE TOP CROSSBAR

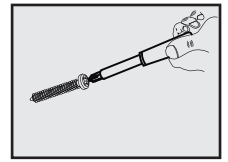

1. SECURE THE FRONT TOP CROSSBAR WITH 1 PART C SCREW.

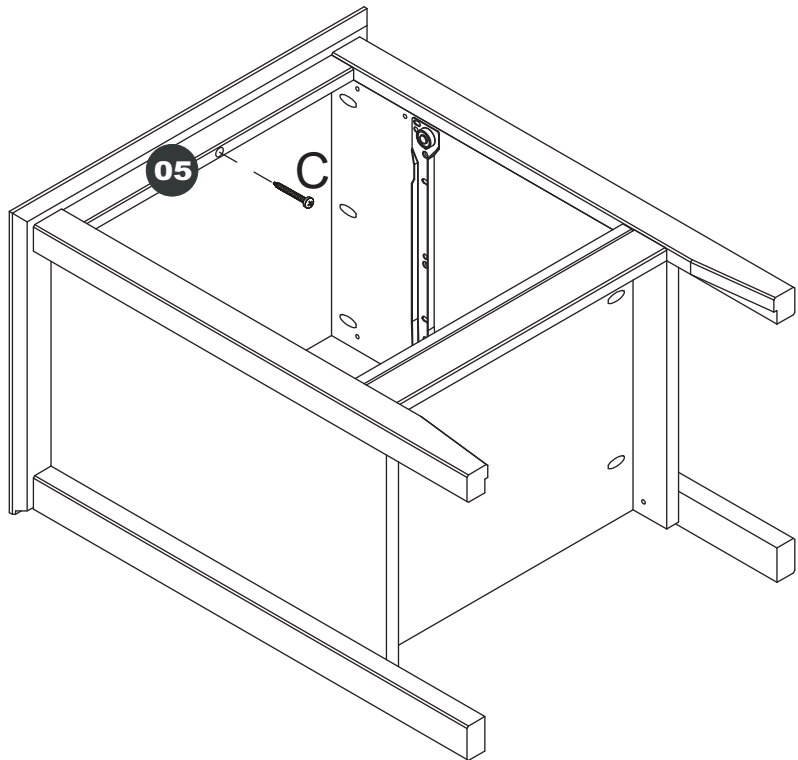

C=01




3.5 x 30mm




**TIP:** This step is easier with the unit upside down.

# 8


## ATTACH THE TOP

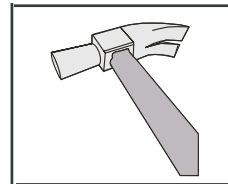

Use all back panels nails. Evenly spaced, they help make the unit strong.

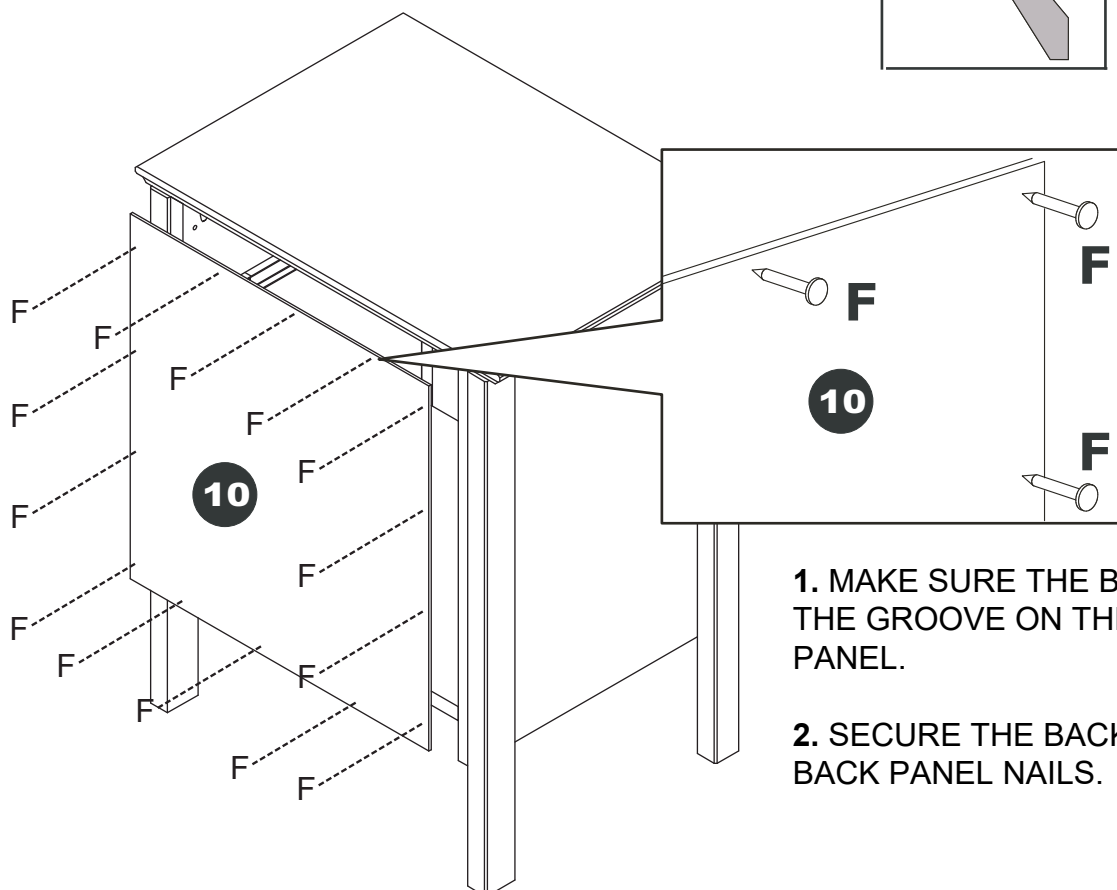

F x 14






1. MAKE SURE THE BACK PANEL FITS IN THE GROOVE ON THE BACK OF THE TOP PANEL.

2. SECURE THE BACK PANEL WITH THE BACK PANEL NAILS.




## 09 ASSEMBLE THE DRAWER BOX


**IMPORTANT! MAKE SURE THE GROOVES IN THE DRAWER FRONT AND BOTH SIDES ALL ALIGN BEFORE TIGHTENING THE SCREWS.**

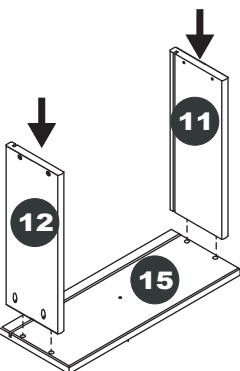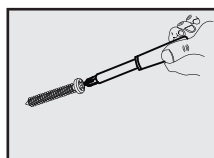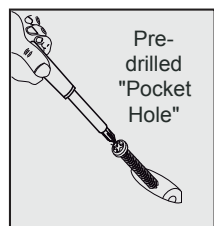


**1. ALIGN THE DOWELS IN THE DRAWER SIDES WITH THE PRE-DRILLED HOLES IN THE DRAWER FRONT AND PUSH UNTIL THE PARTS ARE FLUSH.**

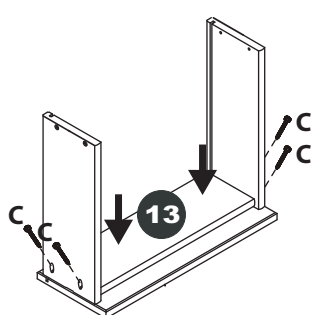


**2. USE THE DRAWER BACK TO SUPPORT THE DRAWER SIDES. THEN SECURE THEM TO THE DRAWER FRONT.**

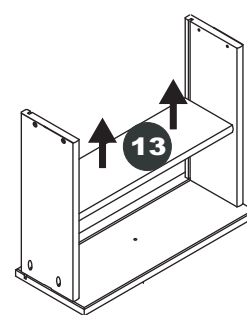


**3. REMOVE THE DRAWER BACK.**

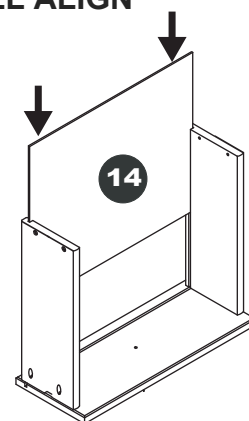

**4. SLIDE IN THE DRAWER BOTTOM. MAKE SURE IT IS ALL THE WAY FORWARD & IN THE GROOVE ON THE DRAWER FRONT.**

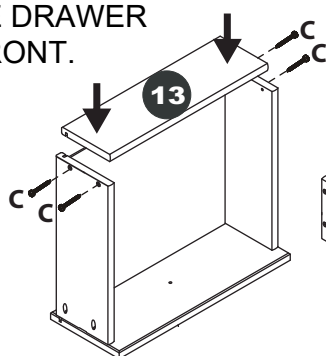


**5. SECURE THE DRAWER BACK.**

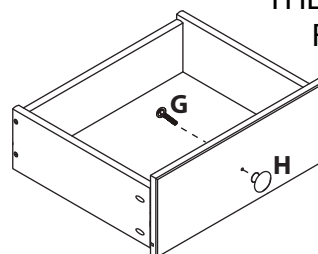

**6. ATTACH THE KNOB TO THE DRAWER FRONT.**

**C=08**



3.5 x 30mm

**G=01**



M4 x 25mm

**H=01**



## 10 ATTACH THE DRAWER RUNNERS

1. POSITION THE RIGHT DRAWER RUNNER "DR" WITH THE WHEEL TOWARD THE BACK OF THE DRAWER AND THE FRONT END ALL THE WAY FORWARD TOUCHING THE DRAWER FRONT.
2. FIRST SCREW GOES IN THE THIRD HOLE BACK FROM THE DRAWER FRONT.
3. SECOND SCREW GOES IN THE SIXTH HOLE FROM THE DRAWER FRONT.
4. THIRD SCREW GOES IN FROM THE SIDE INTO THE FIRST HOLE IN FRONT OF THE WHEEL.

REPEAT STEPS ON THE LEFT.

**D = 1 (Right side)**



**Drawer Right "DR" Runner**

**E = 1 (Left side)**




**Drawer Left "DL" Runner**

**I = 06**




**Screw (drawer runner to drawer side)**

3.0 x 16mm

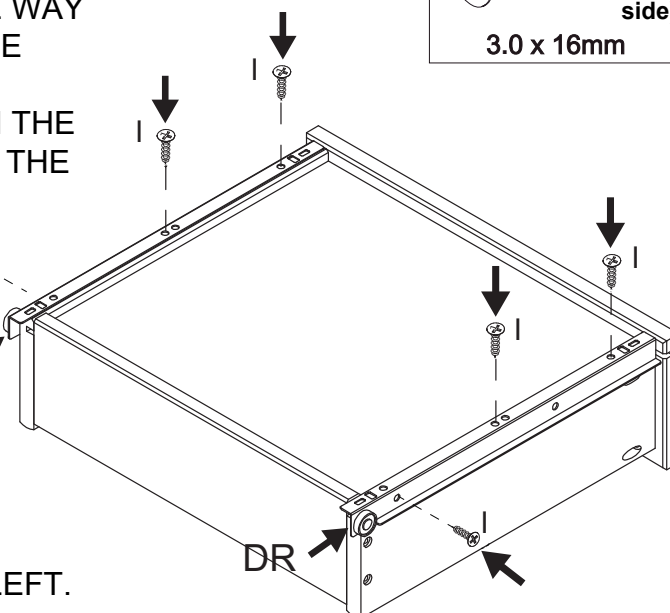


**TIP:** To make this step easier, place the drawer upside down on a counter with the drawer front hanging off the edge. This will allow the drawer box to lay flat and provide better control for tightening the screws.

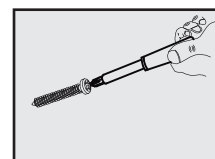


# 11

## INSTALL THE DRAWER

1. HOLD THE FRONT END OF THE DRAWER SIDES. TILT THE BACK OF THE DRAWER UPWARDS TO GET THE WHEELS ON THE DRAWER PAST THE WHEELS ON THE UNIT. ONCE THE WHEELS ARE CLEAR, LEVEL OUT THE DRAWER AND SLIDE IT IN.

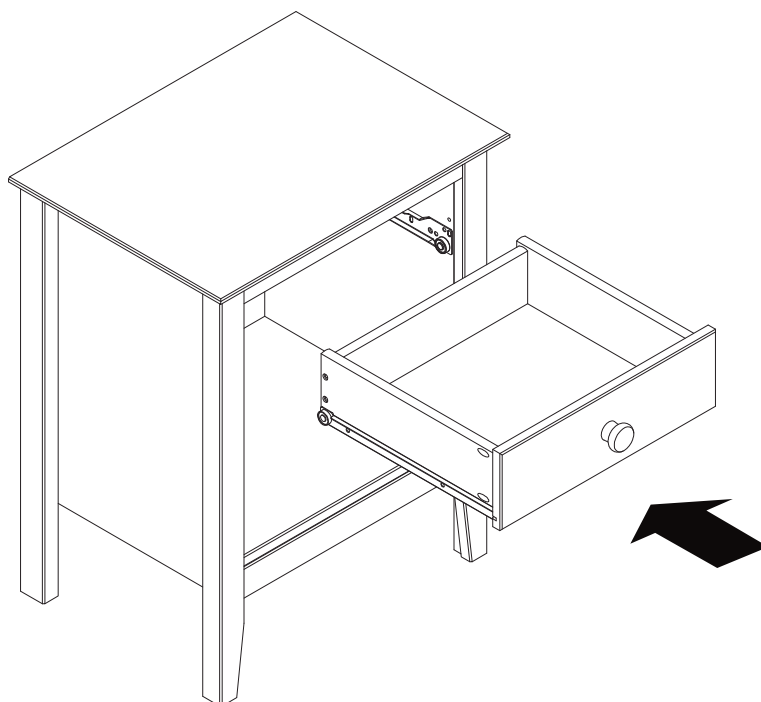

**COMPLETED ASSEMBLY!**  
**THANK YOU FOR YOUR PURCHASE, AND WELCOME !**

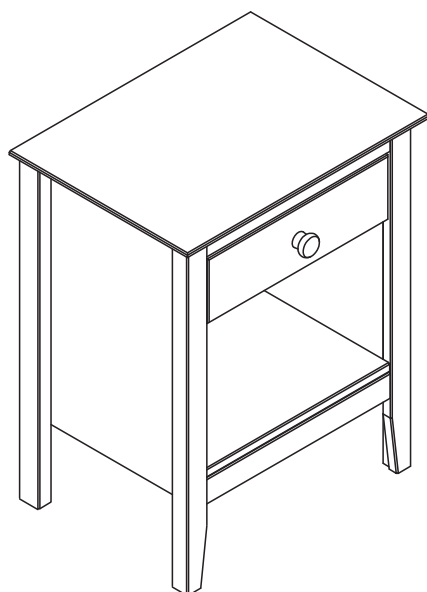

### CARE INSTRUCTIONS:

- NORMAL USE: WIPE WITH A CLEAN CLOTH.
- WHEN NEEDED TO CLEAN SCUFFS: WIPE CLEAN WITH A SLIGHTLY DAMP CLOTH AND A MILD CLEANER. THEN WIPE DRY WITH A CLEAN CLOTH. DO NOT USE HARSH CHEMICALS.
- PERIODICALLY CHECK THAT ALL OF THE SCREWS ON THE UNIT REMAIN TIGHT.

### INTENDED USE:

- AS A SIDE OR ACCENT TABLE WITH STORAGE FOR MISCELLANEOUS HOUSEHOLD ITEMS.