




10'x10' WALL-MOUNTED GAZEBO

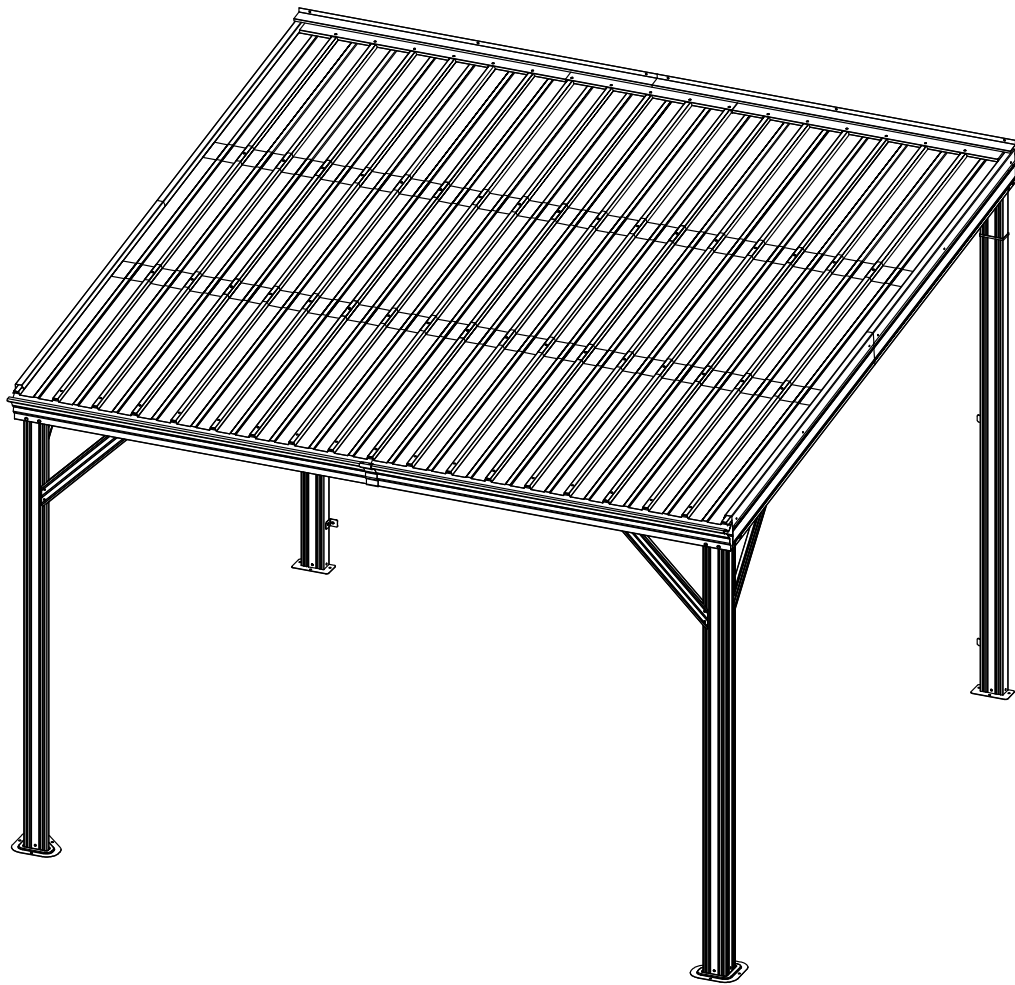





MODEL# : LGCF1696

Missing part? Damaged? Contact us via email at



service@domioutdoorliving.com

www.domioutdoorliving.com


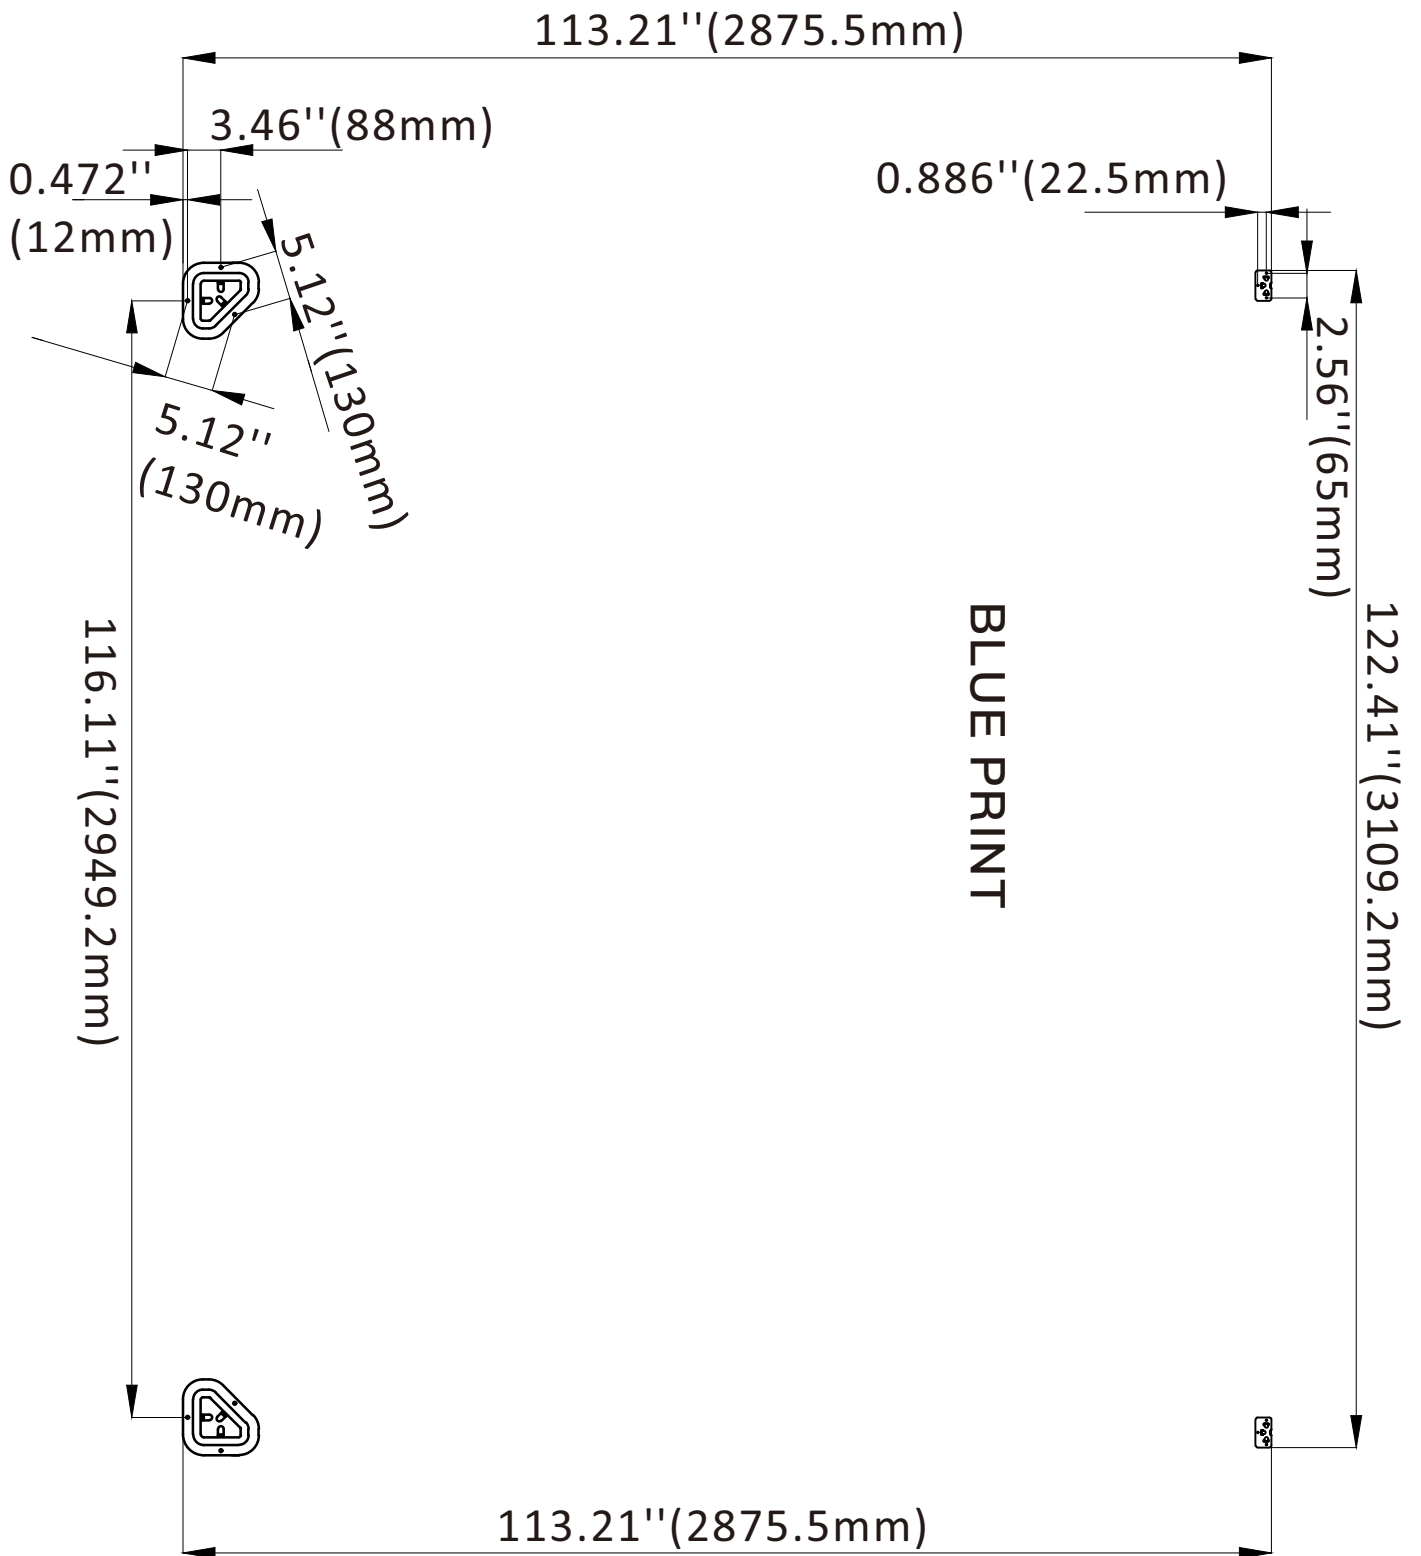


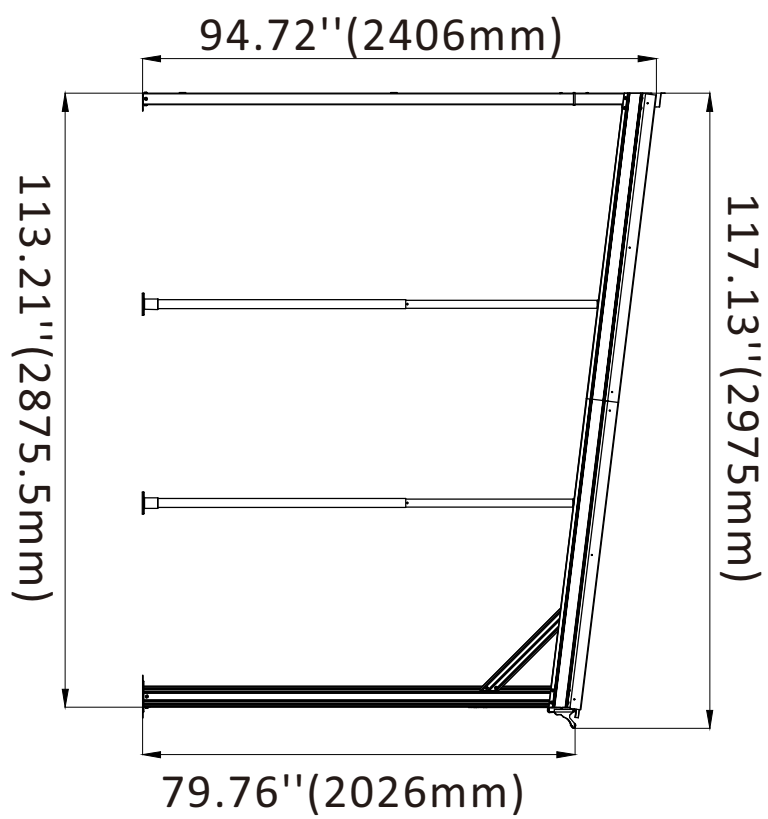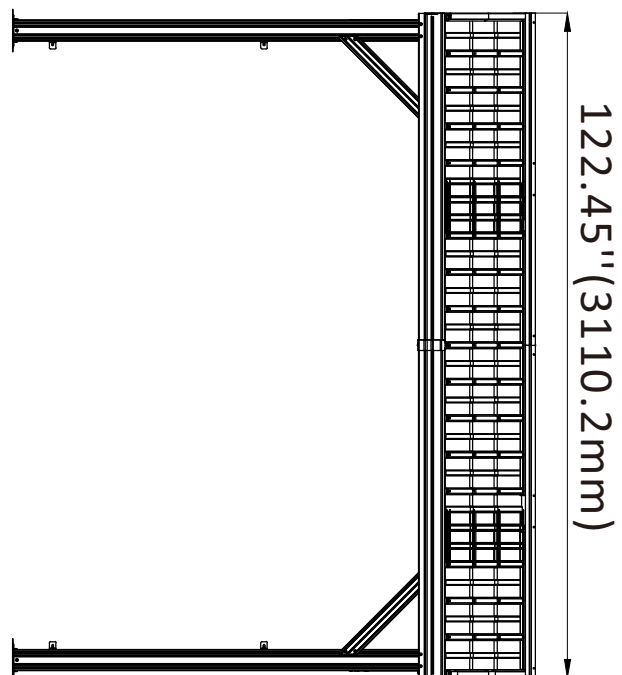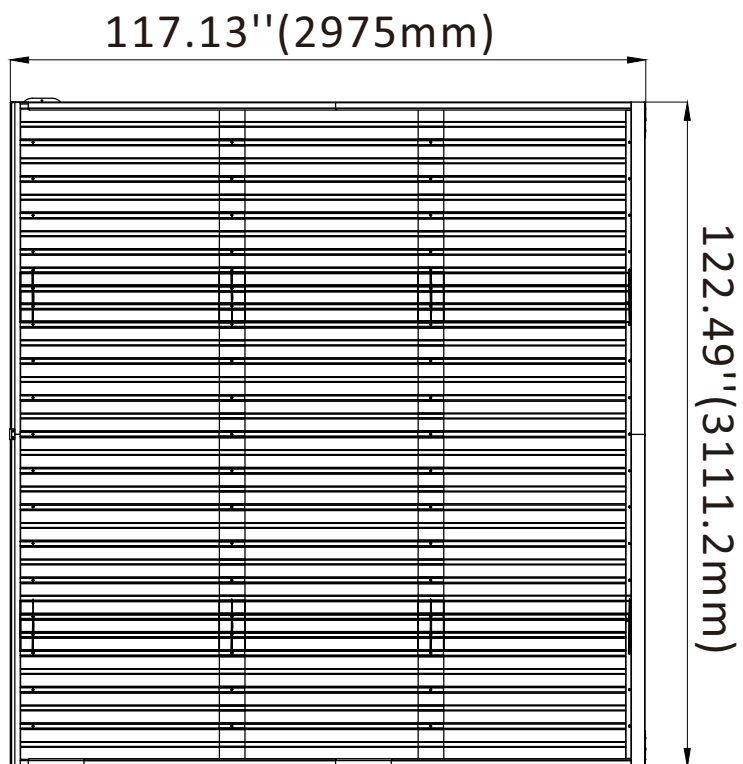



1

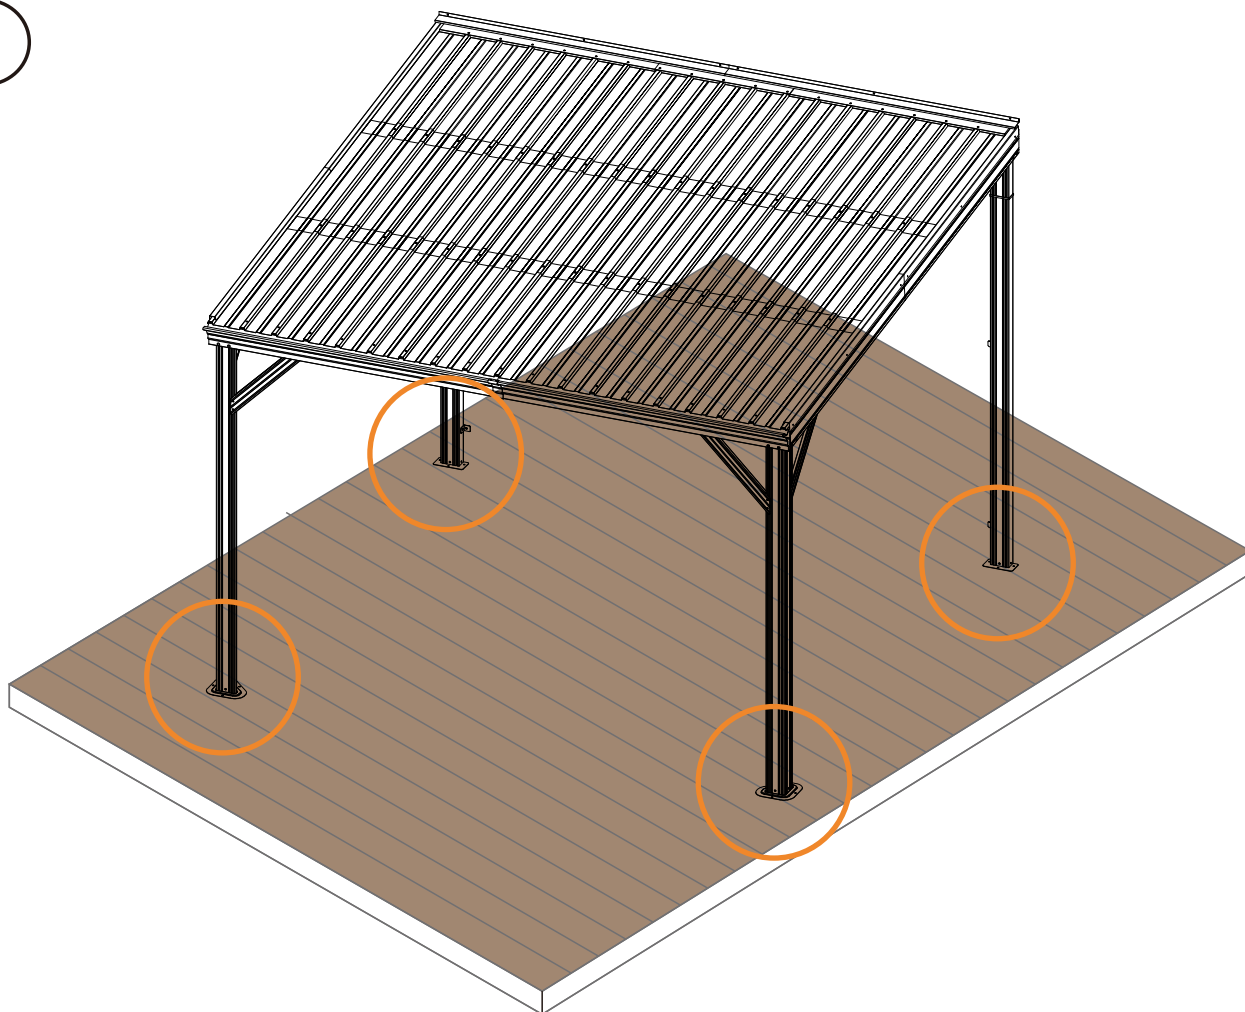

If the deck is hard wood and the depth of it is over 3 inch, you can use **5/16 in. x4 in. Structural Wood Screw** to mount the pergola.

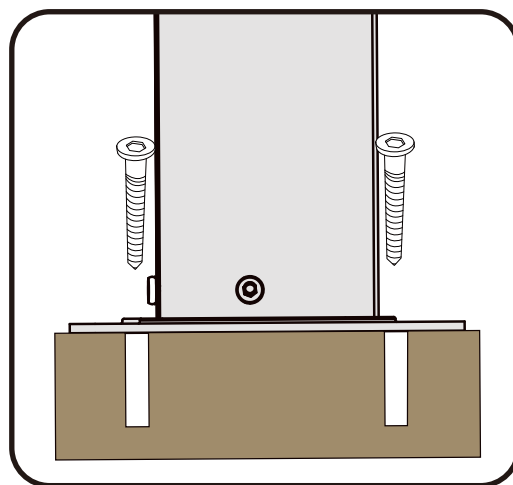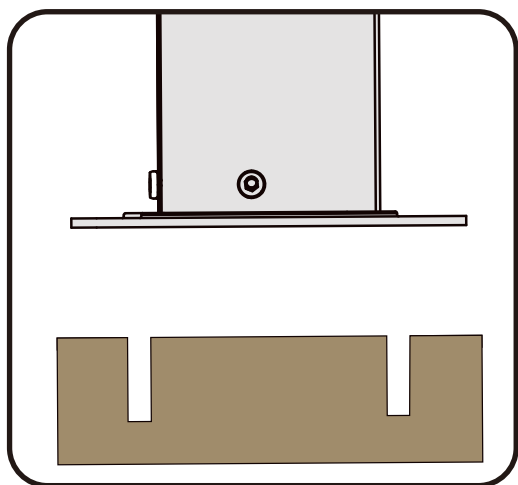

2

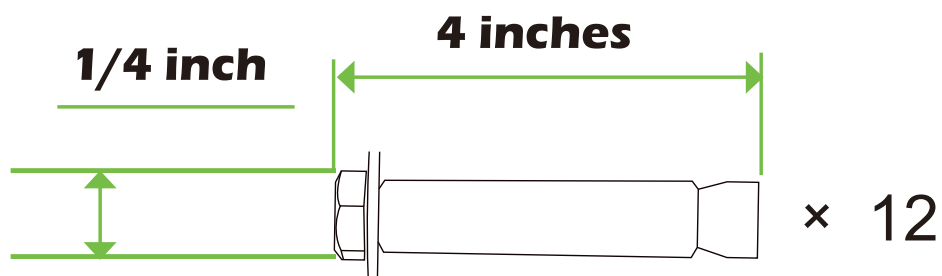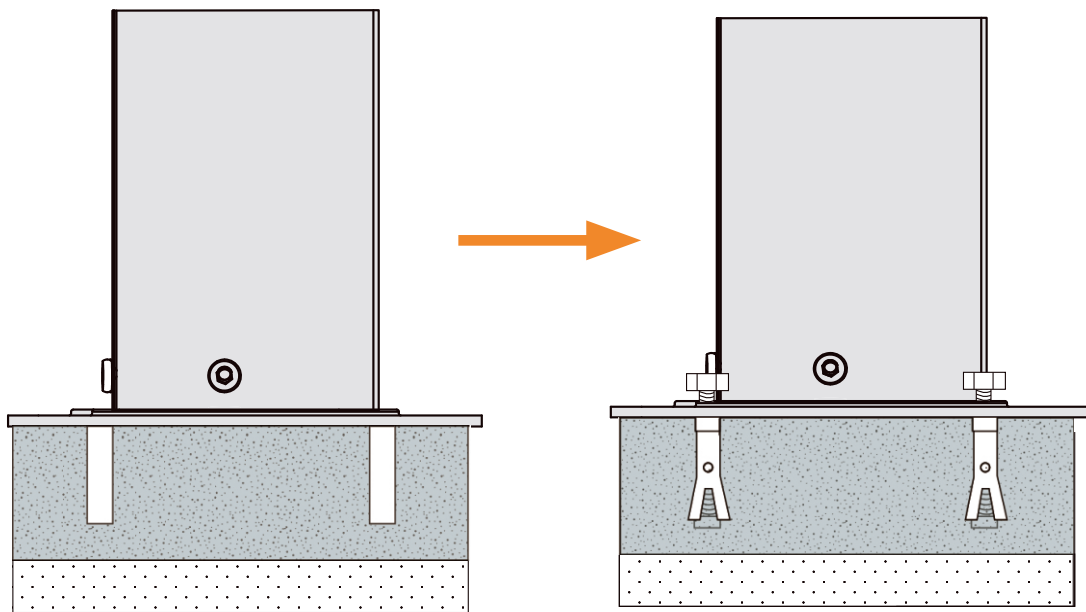

If the ground is concreted and the depth of it is over 3 inch, you can use 1/4 inch expansion bolts to mount the pergola



A1 1x



A2 1x



B1 1x



B2 1x



B3 1x



B4 1x



D1 1x




D2 1x




E1 1x



E2 1x



F1 2x



F2 2x



G1 1x



G2 1x



H1 1x




H2 1x



I1 2x



I2 2x



J1 2x




J2 1x




J3 4x



J4 2x

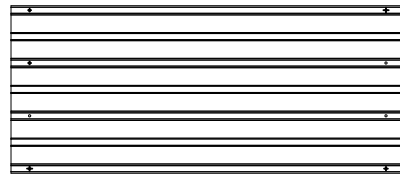

N 18x




C1 2x



C2 2x




C3 6x




D3 1x




D4 1x



K1 2x



K2 2x



K3 5x




K4 1x



K5 8x



L1 76x



L2 76x



1 1x




2 16x



M6x16

3 126x



M6x30

4 76x



M6x30

6 4x



M6x40

7 24x



M6

8 72x



M5x12

9 1x



ST4. 2x10

10 12x



ST4.8x13

11 2x




ST5x16

12 2x




M6x70

13 14x




14 2x

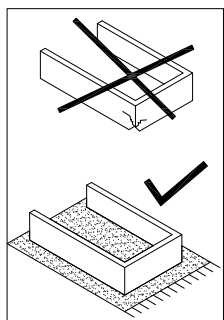

Front Pole Assembly:

INSIDE VIEW

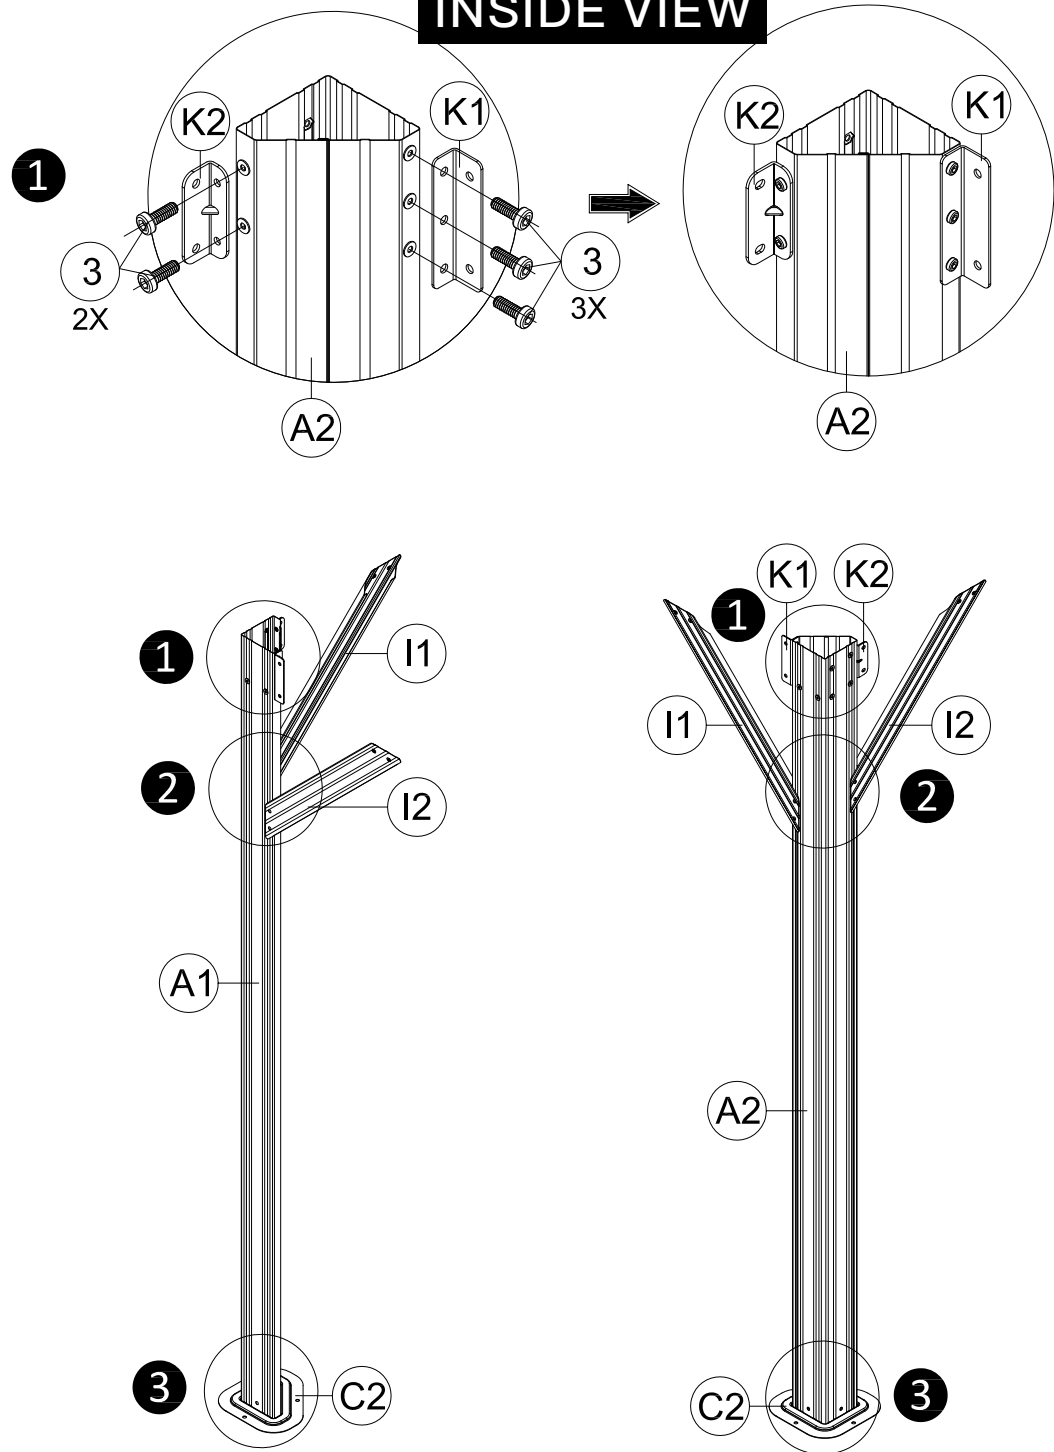

①: Install the Bracket #K2 and #K1 onto the front Pole #A2, secure them with 5 bolts #3.

A1 1x

A2 1x

C2 2x

I1 2x

I2 2x

K2 2x




K1 2x

1 1x


M6x16

3 24x

4-1

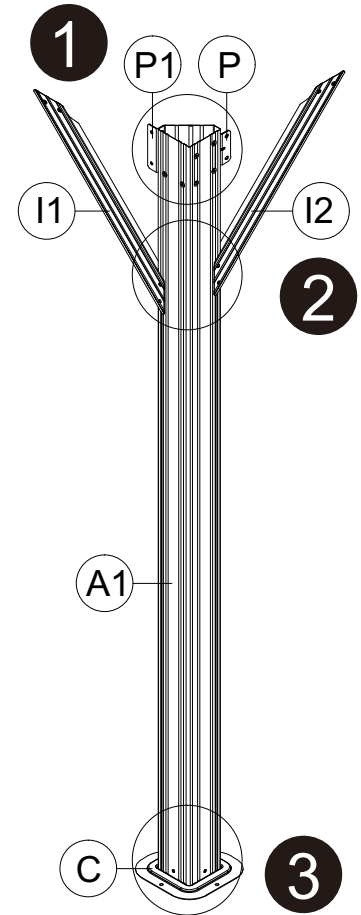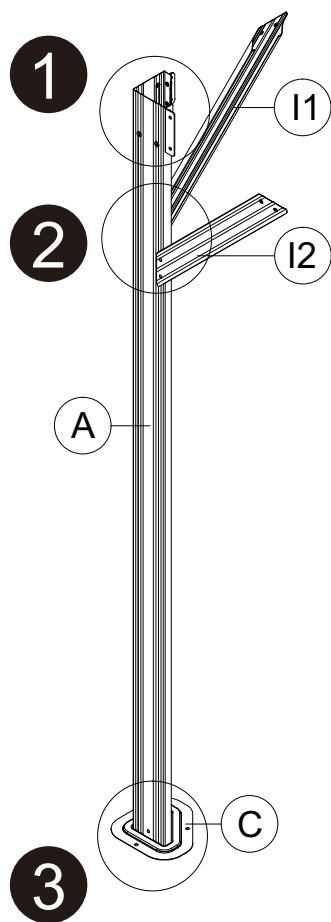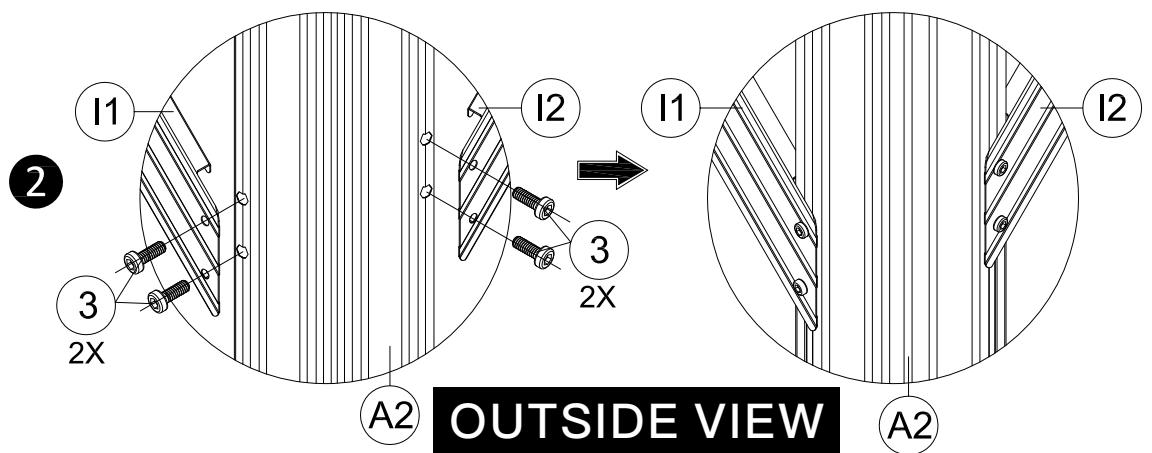


②: Install parts #I1 and #I2 onto #A2, and secure them with 4 bolts #3. (note that the bolts should not be tightened).

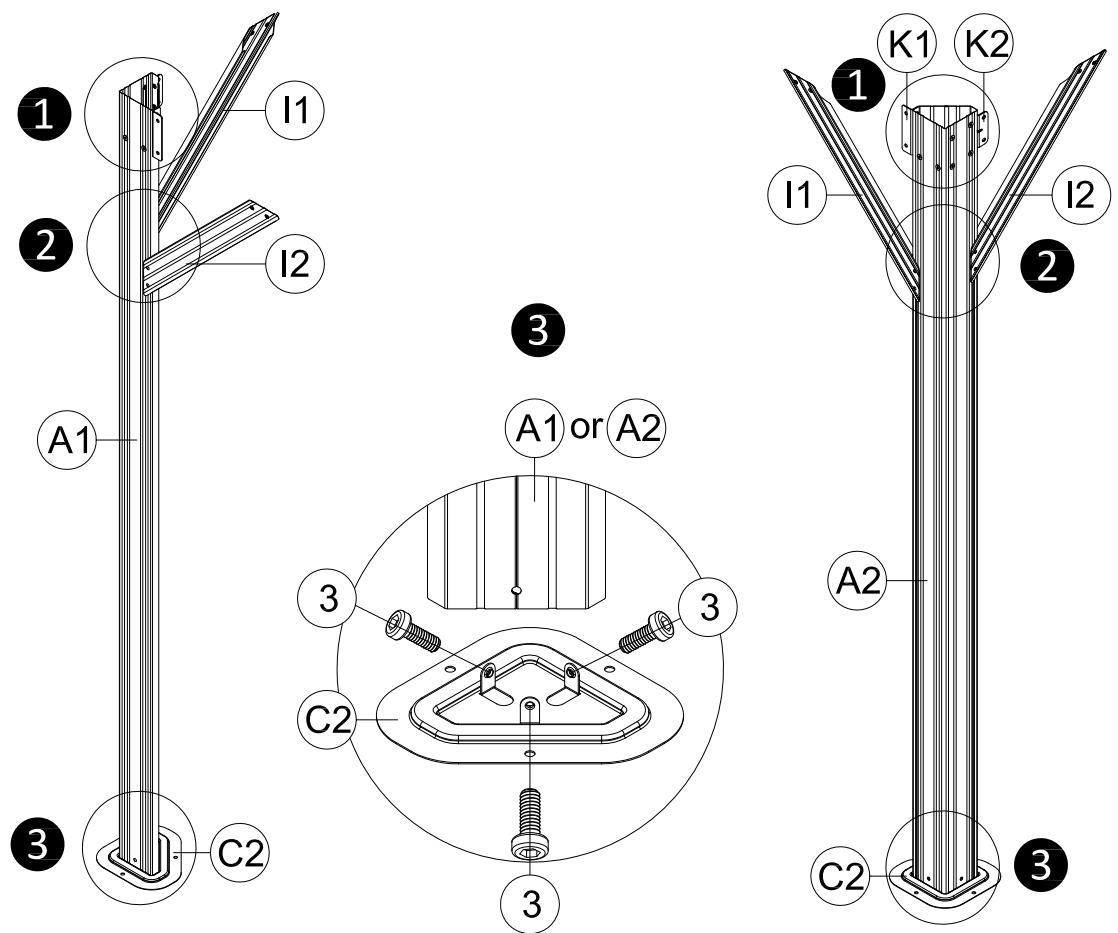


③: Install the Pole #A1 onto the base #C2, secure it with 3 bolts #3.

Repeat above procedures to assemble Pole #A2.


Front Beam Assembly:

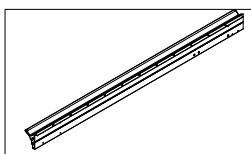


D1 1x

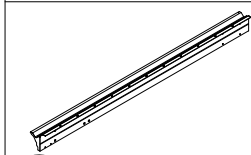


D2 1x

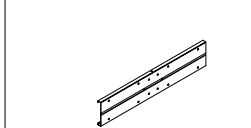

D3 1x

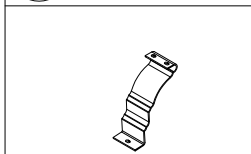


D4 1x

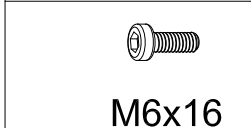

M6x16

3 8x

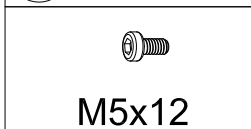


M5x12

9 1x




ST4.8x13

11 2x

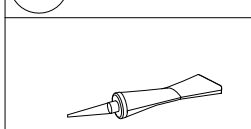

14 1x

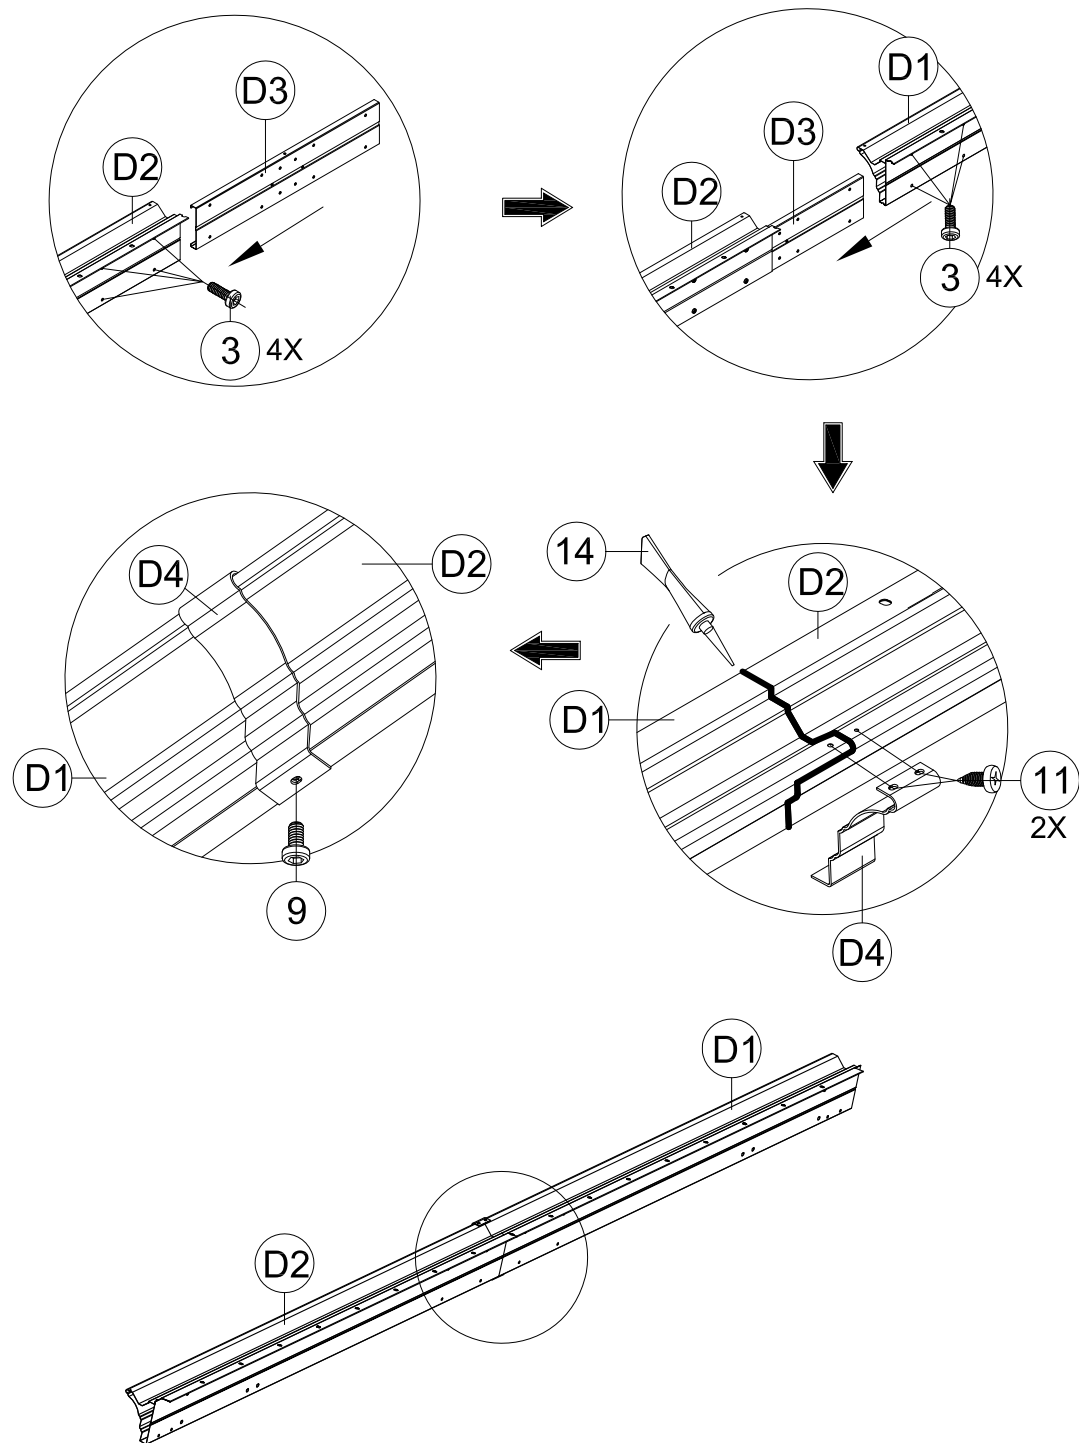

- (1) Insert the Beam Connector #D3 into the front beam #D2, and secure with 4 bolts #3;
- (2) Insert the other side of the Beam Connector #D3 into the front beam #D1, and secure it with 4 bolts #3.
- (3) Apply sealant to the joint between #D2 and #D1. Install the Joint Cover #D4 to the beams #D2 and #D1 by aligning the holes, secure with 2 screws #11 and 1 bolt #9.




S4

1 1x



M6x16


3 8x



M6x30


6 4x

Attach the front beam #D2 to the front pole #A2 and secure it with 2 bolts #6.

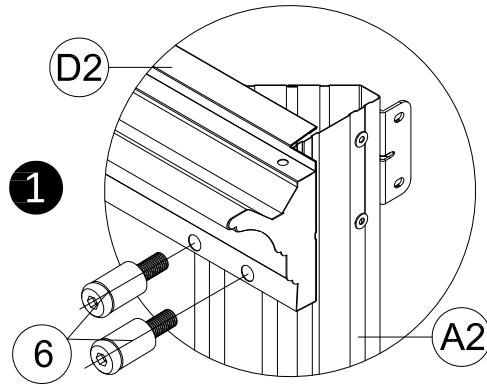


OUTSIDE VIEW


Secure the Bracket #K1 to the front beam #D2 using 2 bolts #3.

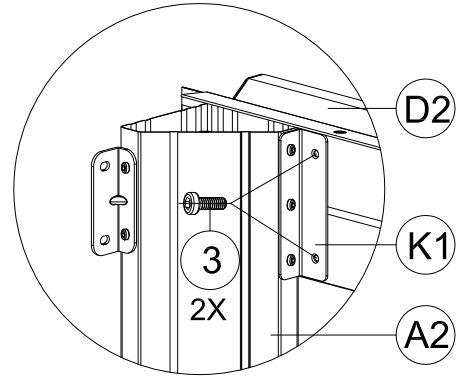

Use 2 bolts #3 to secure #I1 to the front beam #D2.

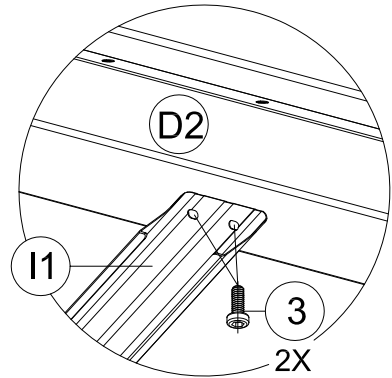



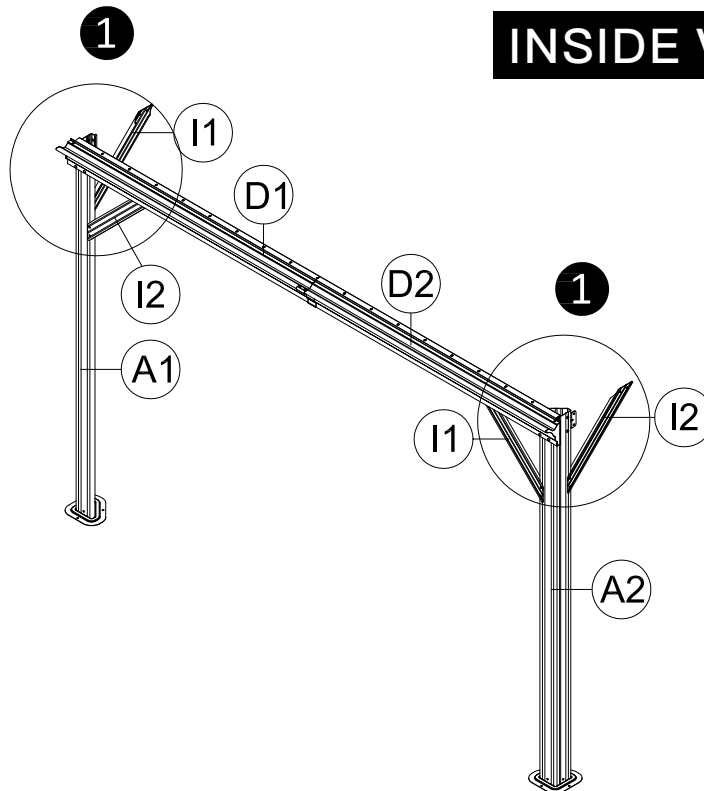






INSIDE VIEW




(Note: Do not tighten the bolts).

Repeat above procedures to assemble Pole #A1 with Front Beam #D1.




Rear Pole Assembly:

	
(B1) 1x	(B2) 1x
	
(B3) 1x	(B4) 1x
	
(C1) 2x	
	
(C3) 6x	
 S4	
(1) 1x	
	
M6x16	
(3) 14x	
	
ST5x16	
(12) 2x	
7-1	

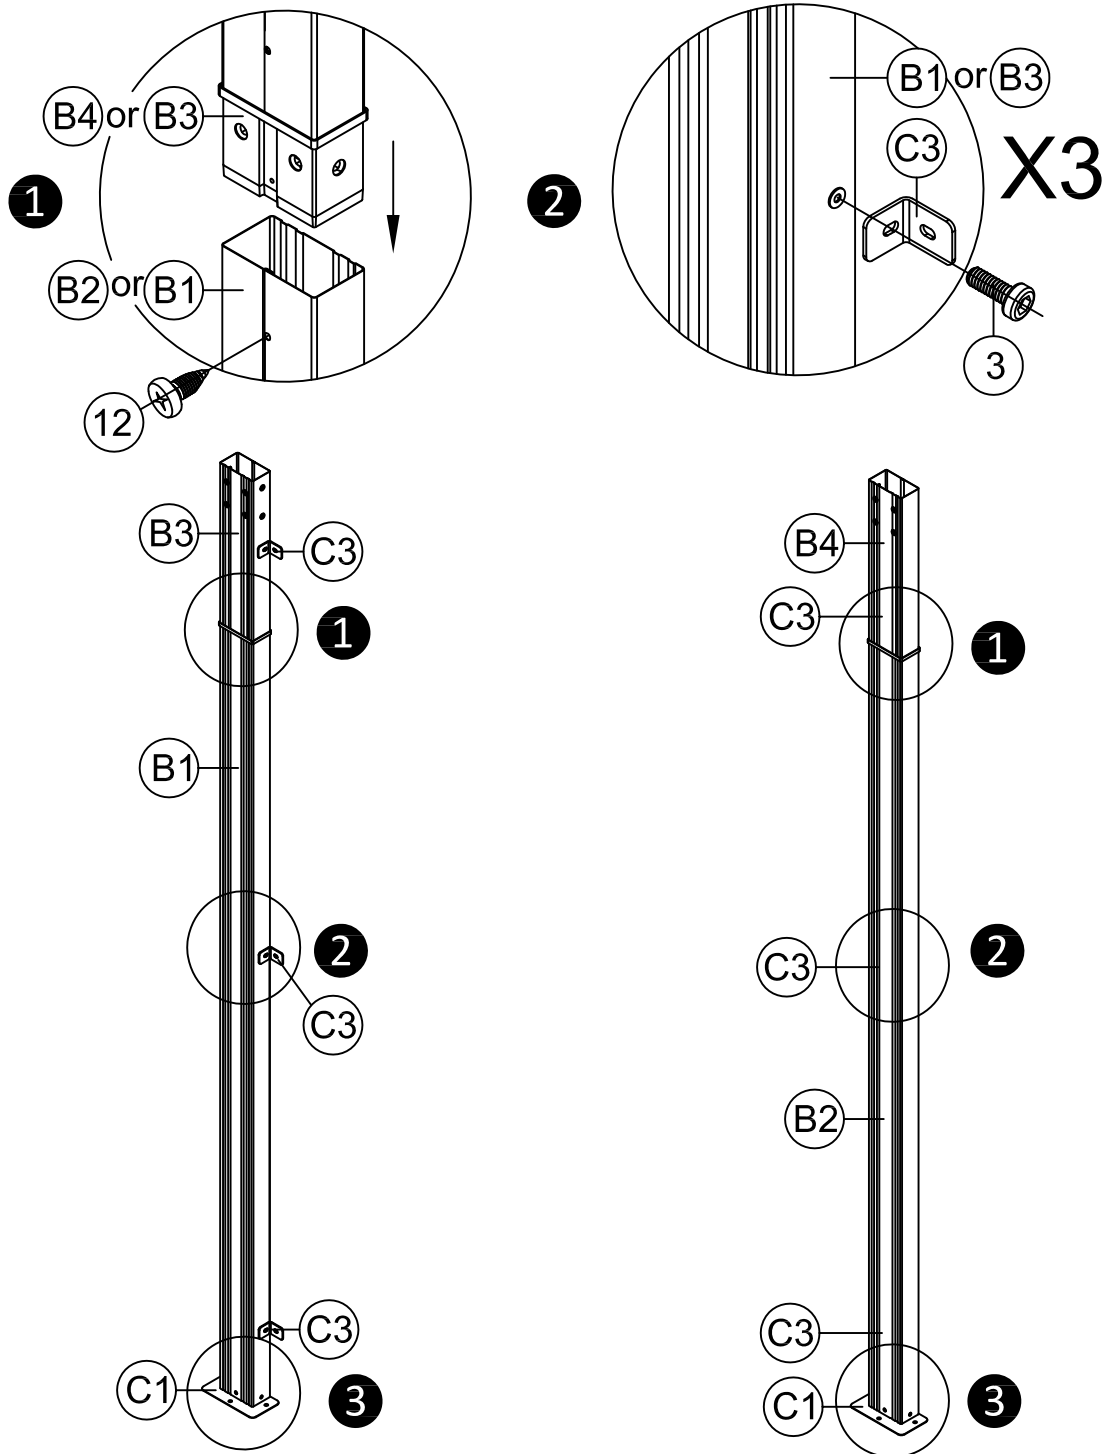








- ①: Insert the rear pole (upper) #B3 into the rear pole (lower) #B1 and secure it with screws #12.
- ②: Use bolts #3 to secure Bracket #C3 to #B1. (If you don't consider fixing it to the wall, you can skip this step.) The bracket #C3 is used to fix the post against the wall. You can assemble only 2 pieces for each post according to the actual installation situation.

Repeat above procedures to assemble #B4 with #B2.

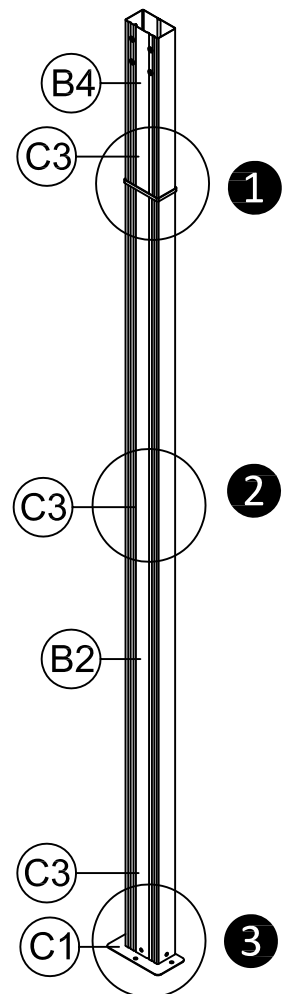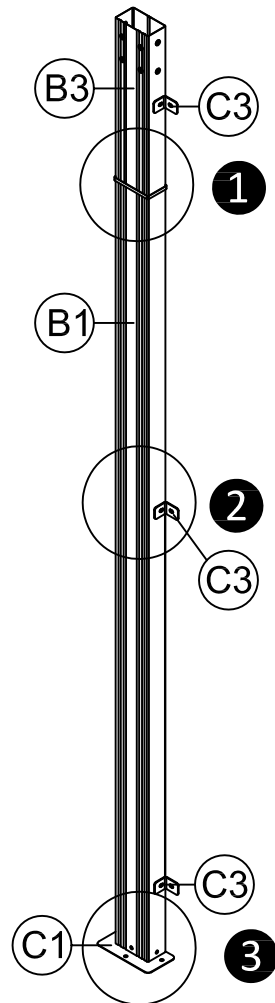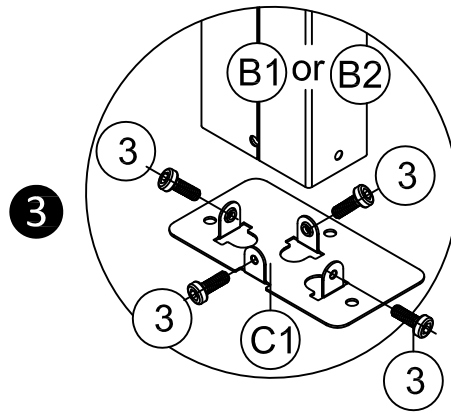

③: Use 4 bolts #3 to secure base #C1 to Pole #B1 and #B2.

Rear Beam Assembly:

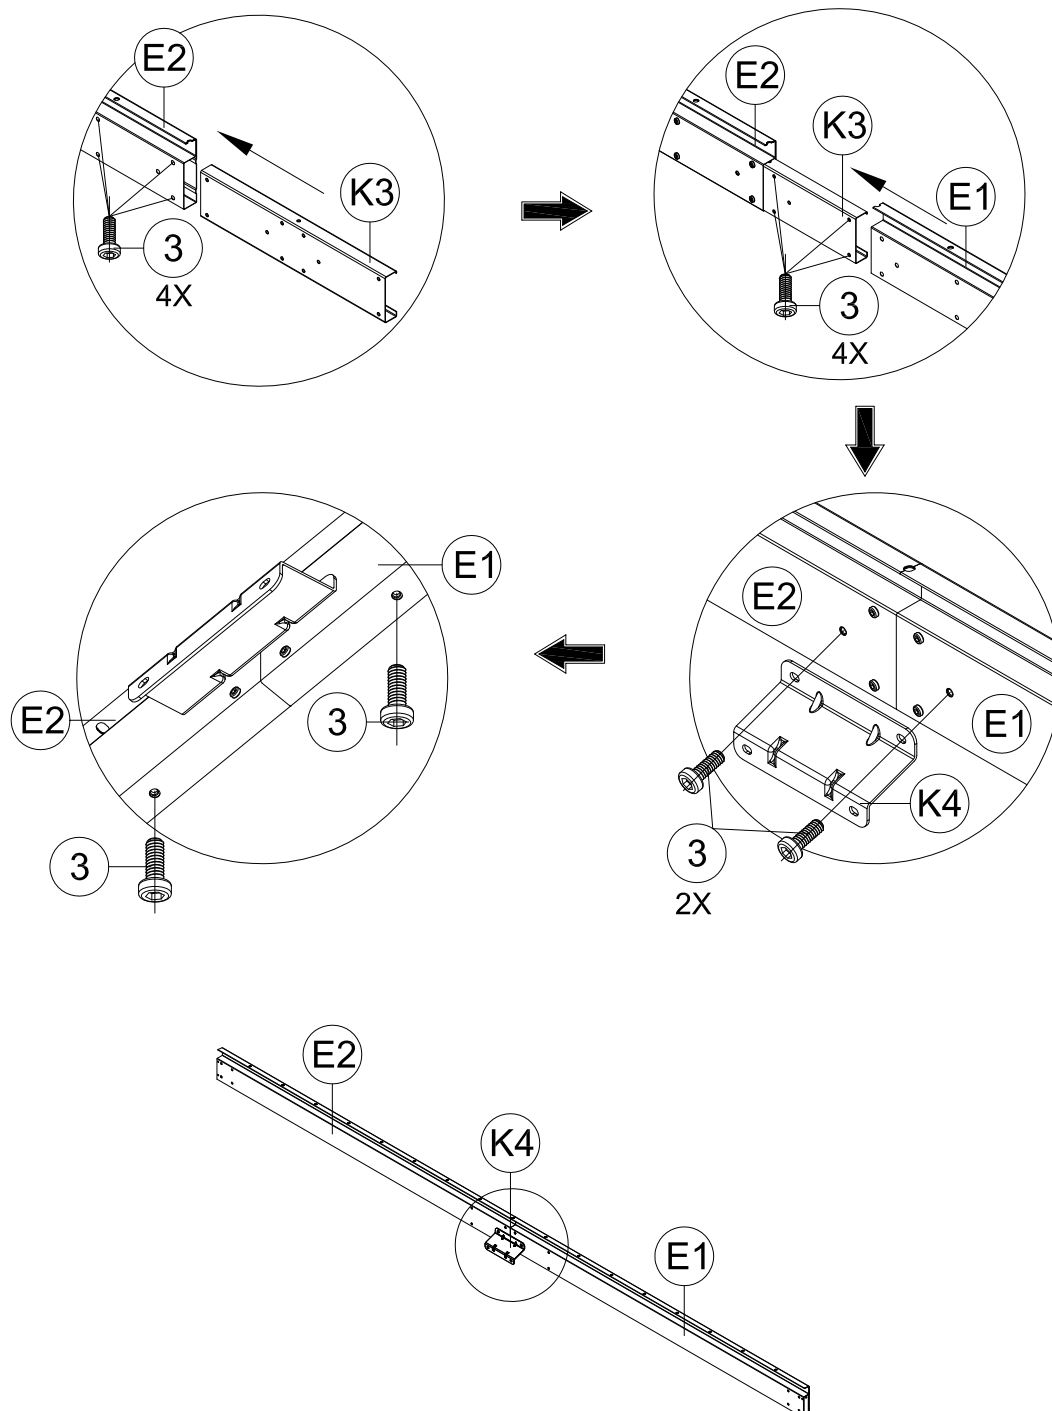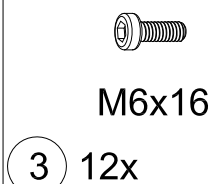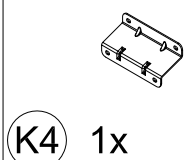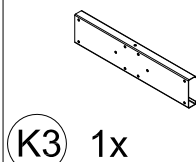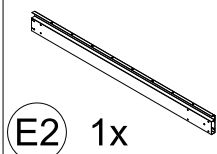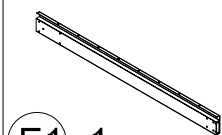

- (1) Insert the Beam Connector #K3 into the rear beam #E2, and secure it with 4 bolts #3;
- (2) Insert the other side of the Beam Connector #K3 into the rear beam #E1, and secure it with 4 bolts #3.
- (3) Align the holes and use 2 bolts #3 to secure #K4 to the Rear Beam #E1 & E2.
- (4) Secure the bottom of the rear beam with 2 bolts #3.






S4

① 1x




M6x40

⑦ 8x

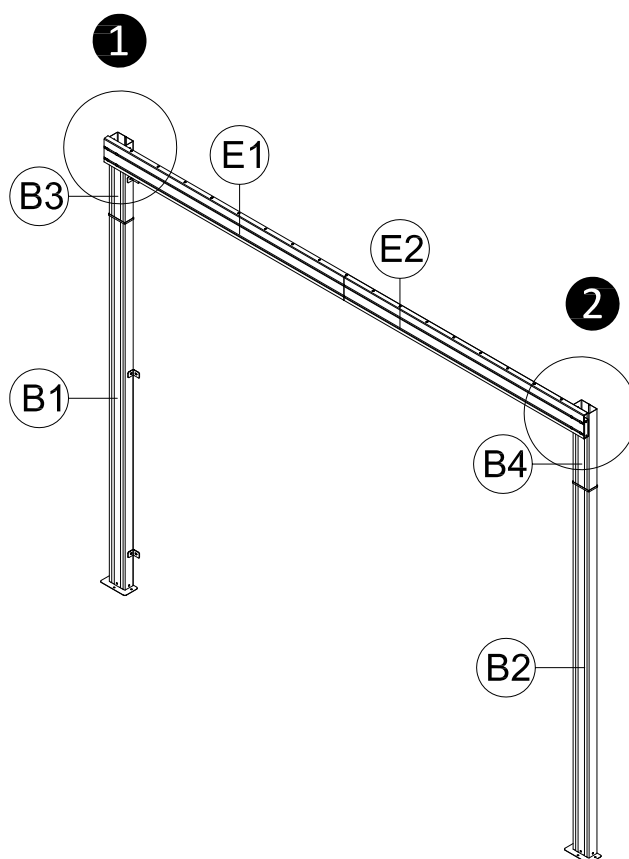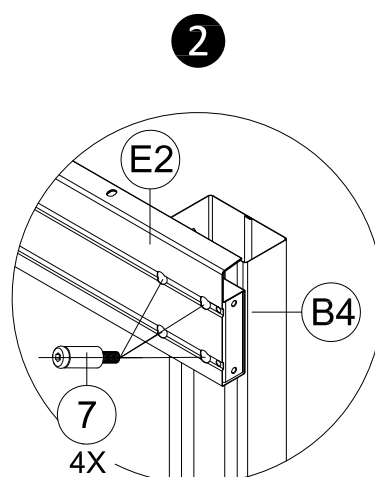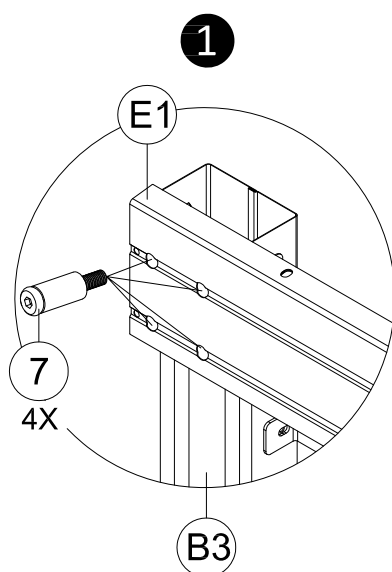


①: Attach the rear beam #E1 to the rear pole #B3 and secure it with 4 bolts #7.


②: Attach the rear beam #E2 to the rear pole #B4 and secure it with 4 bolts #7.

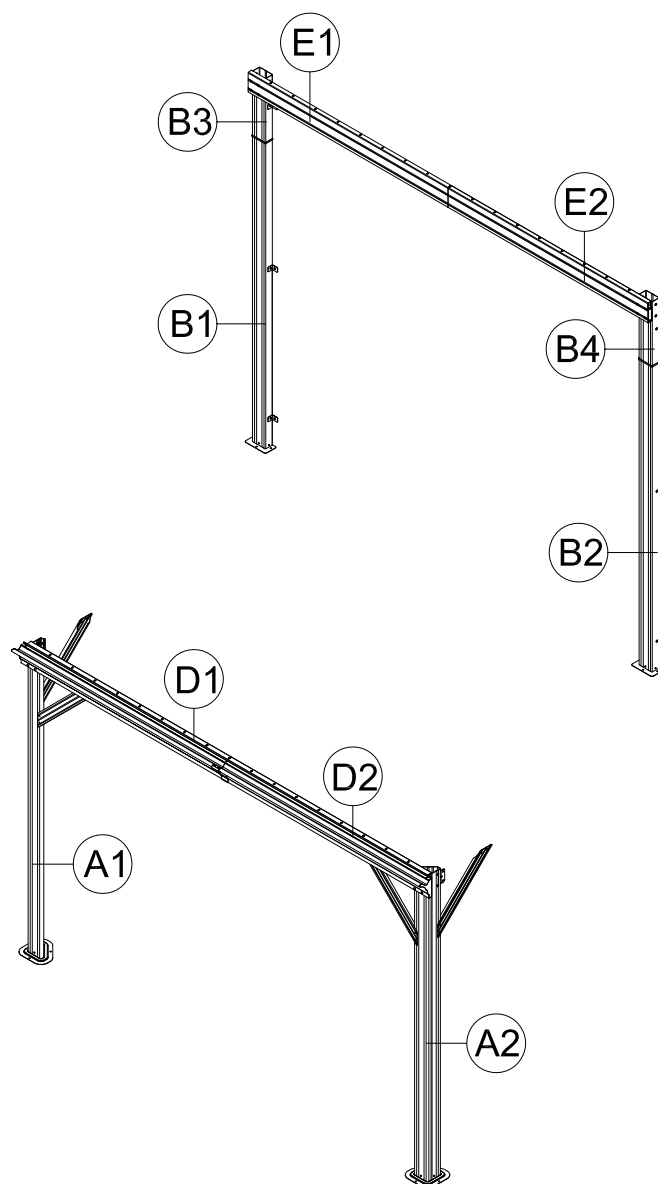


Side Beam Assembly:

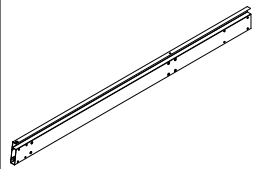


G1 1x

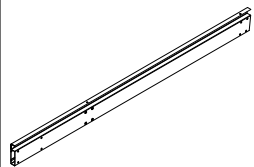


G2 1x

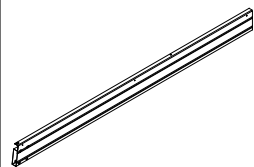

H1 1x

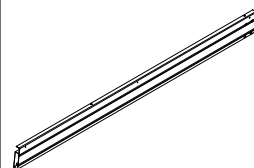

H2 1x



K3 2x







1 1x



M6x16

3 16x

11

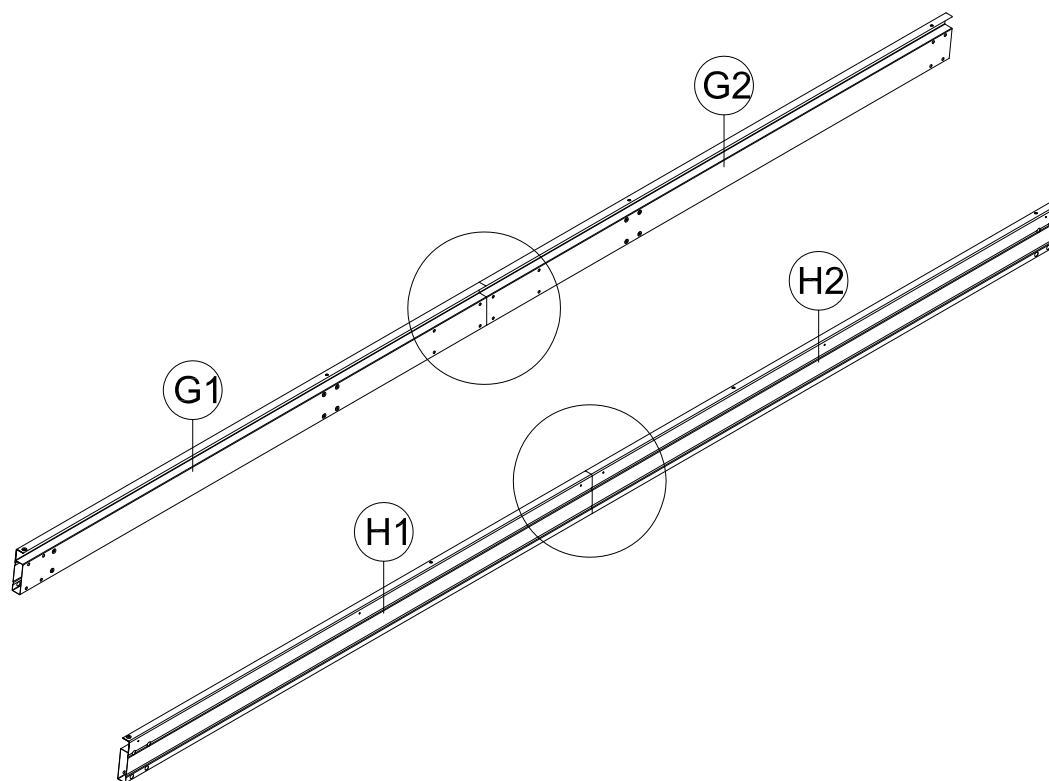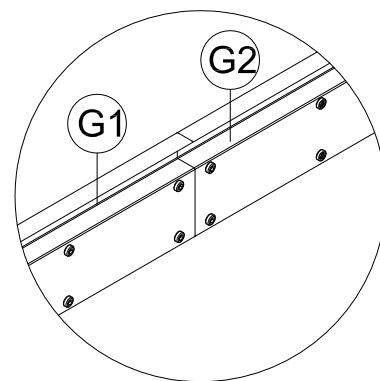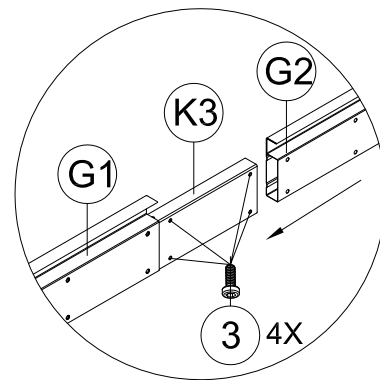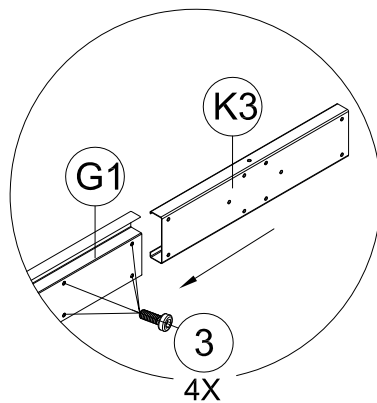

- (1) Insert the Beam Connector #K3 into the side beam #G1, and secure with 4 bolts #3;
 - (2) Insert the other side of the Beam Connector #K3 into the side beam #G2, and secure with 4 bolts #3.
- Repeat above procedures to assemble #H1 with #H2.



S4

① 1x



M6x16


③ 8x



M6x40


⑦ 16x

Frame Assembly:

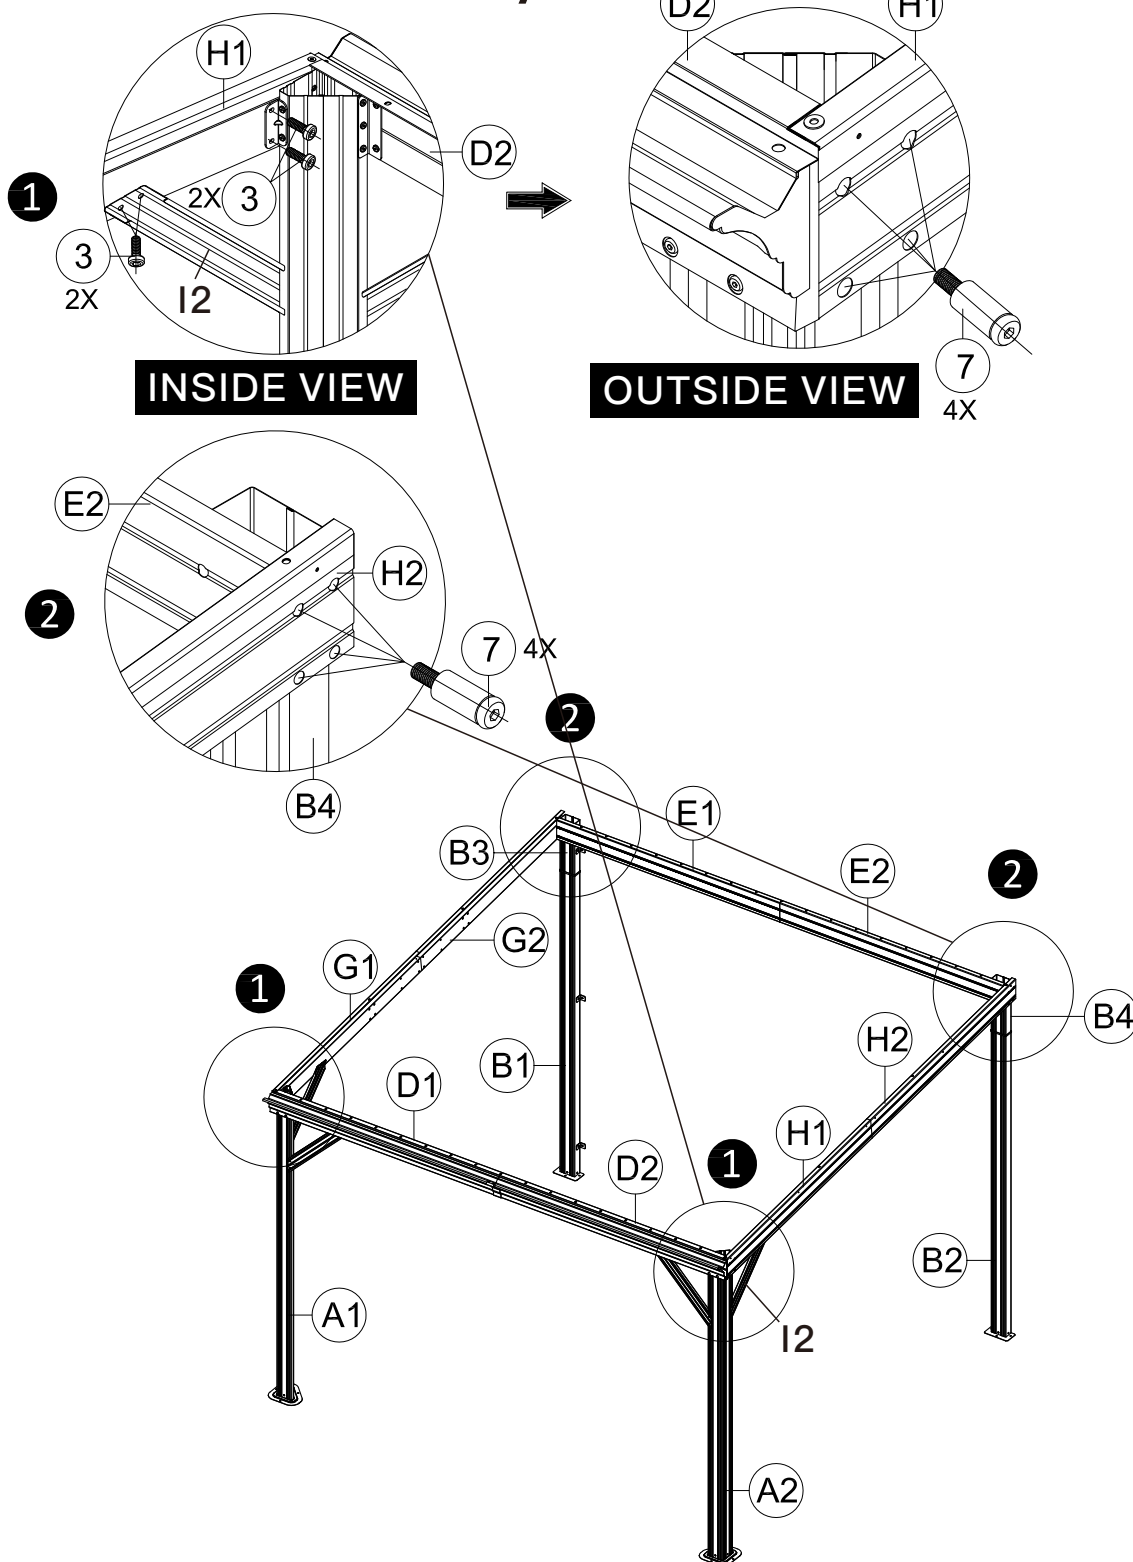


- ① (1) Use 2 bolts #3 to connect Corner Solidifying Bar #I2 with Side Beam #H1.
- (2) Use 4 bolts #7 to connect Side Beam #H1 with Pole #A2. Repeat above procedures to assemble Pole #A1 with Side Beam #G1.
- ② Use 4 bolts #7 to connect Side Beam #H2 with Pole #B2. Repeat above procedures to assemble Pole #B3 with Side Beam #G2.


Centre Beam Assembly:

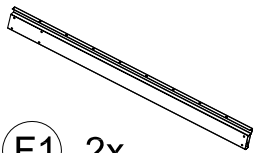

F1 2x

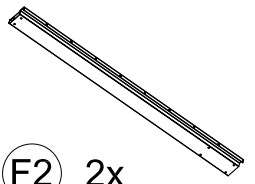

F2 2x



K3 2x



K5 8x



1 1x



M6x12



2 16x






M6x16

3 20x


2

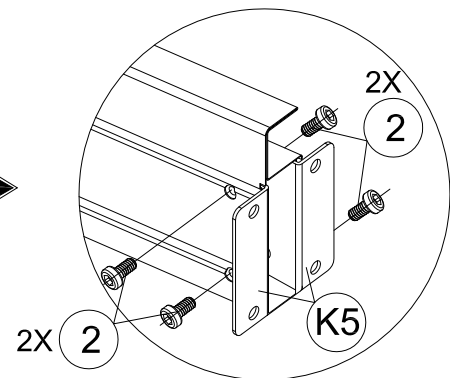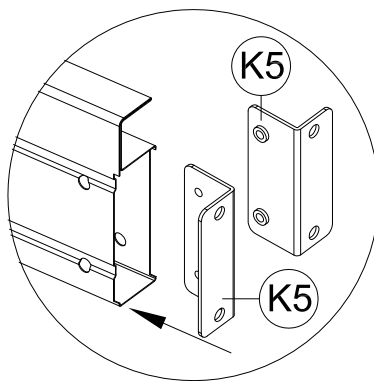

1

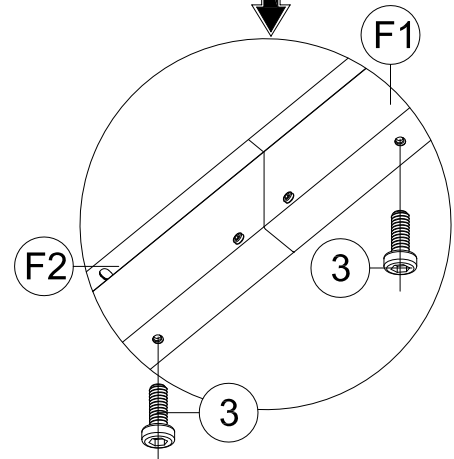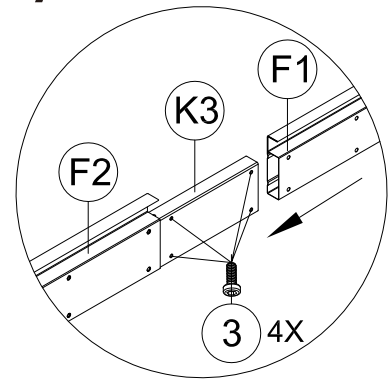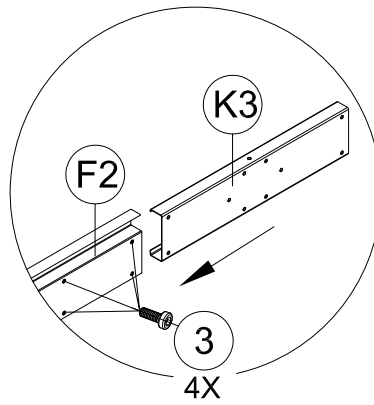

2

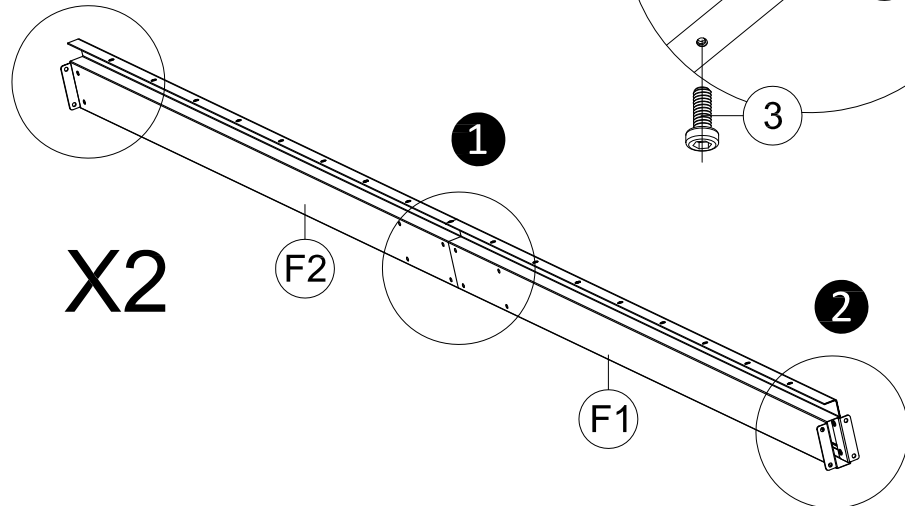

X2

- ① (1) Insert the Beam Connector #K3 into the center beam #F2, and secure it with 4 bolts #3;
- (2) Insert the other side of the Beam Connector #K3 into the center beam #F1, and secure it with 4 bolts #3.
- (3) Secure it at the bottom with bolts #3 as shown.
- ② Combine the Bracket #K5 as shown and insert it into #F1 and #F2, and secure it with 2 bolts #2 on each side.



S4




1 1x



M6x16


3 16x

1

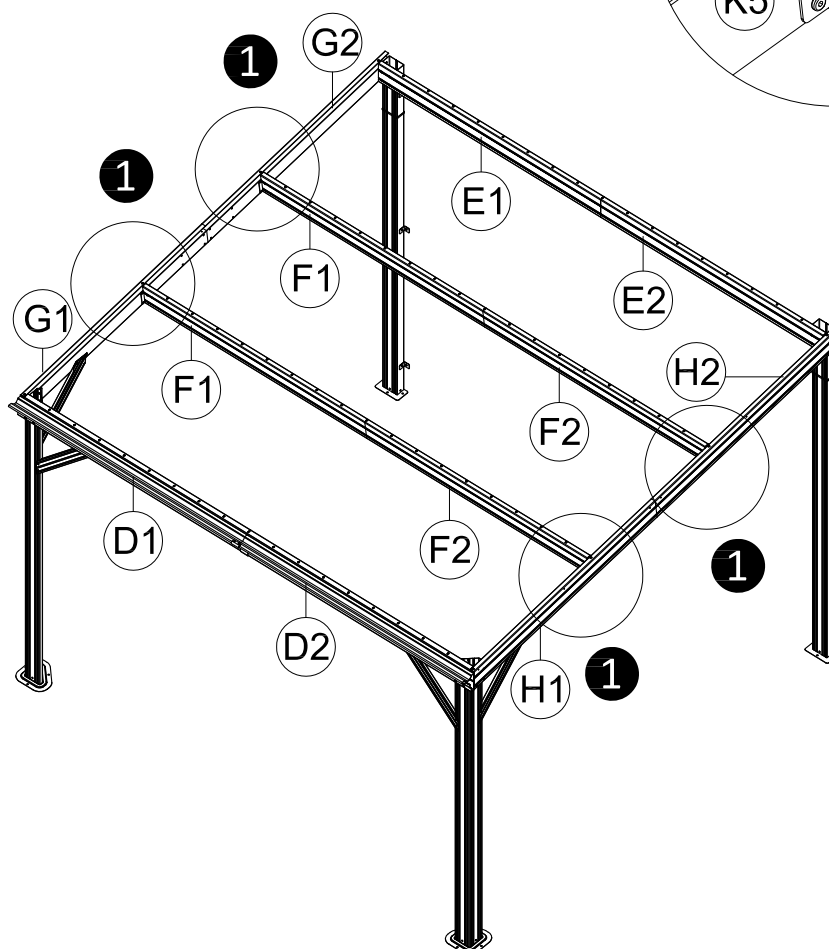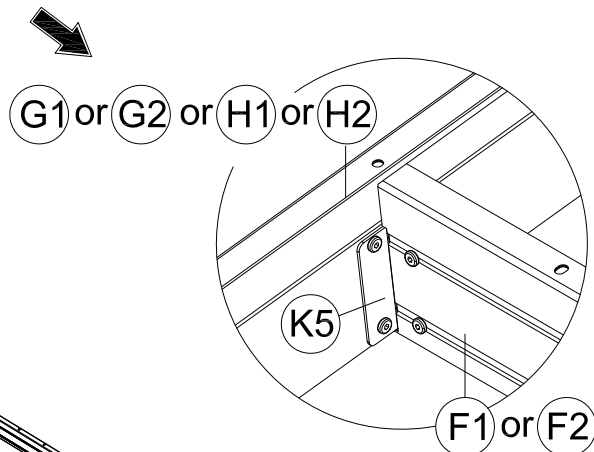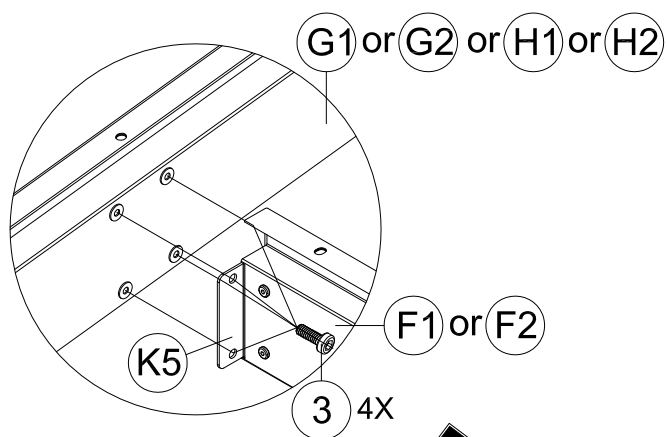

Connect the two middle beams #F1, #F2 with the side beam using Bracket #K5, and secure them with bolts #3.


Note: Please don't fully tighten the bolts until all the bolts have been screwed in place.


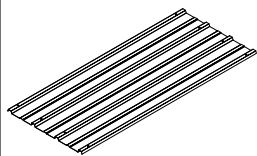

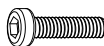

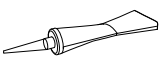



N 18x

Roof Panel Assembly:

Remove the protective film of the panels before installing the roofing panels.


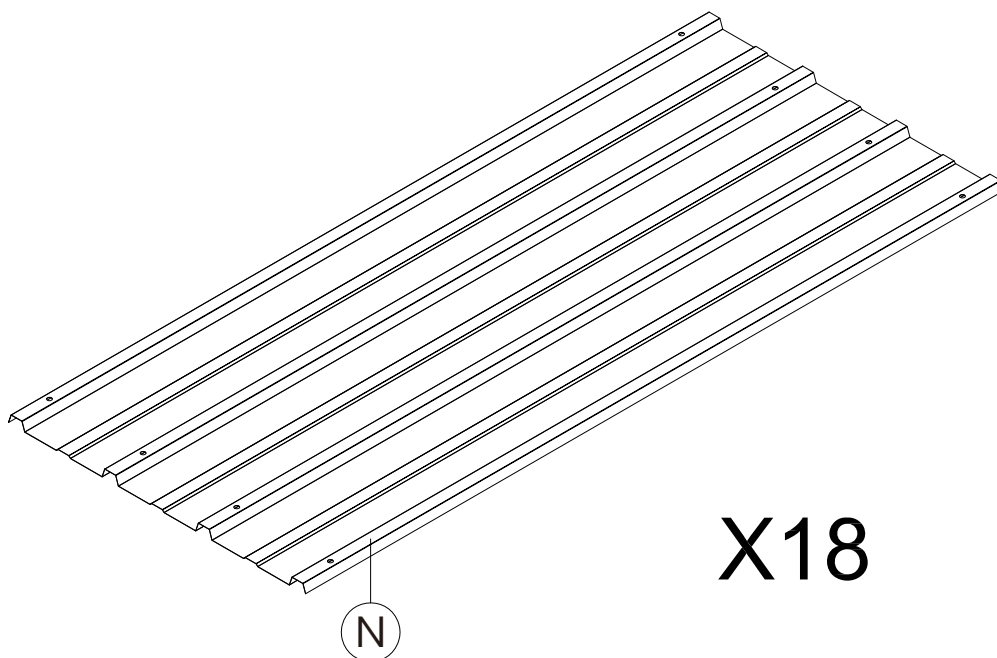

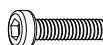

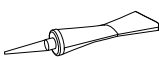


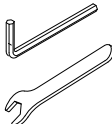
 S4 1 1x
 L2 9x
 L1 9x
 M6x30 4 9x
 M6 8 8x
 14 1x
<div>16</div>

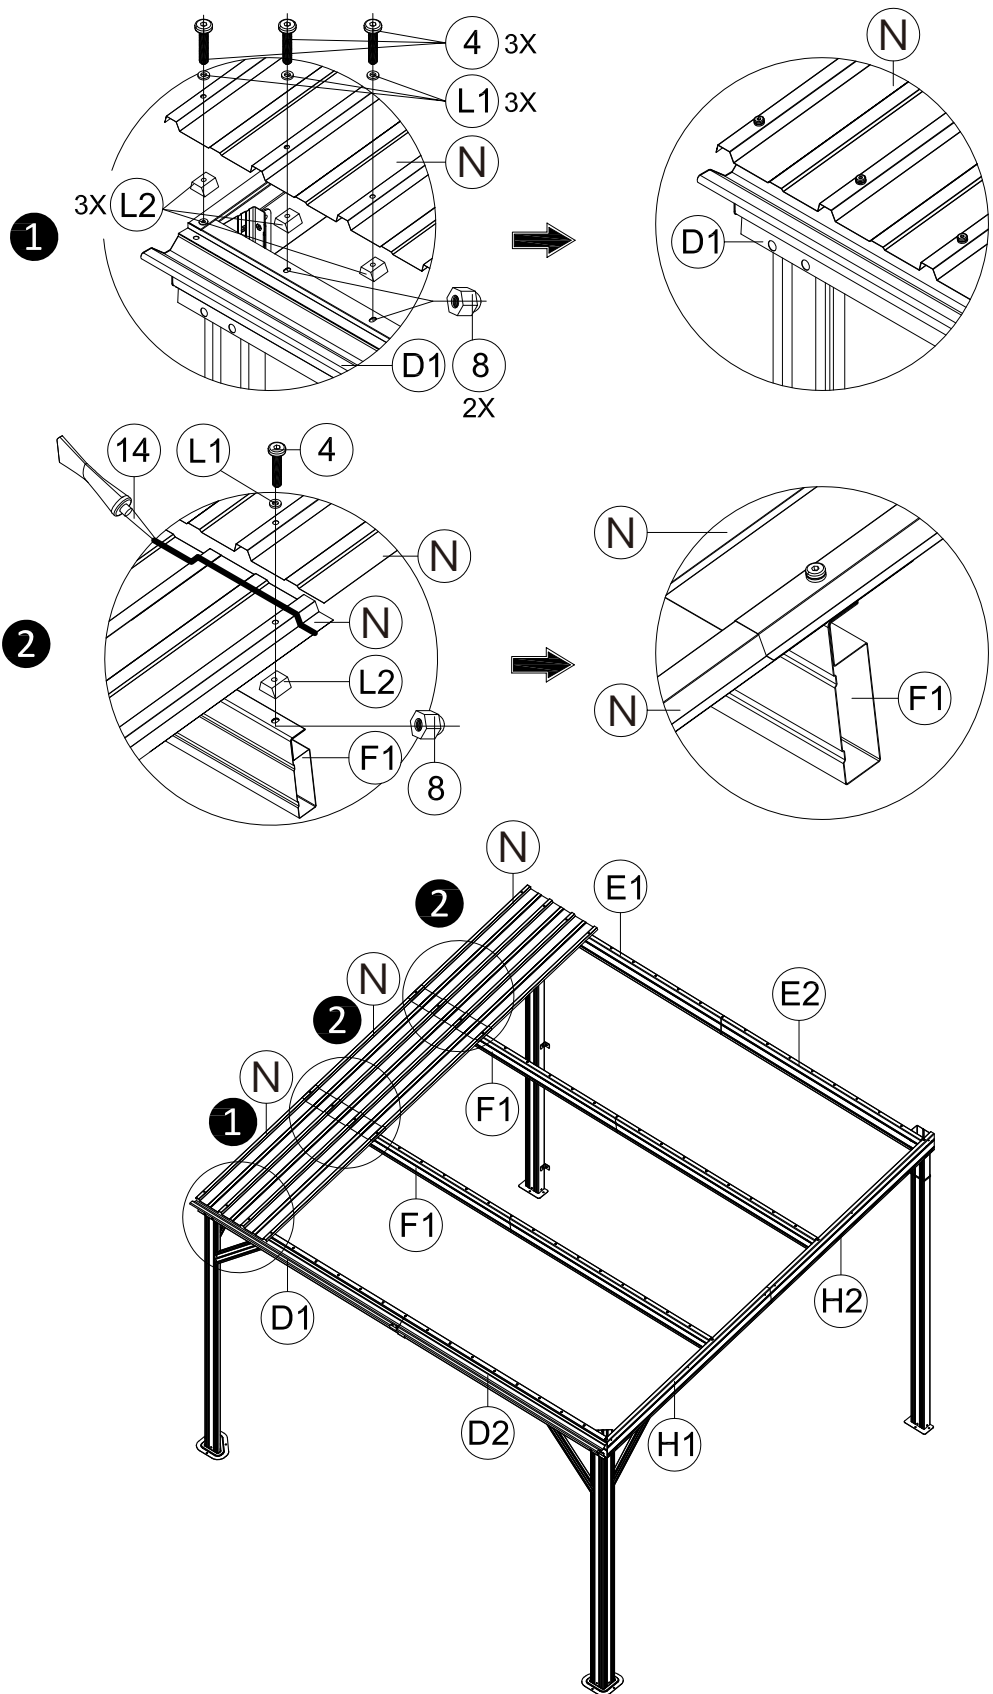

① According to the diagram, install in the order of “Black Rubber #L2, Roof Panels #N, Rubber gaskets #L1, bolts #4,” and connect with the front beam #D1. Secure the bottom with Nuts #8.

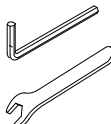




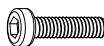



② Apply sealant to the first row of roof panels as shown. Follow the steps of the first row to install the second and third row of roof panels and fix with bolts and nuts.

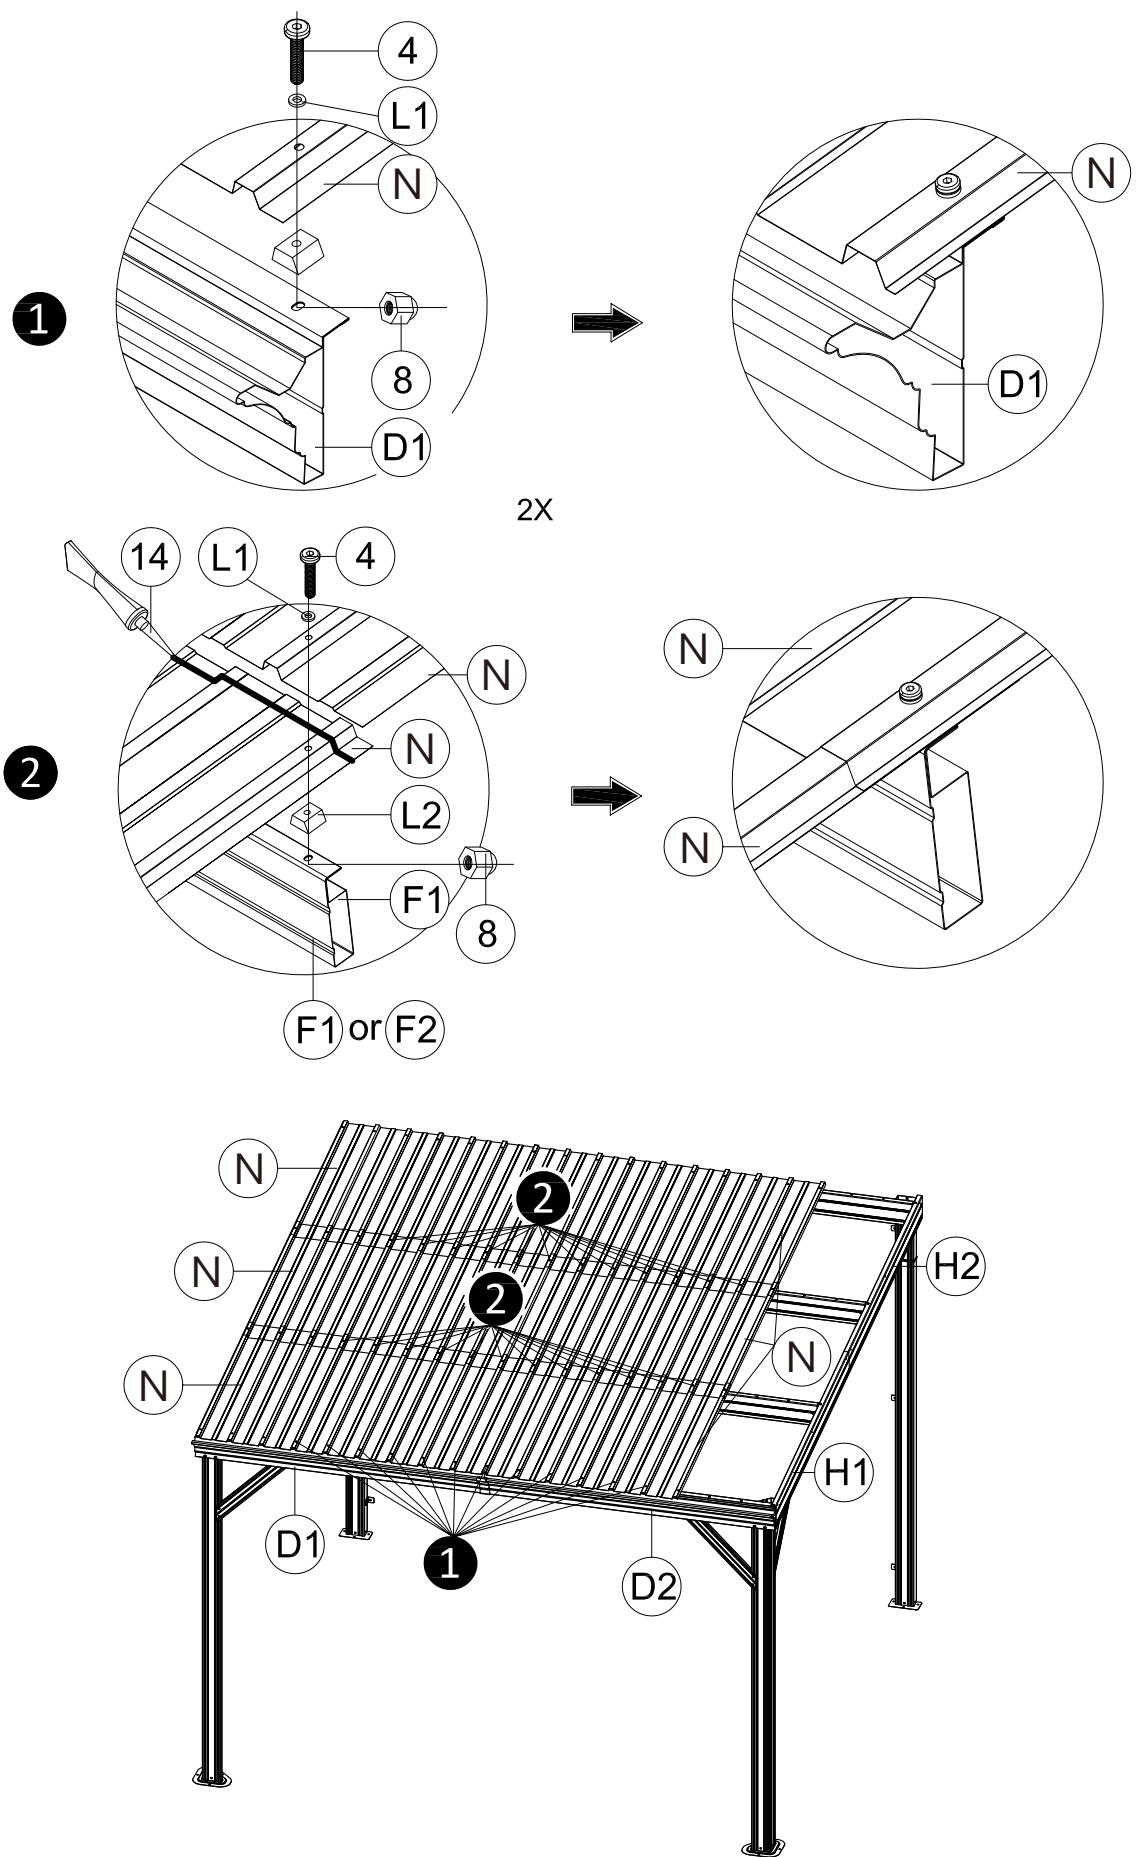
 S4 1 1x	
 L2 36x	
 L1 36x	
 M6x30 4 36x	
 M6 8 36x	
 14 1x	
17	











Repeat above procedures to assemble the 12 Roof Panels #N.

The connection point should apply with silicon sealant.

 S4 	
 1x	
 L2 12x	
 L1 12x	
 M6x30  4 12x	
 M6  8 11x	
<div>18</div>	

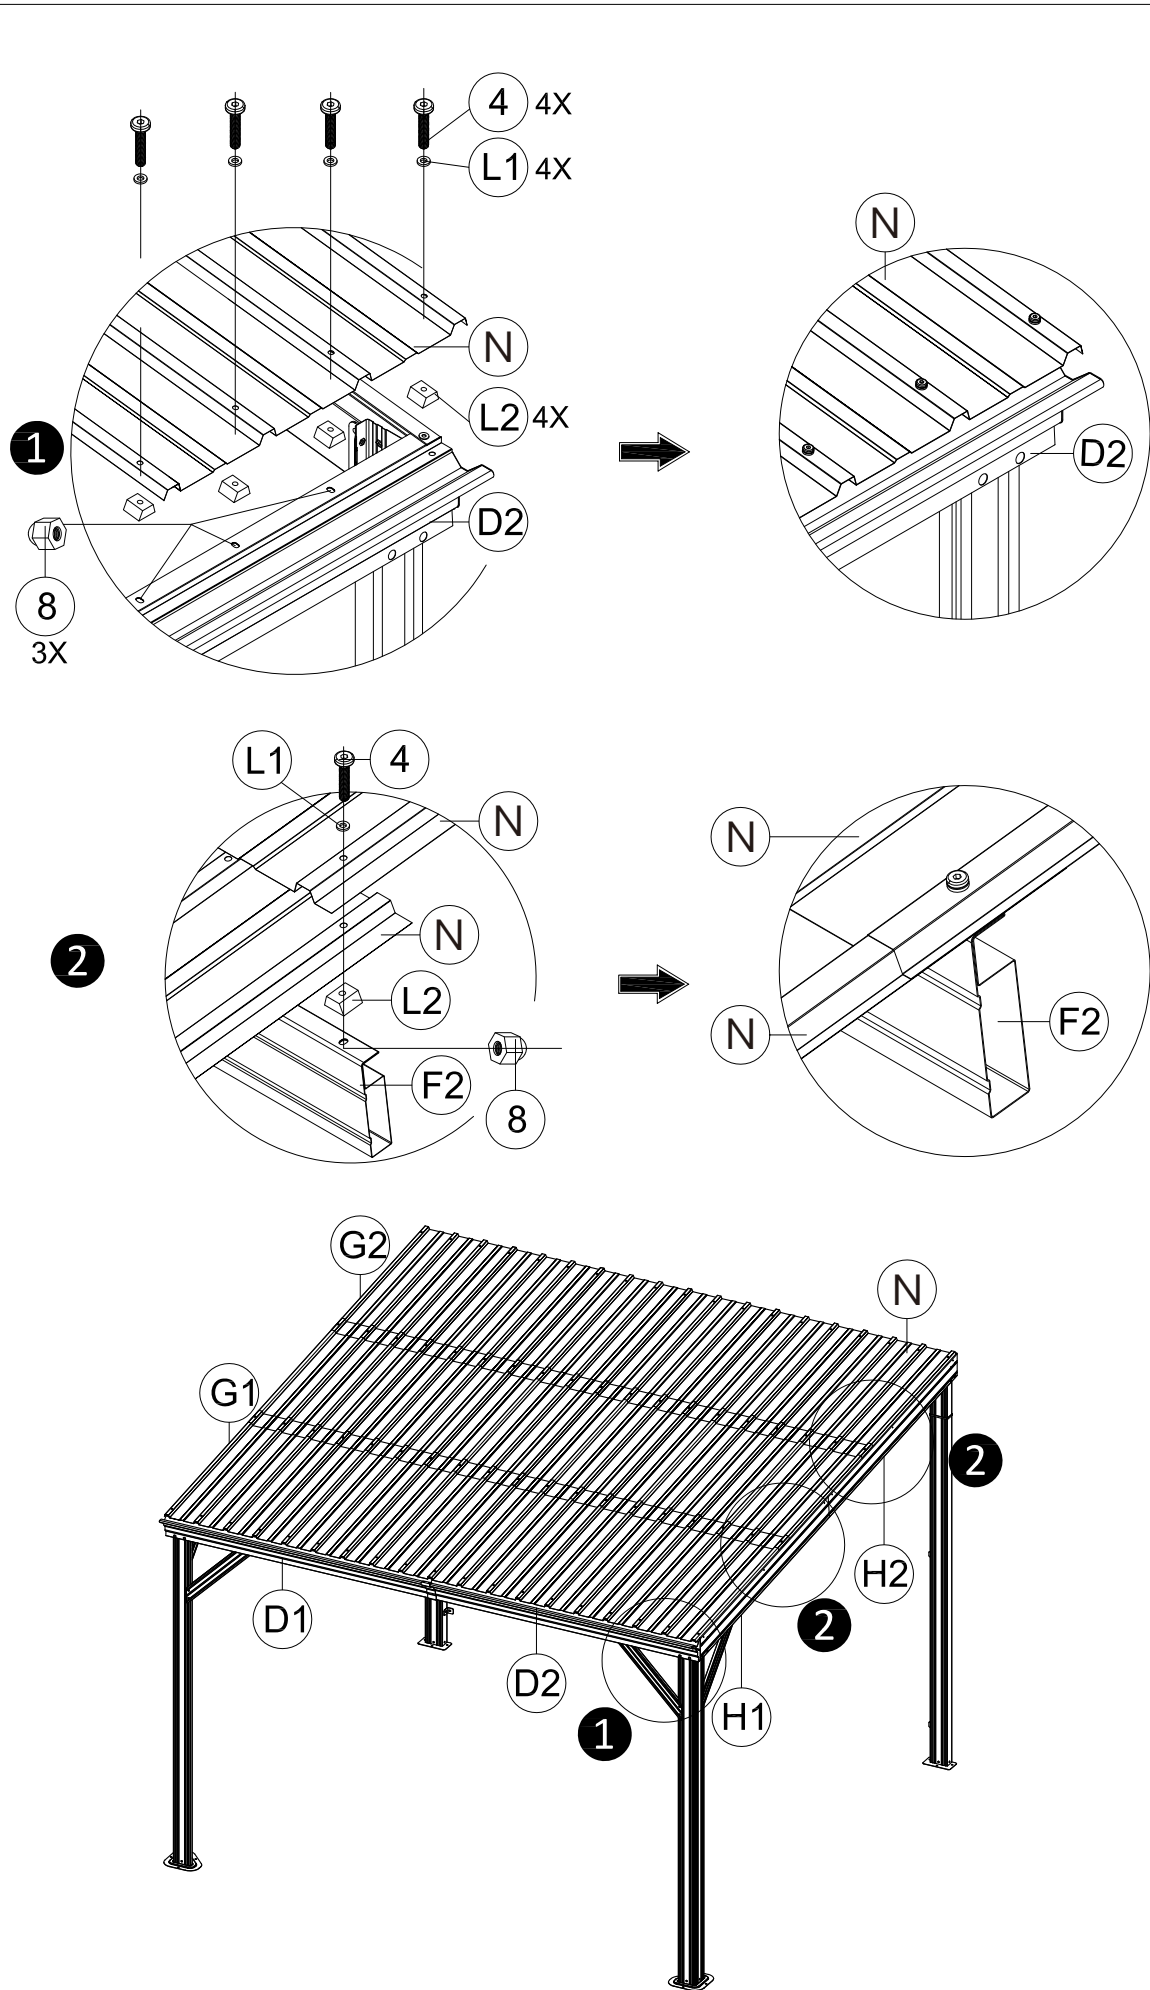


Repeat above procedures to assemble the 3 Roof Panels #N.

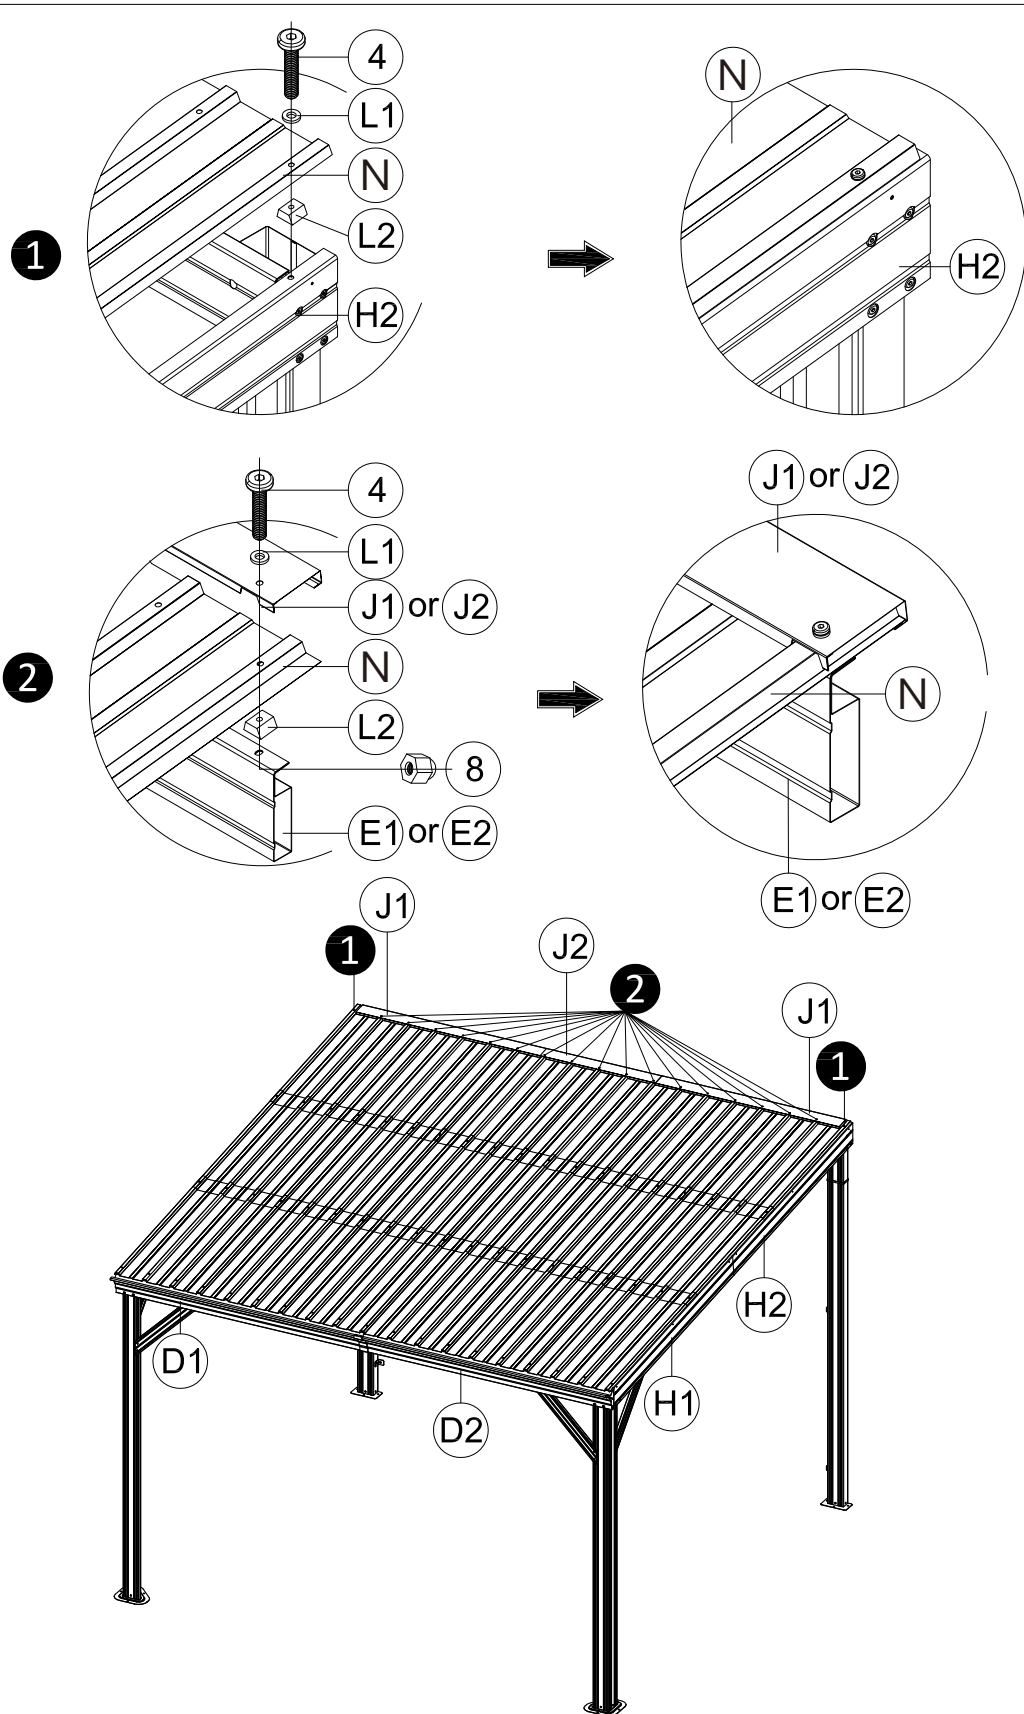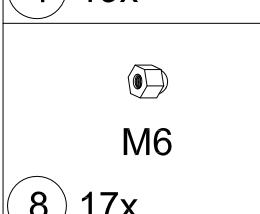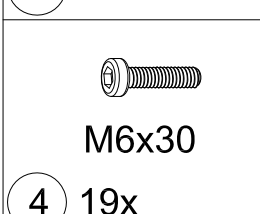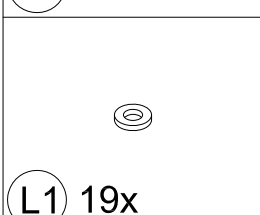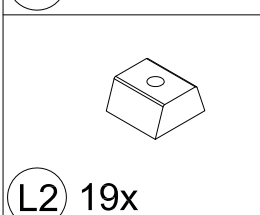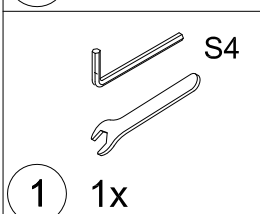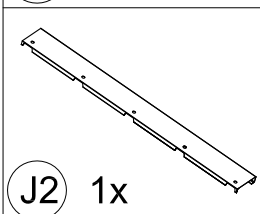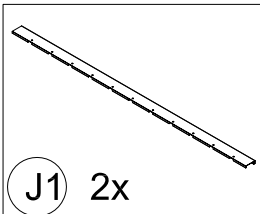

①: Place the rubber spacer #L2 between the beam and the roof panels, then secure it using screws #4 along with rubber gaskets.

②: Place Roof Cover #J1 & J2 on the higher side of the roof. Insert rubber spacer #L2 into the gap between the beam and the roof panels. Secure with bolt #4, rubber gaskets #L1, and nuts #8.

7

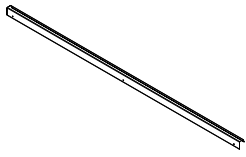



J3 4x




ST4. 2x10

10 12x

Side Roof Cover Assembly:

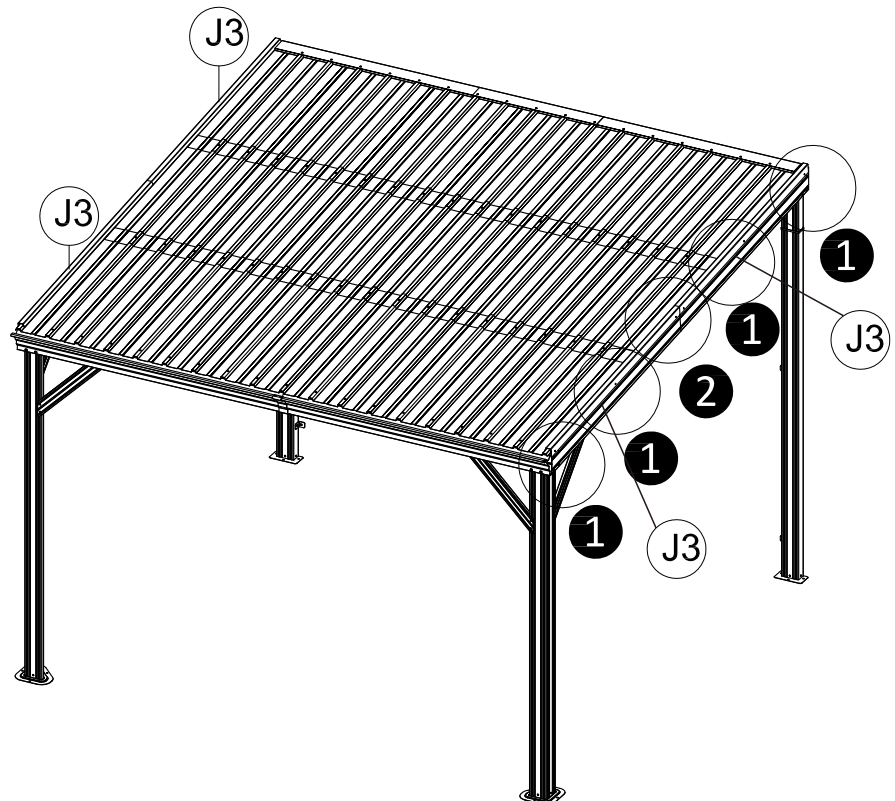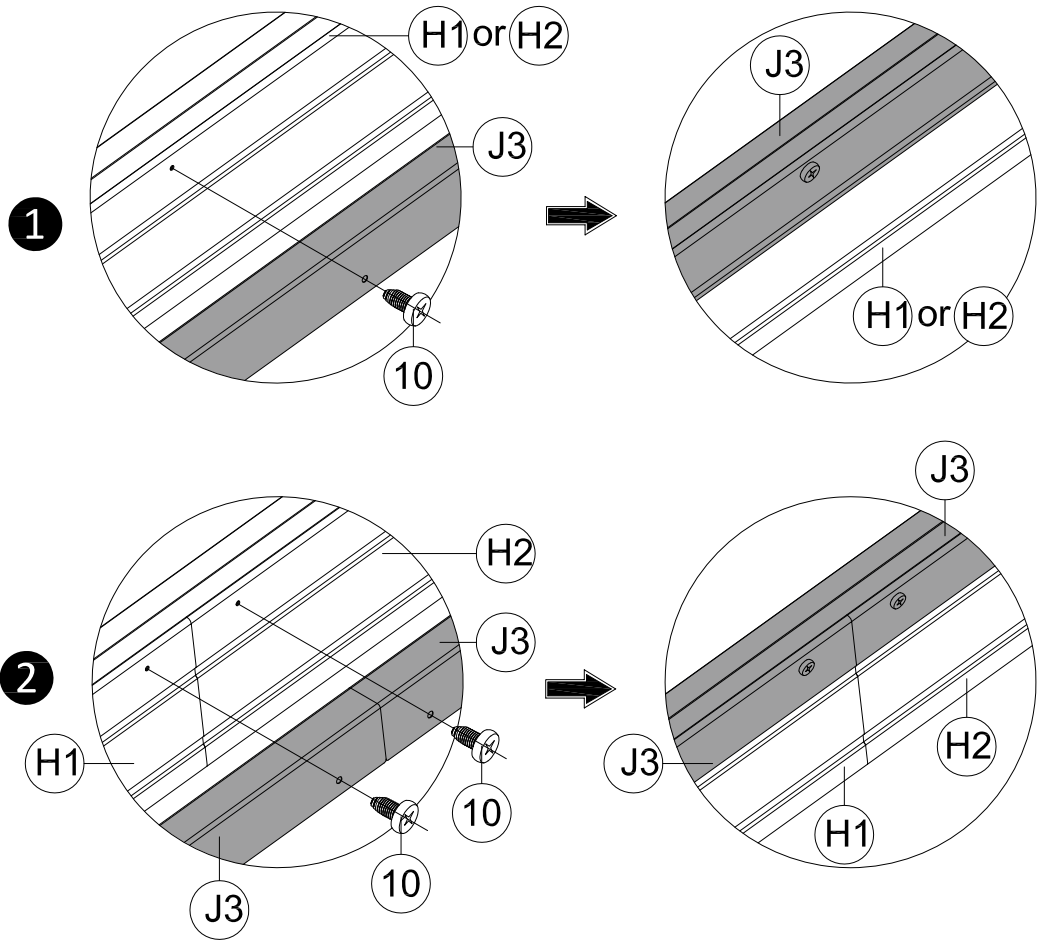

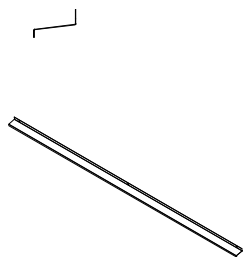



J4 2x





M6x70


13 6x

Installation of the rear drip rail.

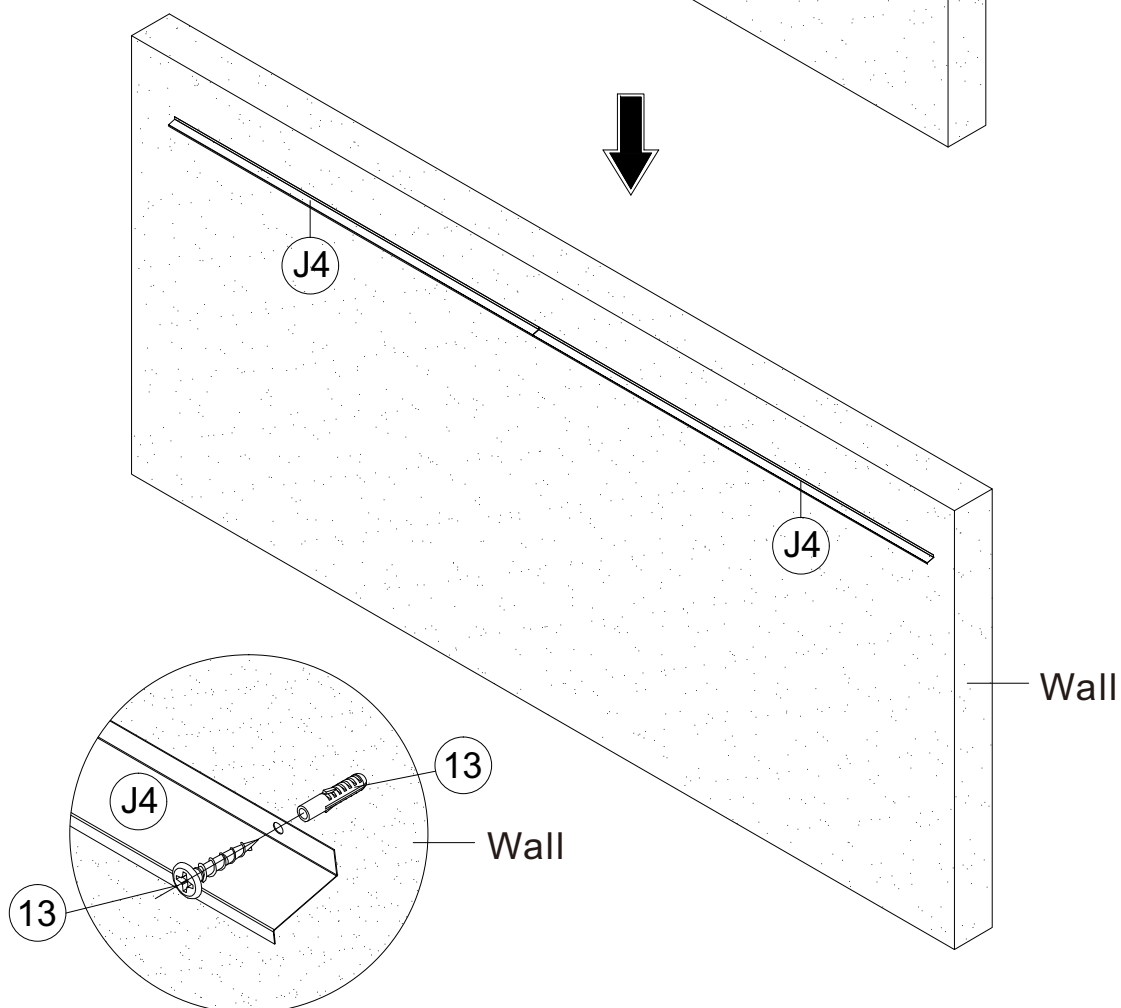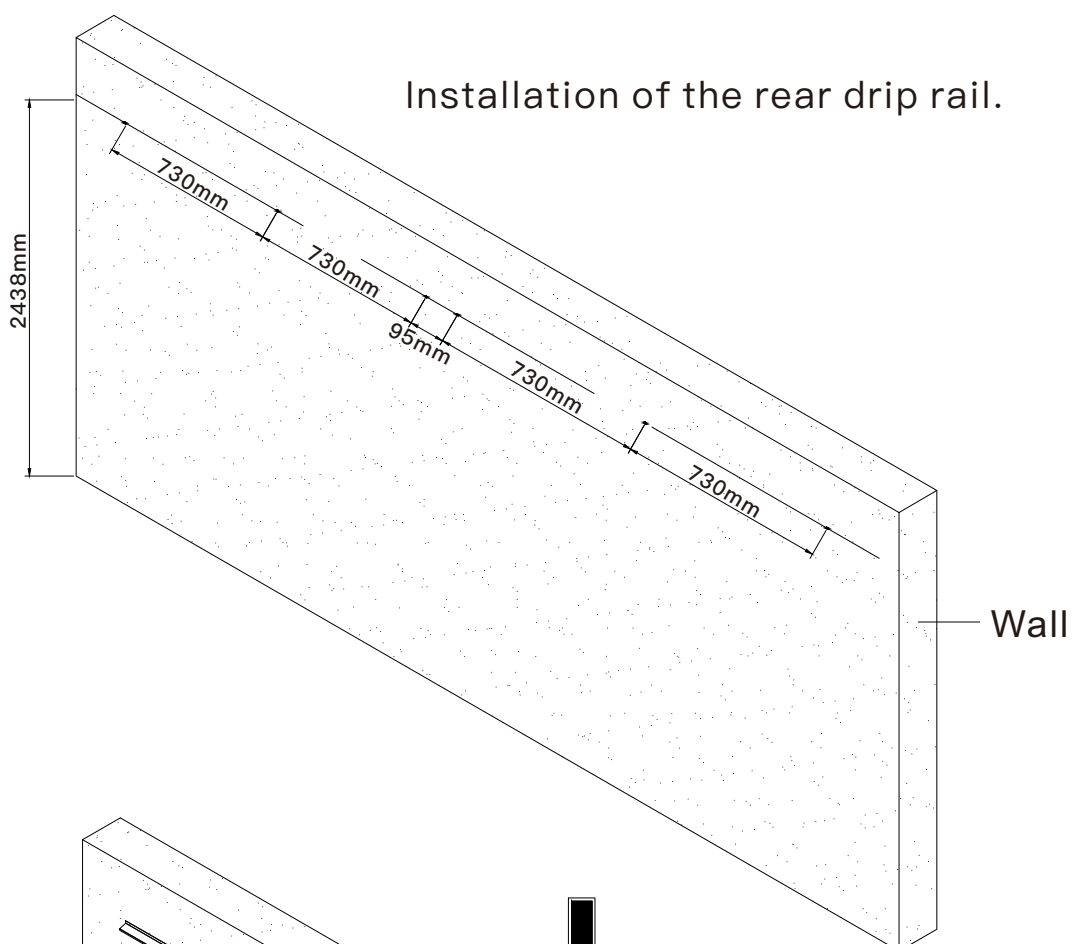


Install this step if you need fix the canopy to the wall (you need to drill holes into the wall). Otherwise please skip this step.

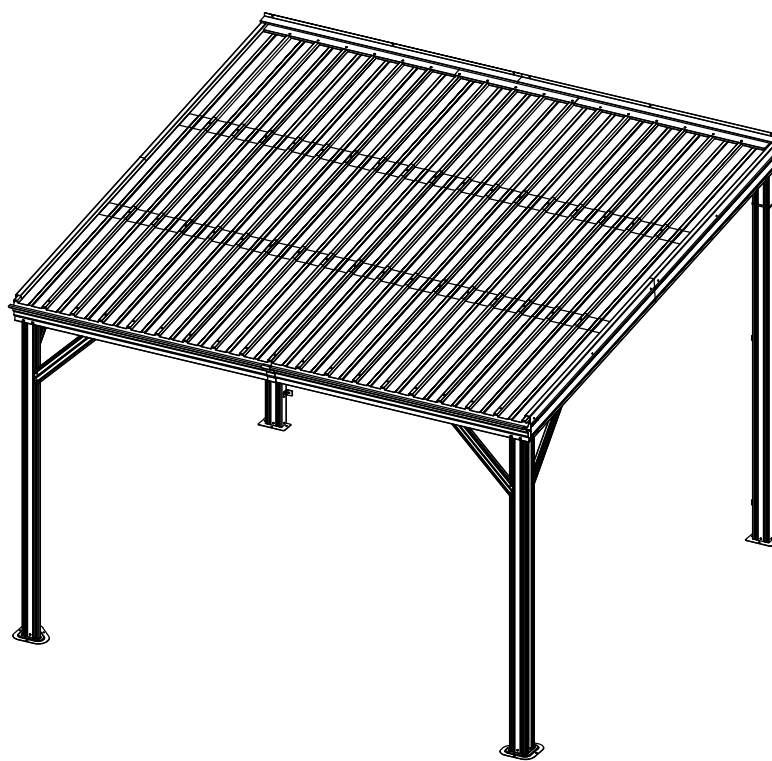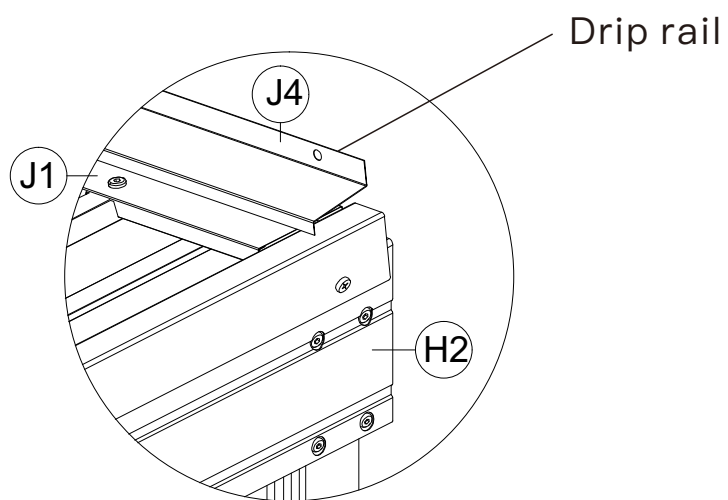



M6x70

13 8x

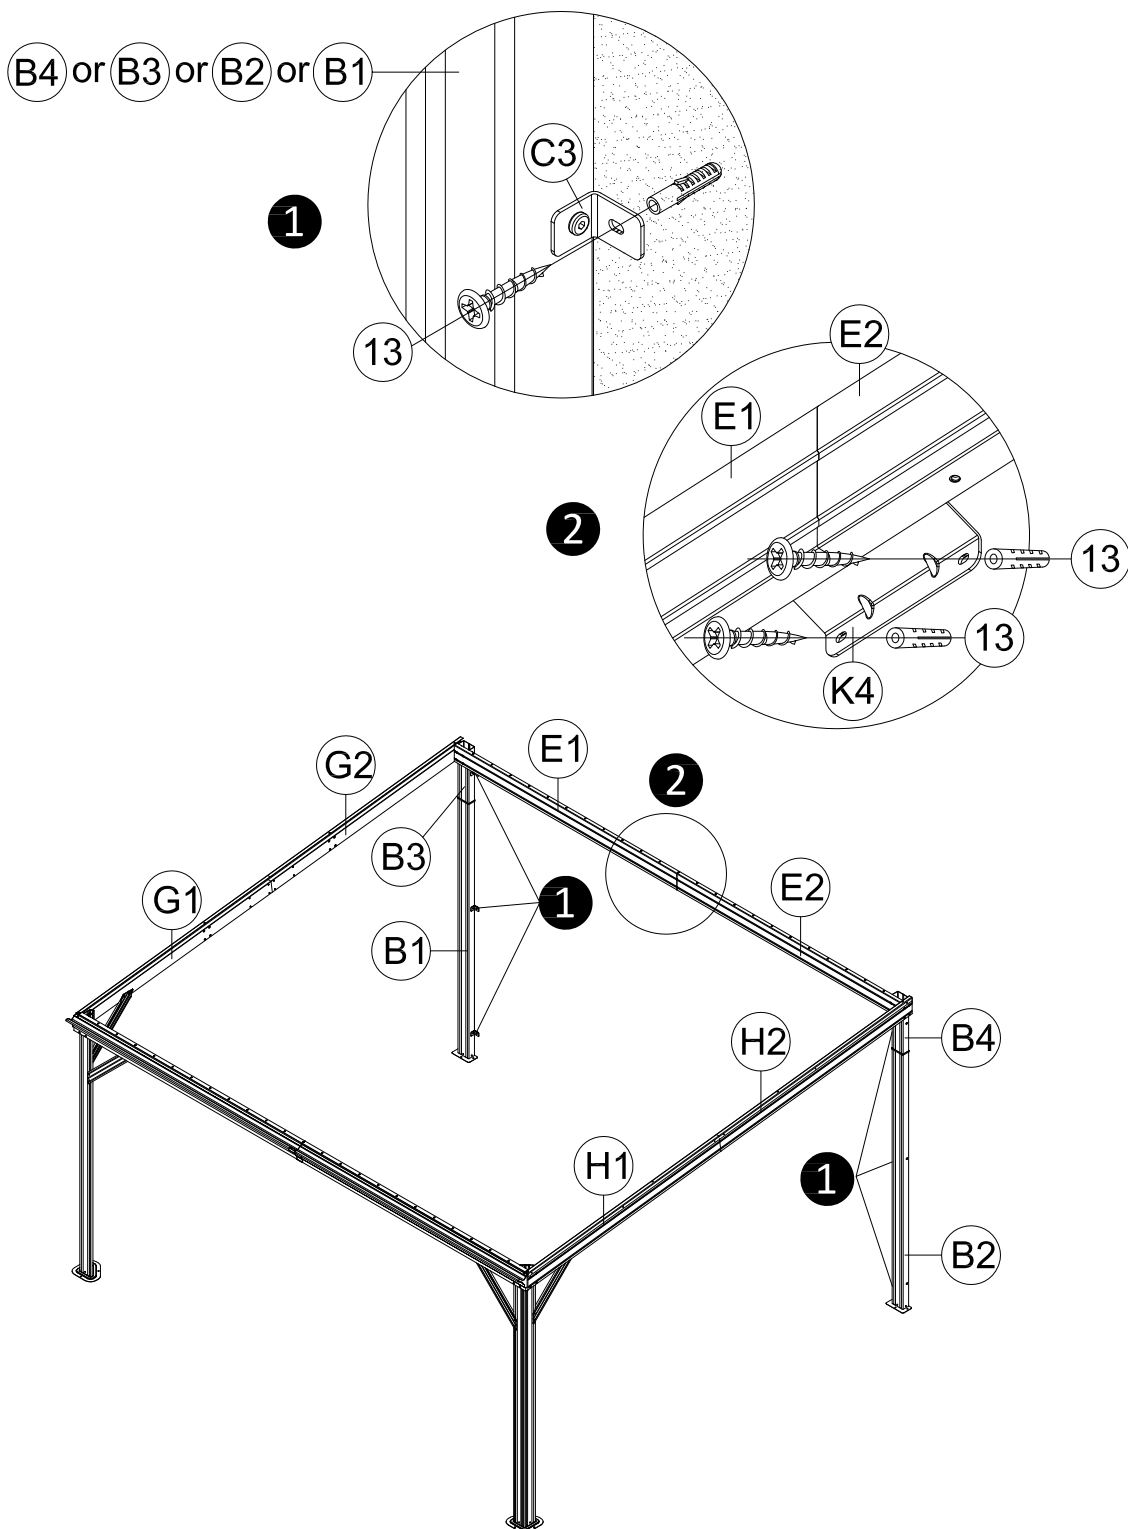

- ① Insert drywall anchor #13 into the wall and screw in bolt #13 through #C3 to secure rear posts to the wall.
 - ② Insert drywall anchor #13 into the wall and screw in bolt #13 through #K4 to secure rear beam to the wall.
- If you don't consider fixing it to the wall, you can skip this step(This step requires the user to drill holes in the wall for fixation.) The bracket #C3 is used to fix the post against the wall.You can assemble only 2 pieces for each post according to the actual installation situation.



Thanks for your purchase.

At domi outdoor living, we believe in our products.

That's why we provide a 12-month warranty and

friendly, easy-to-reach after-sales service. So if you

have any questions about our product and assembly-

,please feel free to contact us. We will be here for you.

Support:  

After-sales contact email:

service@domioutdoorliving.com

Business cooperation contact email:

marketing@domioutdoorliving.com

Please tell us your order ID when contact.

Attach photos of damaged part for instant reply.