



5 Drawers file cabinet

Assembly Instructions

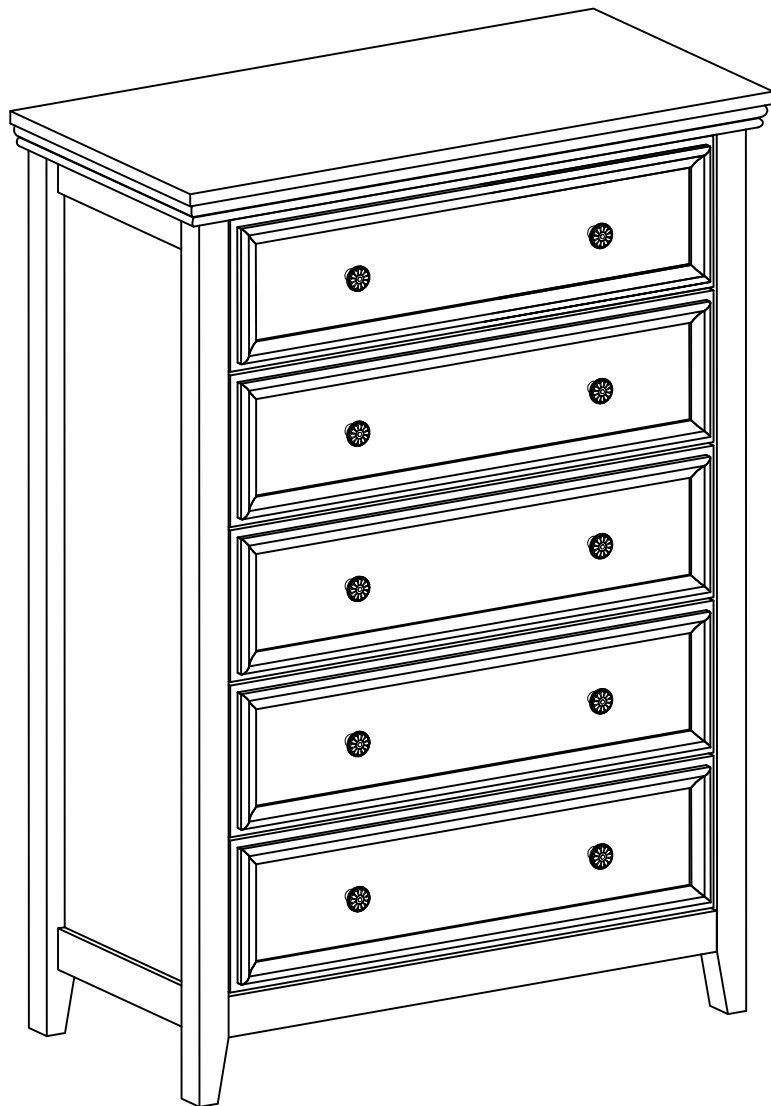






PACKAGE INCLUDE

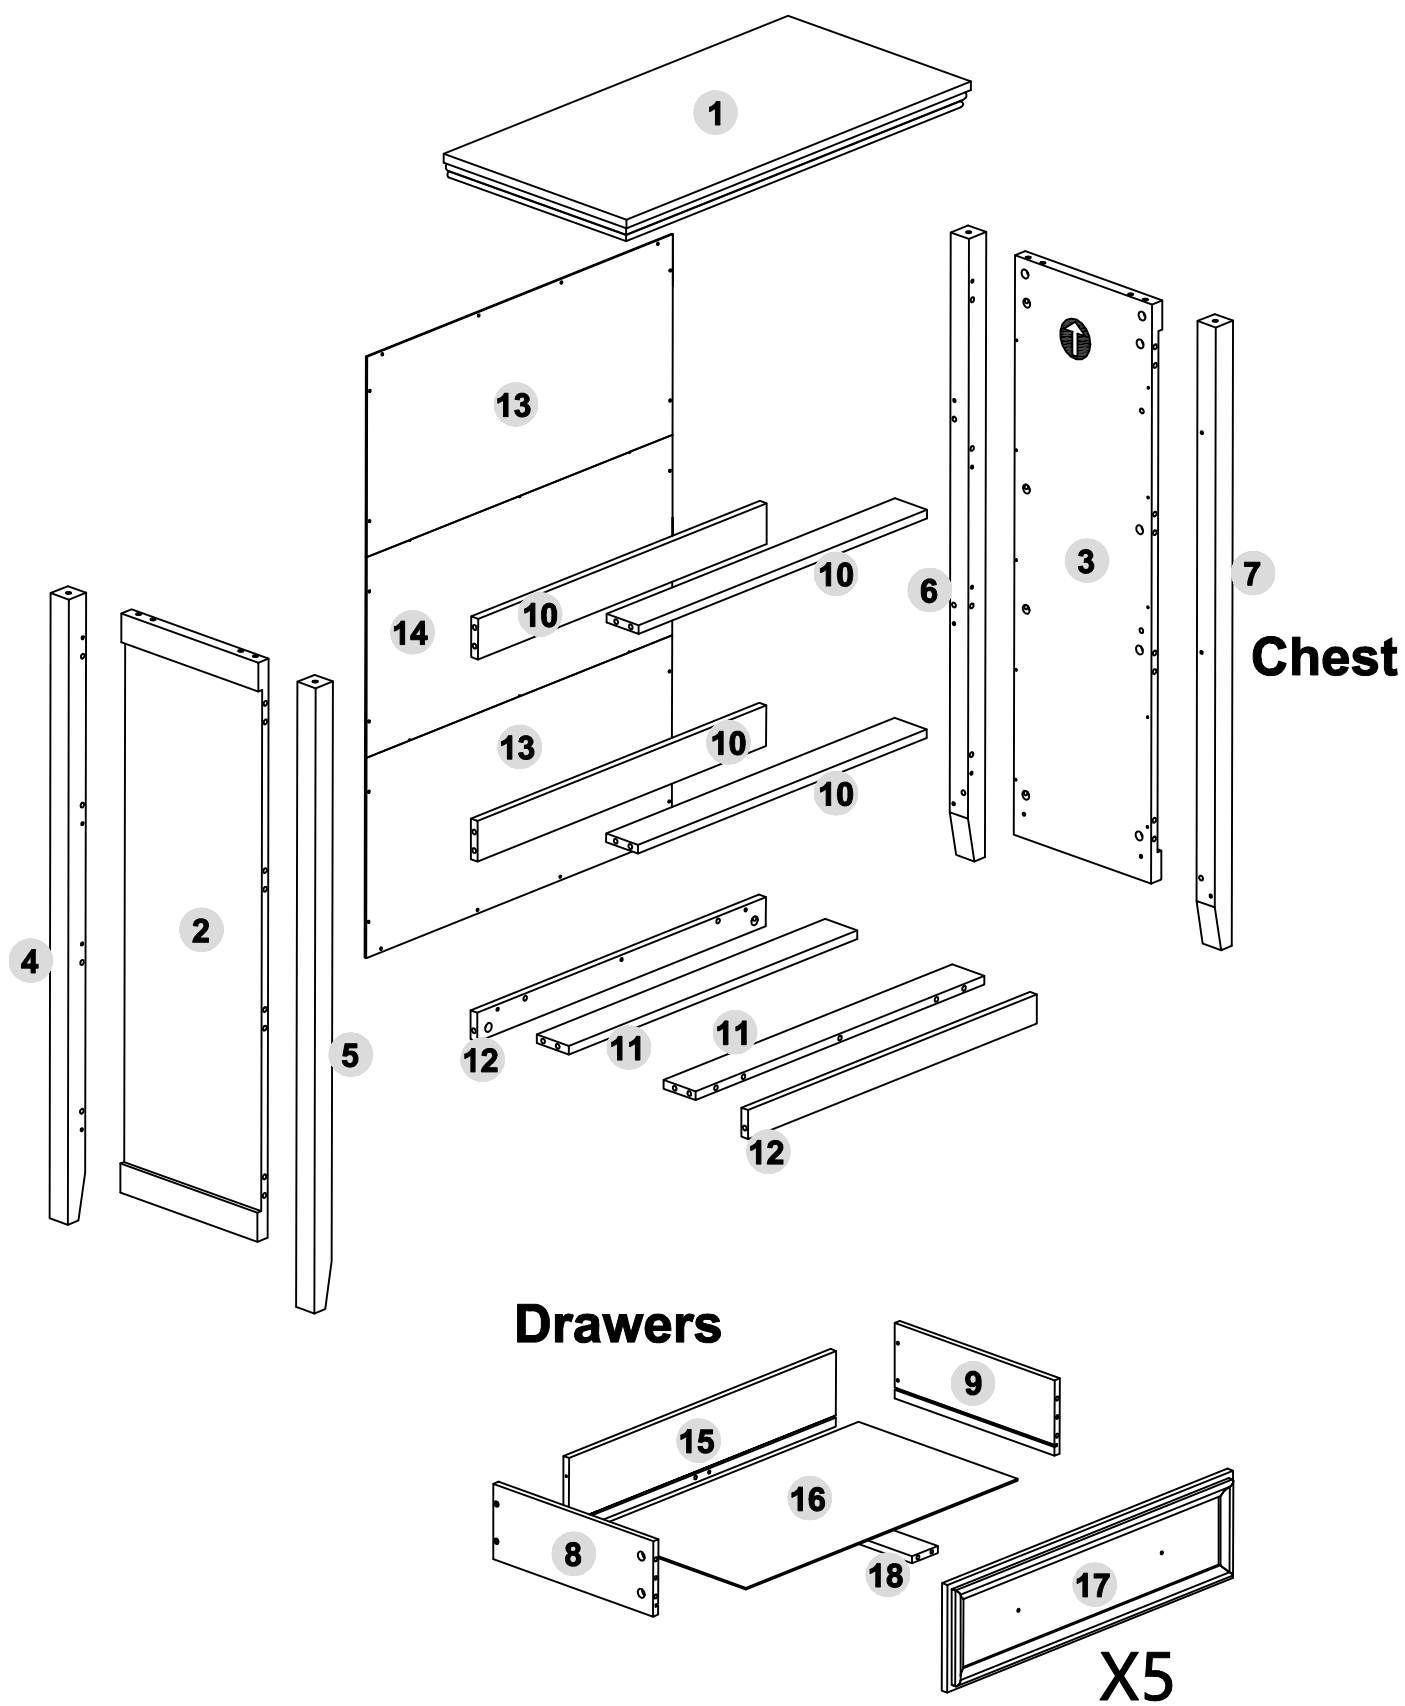


PART IDENTIFICATION

CODE	DESCRIPTION	QTY
1	Top panel	1
2	Left side panel	1
3	Right side panel	1
4	Left hind leg	1
5	Left front leg	1
6	Right hind leg	1
7	Right front leg	1
8	Drawer left side panel	5
9	Drawer right side panel	5
10	Middle drawbar	4
11	Bottom drawbar	2
12	Base trim strip	2
13	Upper and lower back panel	2
14	Middle back panel	1
15	Drawer tail plate	5
16	Bottom panel of drawer	5
17	Front panel of drawer	5
18	Bottom drawbar of drawer	5


PACKAGE CONTENT

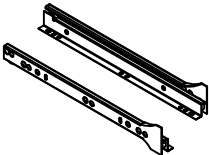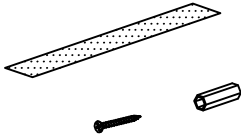 A 72x+1	Ø15x9MM  B 72x+1	Ø8x30MM  C 40x+1	Ø6x30MM  D 20x+1
Ø3.5x35MM  E 20x	Ø3.5x12MM  F 60x+1	Ø3.5x12MM  G 26x+1	14"  H 5x
 I 10x	M4x16MM  J 10x	 K 2x	


How to use the cam lock system

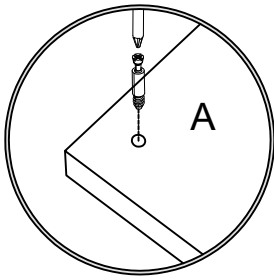


1. Screw cam bolt into panel

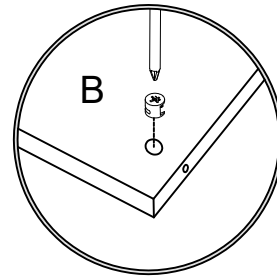


2. Push cam into panel - arrow feature on cam top points to panel edge

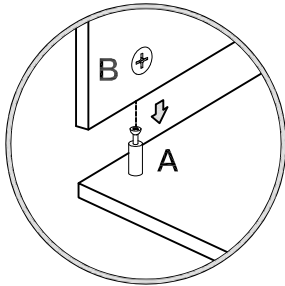

3. Align cam bolt(s) with cam(s) and insert all the way into cross-bored hole(s)




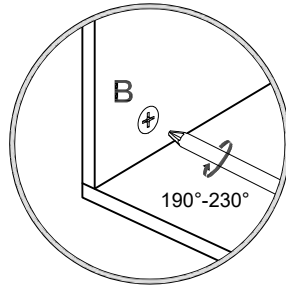


4. Rotate cam(s) clockwise 190°-230° to lock panels together

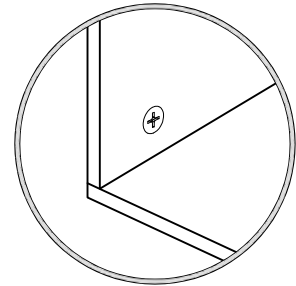

5. Panels should be tight against each other and connection should be rigid

Insert the wood dowel [C] at least half way by tapping lightly with a rubber mallet, IF NECESSARY.

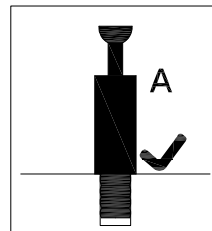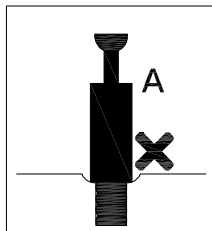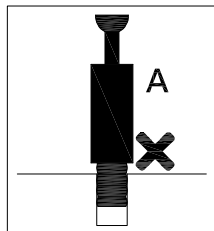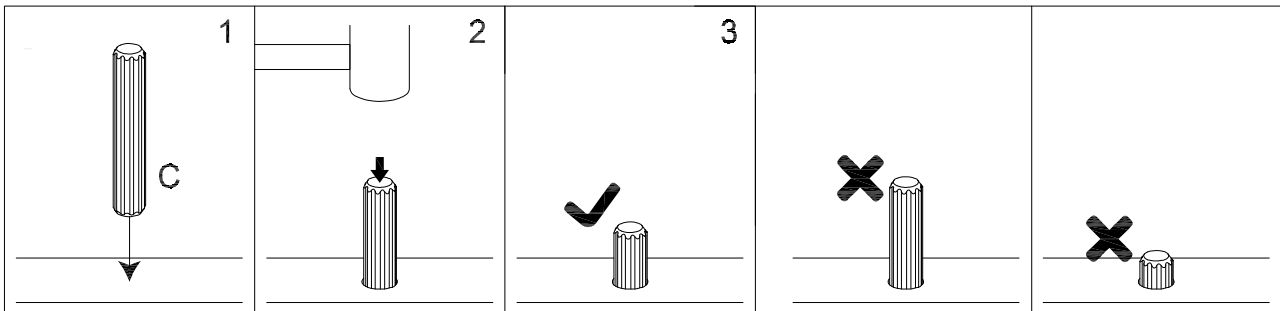


⚠ WARNING


- Unit must be placed on a level surface or leveled with included hardware (when applicable).
- Do not sit or stand on or allow children to climb, sit or stand on the assembled product.
- For safety reasons, it is imperative that this unit be mounted to the wall.
- Do not use without installing the tip restraint.
- Unit can tip over causing severe injury or death.
- Do not exceed the recommended weight limits.
- Evenly distribute the weight on each level and always keep the heavier loads on the bottom.
- Before cutting, drilling or hammering into any wall or floor surface, verify the location of electrical, plumbing and gas lines. Cutting may cause serious injury.

Ready to assemble the dresser

Before installation, observe each structure of the drawer dresser. The drawer dresser consists of two main parts. You will assemble the chest first, and then install the five drawers. Finally, look at the finished look, and contrast list of part, imagine how to install it faster, hope this will help you.

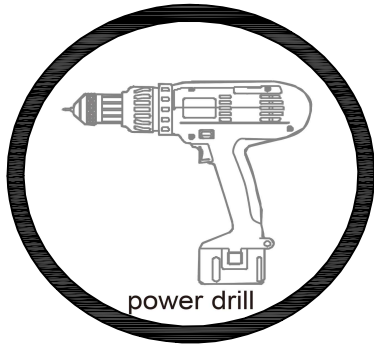

We recommend using a power drill to assemble.

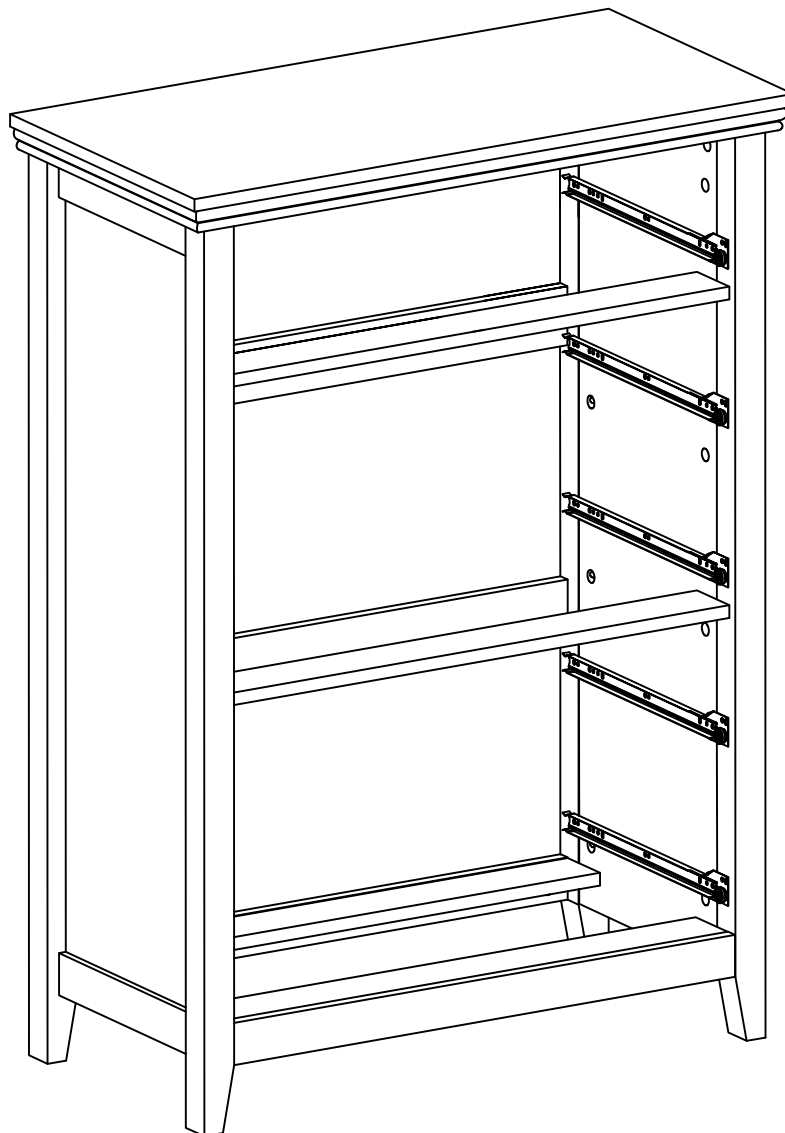


STEP 1

- Attach (A) to (2)&(3)&(4)&(5)&(6)&(7)






A 32X

Warm Tips:
(A) should be screw
to the small holes.


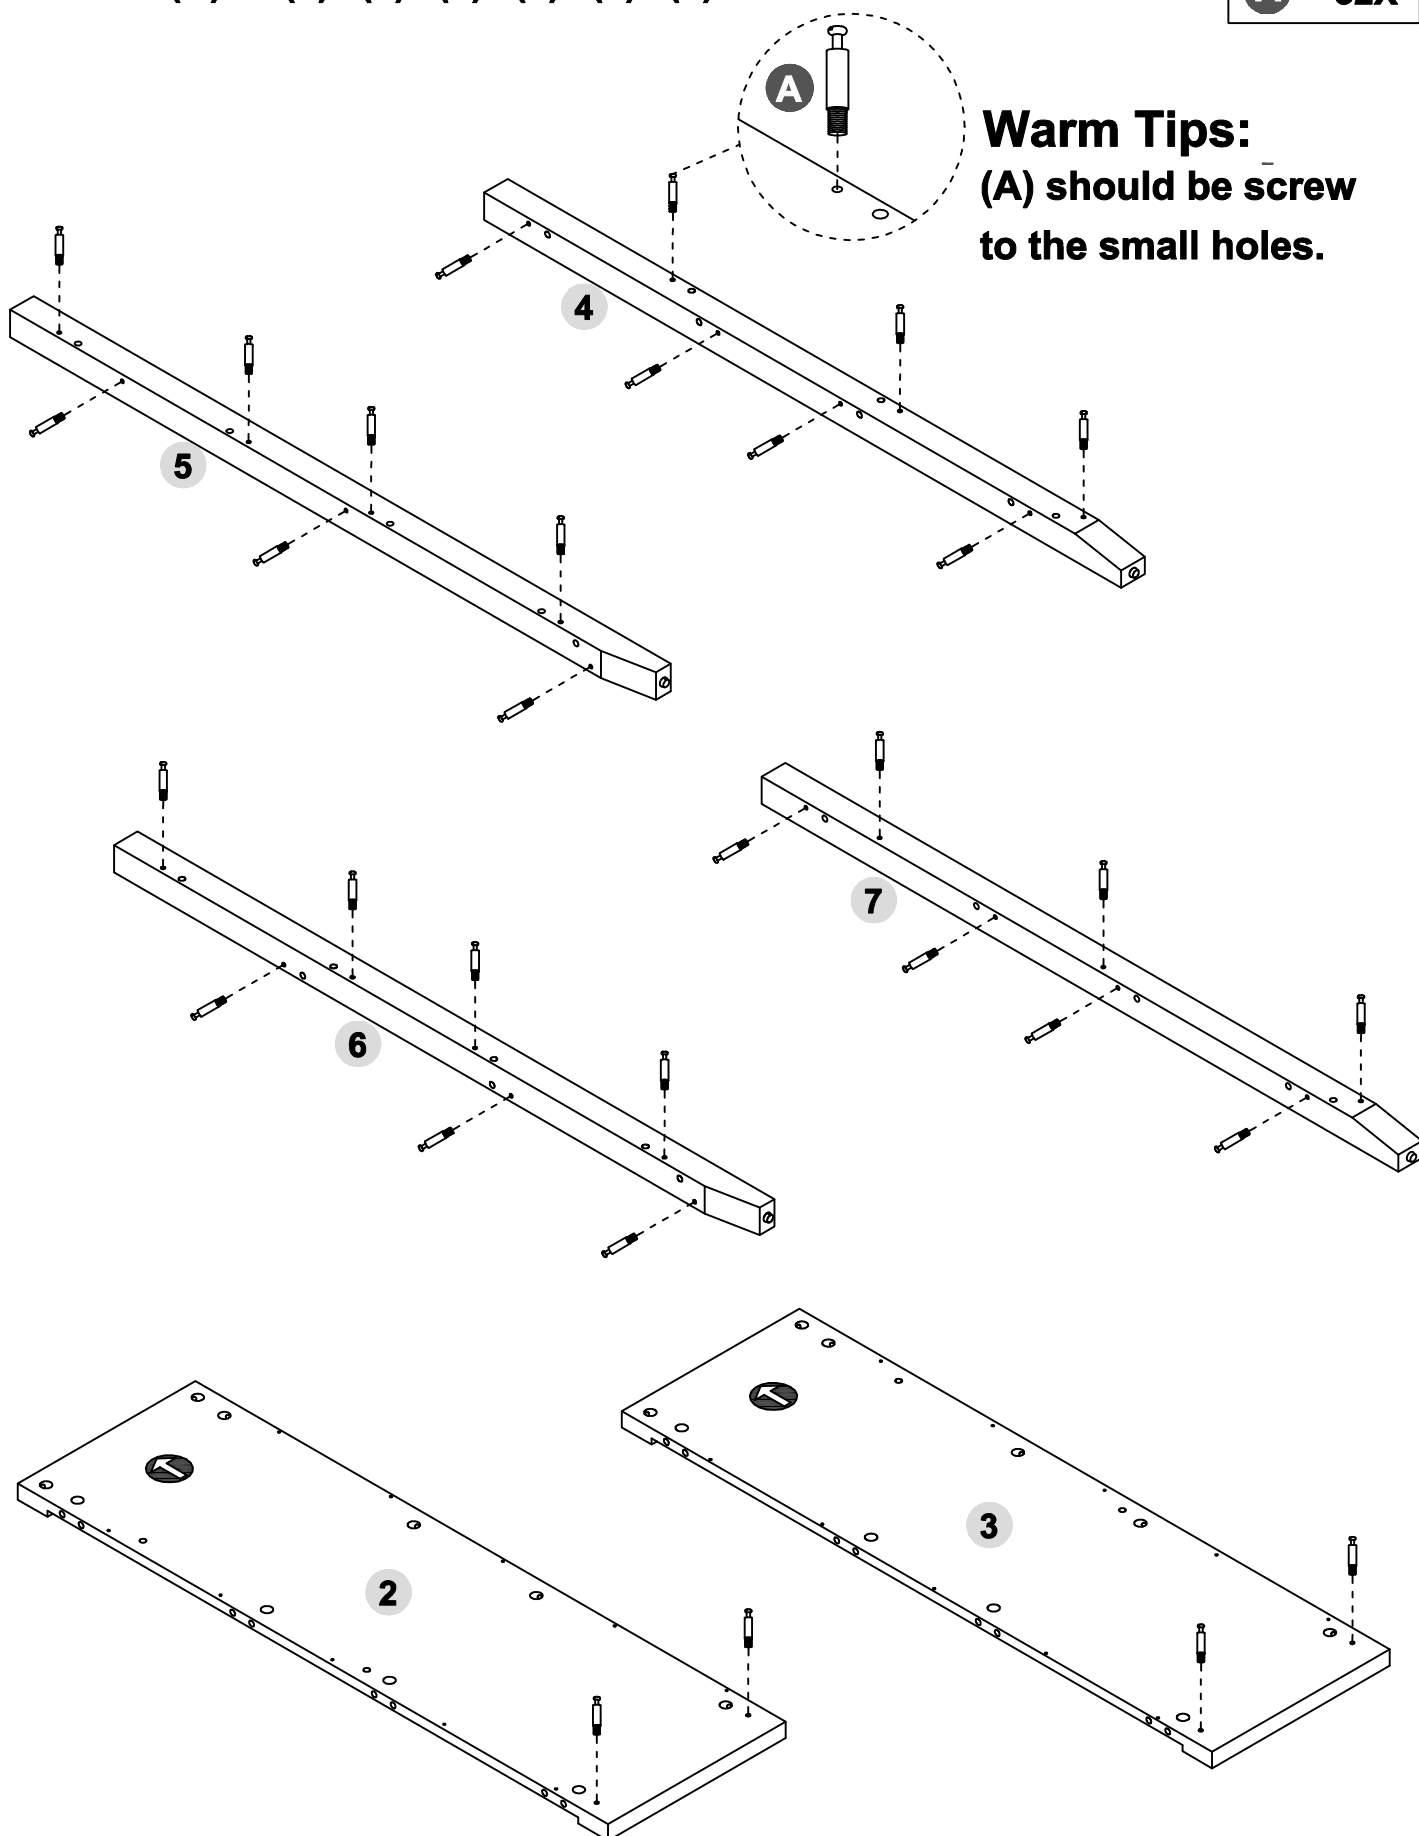


STEP 2

- Attach (C) to (2)&(3)
- Attach (4)&(5) to (2) as below shown
- Attach (6)&(7) to (3) as below shown
- Screw (B) to lock the (2)&(3) as below shown

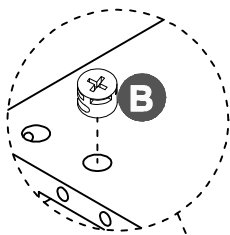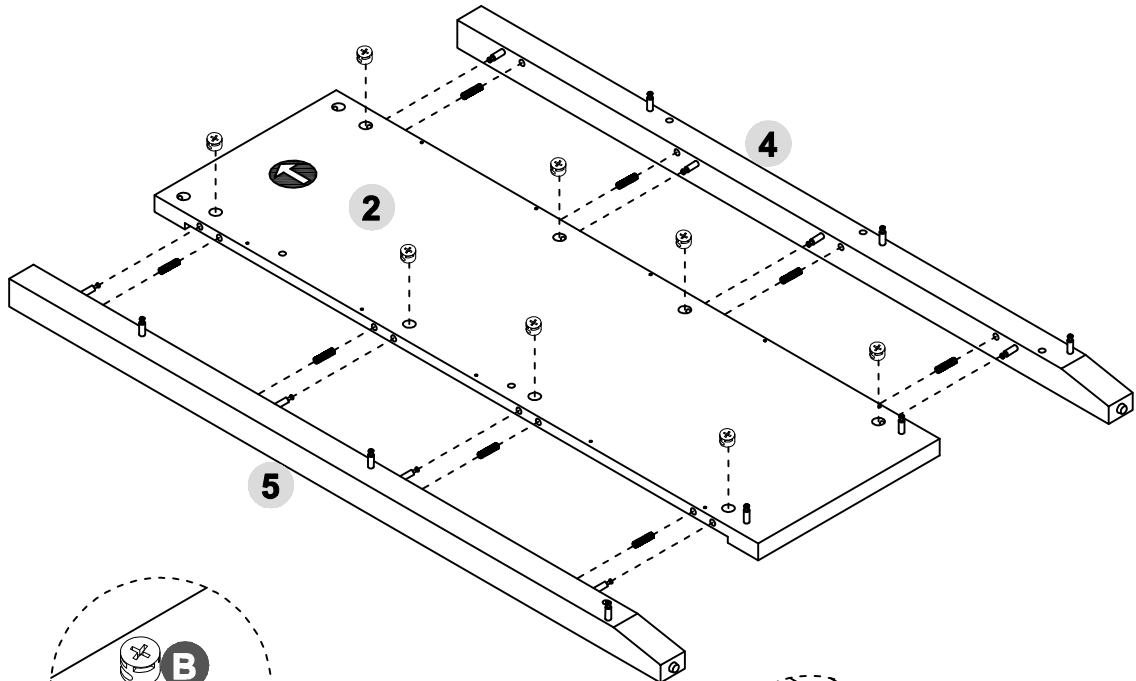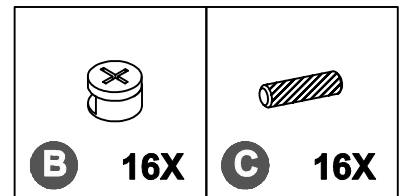


Warm Tips:
Refer to Page 4:
Cam lock
system operation

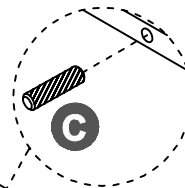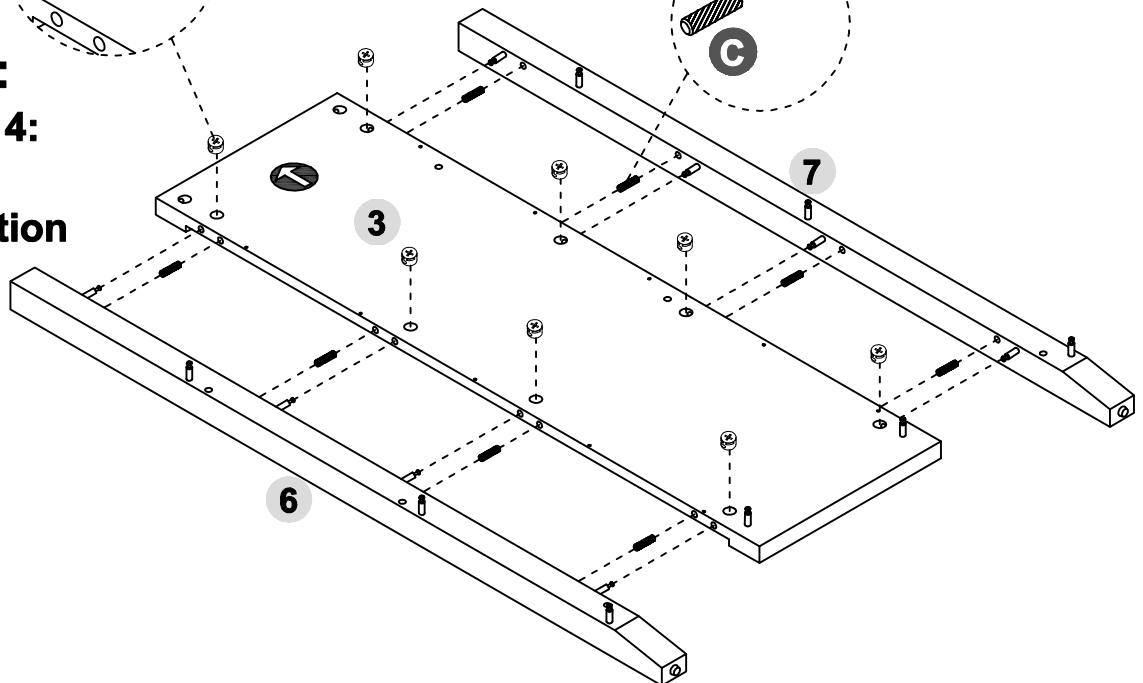


Warm Tips: Make sure the 4 large pre-drilled hole are on the upside
(4)&(5) holes should be in the same side.

STEP 3-1


- Install the drawer slides (H) on the left side panel (2).
When building it make sure to take note of the drawer slides is the one with a flat end.

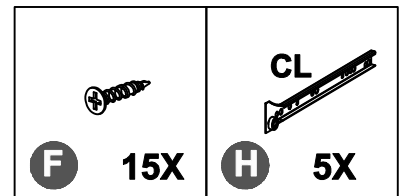

Make sure the 4 large pre-drilled hole are on the upside.

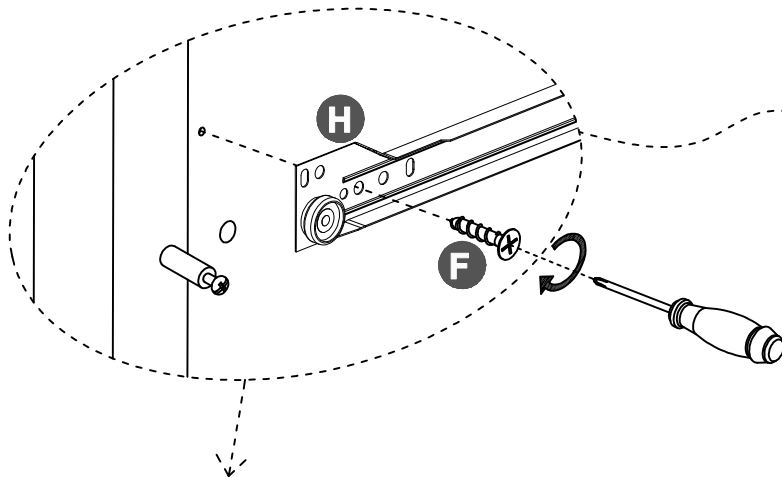


(F) should be locked in the second hole against the pulley.

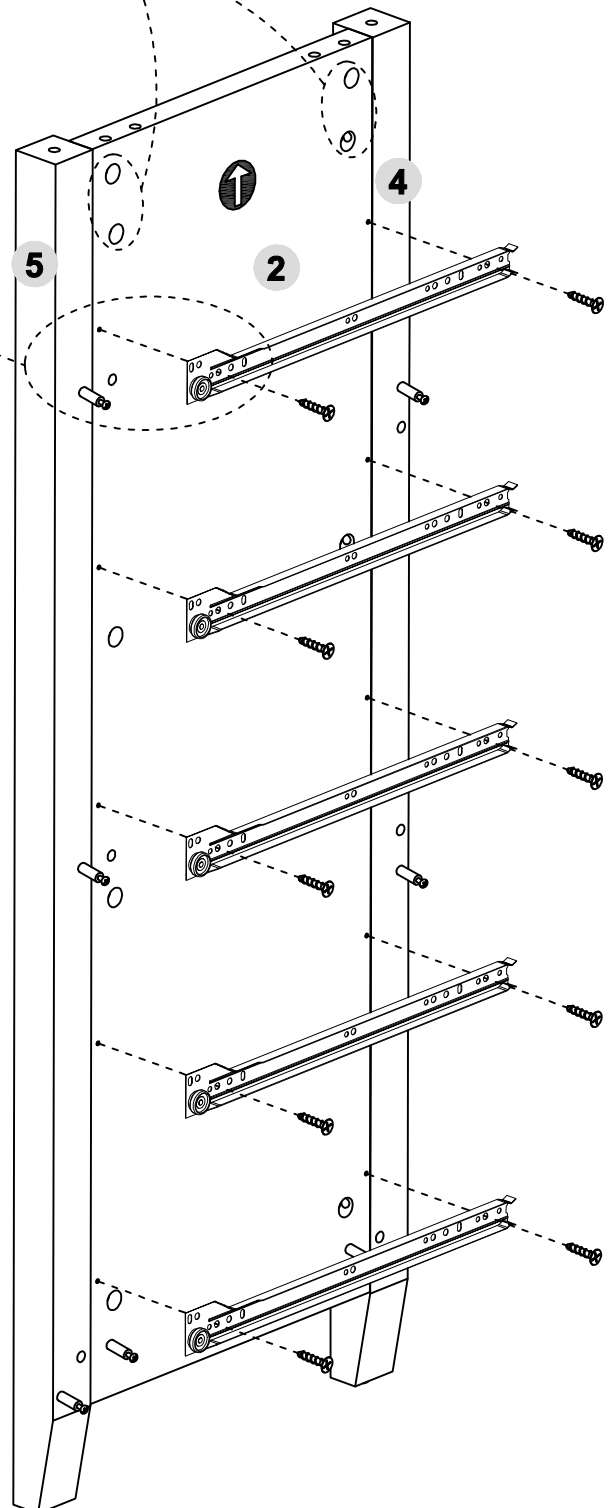


STEP 3-2

NOTE:When you screw the screws, please refer to the illustration carefully to make sure that the slide screws correspond to the position.

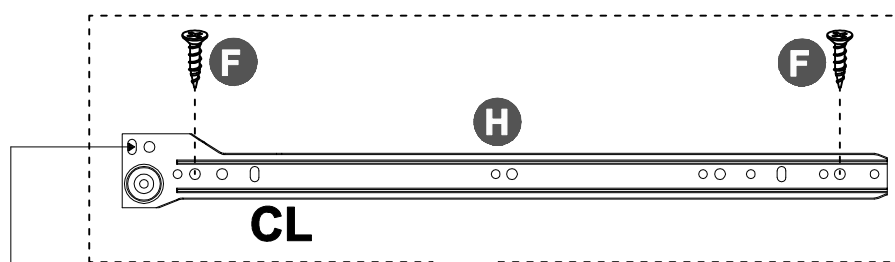


The first hole in the UPPER row holes of the slide is without the corresponding pre-drilled hole, after fix the position of the slide and then screw on.

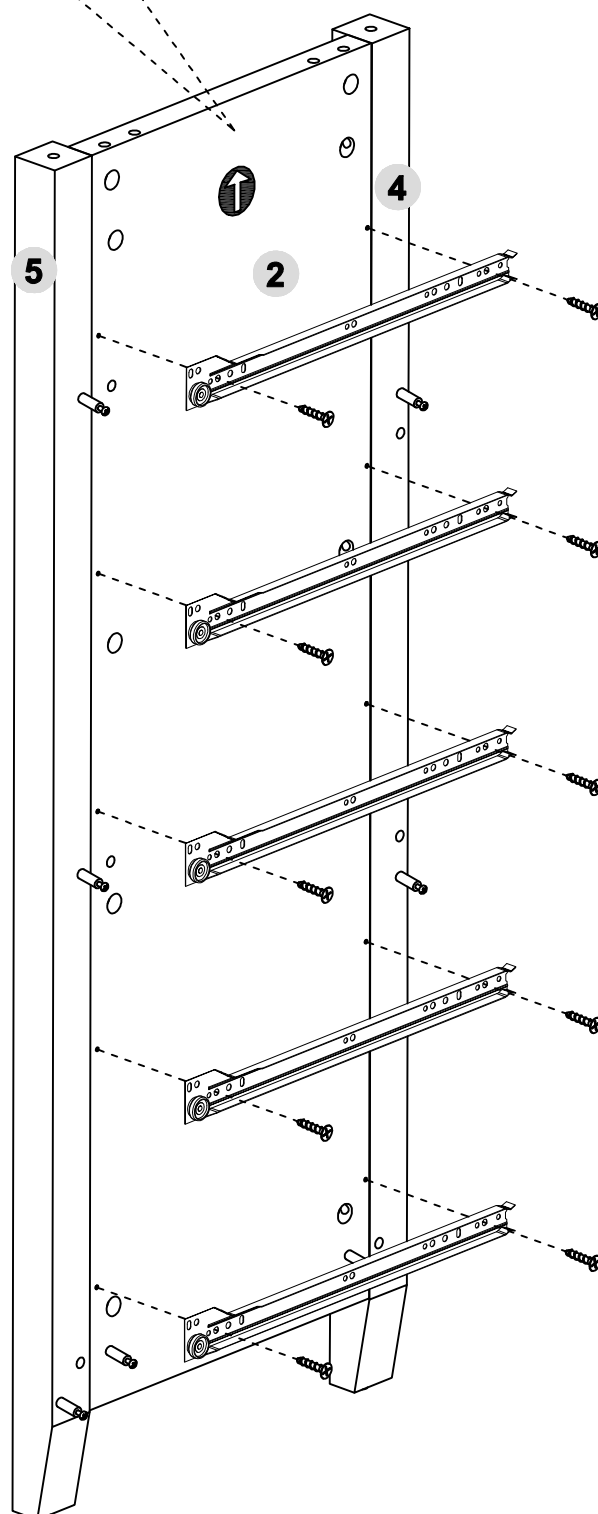


STEP 4-1


- Install the drawer slides (H) on the Right side panel (3).
- When building it make sure to take note of the drawer slides is the one with a flat end.

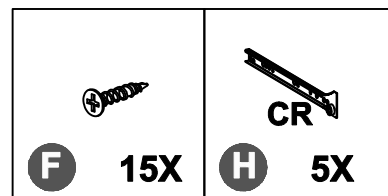

Make sure the 4 large pre-drilled hole are on the upside.

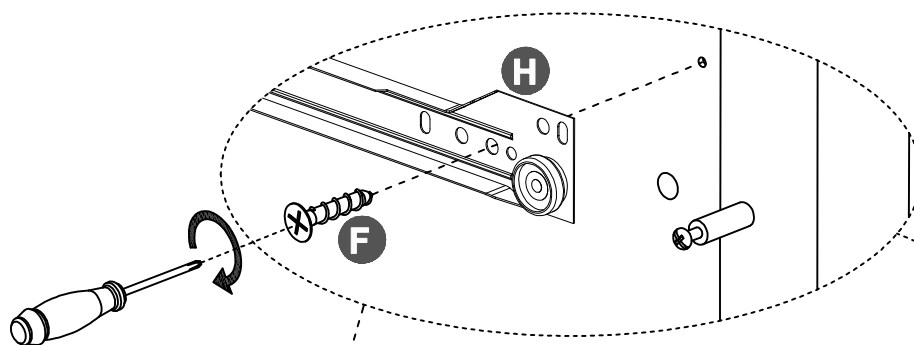


(F) should be locked in the second hole against the pulley.

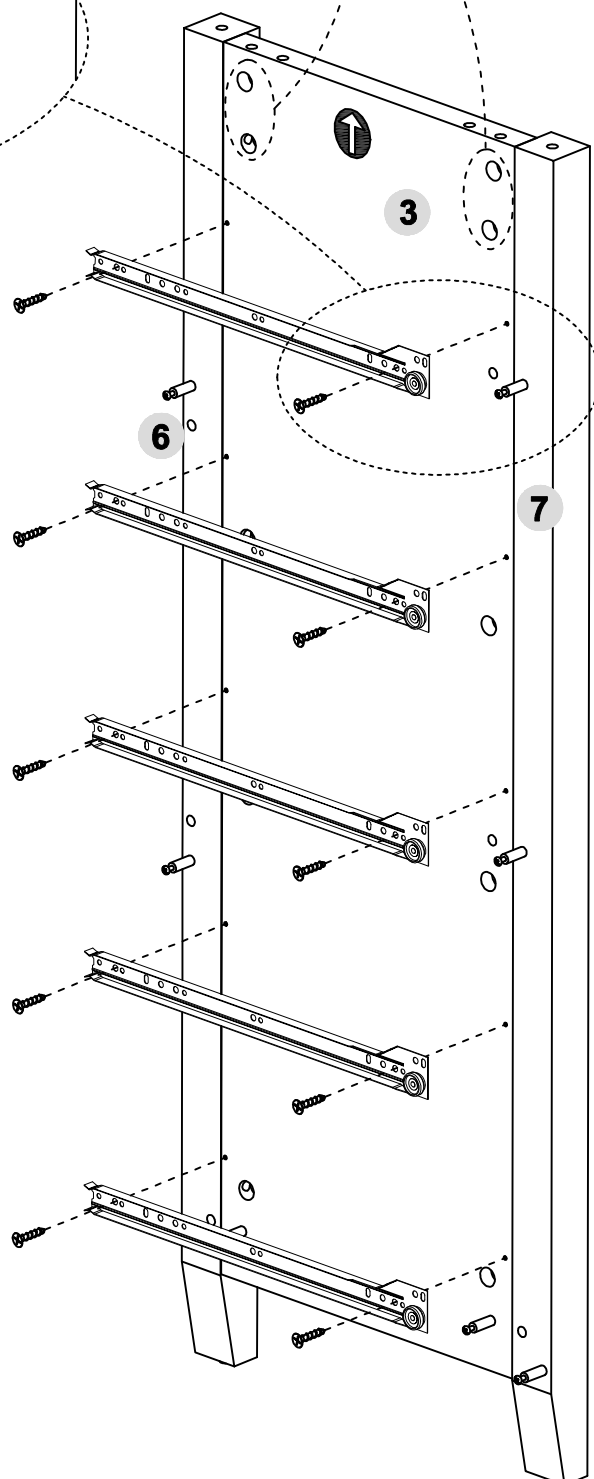

STEP 4-2

NOTE:When you screw the screws, please refer to the illustration carefully to make sure that the slide screws correspond to the position.

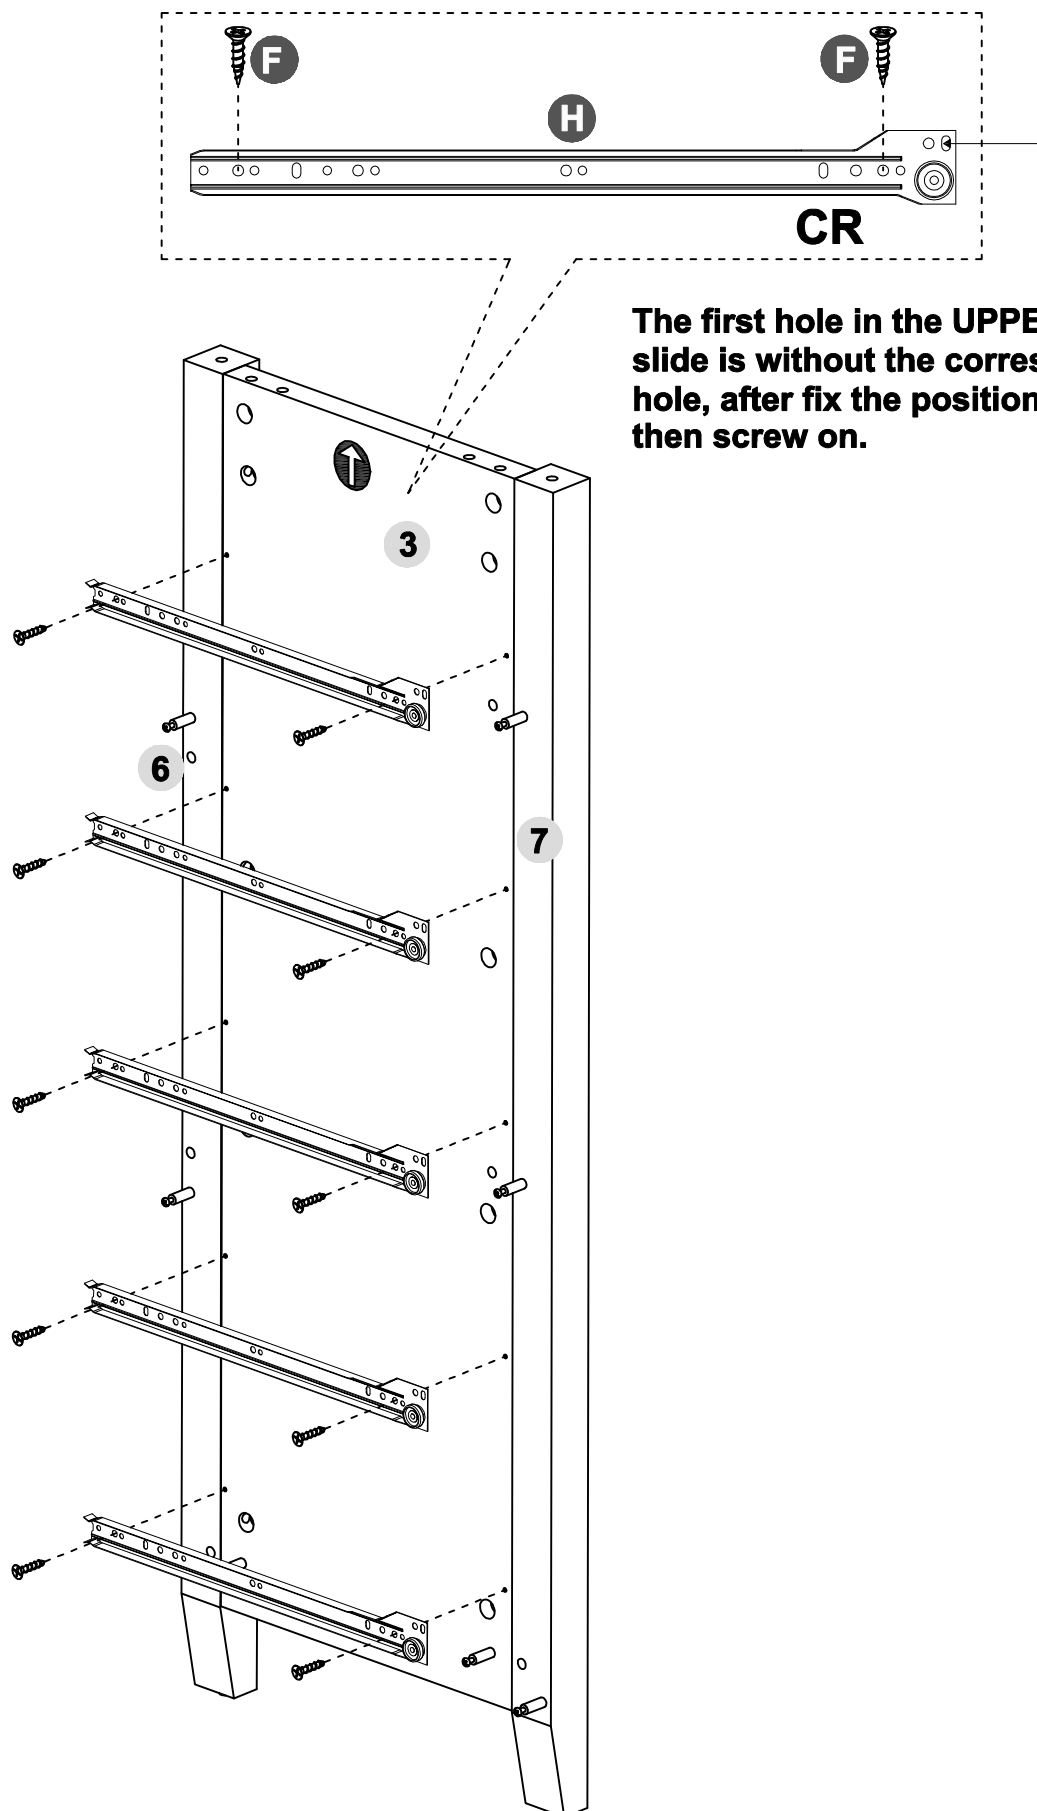


The first hole in the UPPER row holes of the slide is without the corresponding pre-drilled hole, after fix the position of the slide and then screw on.

STEP 5



- Screw (A)&(C) to (12) as below shown
- Attach (11) to (12) as below shown
- Screw (B) to lock the (11) as below shown

		
A 6X	B 6X	C 4X

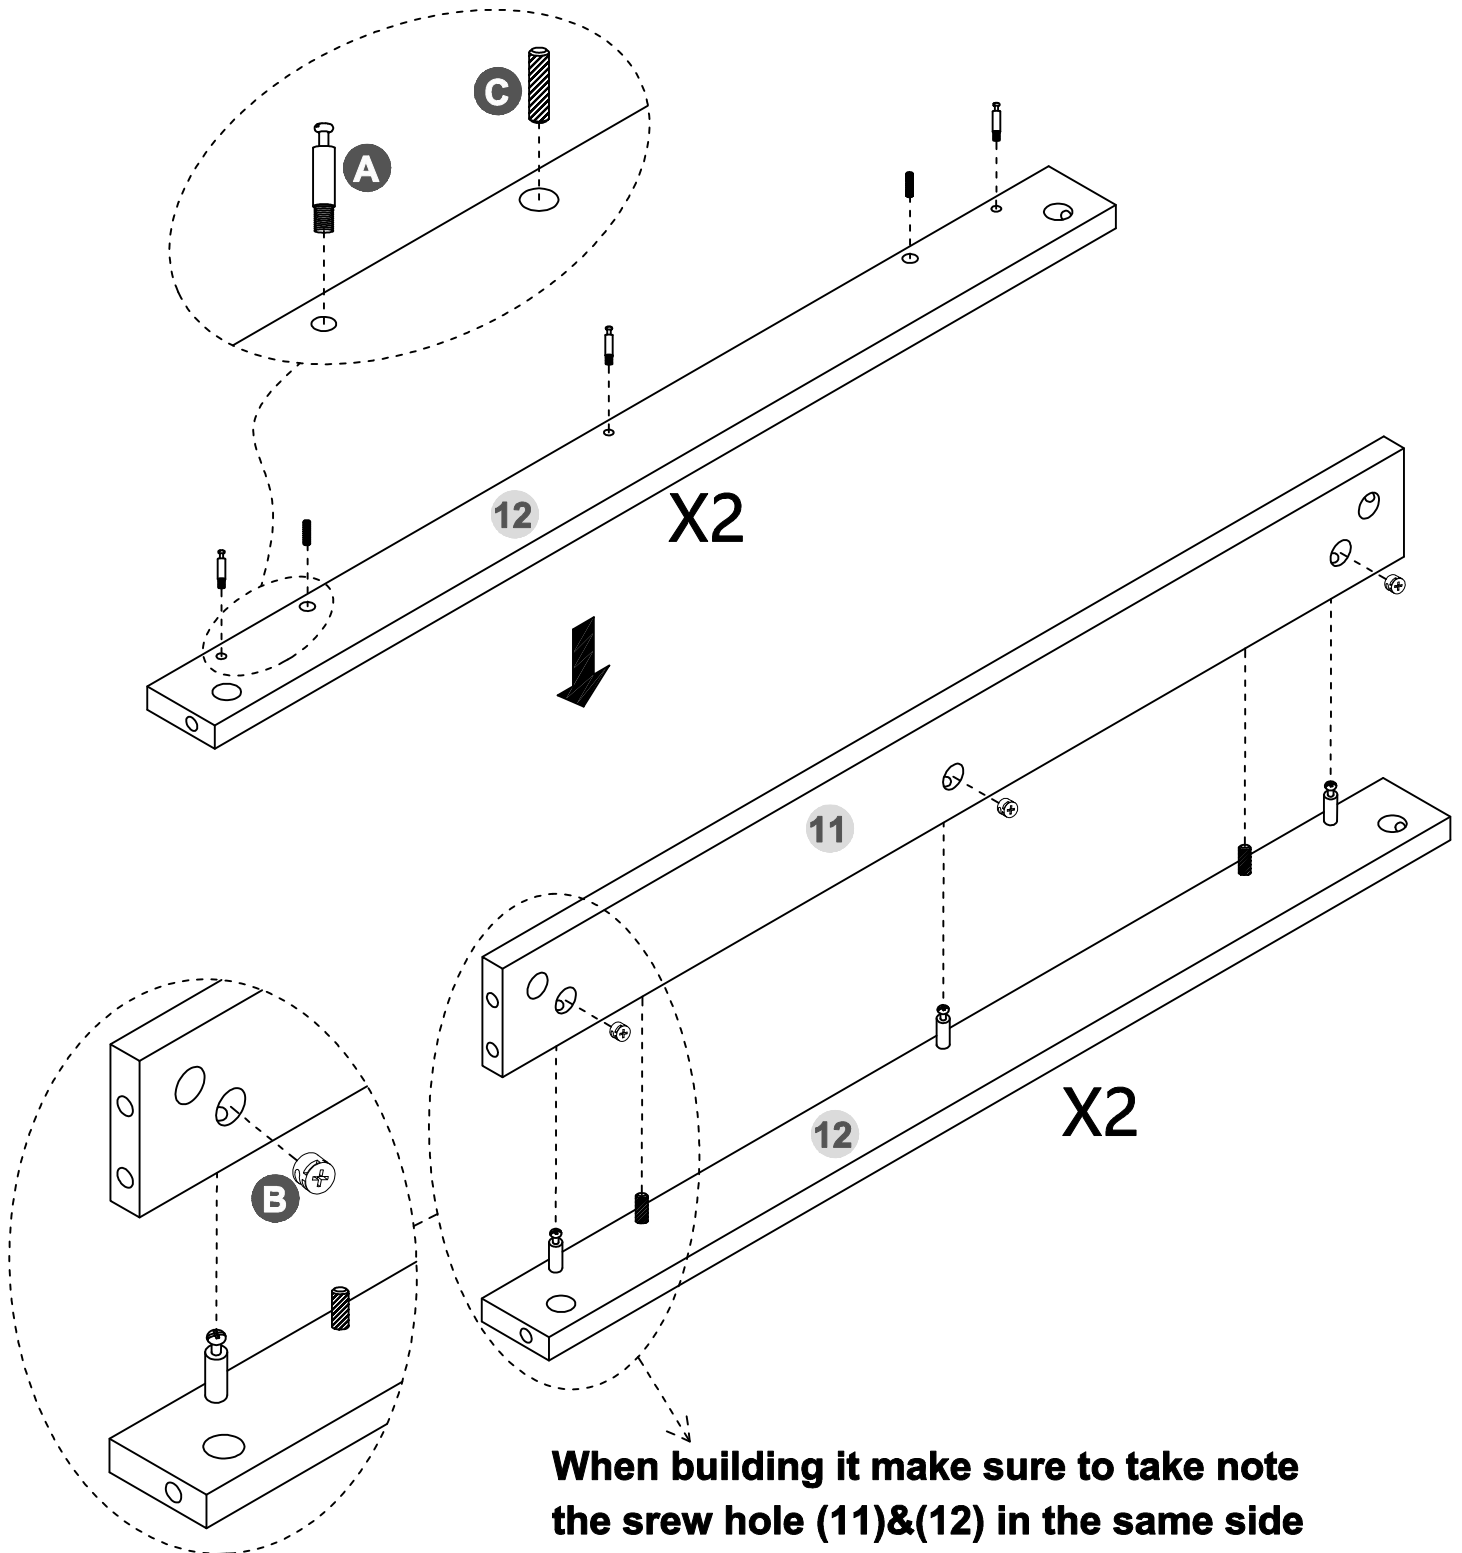



STEP 6

- Screw (C) to (2) as below shown
- Attach (10)&(11)&(12) to (2) as below shown
- Screw (B) to lock the (10)&(11)&(12) as below shown

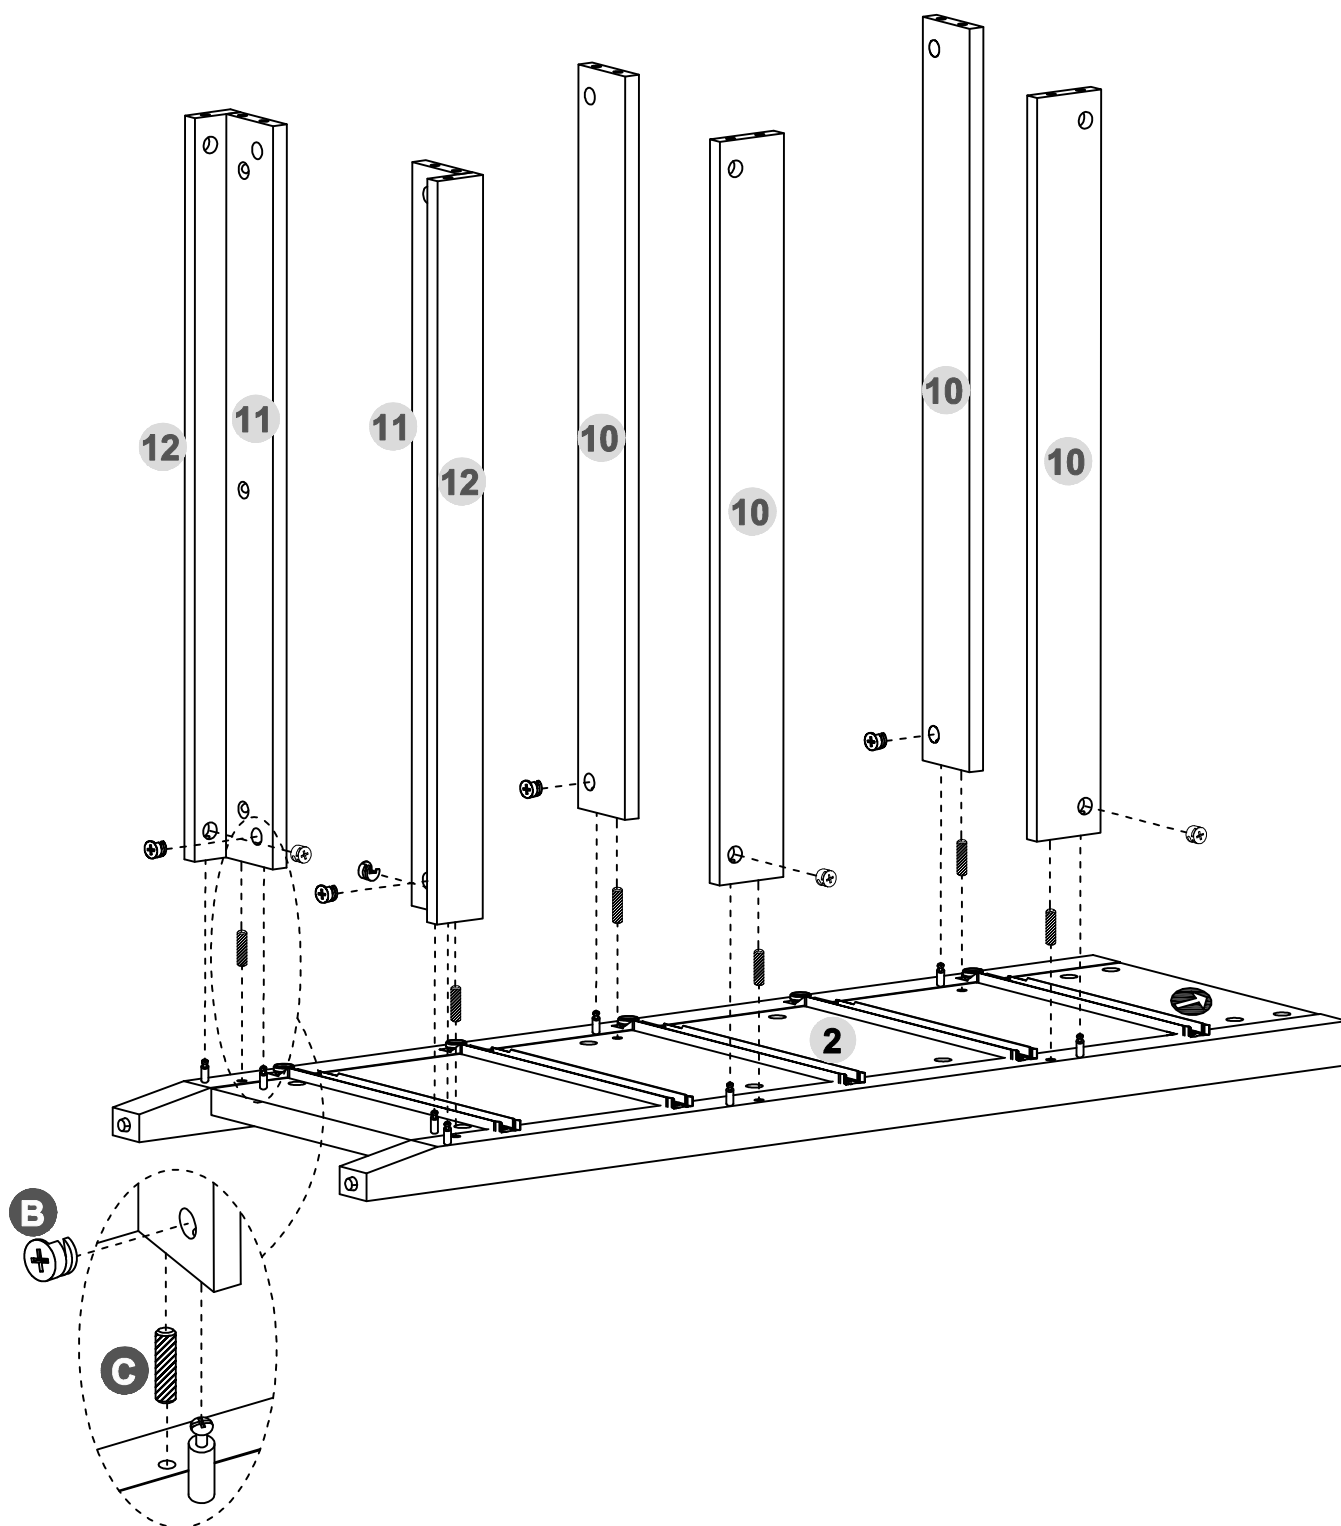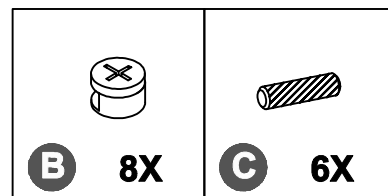



STEP 7

- Screw (C) to (10)&(11)&(12) as below shown
- Attach (10)&(11)&(12) to (3) as below shown
- Screw (B) to lock the (10)&(11)&(12) as below shown

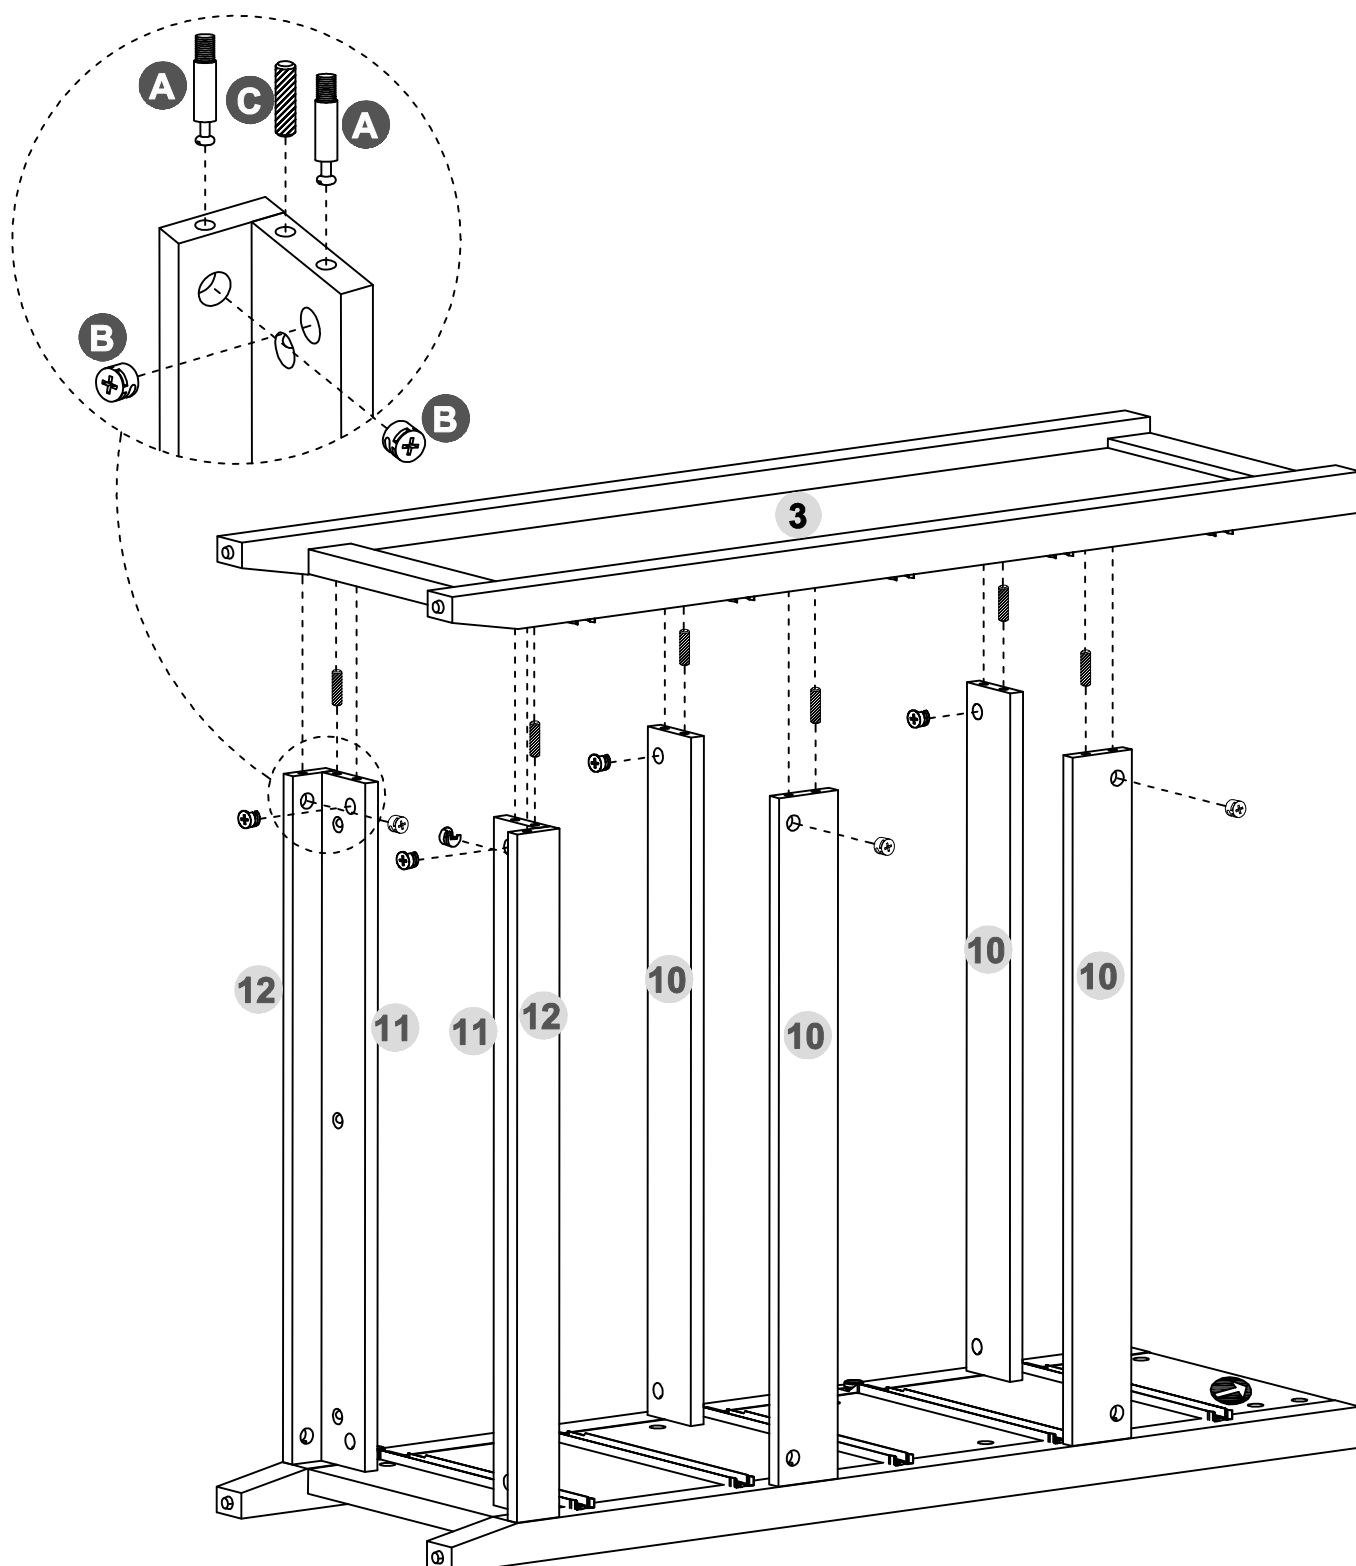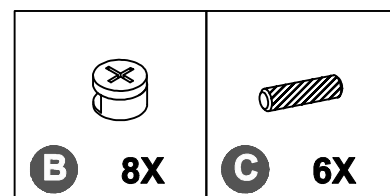



STEP 8

- Screw (A) to (1) as below shown

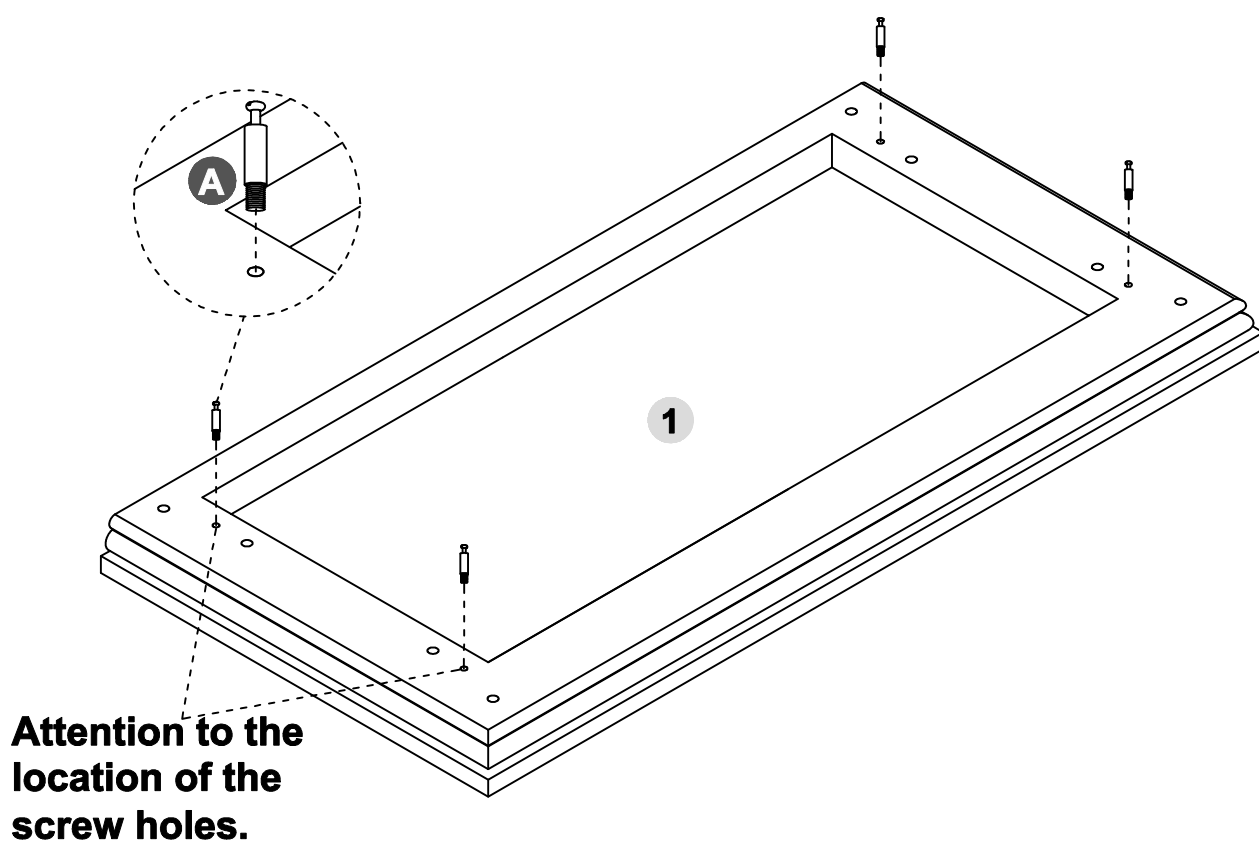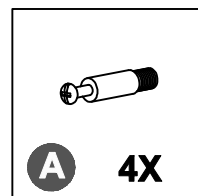



STEP 9

- Screw (C) to (2)&(3) as below shown
- Attach top panel (1) to side boards (2)&(3) as below shown
- Screw (B) to lock the (2)&(3) as below shown

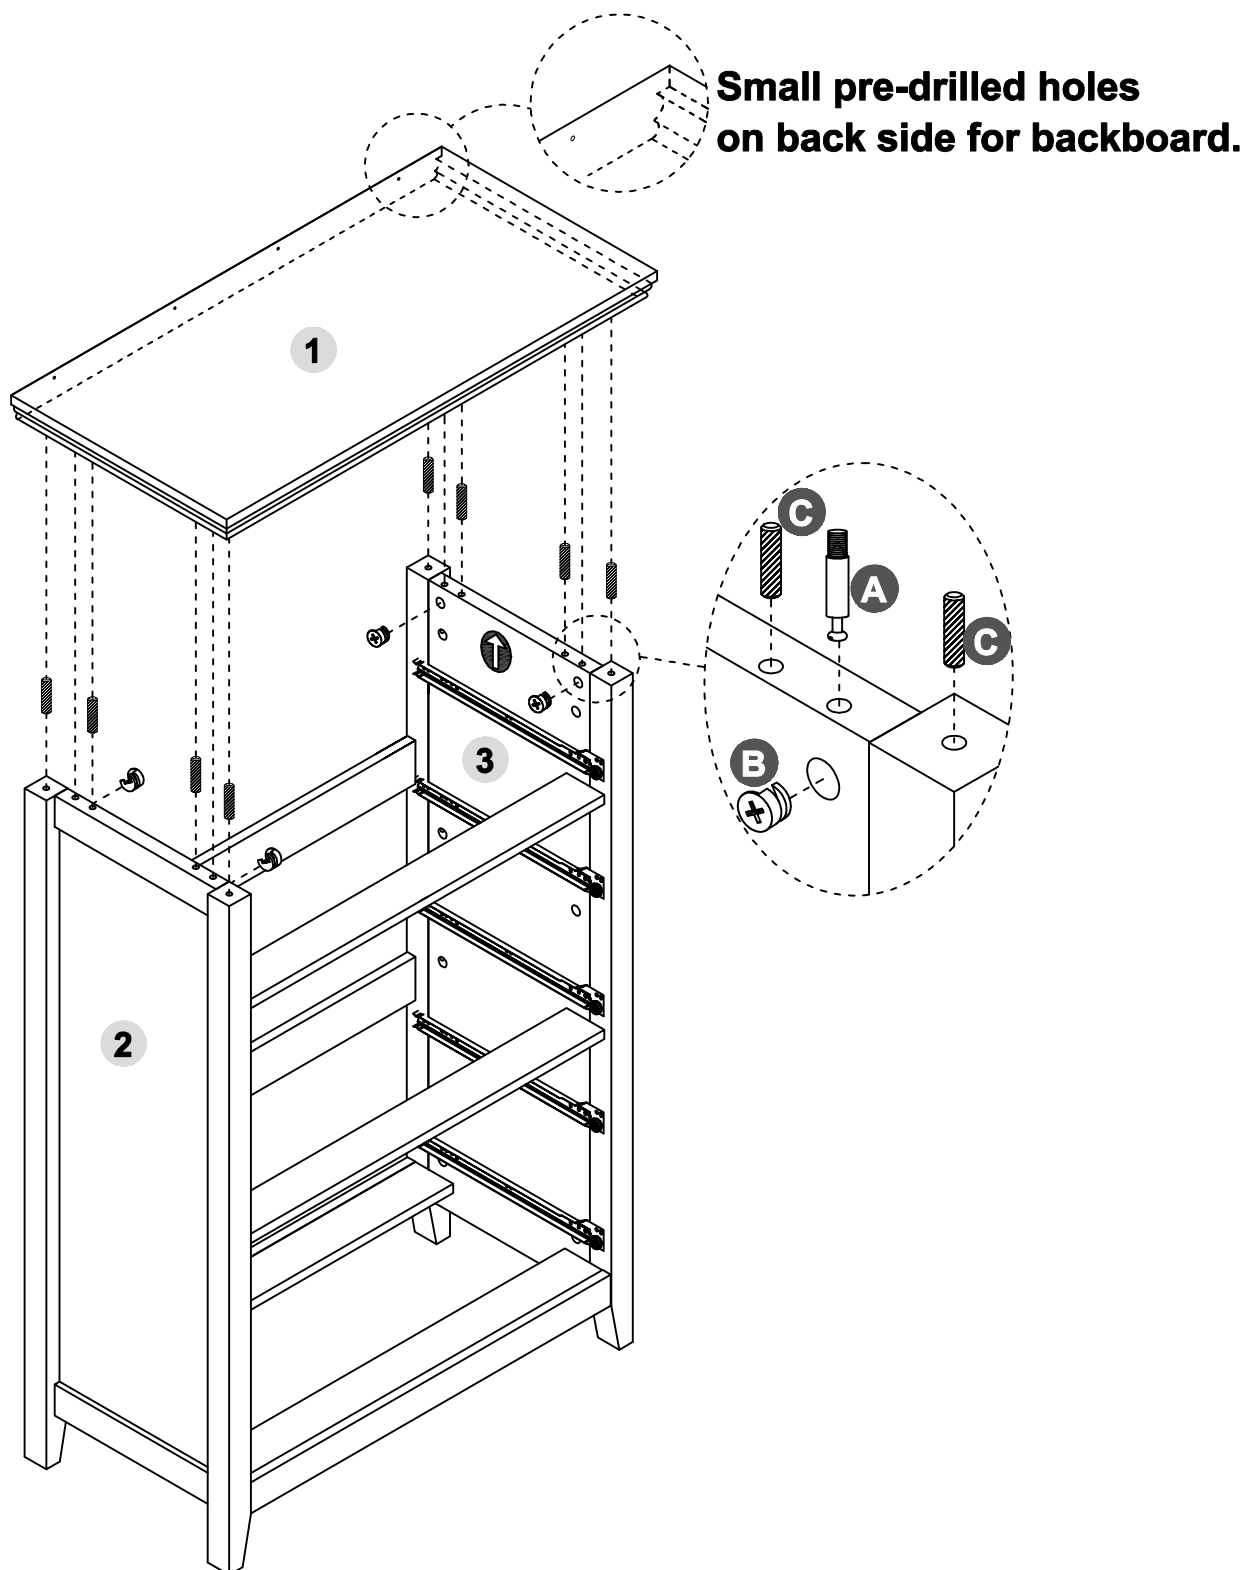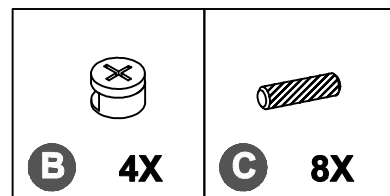

STEP 10


- Screw (G) to Back panel (13)&(14) as below shown
- Stick (K) to (1)&(13), use (G) locked

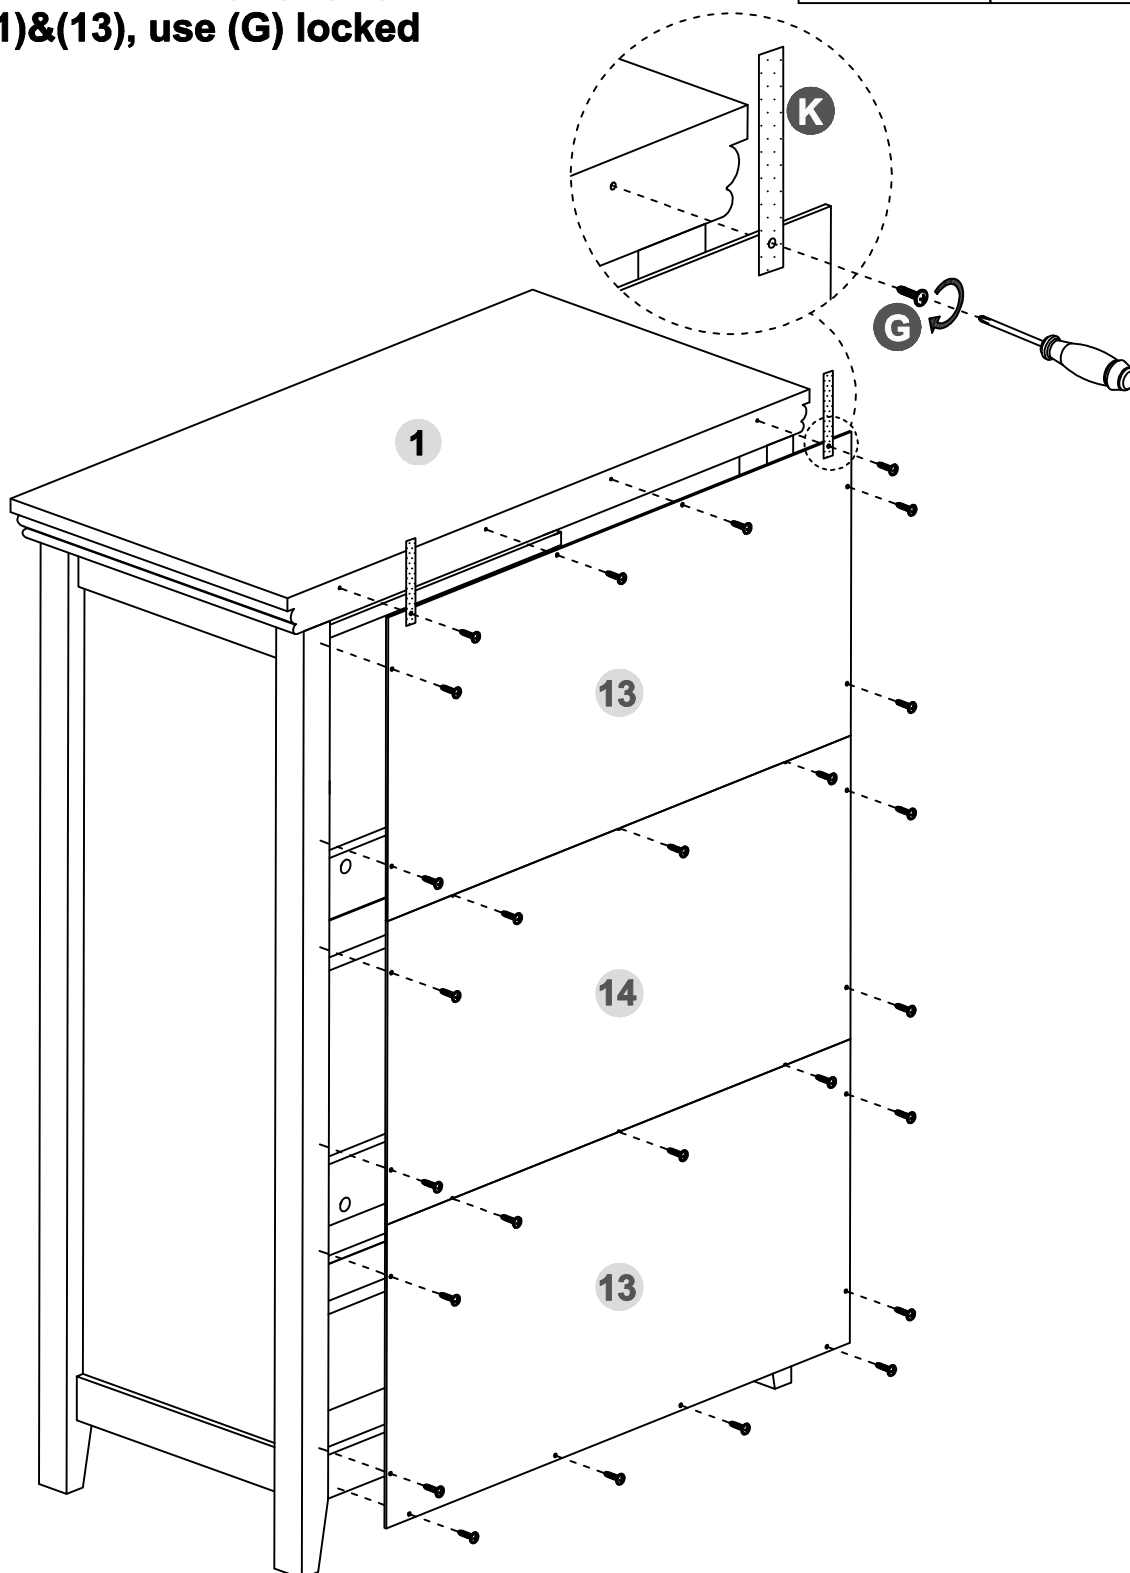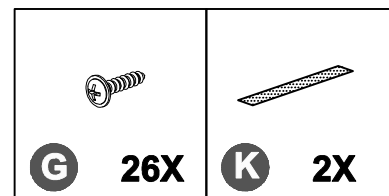


- Warm Tips:**
- ① It is recommended to put the product upside down when is talling the back plane.
 - ② It is recommended to attach the back panel (13) at the top panel (1) first.

STEP 11

- Screw (A)&(D) to (17) as below shown
- Attach (8)&(9)&(18) to (17) as below shown
- Screw (B) to lock the (8)&(9)&(18) as below shown

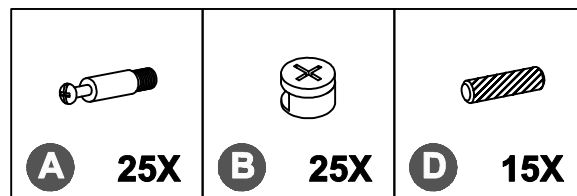


Step 1 :

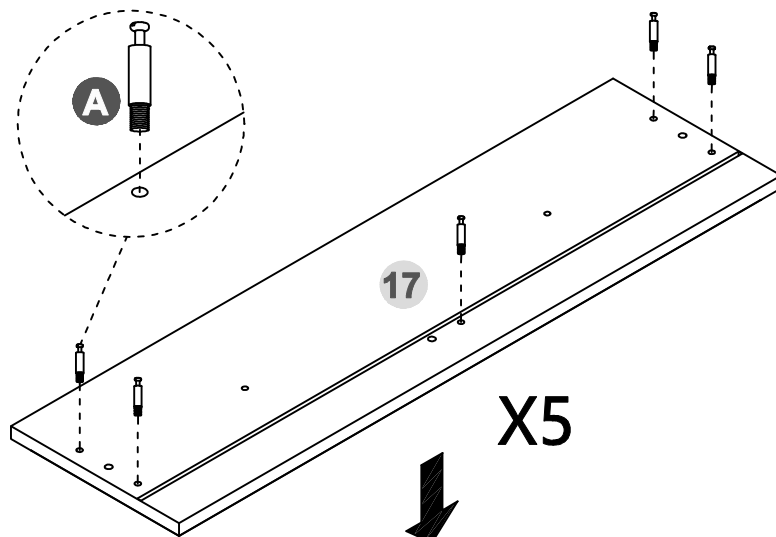

The long groove is used to install the bottom plate, make sure to take note of installing the grooves of these boards on the same side.

Step2 :

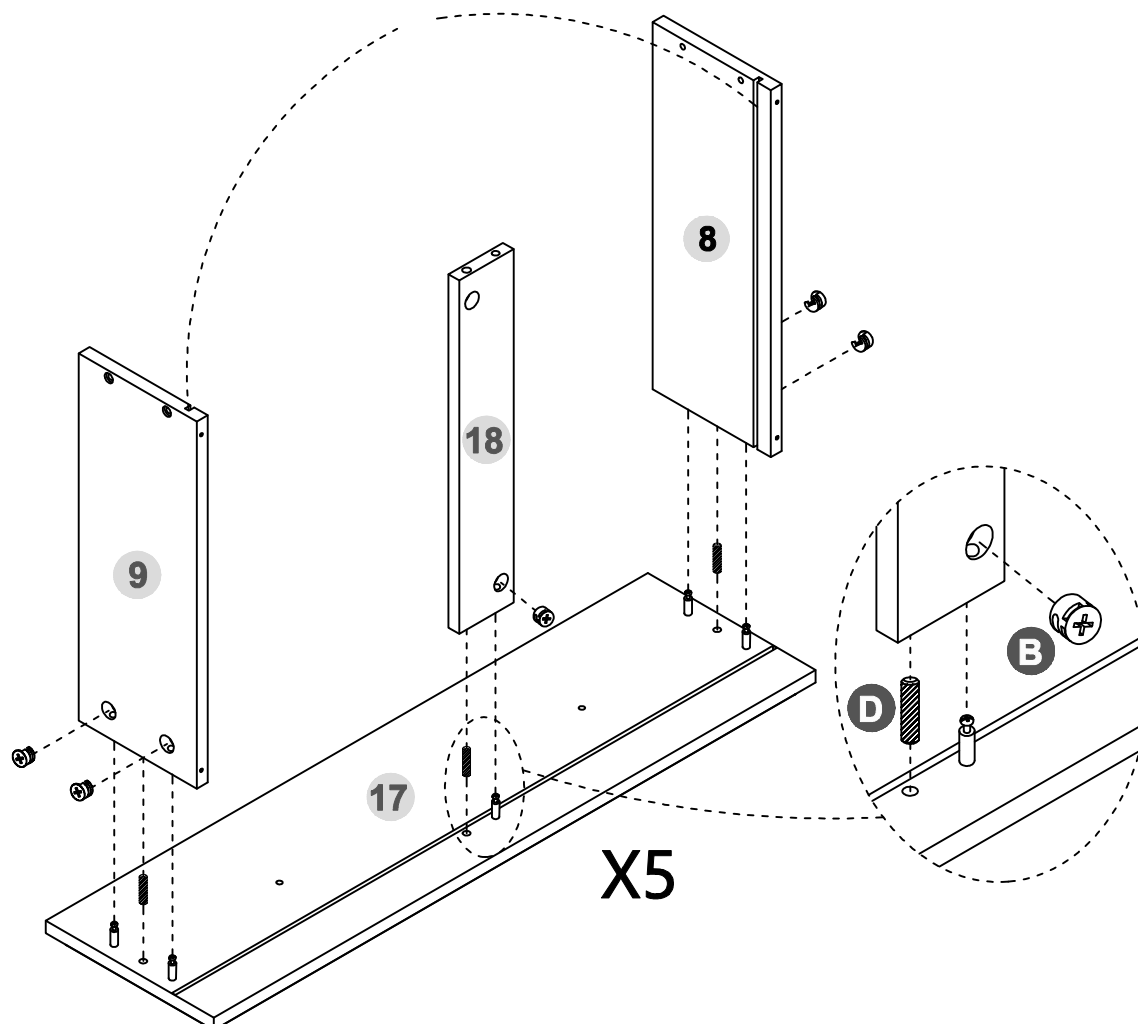


STEP 12


			
A 5X	B 5X	D 5X	E 20X

- Screw (A)&(D) to (15) as below shown
- Attach (15)&(16) to (8)&(9) as below shown
- Screw (E) to attach (8)&(9) to (15)
- Screw (B) to attach (18) to (15)

Step 1 :


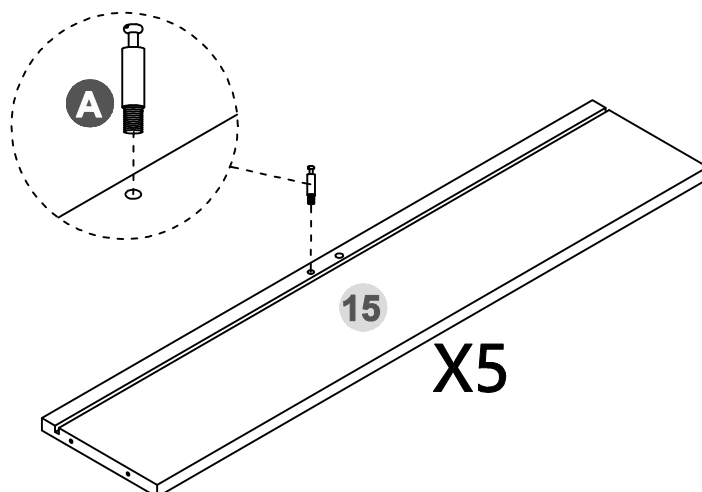


Step 2 :

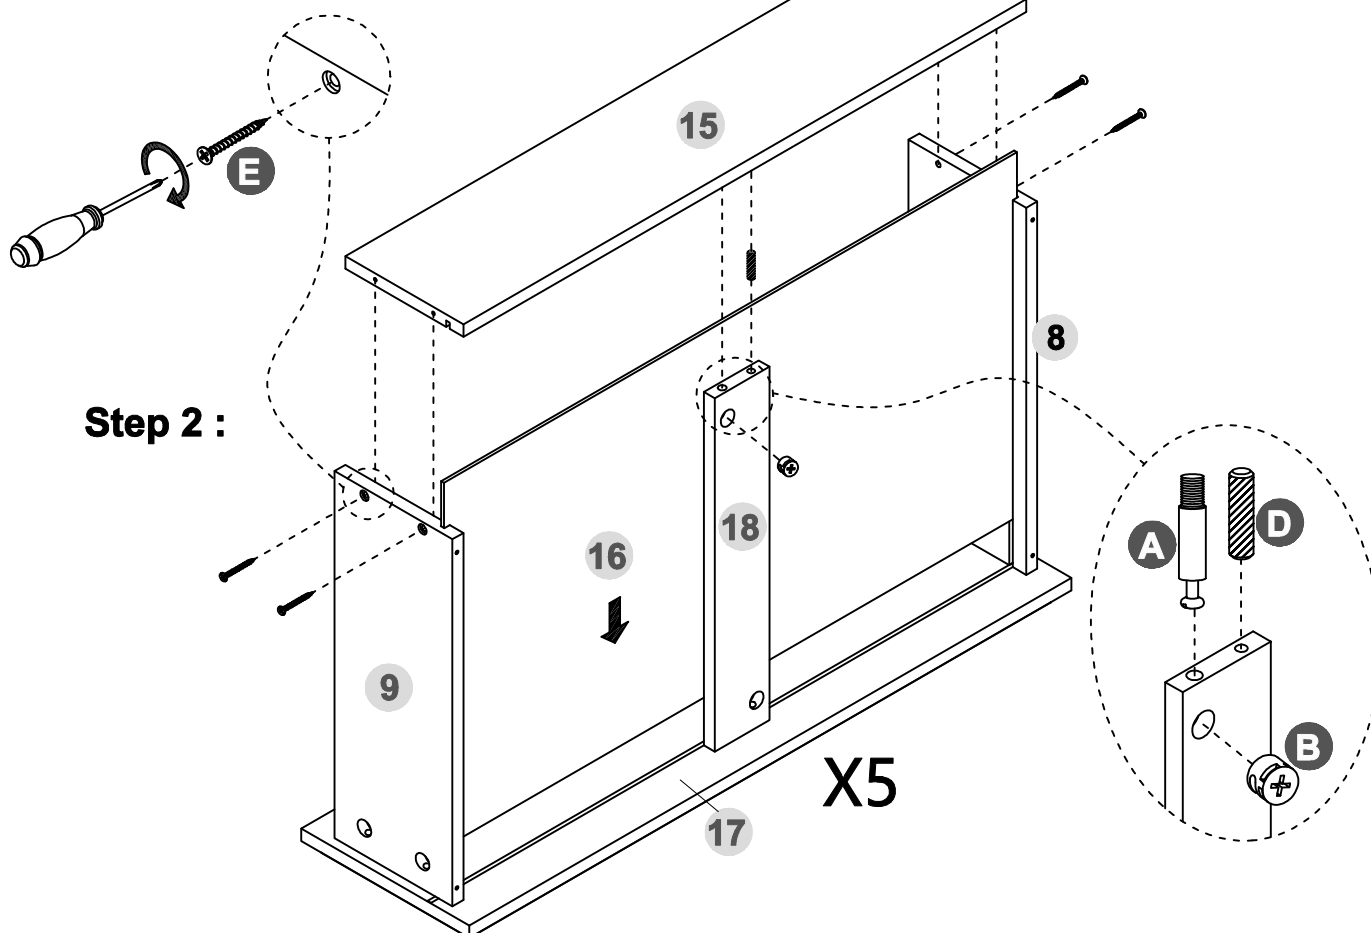



STEP 13

- Screw (J)&(I) to (17) as below shown

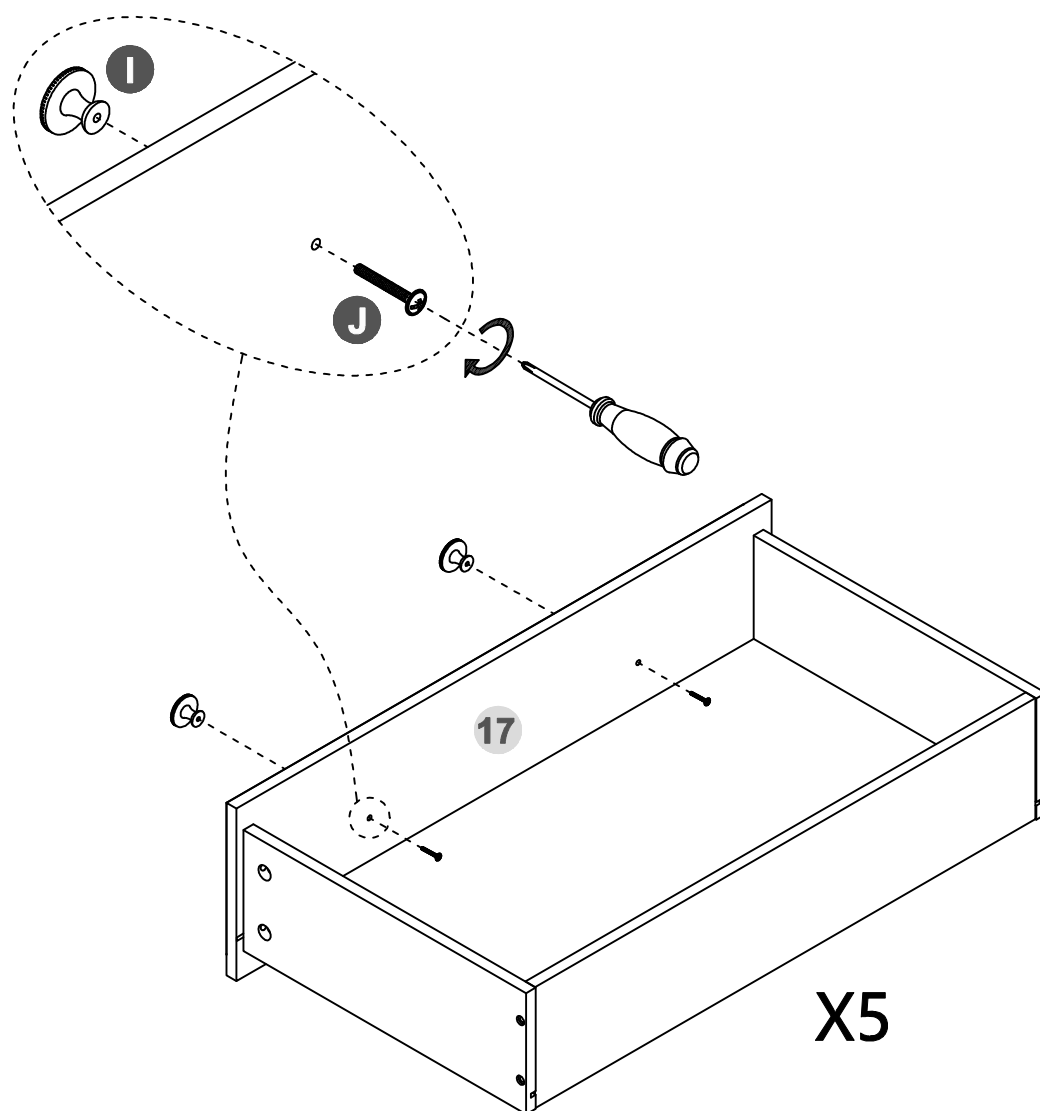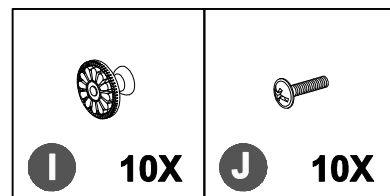


STEP 14

- Install the drawer slides (H) on the drawer side panels (8)&(9) as below shown


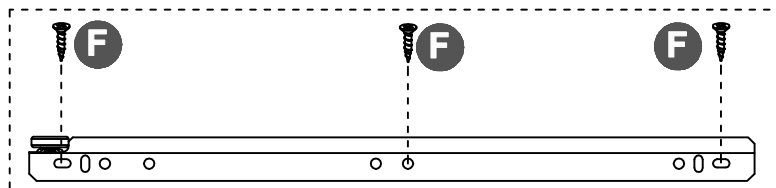
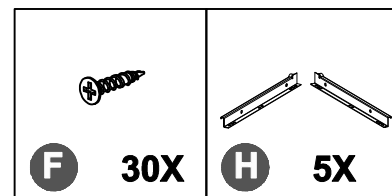


If necessary, install another screw in the middle of the drawer slide.

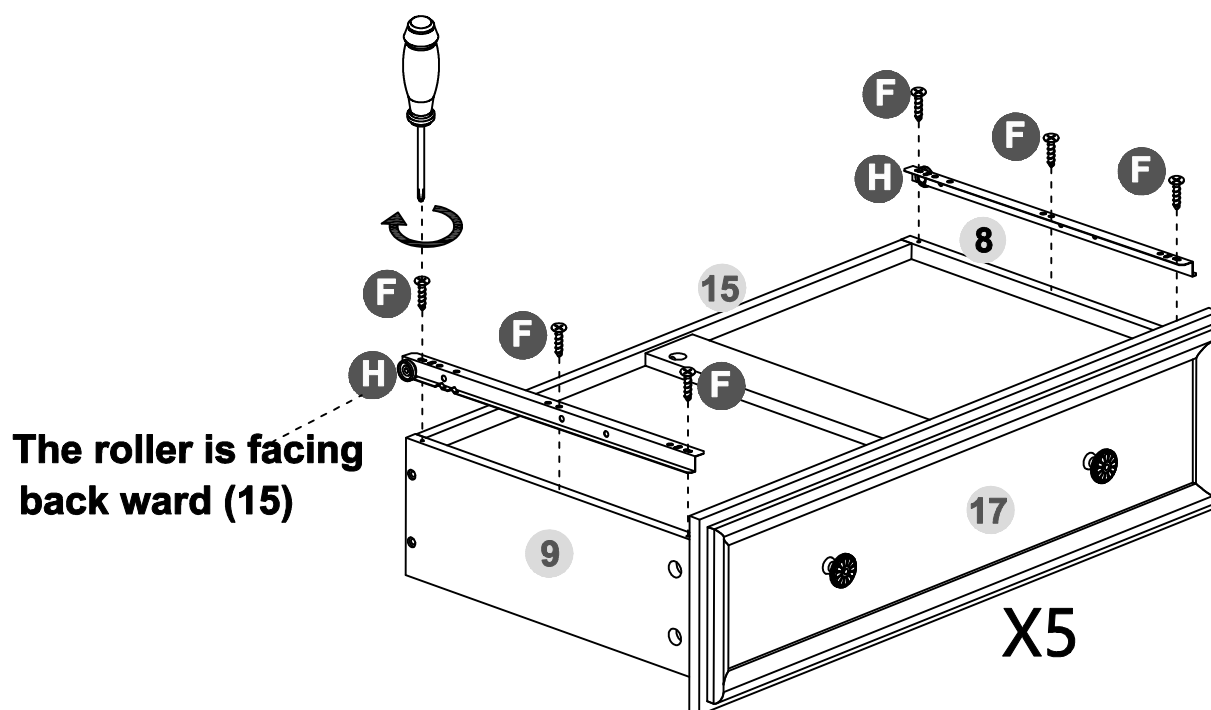


Repeat the previous step to install the remaining drawers

STEP 15

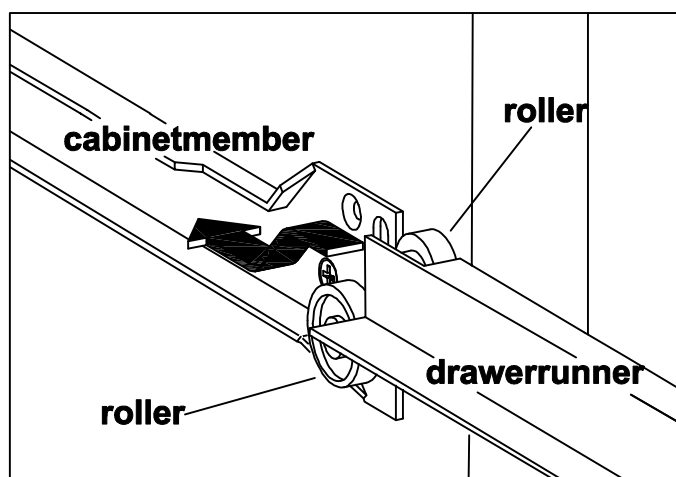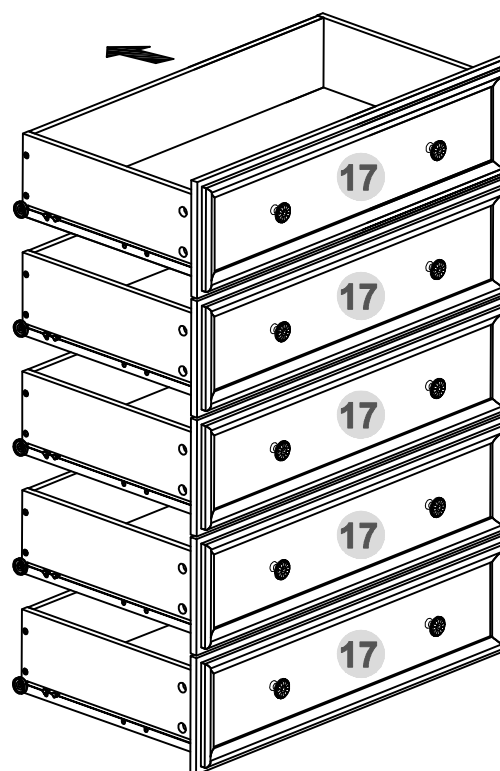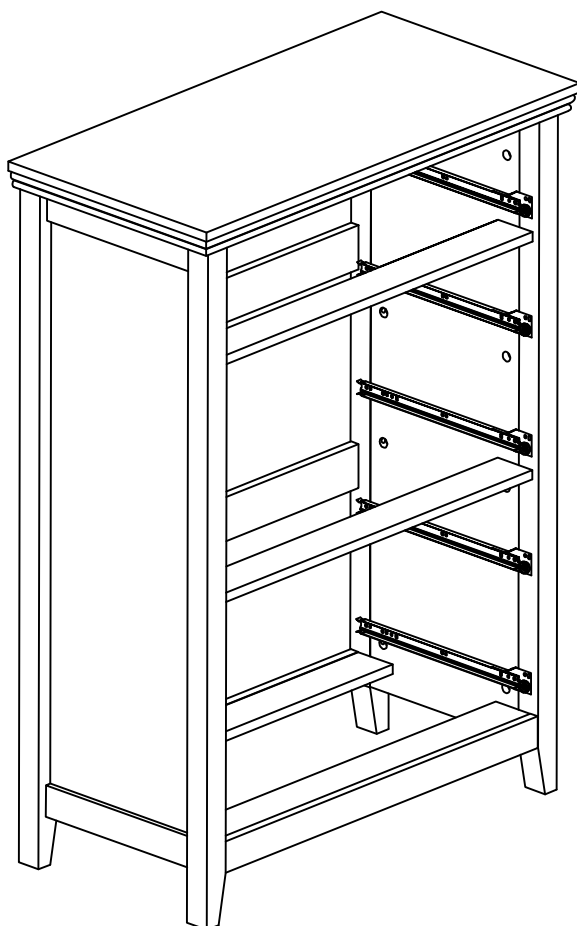

STEP 16

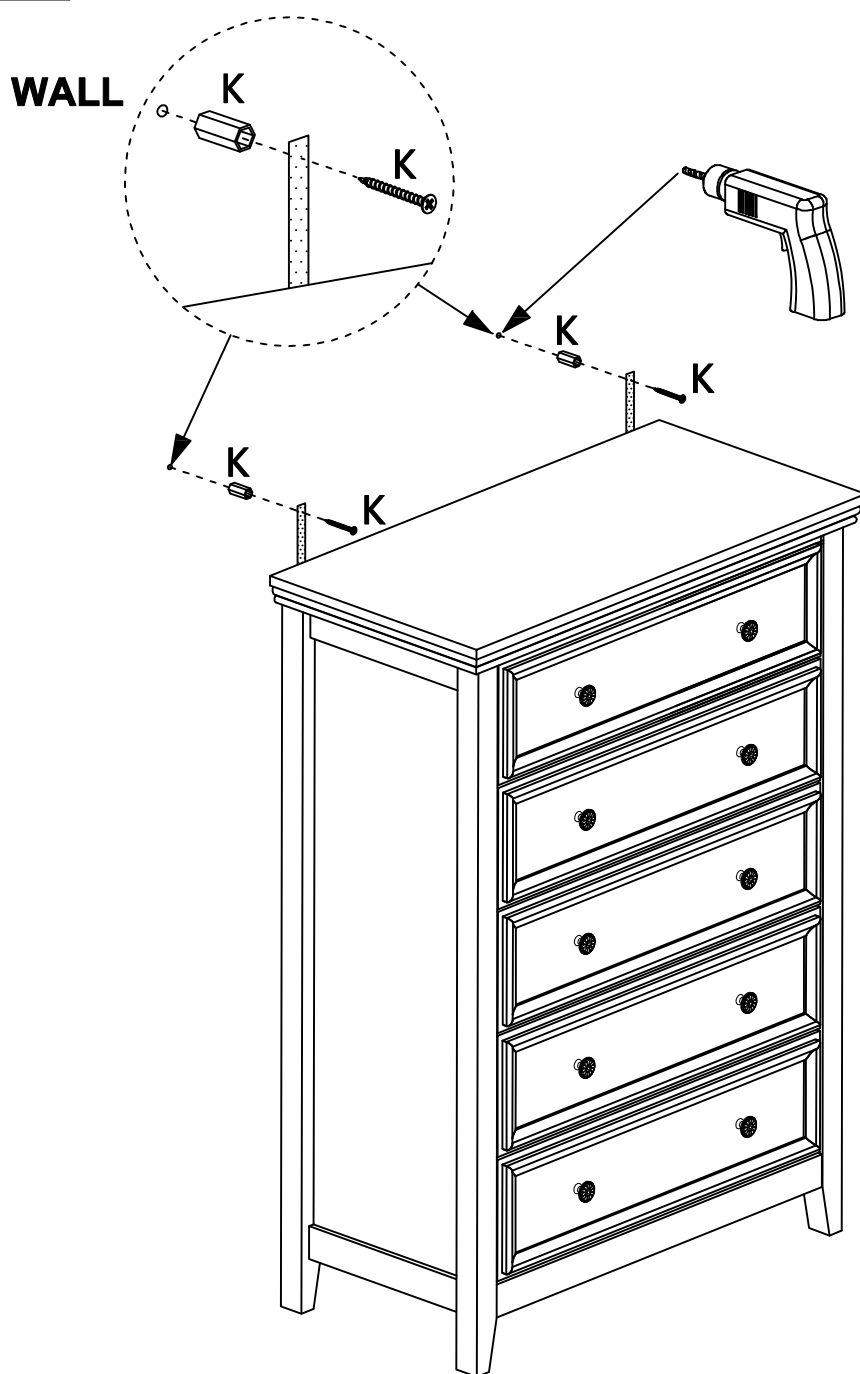

Tools required (not included): phillips screwdriver, stud finder, tape measure, pencil, power drill and 3/16" drill bit.

Now, follow the instructions printed on the plastic bag containing the tipping restraint hardware to attach the tip-over restraints to the unit and the wall.

NOTE: The tipping restraint hardware included is for wooden stud wall construction. it must be attached to a wall stud. depending upon your wall construction, different anchor hardware maybe required. please contact your local hardware store for assistance. young children can be seriously injured by tipping furniture. you must install the tipping restraint hardware with the unit to prevent the unit from tipping, causing any accidents or damage. the tipping restraints are intended only as a deterrent, they are not a substitute for proper adult supervision. the tipping restraints are not earthquake restraints. if you wish to add the extra security of earthquake restraints, they must be purchased and installed separately.

STEP 17

FINAL

Great, you got a 5 drawer dresser !

