

INSTALLATION INSTRUCTIONS

LED VANITY FIXTURE

120VAC Input, Dimmable

READ AND FILLLOW SAFETY INFORMATION

Turn off the main power at the circuit breaker before installing and servicing the fixture to prevent possible injury from electric shock.

All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections, obtain the services of a qualified electrician.


INSTALLATION & ASSEMBLY

Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions.

1. Place the mounting wall plate(3) over the outlet box(1), align the mounting slots of the wall plate with holes of the outlet box as shown. Use a level to ensure the wall plate(3) is straight.
2. Mark the location of the keyhole slots of the wall plate on the wall. Drill a $\frac{1}{4}$ " holes at the narrow end of each keyhole slot marking on the wall. Carefully hammer a wall anchor into each drilled hole.
3. Replace the mounting wall plate(3) over outlet box, align the narrow end of each keyhole slot with its respective wall anchor. Feed the anchor screws (8) through keyhole slots and thread them into the wall anchors until wall plate is flush against the wall. Additionally, fasten the wall plate to thread holes in outlet box using two outlet box screws, as shown.
4. *Pull the supply wires (4 &5) and house ground wire (6) out from the outlet box (1) before attaching wall plate to outlet box.*
Make electrical connections, connect the black fixture black wire (10) to the black supply wire (5) and the white fixture wire (9) to the white supply wire (4) using wire nut (7). Connect the fixture ground wire (11) to the supply ground wire (6) together using wire nut (7). Wrap all wire connections with electrical tape to ensure secure connection.
5. Place the fixture base (13) over the mounting wall plate (3) and secure it to the wall plate by using four fixture screws (12).
6. Installation complete, restore power at the circuit breaker and turn light switch on to activate this fixture.

Care and maintenance – Use dry and clean cloth to wipe the surface of the fixture.

Replacement- This LED product has no bulb to replace.

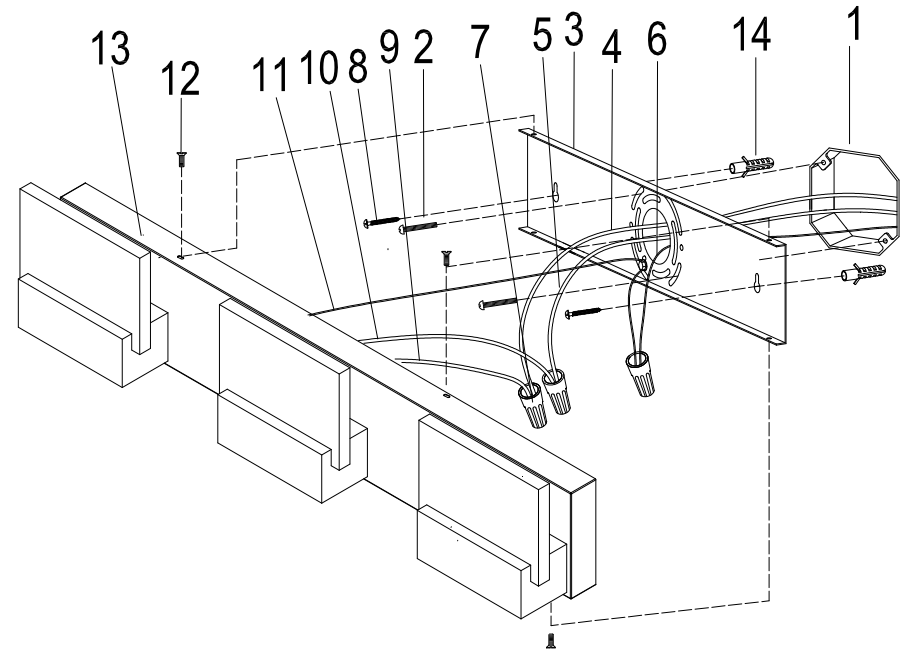

- 1. OUTLET BOX (EXCLUDED)
- 2. OUTLET BOX SCREWS
- 3. MOUNTING WALL PLATE
- 4. WHITE SUPPLY WIRE
- 5. BLACK SUPPLY WIRE
- 6. HOUSE GROUND WIRE
- 7. WIRE NUTS

- 8. ANCHOR SCREWS
- 9. WHITE FIXTURE WIRE
- 10. BLACK FIXTURE WIRE
- 11. FIXTURE GROUND WIRE
- 12. FIXTURE SCREWS
- 13. FIXTURE BASE