# **Assembly Instruction Sheet**

Please go to our website for product cleaning tips. Go to the Care + Maintenance selection.

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Light Source: (5) A 19 Medium Base Bulbs 100W Maximum or

(5) Medium Base T10 Vintage Bulbs are recommended but not supplied.

Estimated Assembly Time: 30-45 minutes


**Preparation:** Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

## **⚠** Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.


These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

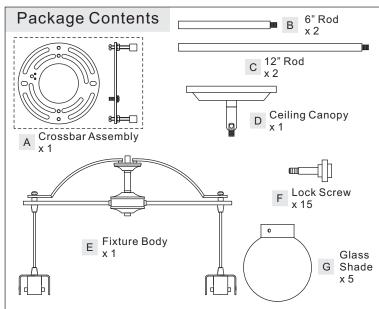


#### STEP 2 - Installing the Crossbar Assembly


A. Pass the supply wires from outlet box through the Crossbar Assembly (A). Attach the Crossbar Assembly (A) to the Outlet Box with the head of the Green Ground Screw facing you. Secure the Crossbar Assembly (A) with Outlet Box Screws (not included). Tighten until snug.

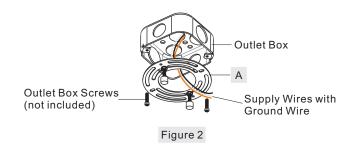

#### STEP 3 - Test Fitting Ceiling Canopy to Crossbar Assembly

A. Remove mounting balls from the Crossbar Assembly (A). Fit the Ceiling Canopy (D) to the Crossbar Assembly (A) and secure with mounting balls. Note: The Ceiling Canopy (D) should be snug against the ceiling and the mounting balls. If not, adjust the length of the nipple on the Crossbar Assembly (A) by unscrewing the preassembled hex nut and lock washer and then screwing the mounting screws in or out of the crossbar until the correct length is achieved. Once the Ceiling Canopy (D) is secure, remove the mounting ball and Ceiling Canopy (D) and proceed to Step 4.

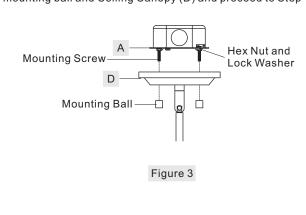

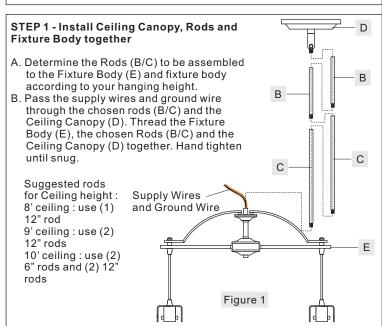


Thank you for purchasing our product.

Need assistance with parts or assembly? Call our customer service or visit us on-line.

### STEP 4 - Wire Connections


A. Use standard wire connectors (not included) to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

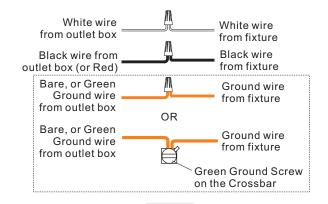

STEP 5 - Install the Fixture

A. Carefully tuck all wires into the outlet box and position the Ceiling Canopy (D) over the outlet box. Align the holes in the ceiling canopy with the mounting screws, then attach the Ceiling Canopy (D) using the previously removed mounting balls. Hand tighten until snug.

Figure 4

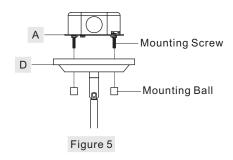



#### STEP 6 - Install Bulbs and Shades

A. Insert bulbs onto sockets and screw snugly into place.

B. Place the Shade (G) over the socket. Pass Lock Screws (F) through the holes on the holder and the neck of the Shade (G). Thread Lock Screws (F) into the mounting holes on the side of the socket cup. Hand tighten until snug to secure the Shade (G).

Your fixture is now assembled and ready to use. Enjoy!

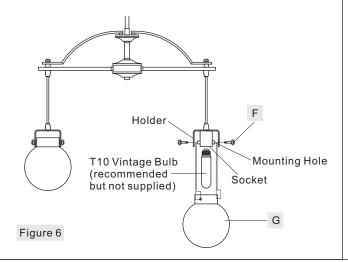

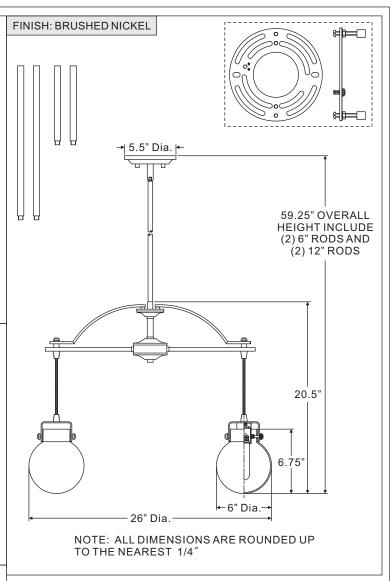

Thank you for purchasing our product.

Need assistance with parts or assembly? Call our customer service or visit us on-line.