


# OWNER'S MANUAL

## XFB/XSF Low Profile Bed

SKU#: SFAB200ETXL  
SFAB200EQ  
SFAB200EK

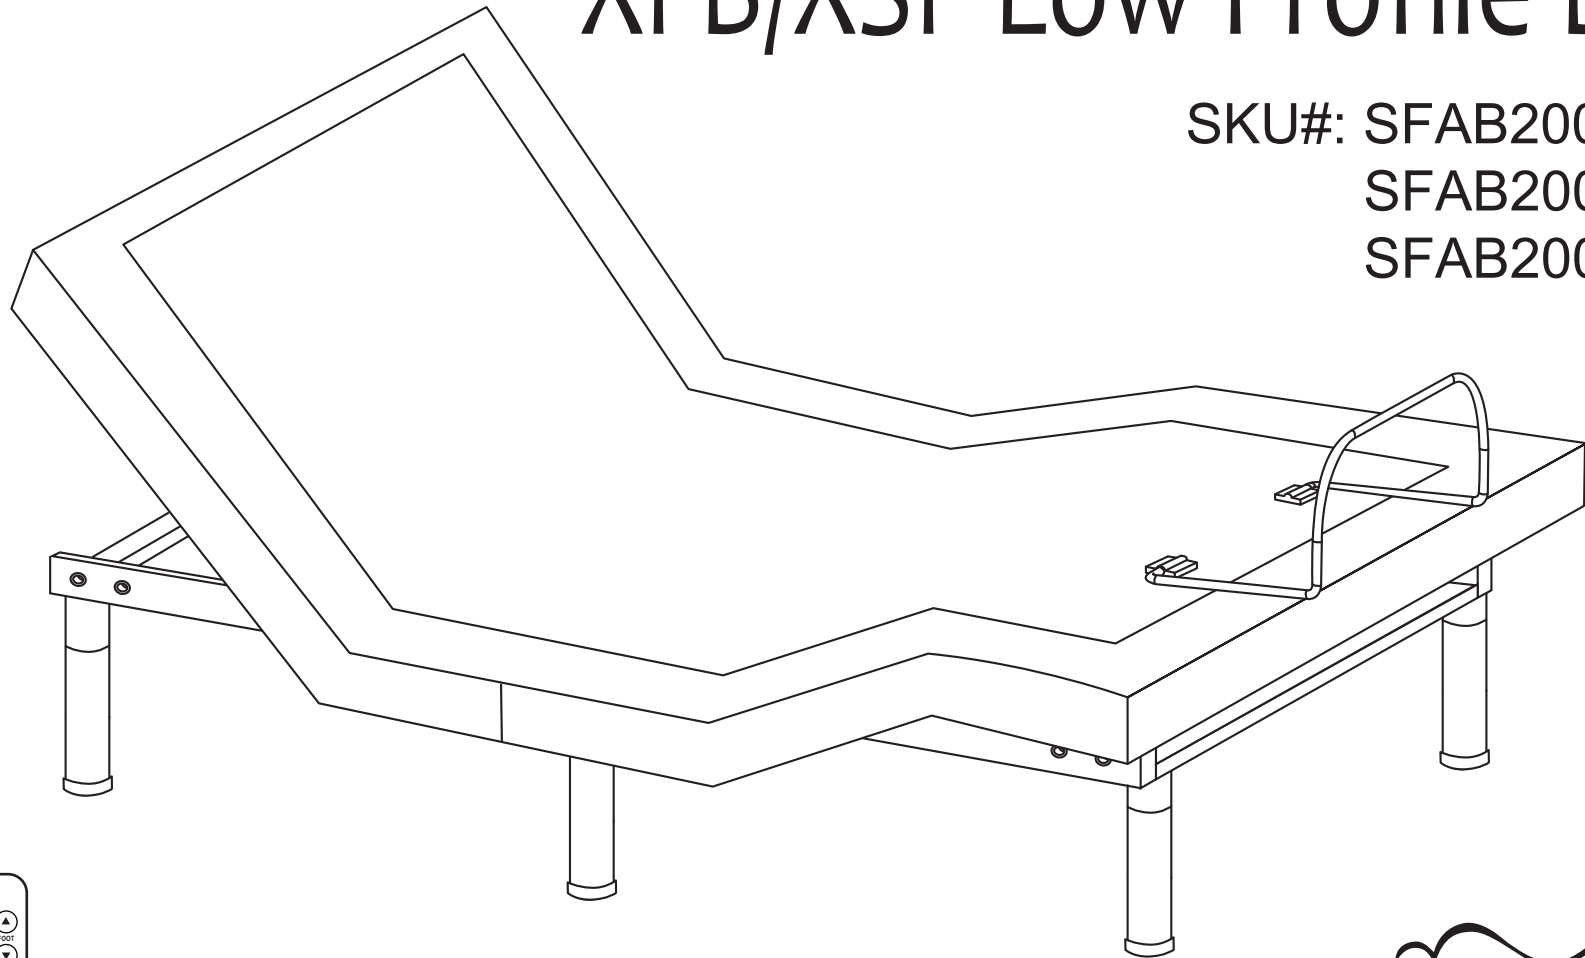


  
**MotoSleep**<sup>®</sup>  
Power Foundations

LPB11NM Rev 1.0 06/2021

## Setup the power foundation without the bed frame.

1

Open the box lid.

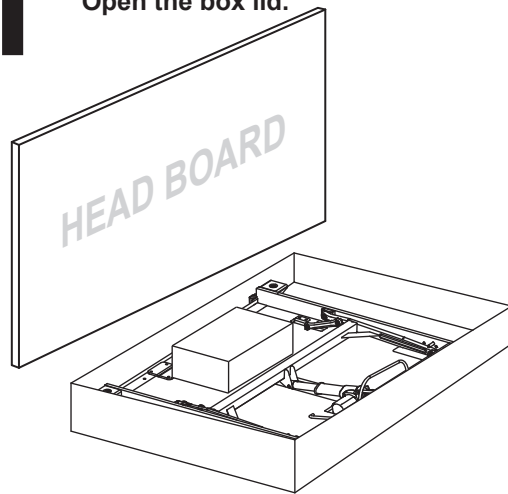

2


Take out all the accessories from the packaging and put them aside. All electronics and components that need to be installed are located in boxes under the foundation or attached to the frame. Before discarding the packing materials, ensure that all the parts are accounted for.

Mattress Retainer Bar



x1(2 for K/CK)

Accessories Box



x1

### ACCESSORIES BOX:

Adjustable Legs




x6

Remote Control




x1

Power Supply with Battery Backup Box

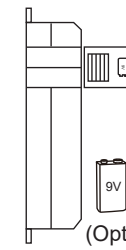

x1

AC Power Cord




x1

AAA Batteries



x3

Sync Cord  
(TXL/T/CKS Only)




x1


# 3

Remove the red plastic safety lock before unfolding your power foundation.


Remove the red plastic safety clip.

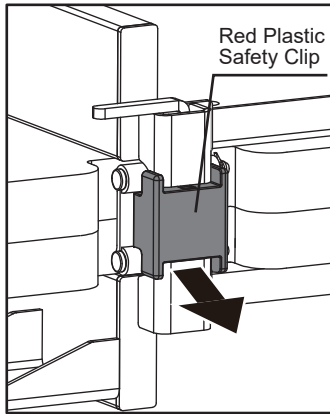

Turn the locking pin 90° in counter clockwise direction.

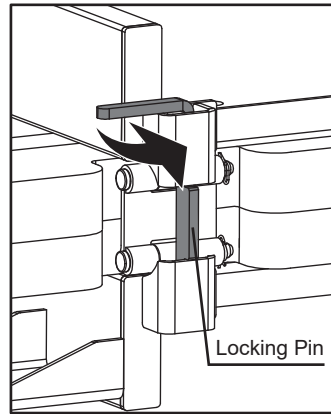


Remove the folding locking pin by pulling upwards.

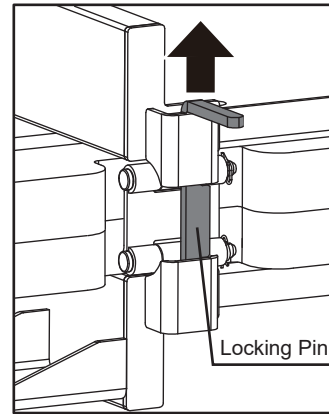


# 4

Install 4 legs, make sure the legs are tight.

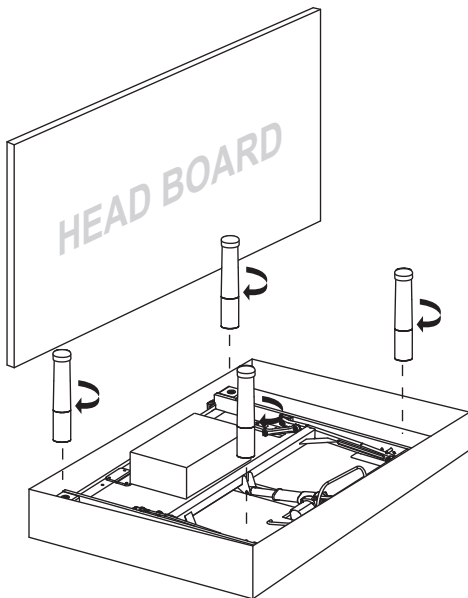


# 5

Remove the bed from the box with a flipping motion, let the bed stand on the 4 legs.

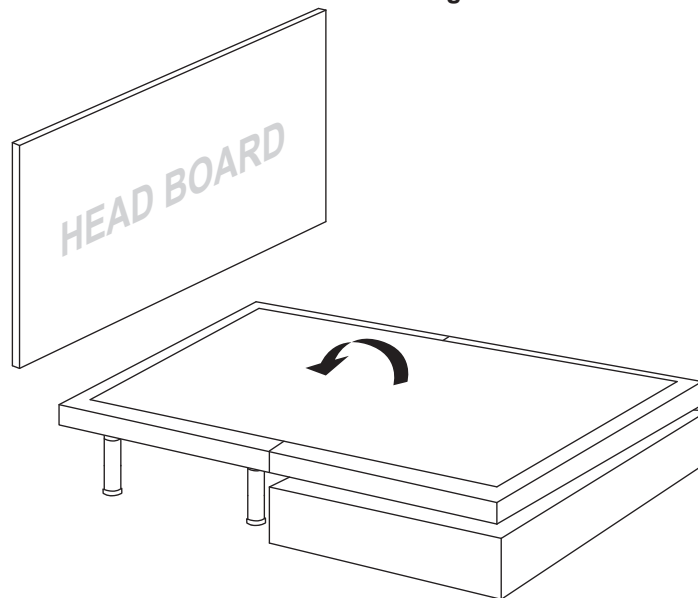


# 6

Flip the foot end of the bed from the box and lay it on top of the end at the headboard.

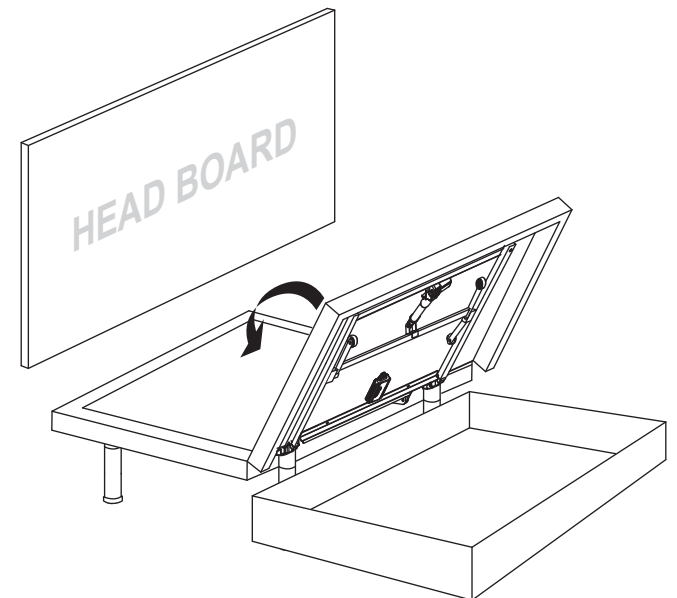


# 7

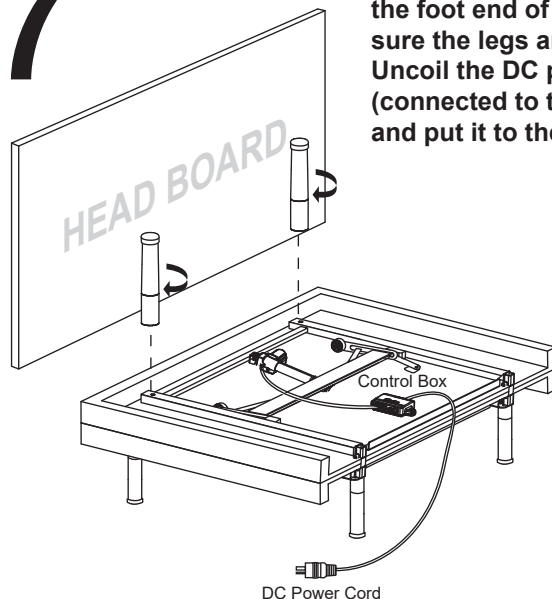

Install the remaining 2 legs on the foot end of the bed, make sure the legs are tight. Uncoil the DC power cord (connected to the control box) and put it to the side of the bed.


# 8

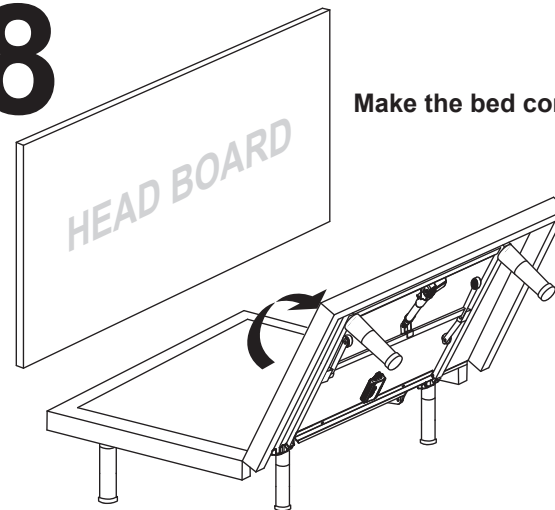

Make the bed completely flat.

# 9


Install the mattress retainer bar one side after another.

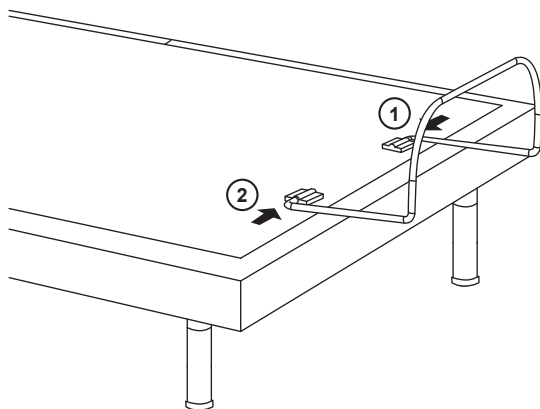

# 10

Uncoil the AC power cord, connect the DC power cord to the power supply and then connect the power supply to the AC power source.

AC Power Source

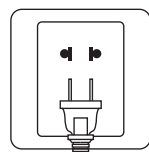

AC Power Cord



Power Supply

DC Power Cord

Insert the batteries into the remote control.




+




# DONE!

## Setup the power foundation with the bed frame and slat base.


- 1** Take the bed out of the box, put it on the slat base, do not install any legs. Uncoil the DC power cord (connected to the control box), pull the DC power cord towards the direction of the AC power source through either the bottom or the side of the bed frame.

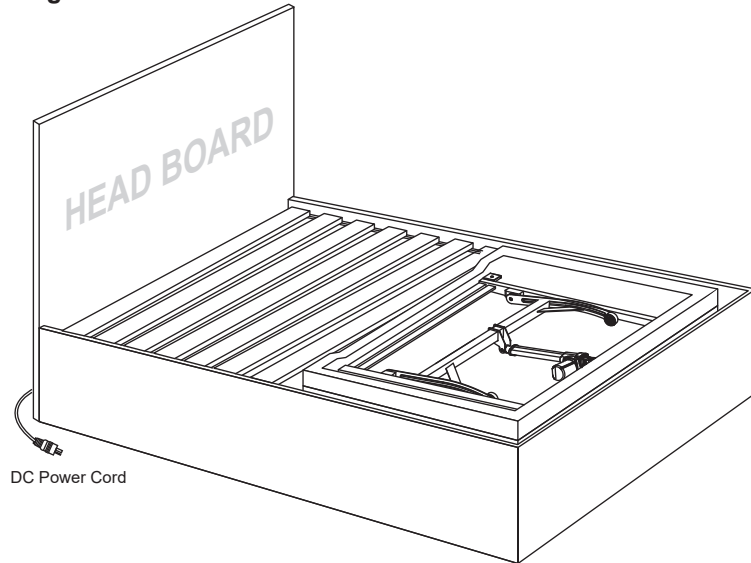

- 2** Make the bed completely flat with a flipping motion.

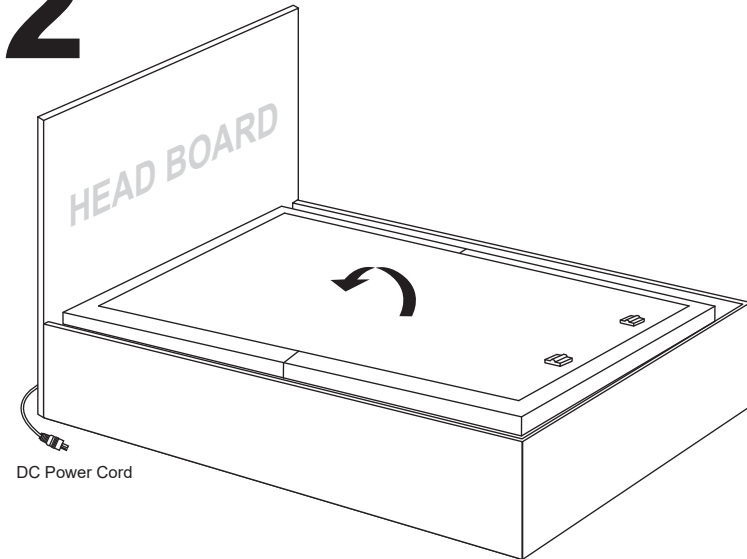


- 3** Install the mattress retainer bar one side after another.


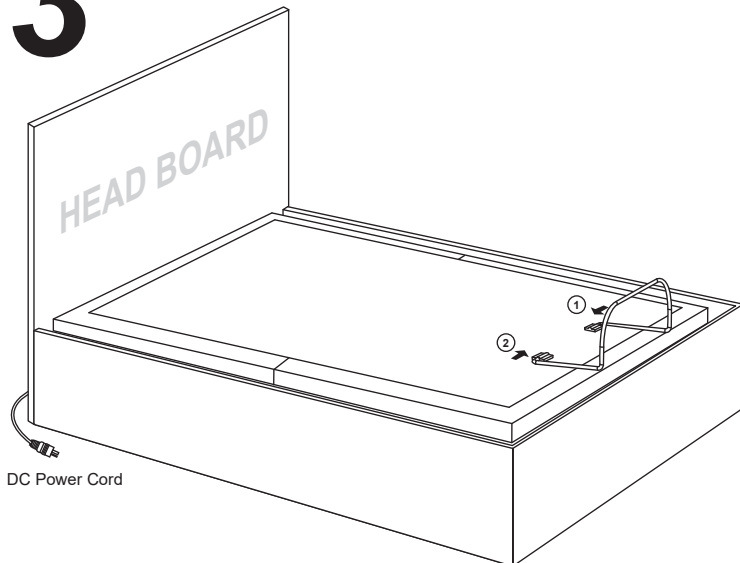


- 4** Uncoil the AC power cord, connect the DC power cord to the power supply and then connect the power supply to the AC power source.


AC Power Source

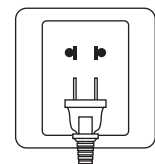


AC Power Cord

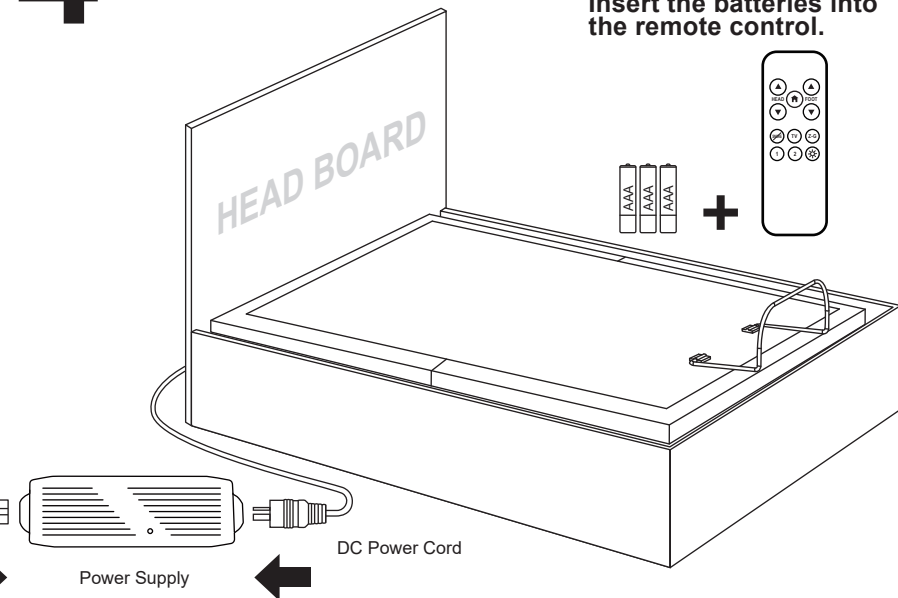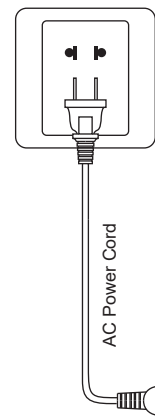

Insert the batteries into the remote control.




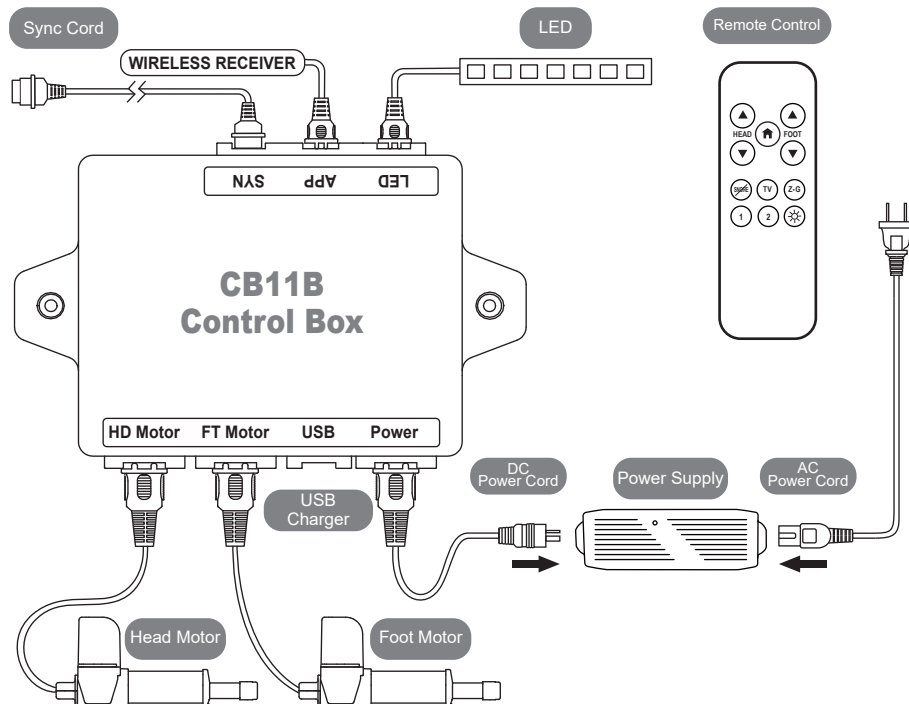

If simultaneous operation of two foundations is desired, please follow the steps listed below.

Sync cable is not required if both adjustable bases are equipped with V2.0 or newer remote controls. If the bases are equipped with V2.0 remote controls, follow the “Wireless Syncing Instruction”.


Model No.:\*\*\*\*\*  
\*\*\*\*\* V2.0

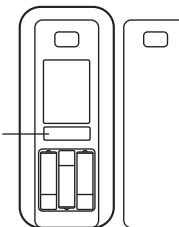

If the adjustable bases are not equipped with V2.0 or newer remote controls, follow the “Synchronizing Two Foundation with Sync Cord” instruction.


## Wireless Syncing Instruction

- STEP 1: Make sure both remotes are individually paired to the foundation. If the remote is not paired with the foundation, follow the pairing instructions.
- STEP 2: Make sure both foundations are at home (flat position).
- STEP 3: Press and hold **HEAD** (▲) and (●) on both remotes at the same time for 5 seconds, or/until the blue **BACK LIGHTS FLASH**.

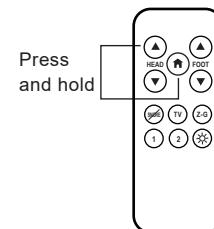


## UN-SYNC Two Foundations

Press and hold **HEAD** (▲) and **HEAD** (▼) on both remotes at the same time for 5 seconds, or/until the blue **BACK LIGHTS FLASH**.

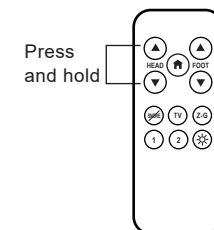


## Synchronizing Two Foundations with Sync Cord

- STEP 1: Unplug foundations from the power source.
- STEP 2: Connect the male ends of the sync cord to the female sync plugs of the control boxes (Refer to below illustration).
- STEP 3: Plug foundations back into the power source.
- STEP 4: Check to ensure all cords are securely attached. Either remote will operate both foundations simultaneously.

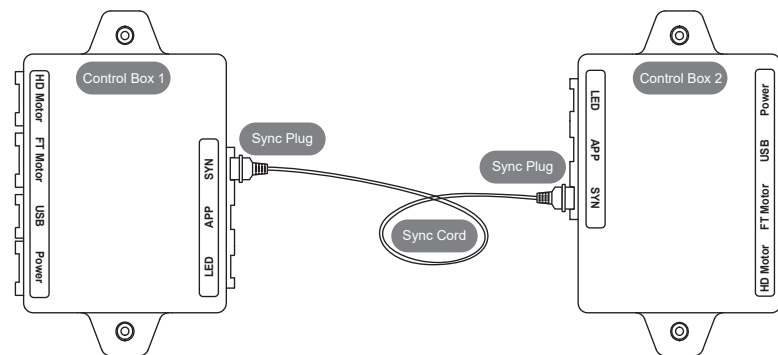

## Remote Control Instructions

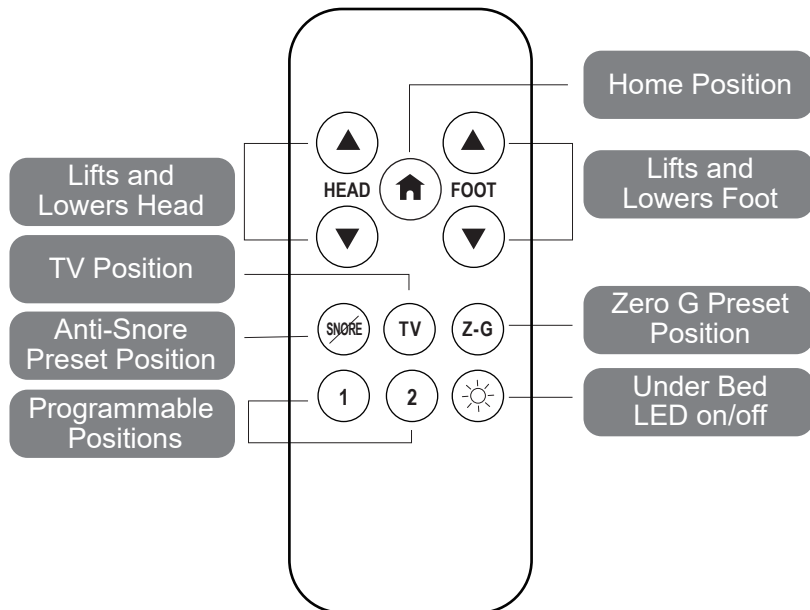

### ADJUST

- ▲ This button lifts the Head/Foot section of the foundation.
- ▼ This button lowers the Head/Foot section of the foundation.

### UNDERNEATH LED LIGHTING


- ☀ One touch underneath **LED** lighting on/off.

### ONE TOUCH BUTTON

- 🏠 One touch flat position.
- 🚫 One touch **ANTI-SNORE** preset position.
- TV One touch **TV** preset position.
- ☀ One touch **ZERO G** preset position. **ZERO G** adjusts your legs to a higher level than your heart, helping to relieve pressure of the lower back and promote circulation.
- 1 One touch programmable positions.
- 2

## Pairing Remote

The original remote that comes in the box is already paired to the foundation. No further action is required. In the event when the remote is not paired with the foundation, follow the pairing instructions below.

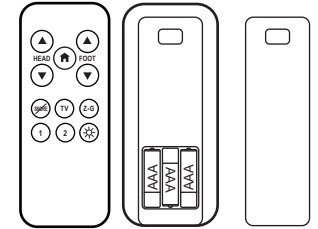

- STEP 1: Make sure the batteries are good. Replace them when needed.
- STEP 2: Unplug the power cord from the power source. If 9V backup batteries were installed in the power supply, remove them.
- STEP 3: Press and hold **HEAD** and **LED** simultaneously until the blue backlights of the remote control are off.
- STEP 4: Plug the power cord back into the power source. You will hear an activation sound in 2 seconds, indicating the remote is paired to the power foundation.

## Setting Programmable Position

- STEP 1: Adjust the head and foot to your desired position.
- STEP 2: Press and hold the **LED** on/off button first, then press and hold one of the picture programmable buttons (1) (2) for 5 seconds until you hear a beep sound. The position is then saved.
- STEP 3: To adjust a saved position, repeat step 1 and 2 and the new position will be saved.

## MotoSleep Mobile APP (Optional)

### General Information

MotoSleep Mobile APP is a mobile application to control the MotoSleep Power Foundation with mobile devices. The application is available for both iOS and Android based smart devices.

The MotoSleep Mobile APP uses the latest technology to communicate with your MotoSleep Power Foundation. Make sure your mobile devices has the pairing function for the APP to work correctly.

### Install the MotoSleep APP

#### IOS






- Open APP Store on your IOS device
- Tap the Magnify Glass Icon and search with the keyword **MOTOSLEEP**
- Tap on **GET** and **INSTALL** to install the APP
- Wait for the download/installation to be complete

#### Android



- Open [www.motosleep.com](http://www.motosleep.com) from your browser.
- Scroll down to the bottom of the page and press download.
- In the download page, tap the download button to download the app.
- Open the download file and install the app.

### The Built-in Owner's Manual at your fingertip

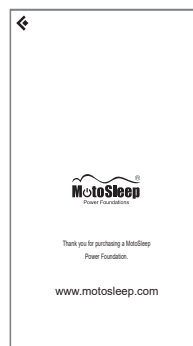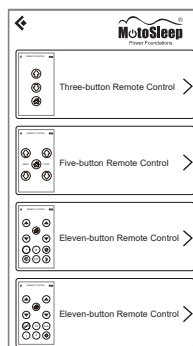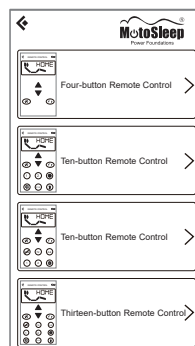

### Device Pairing


Before you start. Switch on the pairing function on your mobile device. Make sure your MotoSleep Power Foundation is correctly connected and is power-on.

The MotoSleep APP will automatically pair your MotoSleep Power Foundation once you start the APP and does not require additional settings.

### MotoSleep APP Home Screen



Home Screen

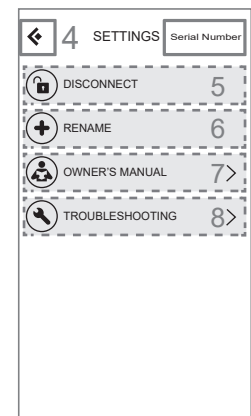


Settings Page

| Home Screen   |                                                               |
|---------------|---------------------------------------------------------------|
| 1             | List of MotoSleep Products within the connection range*       |
| 2             | Tap the Refresh Button to refresh the MotoSleep Products List |
| 3             | Enter the Settings Page                                       |
| Settings Page |                                                               |
| 4             | Back to the Home Screen                                       |
| 5             | Disconnect from the paired MotoSleep Product                  |
| 6             | Rename your MotoSleep Power Foundation of your choice         |
| 7             | Owner's Manual Page                                           |
| 8             | Troubleshooting                                               |
| 9             | Serial Number of the control box                              |

\* The effective connection range is  $\pm 10m$


### MotoSleep APP Remote Control

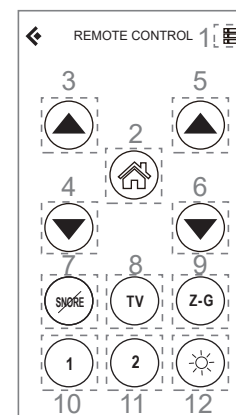

| Remote Control |                            |
|----------------|----------------------------|
| 1              | Enter the Settings Page    |
| 2              | One touch flat Position    |
| 3              | Head Lifting function      |
| 4              | Head Lowering function     |
| 5              | Foot Lifting function      |
| 6              | Foot Lowering function     |
| 7              | Anti-Snore Preset Position |
| 8              | TV Position                |
| 9              | Zero G Preset Position     |
| 10             | Programmable Position 1    |
| 11             | Programmable Position 2    |
| 12             | Under Bed Lighting         |

\* Remote interface varies in between different MotoSleep Power Foundation models. If you wish to disconnect from the current paired Power Foundation, Enter the settings page and tap the Disconnect button.

## Slat Pack Installation Guide(Optional)

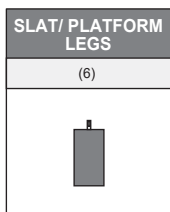


| Leg Configuration Table |      |     |       |       |
|-------------------------|------|-----|-------|-------|
| Leg Configuration       |      |     |       |       |
| Bed Adjustable Height   | 7.3" | 11" | 14.7" | 19.7" |

Support leg may be needed on some slat/platform bed frames, refer to the leg configuration table for height adjustment.

\* Make sure the adjustable legs are properly tight, and the plastic caps have been placed at the bottom of the legs. Incorrect installation might cause the part to fail or damage the floor.

| STABILIZER BRACKETS COMPONENTS |                     |                 |             |                   |
|--------------------------------|---------------------|-----------------|-------------|-------------------|
| (4) Stabilizer Brackets        | (8) Screws ST4.2×16 | (8) Bolts M8*16 | (8) Washers | (1) Socket Wrench |
|                                |                     |                 |             |                   |

Stabilizer Brackets are optional and not included. They can fix the bed onto the slat base. A phillips screwdriver and socket wrench are required to complete the installation.

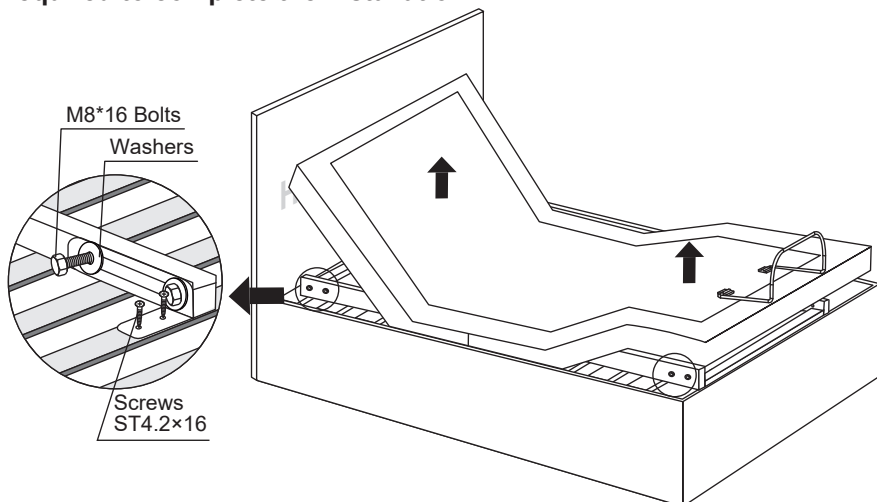

Lift the head and foot end of the bed by remote control. Install four stabilizer brackets as shown. Use a phillips screwdriver and socket wrench to tighten the screws and bolts.

## Headboard Bracket Installation Guide(Optional)


Headboard brackets are optional and not included. A 1/2" (13 mm) socket and 1/2" (13 mm) wrench are required to complete the installation.

| HEADBOARD BRACKET COMPONENTS           |                |           |          |             |
|----------------------------------------|----------------|-----------|----------|-------------|
| (2) Headboard Brackets                 | (2) T-Brackets | (8) M8*16 | (4) Nuts | (4) Washers |
|                                        |                |           |          |             |
| OPTIONAL EQUIPMENT/PART (NOT INCLUDED) |                |           |          |             |
| <br>Socket and Wrench 1/2" (13mm)      |                |           |          |             |

### STEP 1


a)Align the slot hole of the headboard bracket to the sleeve into which the leg threads. **DO NOT OVERTIGHTEN.** Too much force may damage the thread.

b)The headboard bracket has 2 adjustable slots to accommodate any frame type. Use the bolts and washers to secure the bracket. Make sure the bolts are tight.

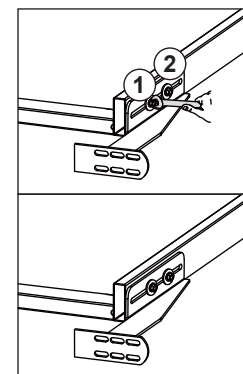

### STEP 2

a)To put the T-Bracket and Headboard Bracket together, you will need (2) M8×16 bolts and (2) nuts. Slip the bolts through the holes from T-Bracket to Headboard Bracket with the head of bolt facing outward. Use the 1/2" (13 mm) socket and 1/2" (13mm) wrench to tighten the bolts.

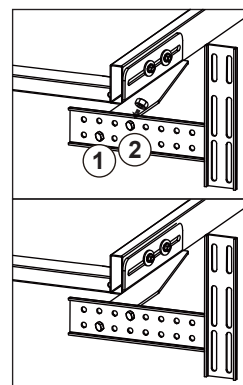


### STEP 3








You may now connect your headboard to the attachment plates using the remaining short bolts and nuts to secure it to the brackets. The heads of the bolts will face outward. Use a 1/2" (13mm) socket and 1/2" (13mm) wrench to tighten the bolts.


## Spacing Connector for TXL/T/CKS (Optional)

Install two spacing connectors to ensure the gap between the two adjustable bases is consistent.

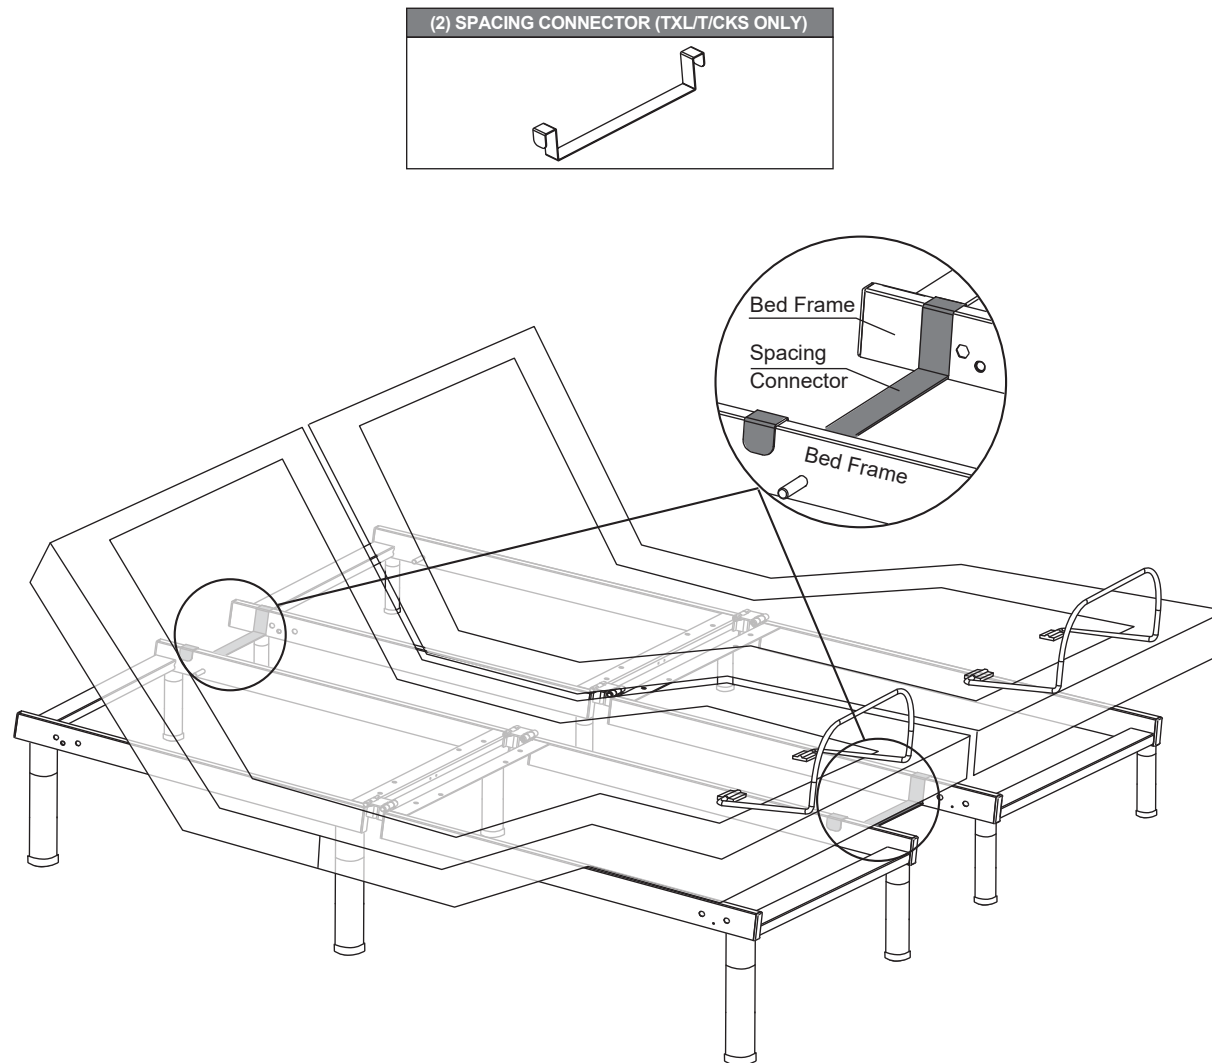

Lift the head and foot end of the bed by remote control. Install the spacing connector as shown.

| TOOLS REQUIRED: NO TOOLS REQUIRED |               |                                                                                     |                        |           |
|-----------------------------------|---------------|-------------------------------------------------------------------------------------|------------------------|-----------|
| PART LIST                         |               |                                                                                     |                        |           |
| NO                                | Description   | Sketch                                                                              | Quantity               | Remark    |
| A                                 | PSFAB200EFM   |    | 1                      |           |
| B                                 | PSFAB200EHM   |    | 1                      |           |
| C                                 | PSFAB200EUP   |    | 1 for TXL<br>2 for Q/K |           |
| D                                 | PSFAB200EUSBB |    | 1                      | For TXL   |
| E                                 | PSFAB200EUSB  |    | 1                      | For Q/K   |
| F                                 | PSFAB200EUCS  |    | 1 for TXL<br>2 for Q/K |           |
| G                                 | PSFAB200ECB   |    | 1                      |           |
| H                                 | PSFAB200EPL   |   | 1                      |           |
| I                                 | PSFAB200EPBB  |  | 1                      | For TXL/Q |
| J                                 | PSFAB200EPBF  |  | 1                      | For K     |
| K                                 | PSFAB200ER    |  | 1                      |           |

| TOOLS REQUIRED: NO TOOLS REQUIRED |               |                                                                                     |          |         |
|-----------------------------------|---------------|-------------------------------------------------------------------------------------|----------|---------|
| PART LIST                         |               |                                                                                     |          |         |
| NO                                | Description   | Sketch                                                                              | Quantity | Remark  |
| L                                 | PSFAB200ELTXL |  | 1        | For TXL |
| M                                 | PSFAB200ELQ   |                                                                                     | 1        | For Q   |
| N                                 | PSFAB200ELK   |                                                                                     | 1        | For K   |

PRODUCT PROTECTED BY FOLLOWING PATENT:  
— US PATENT: 10, 306, 994

**Customer Service Toll Free:1-844-696-6886**