

INSTALLATION INSTRUCTION

LED Vanity & Wall Sconce

WARNING

IMPORTANT: NEVER attempt any work without shutting off the electricity.

- Read all instructions before installing.
- System is intended for installation by a qualified electrician in accordance with the National Electrical Code and local regulations.
- Go to the main fuse box, or circuit breaker. Place the main power switch in the "OFF" position and unscrew the fuse(s) or switch "OFF" the circuit breaker switch(es) that control the power to the fixture or room that you are working on.
- Place the wall switch in the "OFF" position.

CAUTION

- All parts must be used as indicated in these instructions. Do not substitute any parts, leave parts out, or use any parts that are worn out or broken. Failure to follow this instruction could invalidate the ETL/CETL listing of this fixture.
- CAUTION When handling the fixture, do not apply pressure to the LEDs. Hold the fixture by the base only.

AVERTISSEMENT

IMPORTANT : Coupez l'électricité avant TOUTE manipulation.

- Lisez toutes les instructions avant d'installer.
- Système est destiné à être installé par un électricien qualifié en conformité avec le code national de l'électricité et les règlements locaux.
- Accédez au panneau central de disjoncteurs ou de fusibles de votre demeure et placez l'interrupteur principal en position d'arrêt (« OFF »).
- Placez l'interrupteur mural en position d'arrêt (« OFF »).

MISE EN GARDE

- Toutes les pièces doivent être utilisées tel qu'il est indiqué dans ces instructions. Ne remplacez pas les pièces, n'en laissez pas de côté et ne les utilisez pas si elles sont usées ou brisées. Le non-respect de ces instructions peut annuler l'homologation ETL/CETL du luminaire. MISE EN GARDE Ors de la manipulation de l'appareil, ne pas appliquer de pression à la LED, tenir l'appareil par la seule base.

ADVERTENCIA





IMPORTANTE: NUNCA intente hacer trabajos sin desconectar el suministro eléctrico.

- Lea y comprenda todas las instrucciones e ilustraciones por completo antes de proceder con el ensamblaje e instalación de esta lámpara.
- Sistema está diseñado para ser instalado por un electricista calificado, de acuerdo con el código eléctrico nacional y las normas locales.
- Diríjase a la caja de fusibles o a la caja del interruptor de circuito principal en su hogar. Coloque el interruptor de alimentación principal en la posición "OFF" (APAGADO).
- Coloque el interruptor de la pared en la posición "OFF" (APAGADO).

PRECAUCIÓN

- Todas las piezas deben usarse como lo indican estas instrucciones. No reemplace las piezas, no omita piezas durante la instalación ni utilice piezas gastadas o rotas. El incumplimiento de esta indicación podría invalidar la calificación ETL/CETL esta lámpara. PRECAUCIÓN Al manipular el aparato, no aplique presión a los LED, mantenga el aparato en la base sólo.

HARDWARE

A1	B1	C1	D1	E1	F1	G1	H1	I1
								
Wire Connector Qty: 5 pcs +1 Extra 7EAC112201	Driver Qty: 1 pc 4LD-700MA 28U-IS-P	Assembly Screw Qty: 1 Extra 7MPF0308S1 1/8"-40x3/8 Nickel Plating	Junction Box Screw Qty: 2 pcs +1 Extra 7MPF0415C2 #8-32x5/8 SS	Wood Screw Qty: 2 pcs +1 Extra 7MPF2204J2 Ø4x22	Plastic Anchor Qty: 2 pcs +1 Extra 7TDD082401	Mounting Screw Qty: 2 pcs +1 Extra 7MPF0808C1 #8-32x5/16	Mounting Ring Qty: 1 pc 7MBC101501	Conversion Plate Qty: 1 pc 4MBA151110BA

INSTALLATION INSTRUCTION

LED Vanity & Wall Sconce

FIG. 1 MOUNT ON SWITCH


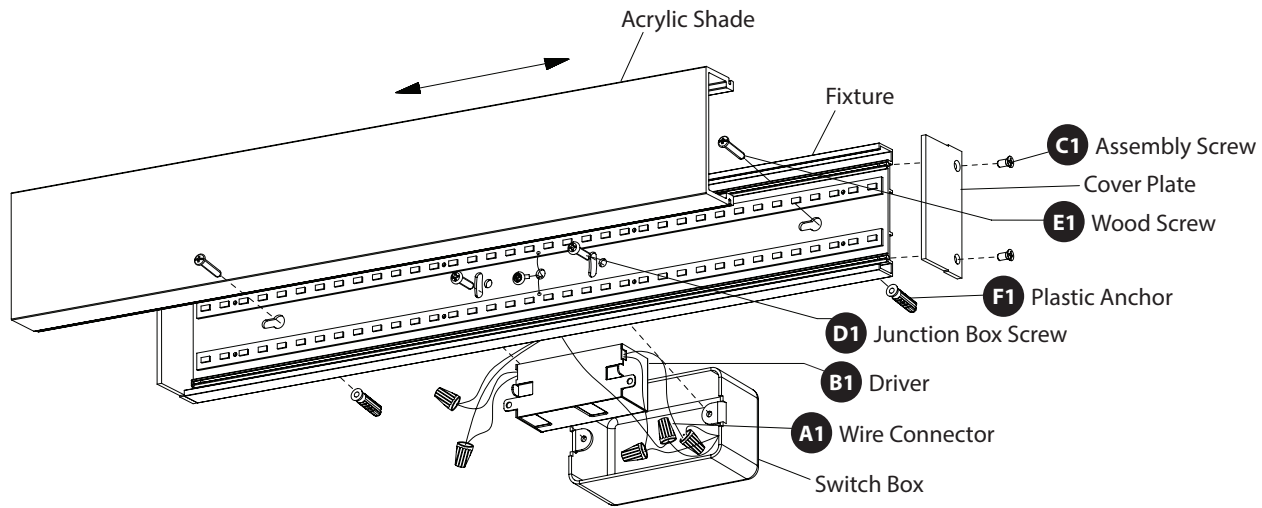


FIG. 2 MOUNT ON JUNCTION BOX

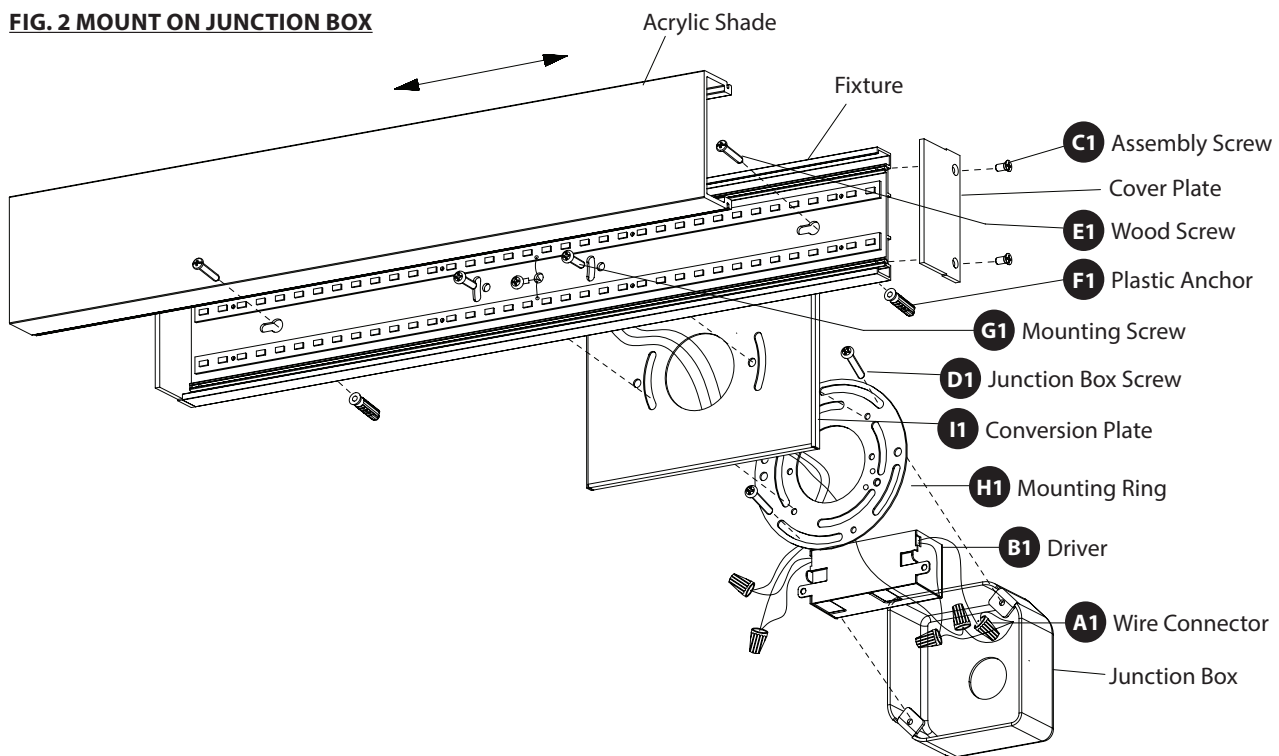

INSTALLATION INSTRUCTION

LED Vanity & Wall Sconce

PREPARATION

1. Shut off the power at the circuit breaker and remove existing fixture, including the crossbar.
2. Carefully unpack your new fixture and lay out all the parts on a clear area. Be careful not to lose any small parts necessary for installation.

INSTALLATION

MOUNT ON SWITCH BOX (Fig. 1)

3. Remove the assembly screws (C1) and one of the cover plates from the fixture, take down the acrylic shade.
4. Drill holes in the wall aligned with the key holes located in the fixture back plate, insert the plastic anchors (F1).
5. Connect the driver (B1) input wires to switch wires, output wire to fixture wire as shown in **Fig. 3**, making sure that all wire connectors (A1) are secured. If your outlet box has a green or bare copper ground wire, connect the fixture's ground wire to it. Otherwise, connect the fixture's ground wire directly to the back plate using the green screw provided. After wires are connected, tuck them carefully inside the switch box.

***Requires Driver to be recessed within the junction box**

6. Secure the fixture back plate to the switch box using the junction box screws (D1), fasten it to the wall using wood screws (E1). The side of the mounting plate marked "GND" must face out.
7. Insert the acrylic shade into the fixture; secure it with cover plate using assembly screws (C1).

OR


MOUNT ON JUNCTION BOX (Fig. 2)

3. Remove the assembly screws (C1) and one of the cover plates from the fixture, take down the acrylic shade.
4. Connect the driver (B1) input wires to switch wires as shown in **Fig. 3**, making sure that all wire connectors (A1) are secured. If your outlet box has a green or bare copper ground wire, connect the fixture's ground wire to it. Otherwise, connect the fixture's ground wire directly to the back plate using the green screw provided. After wires are connected, tuck them carefully inside the switch box.


***Requires Driver to be recessed within the junction box**

5. Secure the mounting ring to the junction box using the junction box screws (D1). Make sure the two holes (Spacing 2-3/4") are horizontal as shown in **Fig. 2**. The side of the mounting plate marked "GND" must face out.
6. Drill holes in the wall aligned with the key hole located in the fixture back plate, insert the plastic anchors (F1).
7. Connect the driver (B1) output wire to the fixture wire as shown in **Fig. 3**, making sure that all wire connectors (A1) are secured. After wires are connected, tuck them carefully inside the junction box.
8. Secure the fixture back plate and conversion plate (I1) to the mounting ring with mounting screws (G1), secure the fixture back plate to the wall using wood screws (E1).
9. Insert the acrylic shade into the fixture; secure it with cover plate using assembly screws (C1).

Fig. 3 Wiring

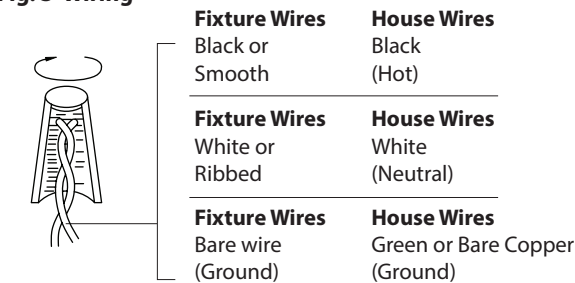

Mounting Ring Dimensions

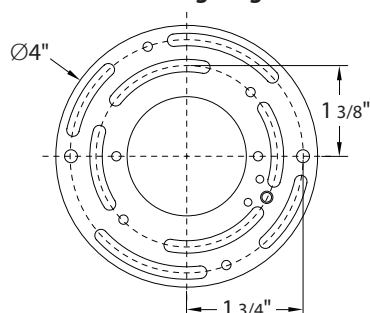

Back Plate Dimensions

