


Assembly Instructions


Caution: You must read this before you proceed


DINING CHAIR

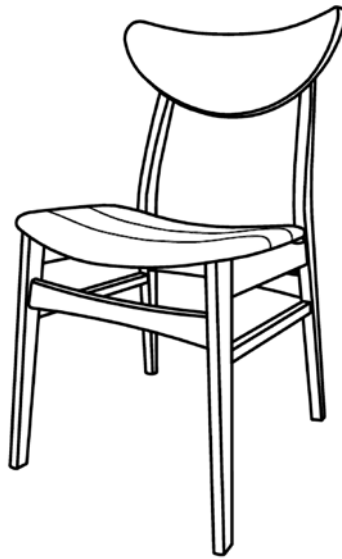



WARNING: These chairs are intended only for normal use with all four chair legs on the ground. These consumer chairs have relatively thin legs and are not designed to be sat in with only two chair legs on the ground (as from tipping back, forward, or to the side), and such can cause stress and failure of one or more chair legs. Any misuse of the chair voids any warranties, express or implied.


Part List

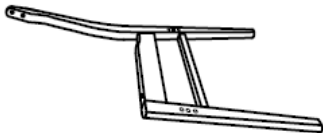Label	Picture	Description	QTY
A		Left Side Frame	1

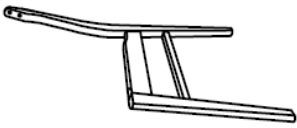B		Right Side Frame	1
C		Front Stretcher	1
D		Back Stretcher	1
E		Top Rest	1
F		Cushion Seat	1


Hardware

Label	Picture	Description	QTY
①		JCBC M6 x 25mm + S/W M6 + F/W M6 x 13mm	5
②		JCBC M6 x 45mm + S/W M6 + F/W M6 x 13mm	5
③		Allen Key M4	1
④		L Bracket	5
⑤		CSK Screw M3.5 x 12mm	9
⑥		Wood Dowel M8 x 25mm	3

⑦		Screwdriver	Not Provided
---	---	-------------	-----------------

Assembly Preparation

Before Beginning Assembly:

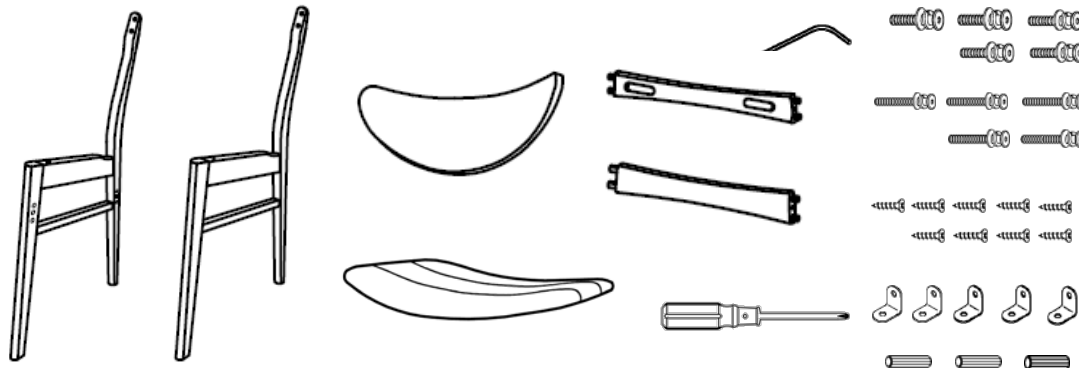

- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-


Assembly Steps

Overview

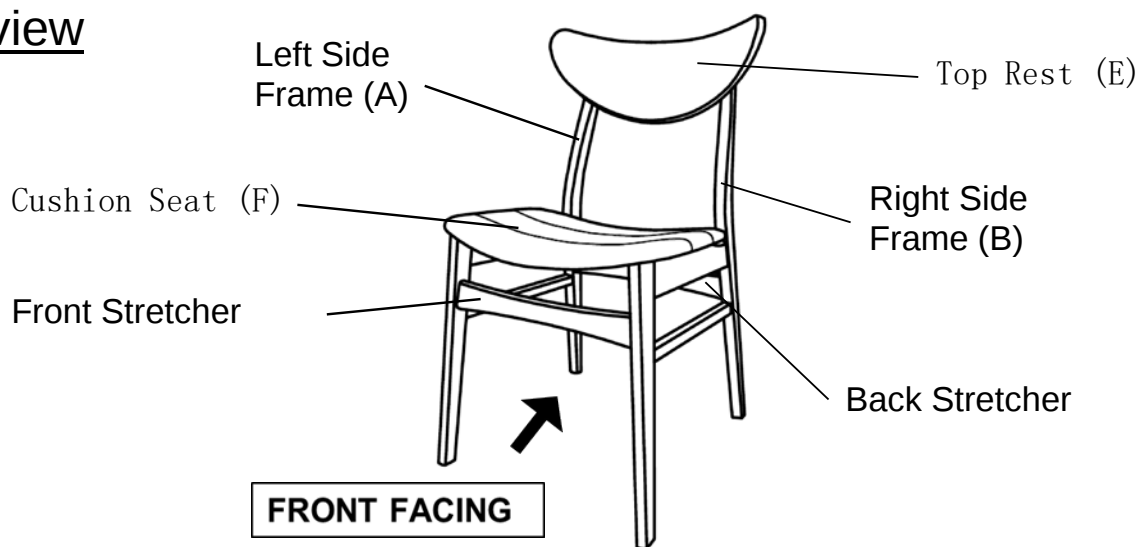


This Dining Chair has multiple parts and may require up to some 30 minutes to assemble. To give you an overview of the Dining Chair parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

Step 1

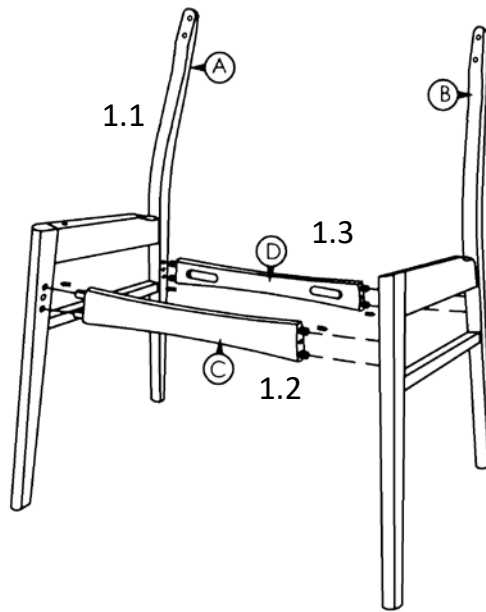

- 1.1 Place the left side frame (A) and right side frame (B) as shown.
1.2 Align the tenon of front stretcher (C) with the mount position of Side Frames.
1.3 Align the tenon of back stretcher (D) with mount position of Side Frames.


Step 2

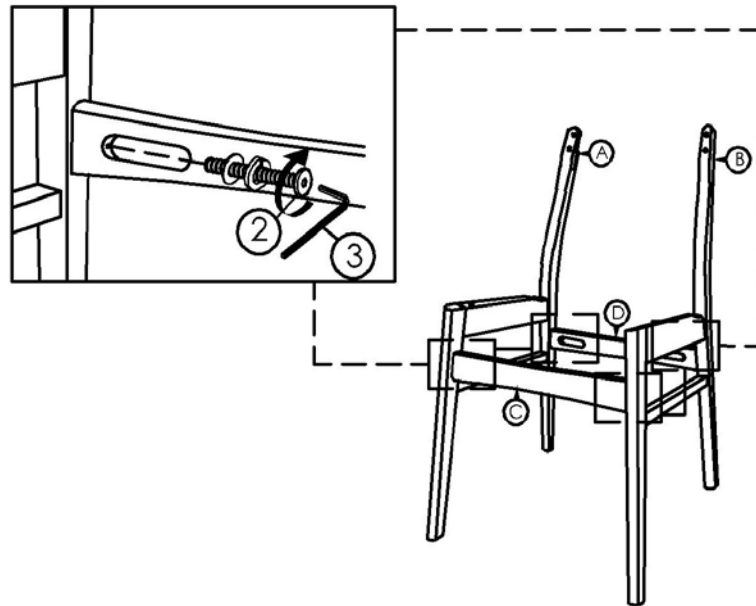

Then, fix the Front Scretcher (C) and Back Scretcher (D) with JCBC Bolt ② + Spring Washer + Flat Washer using Allen Key ③.

DO NOT FULLY TIGHTEN SCREWS.


Step 3

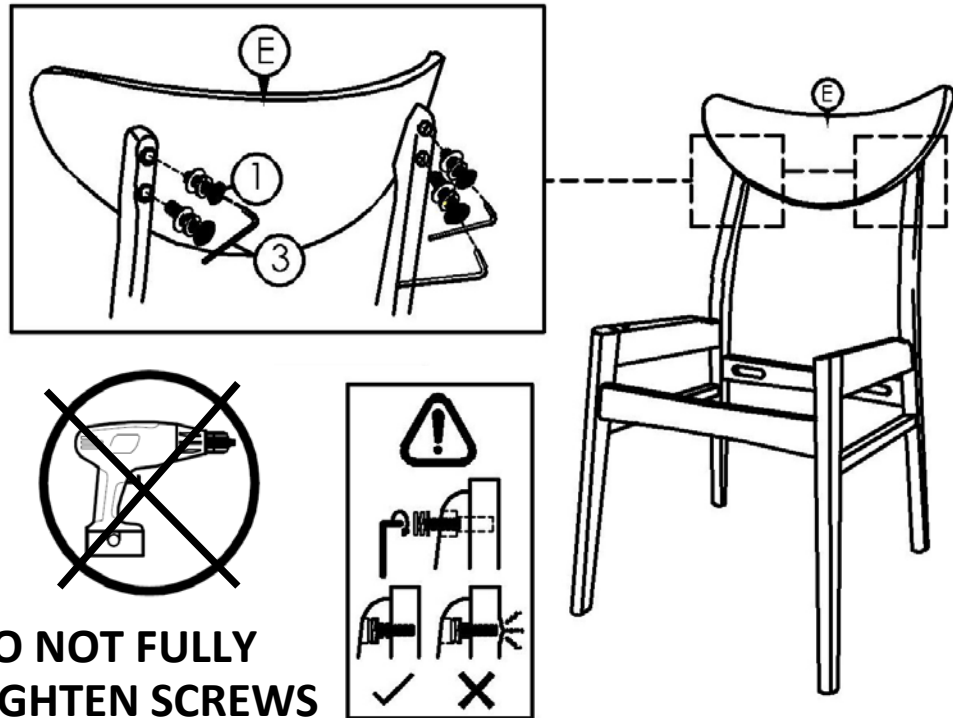

Place the Top Rest (E) on the back frame as shown above.
Then, fix the Top Rest (E) with JCBC Bolt ① + Spring Washer + Flat Washer using Allen Key ③.


DO NOT FULLY TIGHTEN SCREWS.

Step 4

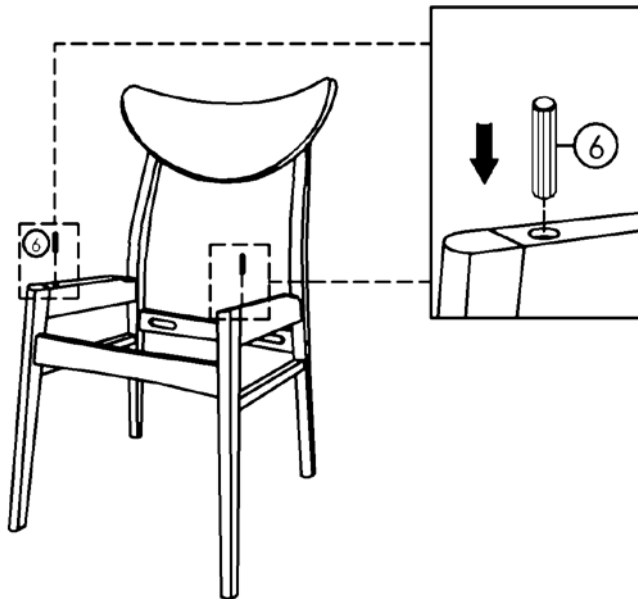

Place Wood Dowel ⑥ on the Side Frame as shown above.

Step 5

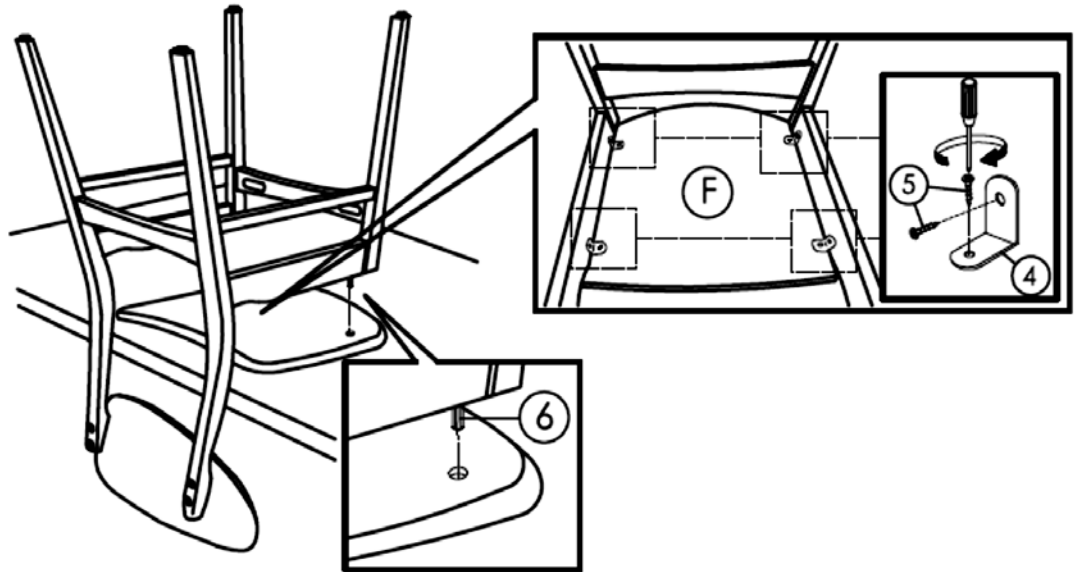


Place **the Cushion Seat (F)** on the table, then put the assembled chair parts in Step 4 to fix the Cushion Seat (F) as shown.

Align the the Wood Dowel ⑥ into the tenon of Cushion Seat (F) as shown above.

Then, fix the Cushion Seat (F) with L-Bracket ④ and Screws ⑤ using Screwdriver (not provided).

DO NOT FULLY TIGHTEN ALL THE BOLT AND SCREWS NOW.

Step 6

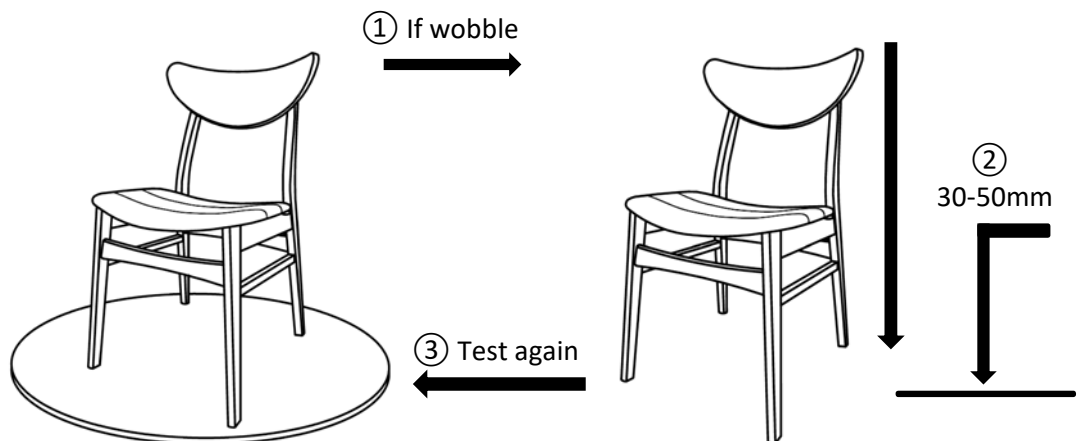

Place the dining chair on a Level Surface to check if it wobbles. loosen the bolts. lift the dining chair some 30mm to 50mm high from the ground, keep your feet and toes well away from the drop zone, and drop the dining chair freely and vertically with the four legs, hitting the ground at the same time. This Drop Test will help to ensure that all the bolts and gaps to all reach full alignment.

Test again for evenness on Level Surface.

If no wobbles are found, proceed to tighten all the Bolts.

Caution: When tightening the Bolts, tighten sequentially.

Do not tighten any screw fully and then towards the next one, this would cause the frame to warp. If it still wobbles, loosen the bolts and execute this same drop test.

If the dining chair is not Stable it could lead to damage to the product.

Step 7



Inspect and make sure all parts are connected.

The dining chair is ready for use.

Caution: This dining chair can only be used on a flat, level surface.

Care & Maintenance

- ✓  • Furniture may scratch floors. We recommend using furniture pads to protect your floors.
 - ⊗  • Do not put hot items directly on furniture surface.
 - ⊗  • Do not clean furniture with harsh cleansers or polish.
 - ⊗  • Do not place furniture under direct sunlight.
 - ⊗  • Do not place furniture near heating or cooling vents.
 - ⊗  • Do not write on furniture without a padded barrier to protect the surface.
 - ⊗  • Do not place furniture outside . For indoor use only.
 - ⊗  • Not for commercial use. For residential use only.
 - ⊗  • Stains may be removed with mild soap solution and damp cloth.
 - ⊗  • Children should not climb or jump on the furniture.
-
- ✓  • Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Questions & Answers about Proposition 65

• What is Proposition 65?

Proposition 65 requires businesses to provide warnings to Californians about significant exposures to chemicals that cause cancer, birth defects or other reproductive harm.

These chemicals can be in the products that Californians purchase, in their homes or workplaces, or that are released into the environment. By requiring that this information be provided, Proposition 65 enables Californians to make informed decisions about their exposures to these chemicals.

Proposition 65 also prohibits California businesses from knowingly discharging significant amounts of listed chemicals into sources of drinking water.

Proposition 65 requires California to publish a list of chemicals known to cause cancer, birth defects or other reproductive harm. This list, which must be updated at least once a year, has grown to include approximately 900 chemicals since it was first published in 1987.

• What types of chemicals are on the Proposition 65 list?

The list contains a wide range of naturally occurring and synthetic chemicals that include additives or ingredients in pesticides, common household products, food, drugs, dyes, or solvents. Listed chemicals may also be used in manufacturing and construction, or they may be byproducts of chemical processes such as motor vehicle exhaust

may be byproducts of chemical processes, such as motor vehicle exhaust.

- What does a warning mean?

If a warning is placed on a product label or posted or distributed at a workplace, a business, or in rental housing, the business issuing the warning is aware or believes that it is exposing individuals to one or more listed chemicals.

By law, a warning must be given for listed chemicals unless the exposure is low enough to pose no significant risk of cancer or is significantly below levels observed to cause birth defects or other reproductive harm.

- Where can I get more information on Proposition 65?

If you have specific questions on the administration or implementation of Proposition 65, you can contact OEHHA's Proposition 65 program at P65.Questions@oehha.ca.gov, or by phone at (916) 445-6900.