

KODA™

BENTHAM OUTDOOR HANGING SINGLE PENDANT LIGHT

Model: LM030520



IMPORTANT INFORMATION.

PLEASE READ CAREFULLY AND RETAIN FOR FUTURE REFERENCE

For assistance with assembly, installation, parts or customer service, please contact us:

info@kodabuilt.com

1-866-294-9244, Monday to Friday, 8am to 5pm Pacific Time

2975 Red Hill Ave., Suite 100, Costa Mesa, CA 92626, USA

Important Safety Instructions:


- Please read the following safety information before use. To reduce risk of fire, electric shock, or injury to persons:
- CAUTION: Turn OFF the main power at the fuse or circuit breaker before installing the light fixture or making any electrical connection. You may use a non-contact voltage tester to ensure no power is running to the wires.
 - CAUTION: Risk of fire. Min. 90° C supply conductors. Consult a qualified electrician to ensure correct branch circuit conductor.
 - WARNING: If any special control devices are used with this fixture, follow instructions carefully to assure full compliance with N.E.C. requirements. If there are any questions, contact a qualified electrical contractor.
 - Make sure this light fixture is adequately grounded. To ensure proper grounding, there must be a separate ground wire (bare copper) contact between this light fixture and the ground connection of your main power supply panel. Do not connect the bare or green insulation fixture ground wire to the black (hot) current-carrying wire or the white (neutral) wire. Connection of the bare or green fixture ground to the black or white wires may cause metal parts of the fixture to carry electrical currents, and may cause electrical shock, which could cause serious injury or death.
 - Do not connect this fixture to an electrical system that does not provide a means for equipment grounding. Never use a fixture in a two-wire system that is not grounded. Installing a fixture into an electrical system not having a proper grounding could cause metal parts of the fixture to carry electrical currents if any of the fixture wires, wire connections, or splices were to become broken, cut, or loose during the mounting or normal operation of the fixture. Under this condition, anyone coming in contact with the fixture would be subject to electrical shock, which could cause serious injury or death.
 - CAUTION: A loose wire increases the risk of fire; tighten all connections securely.
 - Do not suspend any fixtures by the house wires, Suspending a fixture by the house wires and wire connectors may result in the fixture falling, possibly causing personal injury and the danger of electrical shock or fire.
 - The luminaire must be installed by qualified electrician. All electrical connections must be in accordance with all national and local electrical codes.
 - This light fixture is designed for use in 120VAC, 60Hz fuse circuit.
 - CAUTION: All glass is fragile. Use care when handling glass shades and bulbs.

PREPARATION

Carefully remove the lighting fixture, LED bulb and mounting accessories from the box, and check that all parts are included using the contents diagrams below. Do not attempt to assemble the product if any part(s) is missing or damaged. Please contact KODA customer support if missing.

PACKAGE CONTAINS:

Please lay out all parts and read the instructions prior to installation.

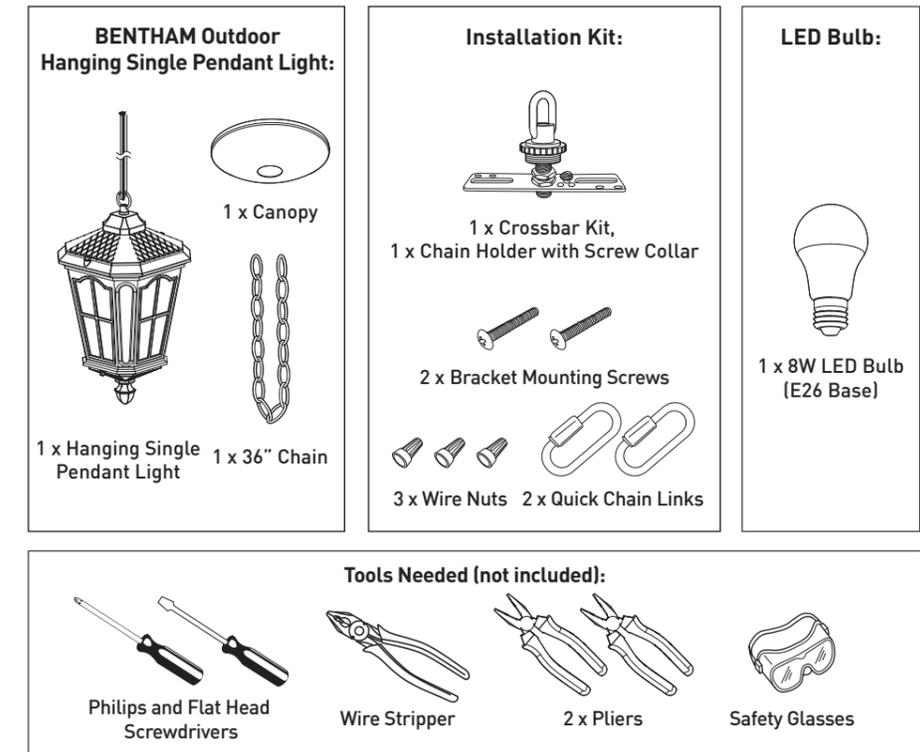


2

3


THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED

INSTALLATION:

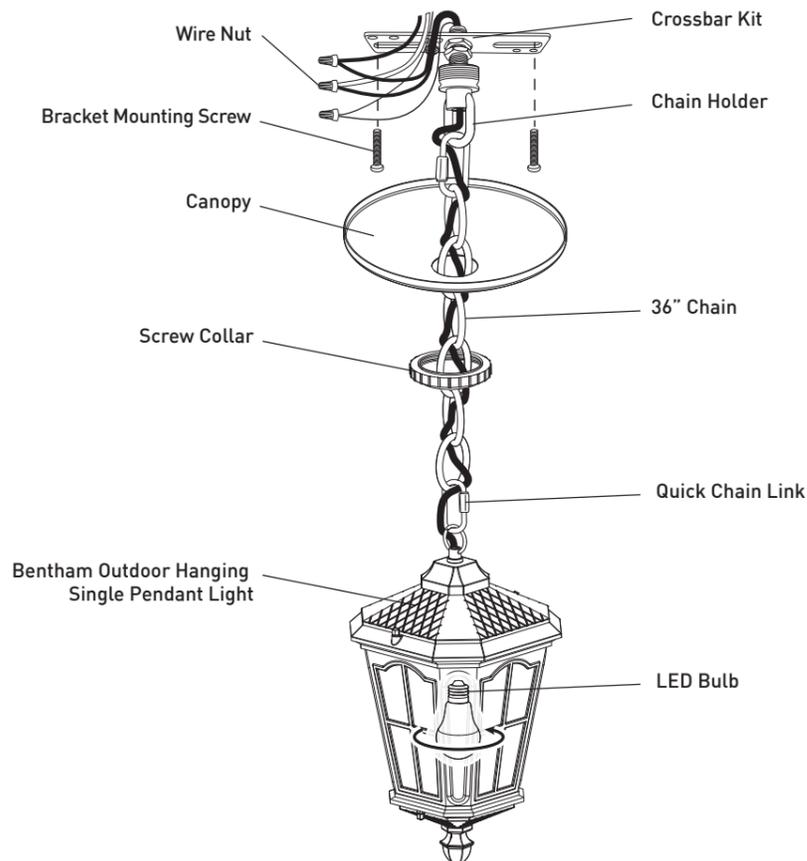


4


INSTALLATION PROCEDURE:

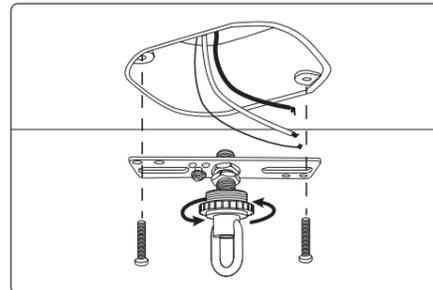

1. Detach the screw collar from chain holder. Mount the Crossbar Kit together with the Chain Holder using the mounting screws.

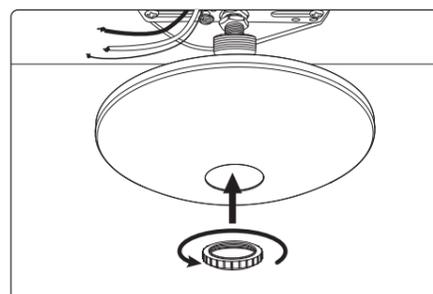


2. Attach the Canopy to the ceiling using the Screw Collar.

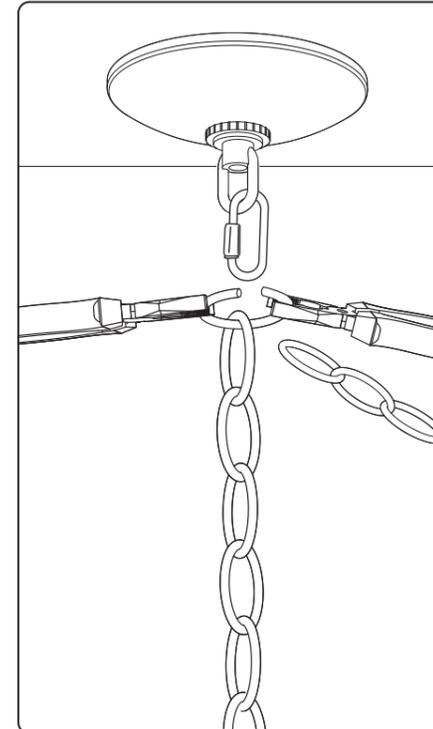


3. Connect the Quick Chain Link to the Chain Holder. Determine the height you want to hang the fixture down from the ceiling. Use a pair of pliers to twist open the chain link end and remove the unwanted portion of chain. Connect the wanted chain to the Quick Chain Link. Twist to close both opened chain links.

5

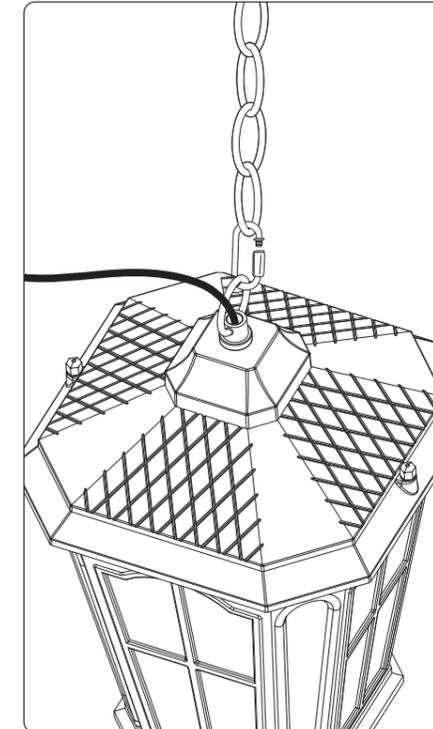


4. Connect the fixture and the chain with the Quick Chain Link.

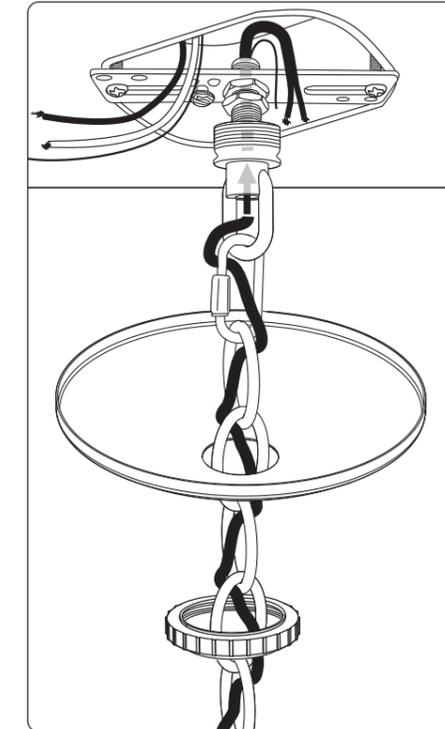

5. Determine the length of wires you need and use a wire stripper tool to cut and strip the wires. Then weave the wires through the chain. Unlock the Collar and release the Canopy to pass the wires through the hole on the Chain Holder and Cross Bar as shown in the diagram.

6

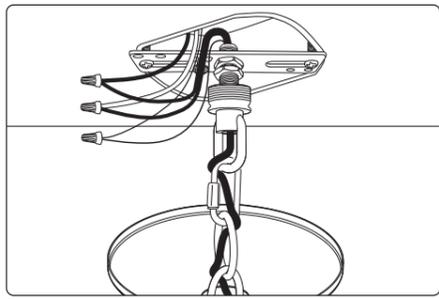


6. Make the following spliced wire connections using wire nuts:


- Smooth (Hot) wire to the hot supply wire (most likely black or colored)
- Ribbed (neutral) wire to the neutral supply (most likely white).
- Bare copper (ground) wire to the supply ground wire (most likely bare copper, green wire, or green and yellow wire), or wrap around the ground screw if ground wire does not exist.

Screw the wire nuts in a clockwise direction until tight. Make sure no bare wire or wire strands are visible after making the connections.

Check for tightness by pulling wires.

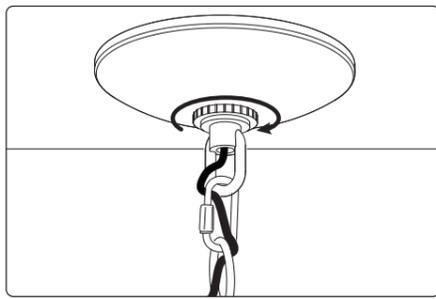

7. Put the Canopy back up against the ceiling and lock it in place using the Collar.

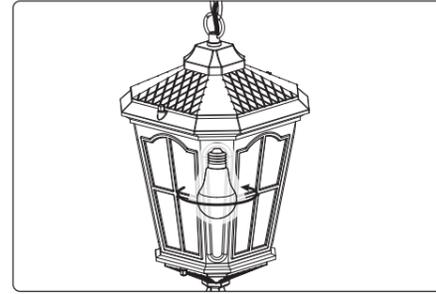

8. Screw in the LED bulb by hand.


CARE AND MAINTENANCE:

Shut off main power supply before cleaning product or changing light bulbs. To clean, wipe with damp cloth. Do not use abrasive cleaners or cleaners that contain alcohol.

PRODUCT SPECIFICATIONS:

Operating Voltage: 120 Vac, 60 Hz
 Compatible with incandescent light bulb of 120 V, 60 W MAX, E26 base
 LED Bulb (included): 800 lumen, 3000K, 8 W

DIMENSIONS:

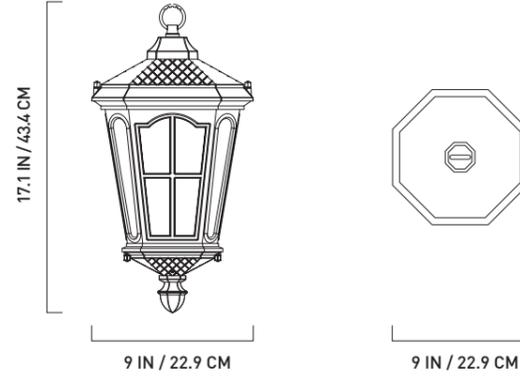

TROUBLESHOOTING:

Problem	Possible Cause	Solution
The light does not come on.	The light wall switch is turned off.	Turn the light wall switch on.
	The fuse is blown or the circuit breaker is turned off.	Replace the fuse or ensure the circuit breaker is turned on.
	Faulty wire connection.	Check all wiring to ensure they are correctly and securely wired.
	Worn or broken bulb.	Replace bulb.

Warranty:

This KODA product carries a 5-year warranty against defects in workmanship and materials subject to the conditions and additional warranty information available at: www.kodabuilt.com/warranty

DISCLAIMER OF WARRANTIES, INCLUDING WARRANTY OF MERCHANTABILITY AND WARRANTY OF FITNESS FOR PARTICULAR PURPOSE: EXCEPT AS SPECIFICALLY SET FORTH HEREIN, NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, IS MADE AS TO THE KODA BENTHAM OUTDOOR HANGING SINGLE PENDANT LIGHT. KODA AND/OR ITS AFFILIATES EXPRESSLY DISCLAIMS, WITHOUT LIMITATION, ANY STATUTORY WARRANTIES AND ALL IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

MADE IN VIETNAM

Have a comment or question? Email us at info@kodabuilt.com or visit us online at www.KodaBuilt.com



A Horizon Brands Company
 2975 Red Hill Ave., Ste. 100, Costa Mesa, CA 92626, USA | Tel: 1-866-294-9244
 © 2023 KODA. All rights reserved.