
OWNER'S MANUAL



BASICS 5-TIER 60" x 24" x 72" NSF WIRE SHELVING RACK w/WHEELS

Important / Important / Importante

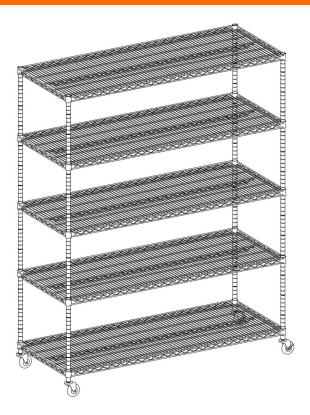


FOR QUICK & EASY 3D ASSEMBLY INSTRUCTIONS POUR DES DIRECTIVES D'ASSEMBLAGE 3D RAPIDES ET FACILES PARA INSTRUCCIONES DE ENSAMBLAJE RÁPIDAS Y SENCILLAS EN 3D

Intelligent Instructions Directives intelligentes Instrucciones Inteligentes

PARTS LIST

You will NOT need additional tools for assembly.

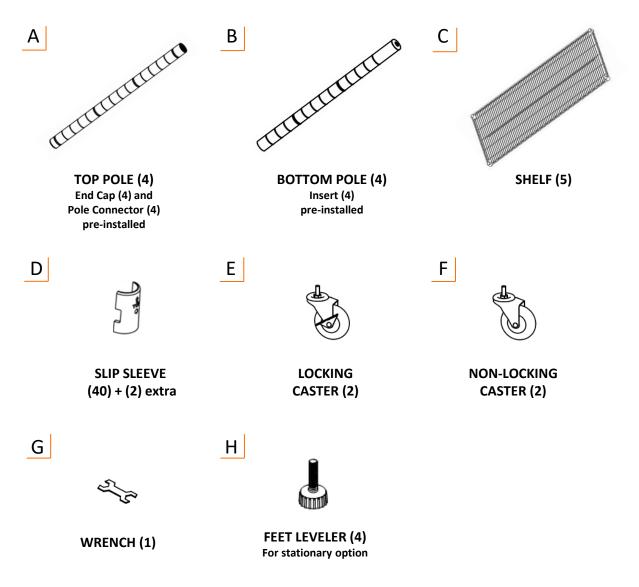



Note: The black circular plastic spacers in between Shelves are used only for packaging purposes. They are NOT needed. Please discard.

ASSEMBLY INSTRUCTIONS

STEP 1

Stationary Option


Screw each FEET LEVELER (H) into the bottom of each BOTTOM POLE (B). Turn clockwise to screw in place.

Warning: For safety, at least half of the FEET LEVELER (H) stem must be screwed into BOTTOM POLE (B).

Mobile Option

Screw each CASTER (E &F) into the bottom of a BOTTOM POLE (B). Turn clockwise to screw in place. Use the provided WRENCH (G) to tighten completely. Make sure the locking casters are on the same side.

<u>Use the provided WRENCH (G) to tighten completely.</u> <u>Failure to do as instructed could result in the caster stem</u> <u>breaking.</u>

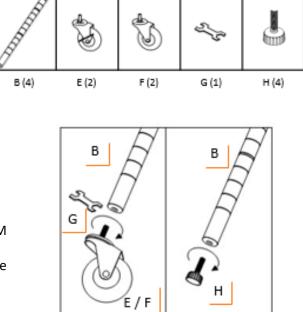



STEP 2

On BOTTOM POLE (B), place 1 pair of SLIP SLEEVES (D) at the desired level no higher than the 3rd indentation from the bottom. Please make sure the arrow on SLIP SLEEVES (D) faces up and the word "TOP" right-side up. Do this for each BOTTOM POLE (B) and make sure slip sleeve heights are identical for all (4) BOTTOM POLES (B).

Note that each POLE (A & B) has slight horizontal line indentations at 1" intervals. Each SLIP SLEEVE (D) has raised horizontal lines inside designed to lock in place on POLE (A & B).

Slide the pair of SLIP SLEEVES (D) until you hear a click to confirm the pair is locked onto BOTTOM POLE (B). Do NOT place more than one pair on each POLE (A & B) at one time.



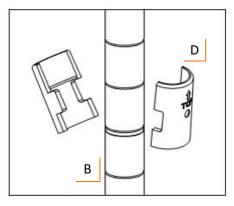

Note: There will be a very small gap in-between two locked SLIP SLEEVES (D)—this is normal.

ASSEMBLY INSTRUCTIONS

STEP 3

Place SHELF (C) on its side and slide the (4) BOTTOM POLES (B) through the (4) holes in the SHELF (C). Make sure that the SHELF (C) corner cylinders are positioned over the SLIP SLEEVES (D).

Stand the unit upright.

Note:

- The level side of the SHELF (C) is the TOP side (the TRINITY logo on the corner cylinders should be right-side up.)
- Use a rubber mallet, if needed, to secure the SHELF (C).
- For convenience, place BOTTOM POLES (B) with Locking ٠ Casters on the long side of the shelf if the rack will be pushed against a wall OR if the rack is frequently rolled around like a cart, place BOTTOM POLES (B) with Locking Casters on the side being pushed or pulled.

STEP 4


On BOTTOM POLE (B), place 1 pair of SLIP SLEEVES (D) at a desired distance between SHELVES (C). Please make sure the arrow on SLIP SLEEVES (D) faces up and the word "TOP" is right side up. Do this for each BOTTOM POLE (B), and make sure that the heights of SLIP SLEEVES (D) on each BOTTOM POLE (B) are identical.


Lower SHELF (C) over the BOTTOM POLES (B) so that the corner cylinders of the SHELF (C) are positioned over the SLIP SLEEVES (D).


Make sure to put SLIP SLEEVES (D) at the desired heights for each item, installing one shelf at a time.

Note:


Use a rubber mallet, if needed, to secure the SHELVES (C).



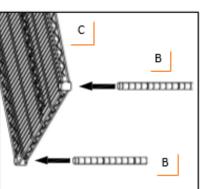

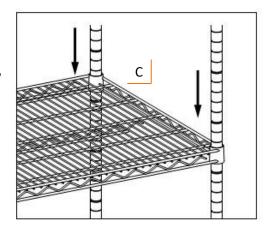






ASSEMBLY INSTRUCTIONS


STEP 5

Screw the TOP POLE (A) into the BOTTOM POLE (B). Pole Connectors are pre-installed in bottom of the TOP POLES (A).

The tops of TOP POLE (A) are indicated by the BLACK END CAP.

Repeat STEP 4 to install (3) SHELVES (C) to complete the assembly.

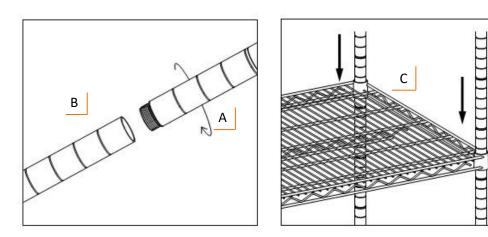




SERVICE PARTS LIST – (Black Color)

TRINITY Customer Service provides the following replacement parts:


	Description		Description
1)	Slip Sleeve	6)	Locking Caster
2)	Top Pole	7)	Feet Leveler
3)	Pole Connector	8)	Non-locking Caster
4)	Bottom Pole	9)	End Cap
5)	Wrench	10)	Shelf

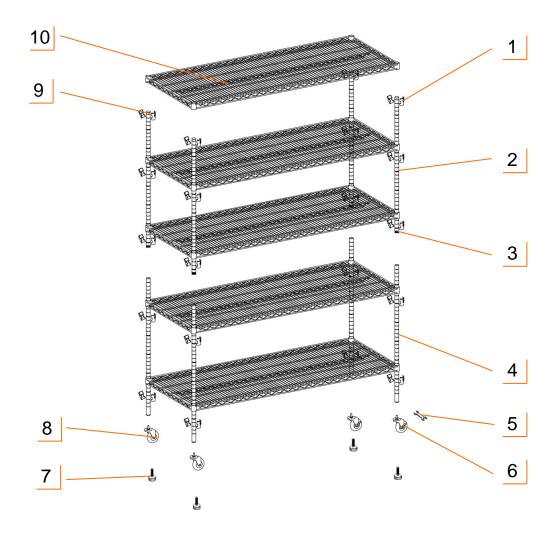

SERVICE PARTS LIST – (Chrome Color)

TRINITY Customer Service provides the following replacement parts:


	Description		Description
1)	Slip Sleeve	6)	Locking Caster
2)	Top Pole	7)	Feet Leveler
3)	Pole Connector	8)	Non-locking Caster
4)	Bottom Pole	9)	End Cap
5)	Wrench	10)	Shelf

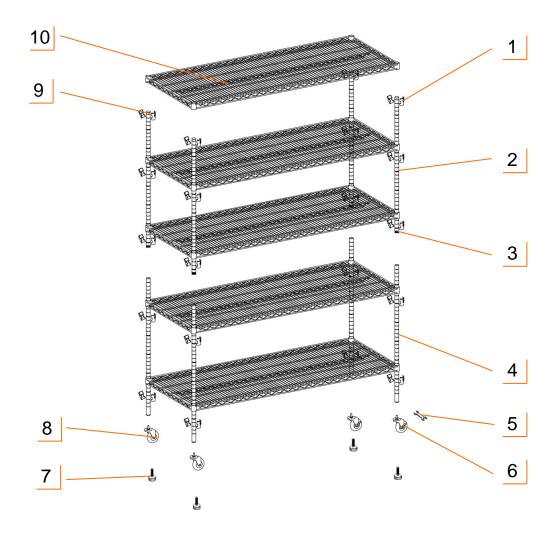

SERVICE PARTS LIST – (Chrome Color)

TRINITY Customer Service provides the following replacement parts:

	Description		Description
1)	Slip Sleeve	6)	Locking Caster
2)	Top Pole	7)	Feet Leveler
3)	Pole Connector	8)	Non-locking Caster
4)	Bottom Pole	9)	End Cap
5)	Wrench	10)	Shelf

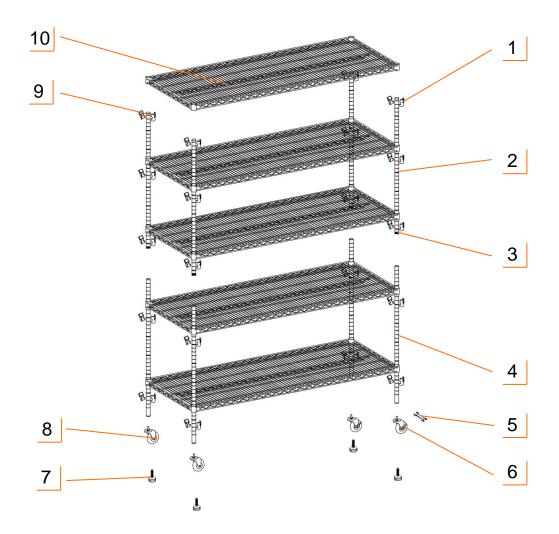

WARNINGS

- **1. Read and understand all instructions.** Failure to follow all instructions may result in injury and/or damage.
- 2. Tighten all casters completely by using the provided wrench and regularly check and secure all casters. Failure to do as instructed could result in the caster stem breaking, thereby causing the product to collapse.
- 3. The warnings, cautions, and instructions discussed in this manual cannot cover all possible conditions or situations that may occur. The user must always be aware of the environment where the product will be placed and make sure to use the product in a safe and responsible manner.
- **4.** Do NOT modify the product in any way. Unauthorized modification may impair the function and/or safety of the product, and may affect the life of the product. Any modifications will void product warranty.
- 5. Check for damaged parts. Before using this product, carefully check that all parts are in good condition, and that the product will operate properly and perform its intended function. Check for damaged parts and any other conditions that may affect the operation of this product. Replace damaged or worn parts, and never use this product with a damaged part.

6. Do NOT overload the product.

Weight capacity per Shelf on Feet Levelers	450 lb (evenly distributed)	
Weight capacity per Shelf on Casters	120 lb (evenly distributed)	
Total weight capacity of Shelving Rack (evenly distributed)	2250 lb (on Feet Levelers) 600 lb (on Casters)	

- 7. Do NOT roll the product on an uneven surface. Only move the product on a smooth surface. Rolling over rough or uneven surfaces may cause casters to break or items on the product to fall, resulting in injury and / or damage. Wood and laminate flooring can be scratched or dented. Ensure your flooring can bear the weight of the rack before rolling the rack across your flooring.
- 8. Do NOT allow children to climb or play around the product.
- 9. Load the unit evenly and place the heaviest items on the lower shelves.

CARE AND MAINTENANCE

• Avoid harsh, abrasive cleaners, and other corrosive chemicals.

1 YEAR LIMITED WARRANTY

Basics 5-Tier 60" x 24" x 72" NSF Wire Shelving Rack w/ Wheels

International Industries warrants to the original consumer purchaser ("Purchaser") of the Basics 5-Tier 60" x 24" x 72" NSF Wire Shelving Rack w/ Wheels ("Product") that each Product shall be free from defects in workmanship and materials for a period of 1 year from the date of original purchase. Obligation under this warranty shall be limited to repair or replacement of, or adequate compensation for the Product which shall not be greater than the amount of the purchase price of the Product, during the warranty period.

This warranty excludes normal wear and tear of the Product and its parts or components, and damage arising from any of the following: negligent use or misuse of the Product, use contrary to this User's Manual, or alteration by anyone other than Trinity. The warranty period of 1 year shall not be extended or renewed by the repair or replacement of, or compensation for, the Product. Any warranty implied by applicable law is limited in duration to one year from the date of purchase and is subject to the same conditions and limitations as is provided for our express warranty.

Except as set forth herein, and to the extent of applicable there are no warranties on this Product either express or implied, and Trinity disclaims all warranties including, but not limited to, any implied warranties of merchantability, infringement or fitness for a particular purpose. No warranty or guarantee given by any person, firm, or corporation with respect to this product shall be binding on Trinity.

LIMITATION OF REMEDIES AND LIABILITY

Trinity (and its employees, officers, members, managers, affiliates and assigns) shall not be liable for any incidental, consequential, special, indirect, remote, special or punitive damages for breach of any warranty, express or implied, including, but not limited to, lost profits, lost savings, loss of anticipated benefits and attorneys' fees, which arise out of the purchase, use or inability to use the Product, whether arising out of contract, negligence, strict tort, product liability, or any other legal theory on which a claim is based. As noted above, to the extent damages are allowed by our express warranty or by applicable law, those damages may not exceed the purchase price paid for the Product. Without limiting the foregoing Purchaser assumes all risk and liability for loss, damage or injury to Purchaser and Purchaser's property and to others and their property arising out of the use, misuse, or inability to use this Product. This limited warranty shall not extend to anyone other than the original purchaser of this product, is nontransferable and states your exclusive remedy.

Some states do not allow the exclusion or limitation of incidental, consequential, special, or punitive damages, so the above limitation or exclusion may not apply to you. The above warranty gives you specific legal rights, and you may have other rights which vary from state to state.