





Display Cabinet

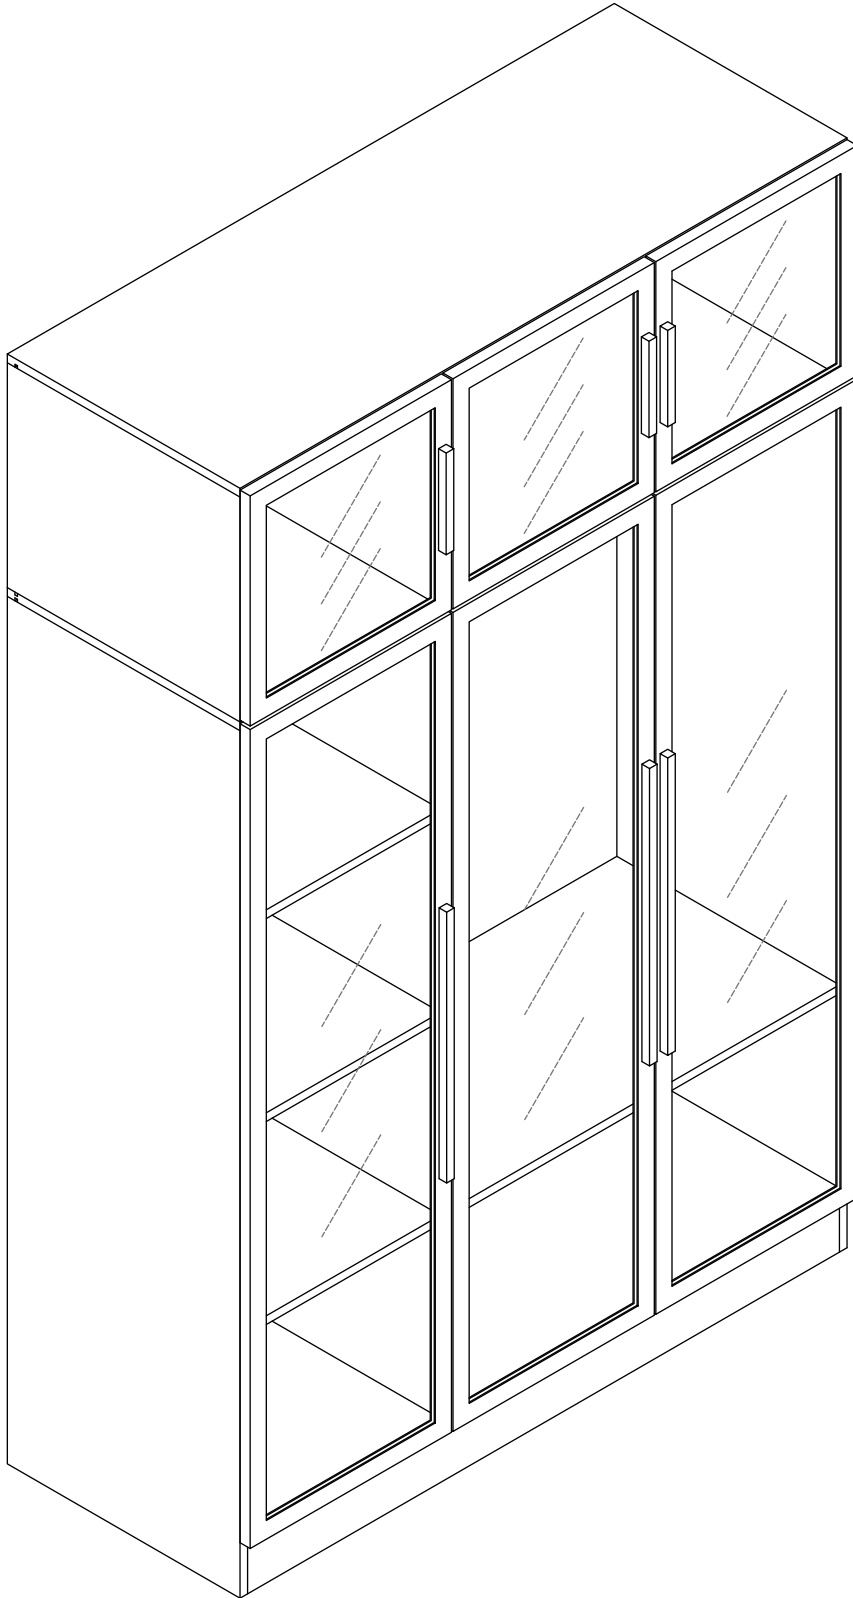

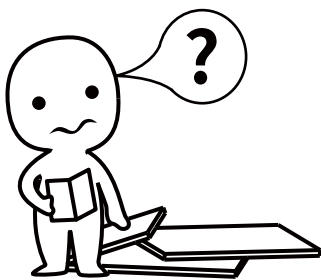


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

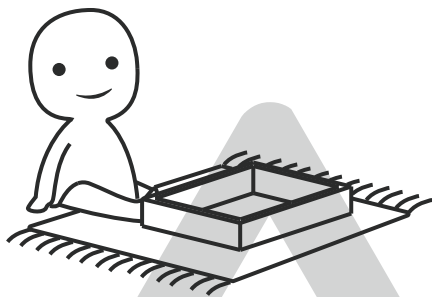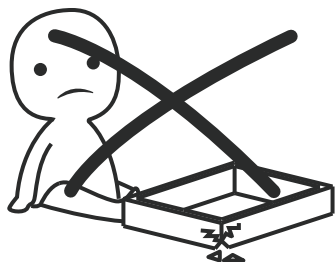



AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

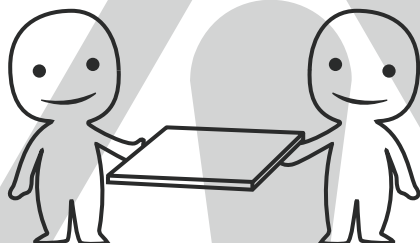

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

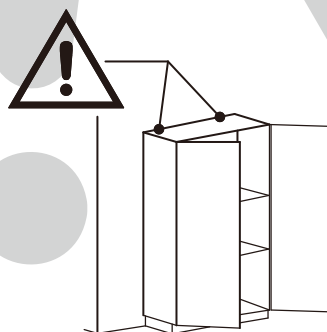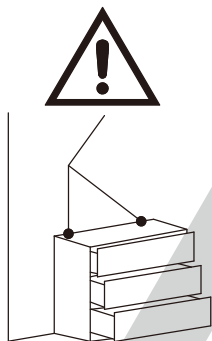

ANTI-TOPPLE WARNING !


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

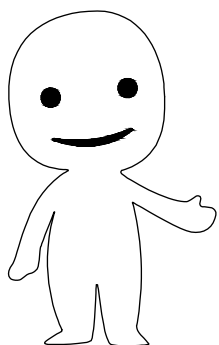

Please prepare the following tools

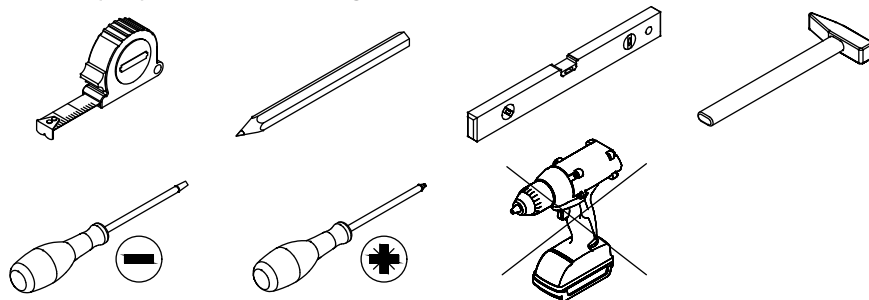

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size.

A x 48+2



M6 x 35mm

B x 48+2



Ø15 x 11mm

C x 15+1



Ø6 x 32mm

D x 4+1




M6 x 50mm

E x 60




M4 x 14mm

F x 10



G x 4



M4 x 40mm

H x 30




M4 x 8mm


I x 16+2




J x 4+1



K x 1




L-1 x 1

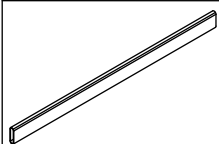


L-2 x 1



M x 1



N x 5



O x 16+2



M3 x 16mm

P x 12+2




M3 x 10mm

Q x 36




R x 2





S x 2





Ø6 x 30mm

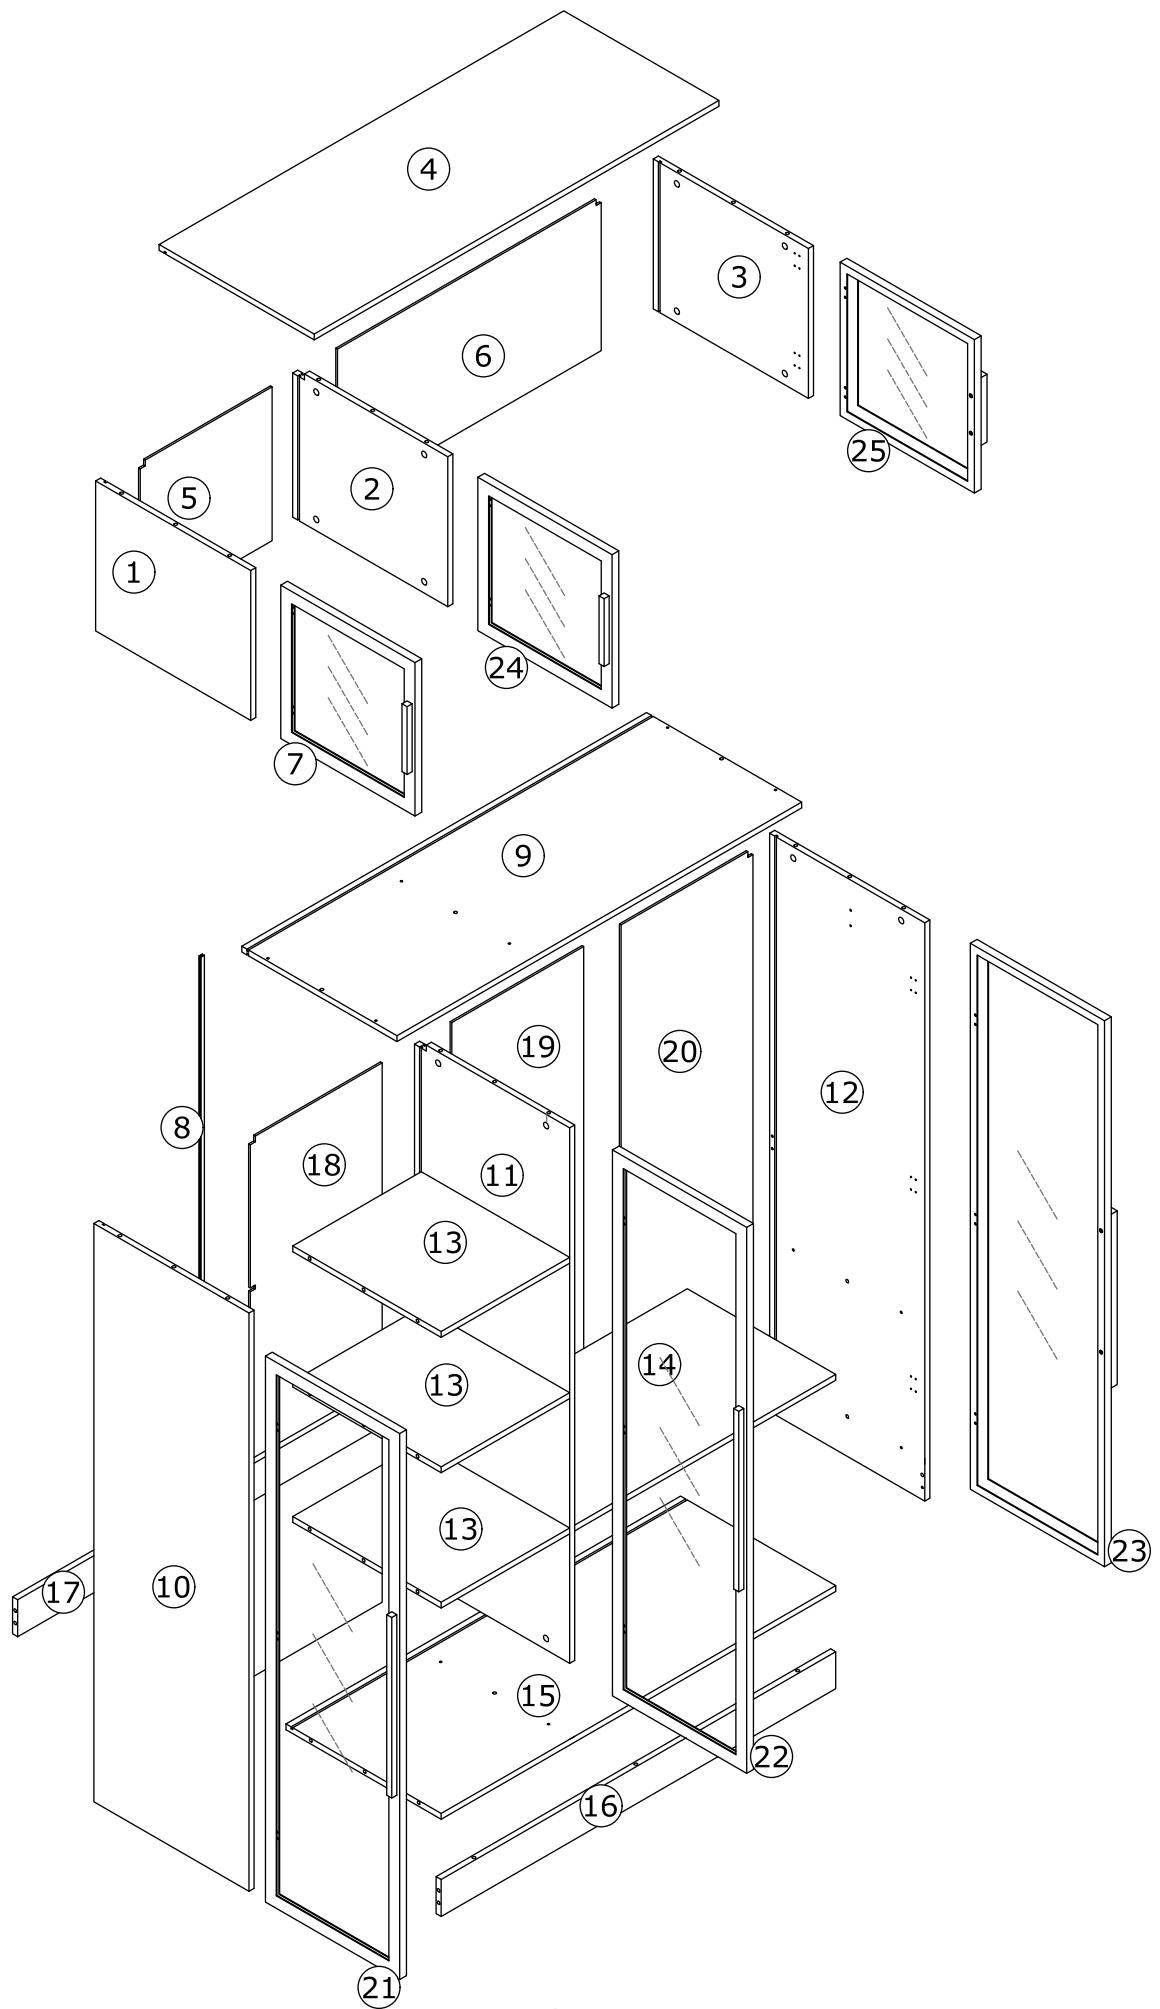







1

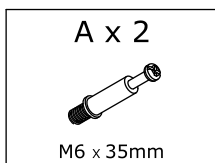





Insert quickfit screw(A) into corresponding holes in plate #15 with a screwdriver as shown.

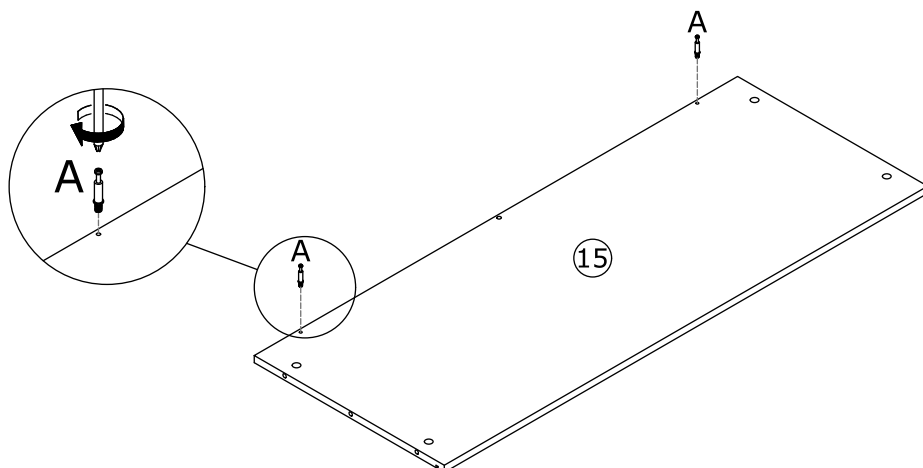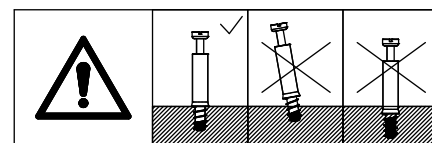

2

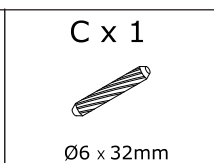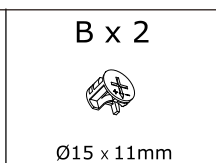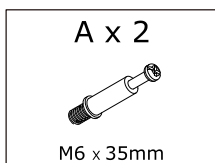


Connect plate #16 with plate #15 using wooden dowel(C), insert cam lock(B) into plate #16 and turn clockwise to tighten as shown.

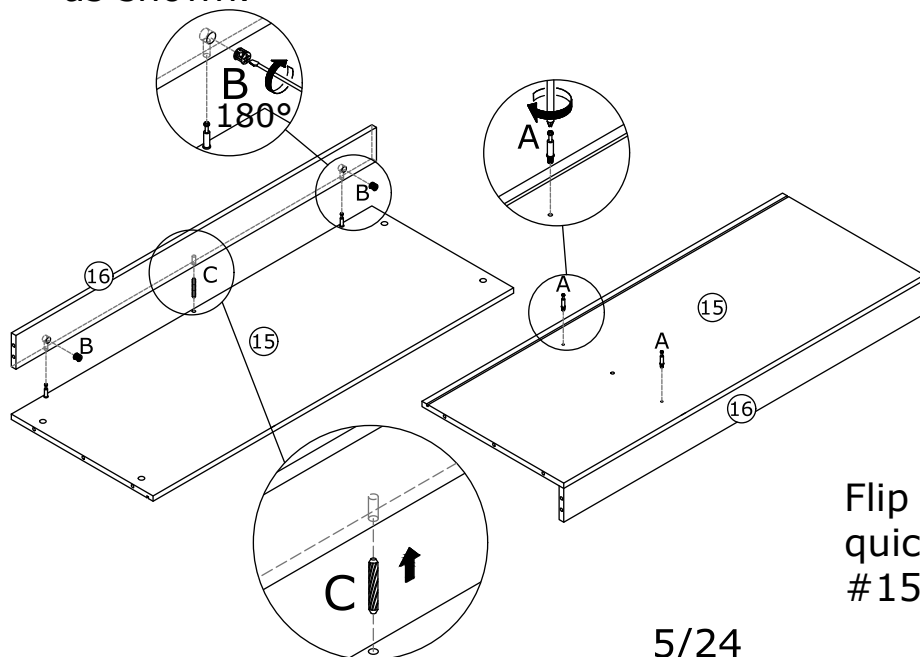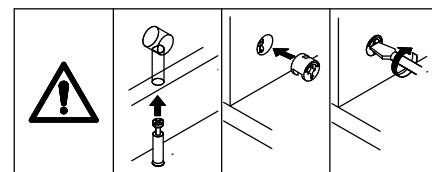
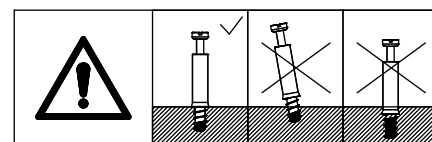


Flip the component, insert quickfit screw(A) into plate #15 as shown.

3



A x 8  M6 x 35mm	L-2 x 1 	P x 2  Ø3 x 10mm	
---	--	---	---



Insert quickfit screw(A) into corresponding holes in plate #11 as shown.
Please note the other side of the plate also needs to be inserted screw(A).

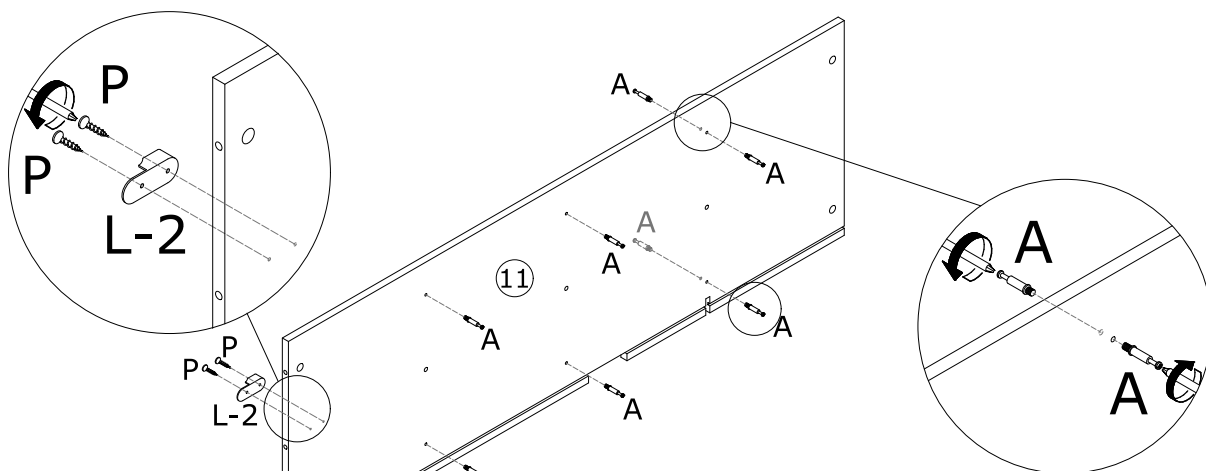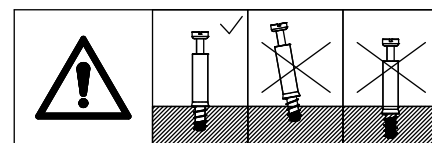

Fix part(L-2) to corresponding position of plate #11 with screw(P) as shown.







4

G x 2  M4 x 40mm	
---	---

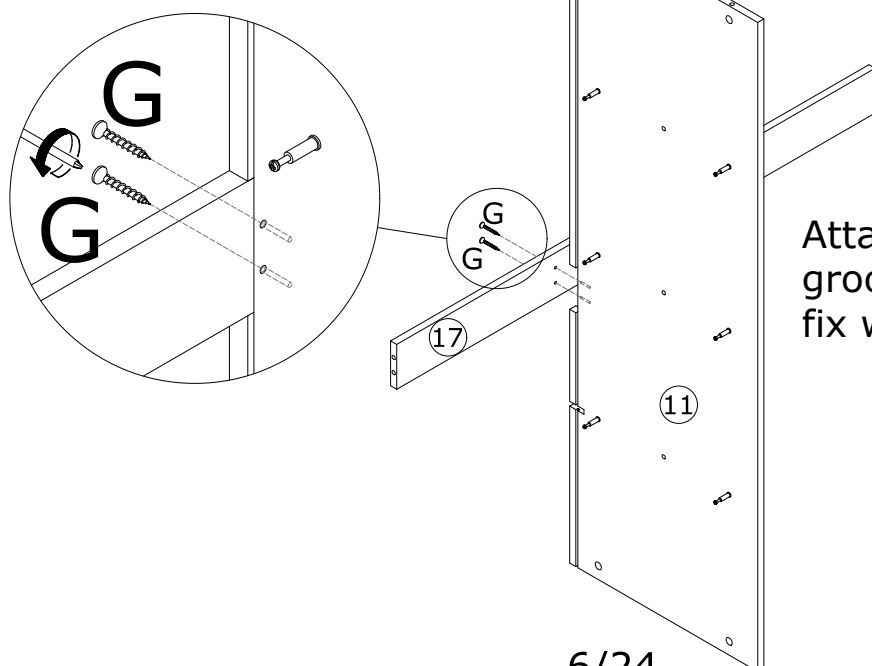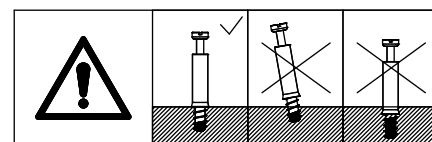


Attach plate #17 to the groove in plate #11 and fix with screw(G) as shown.

5

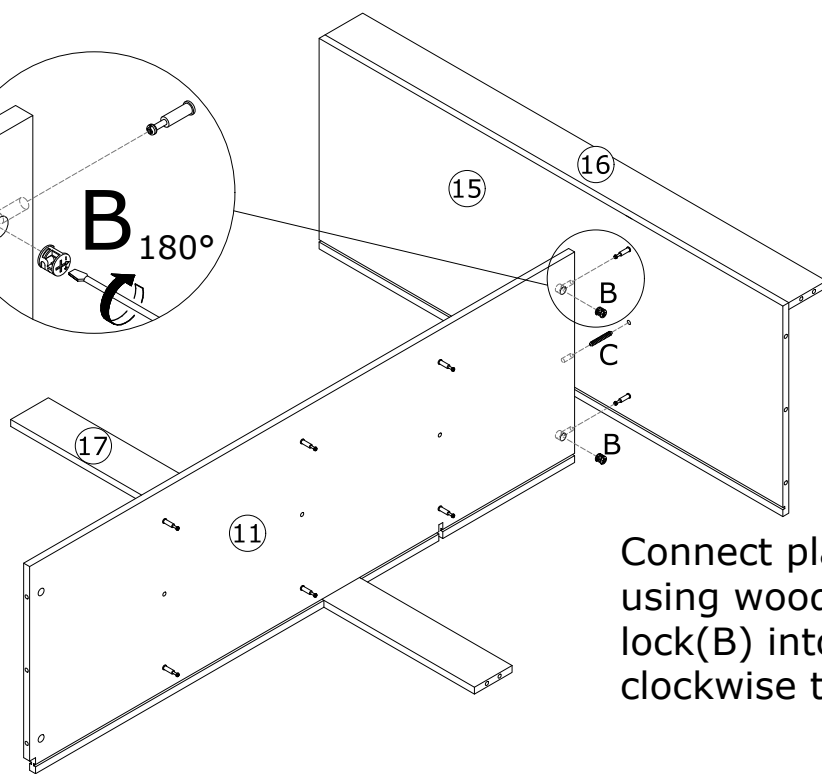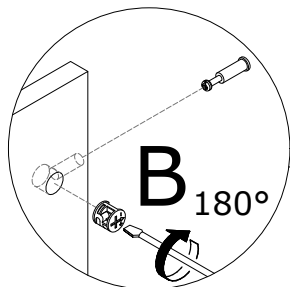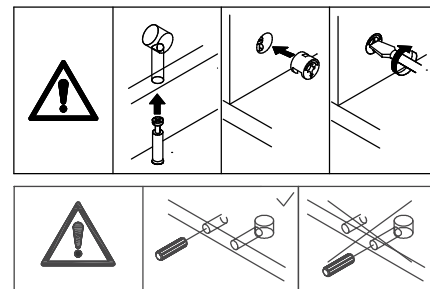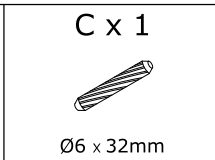
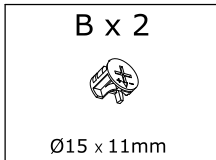


Connect plate #15 with plate #11 using wooden dowel(C), insert cam lock(B) into plate #11 and turn clockwise to tighten as shown.

6



Insert quickfit screw(A) into corresponding holes in plate #10 as shown.

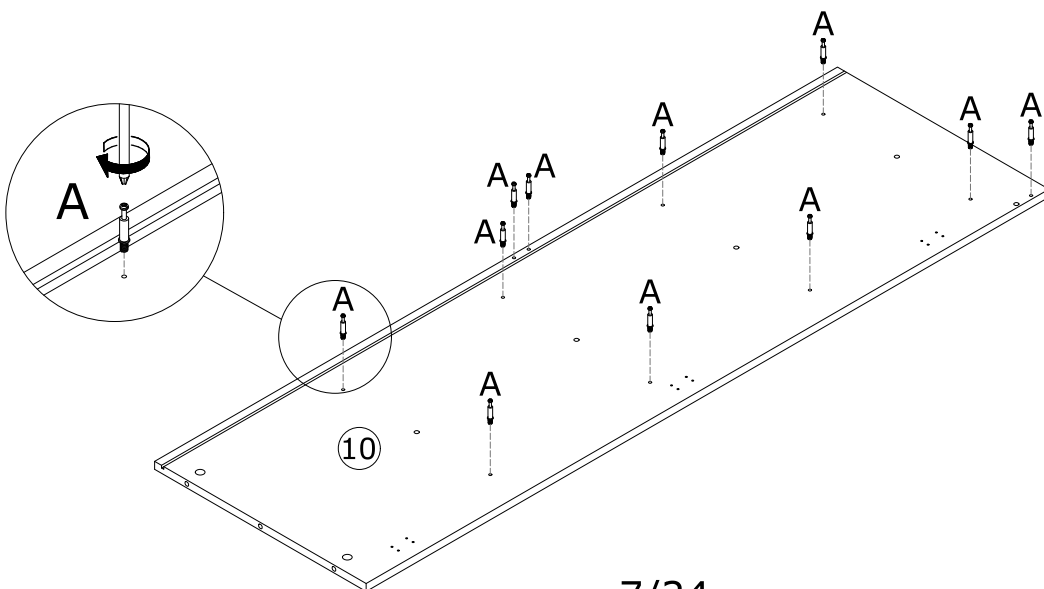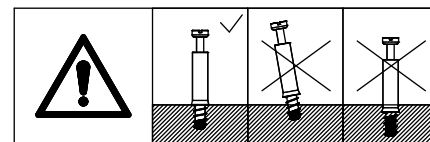

7

B x 6



Ø15 x 11mm

C x 7




Ø6 x 32mm




D x 1



M6 x 50mm



Attach plate #13 to plate #10 with wooden dowel(C), insert cam lock(B) into plate #13 and turn clockwise to tighten as shown.

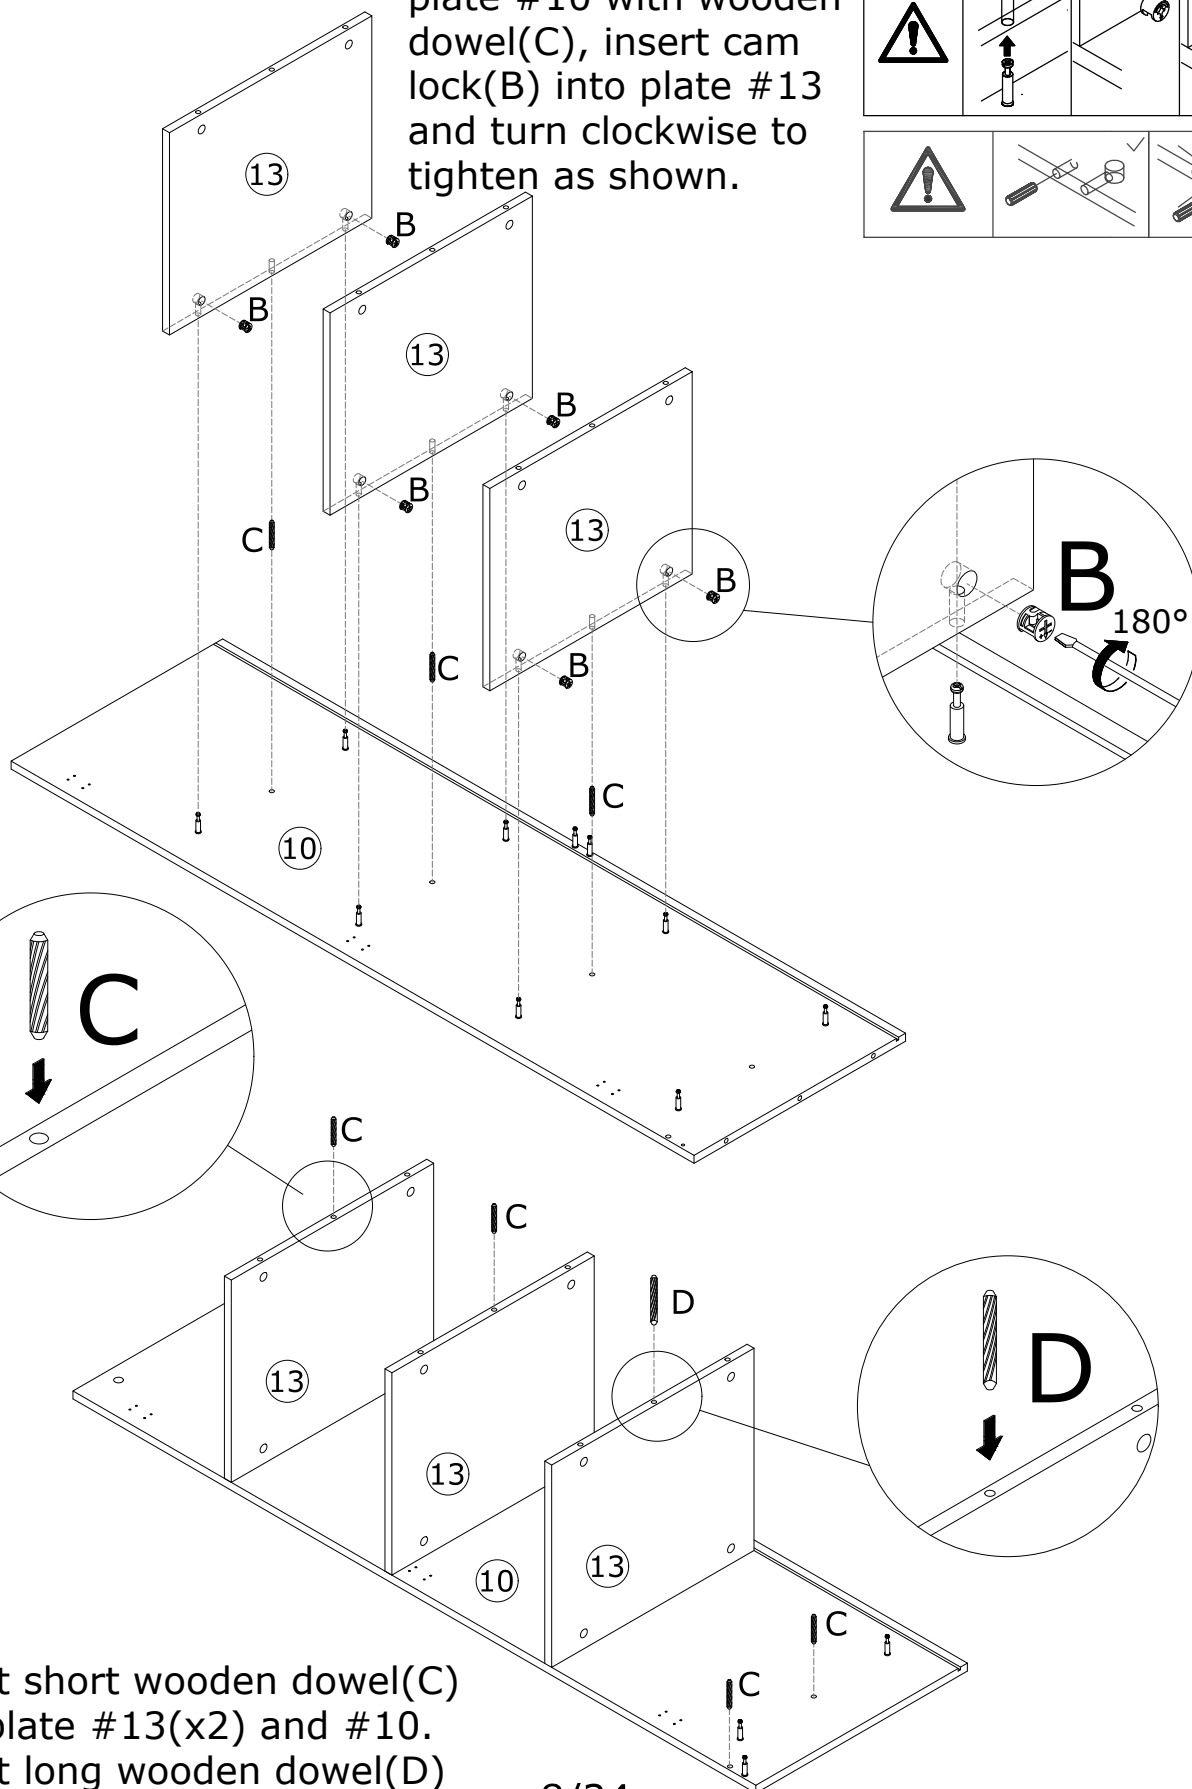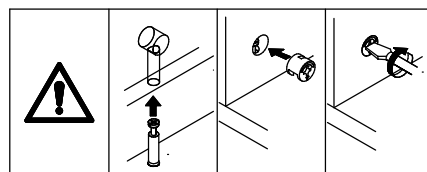


Insert short wooden dowel(C) into plate #13(x2) and #10. Insert long wooden dowel(D) into the third plate #13 as shown.

8



B x 11



Ø15 x 11mm



Connect two components(assembled in step 5 and step 7), insert cam lock(B) into plate #15, #16,#13,#17, and turn clockwise to tighten as shown.

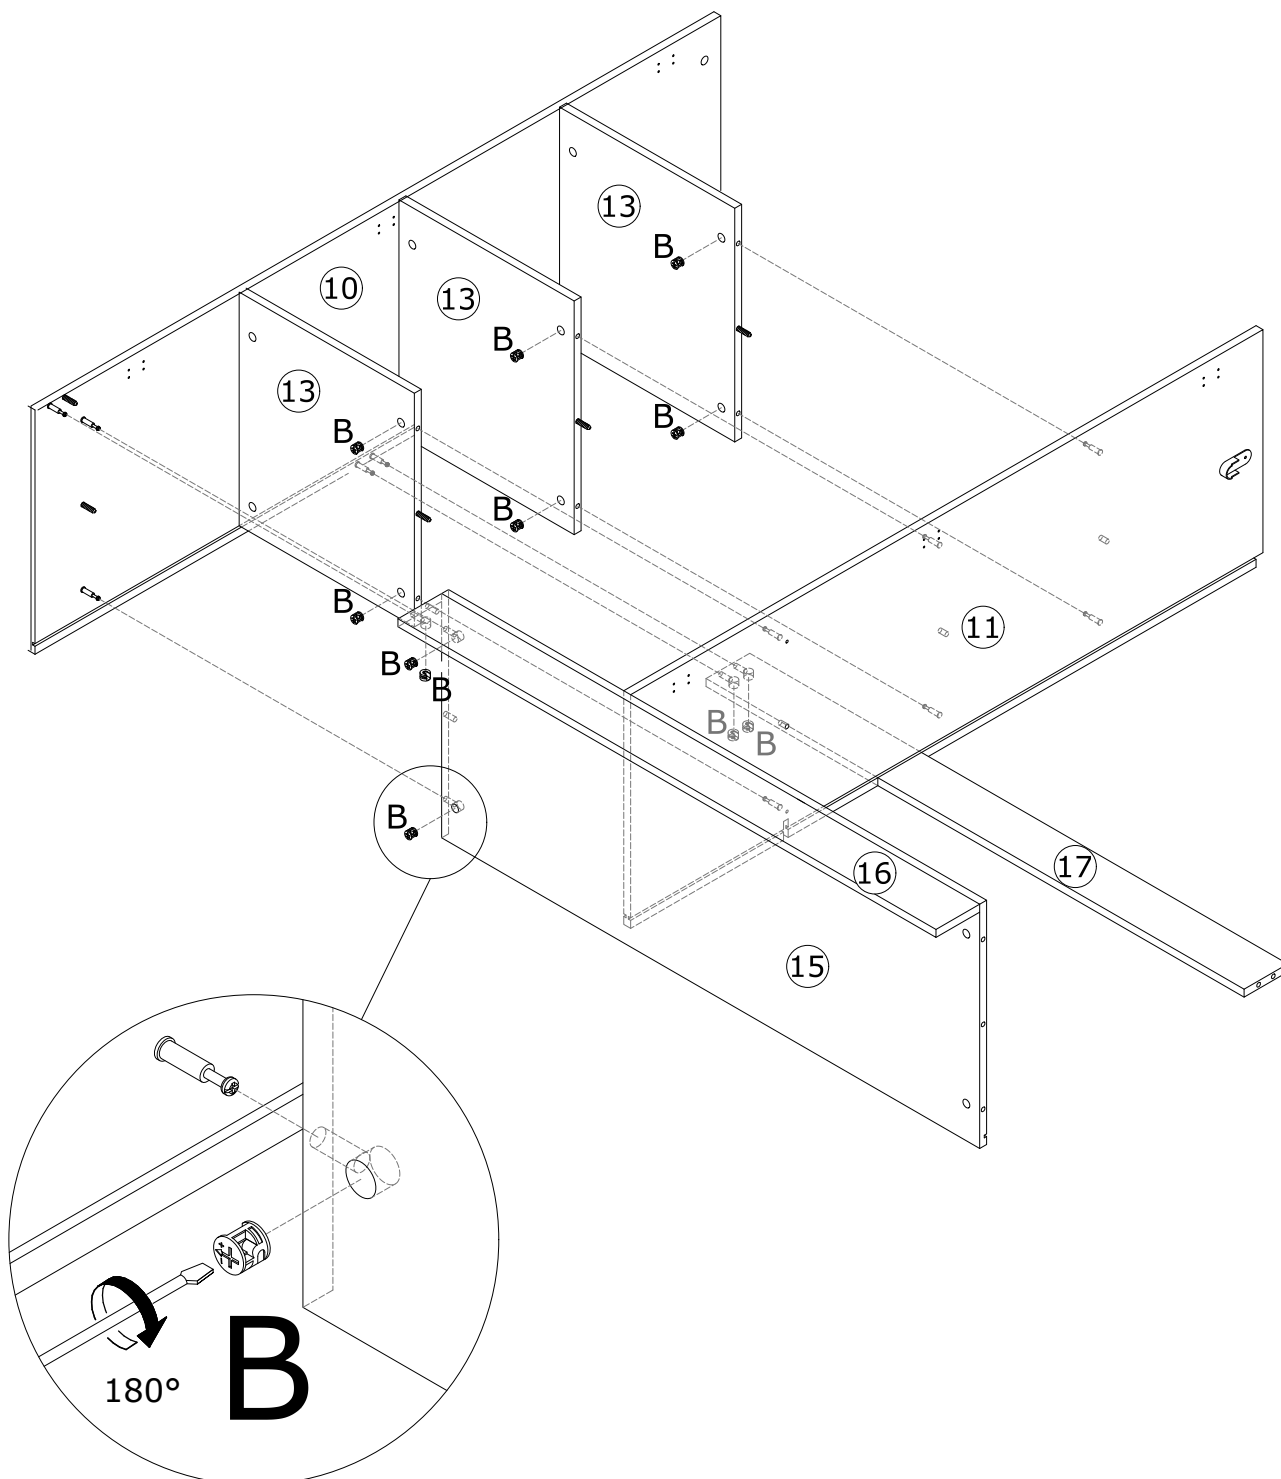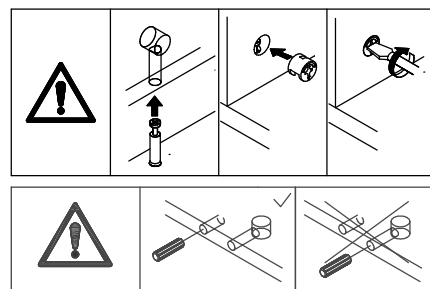

9

A x 7



M6 x 35mm


L-2 x 1



P x 2





Ø3 x 10mm




Insert quickfit screw(A) into corresponding holes in plate #12 as shown.

Fix part(L-2) to plate #12 using screw(P) as shown.

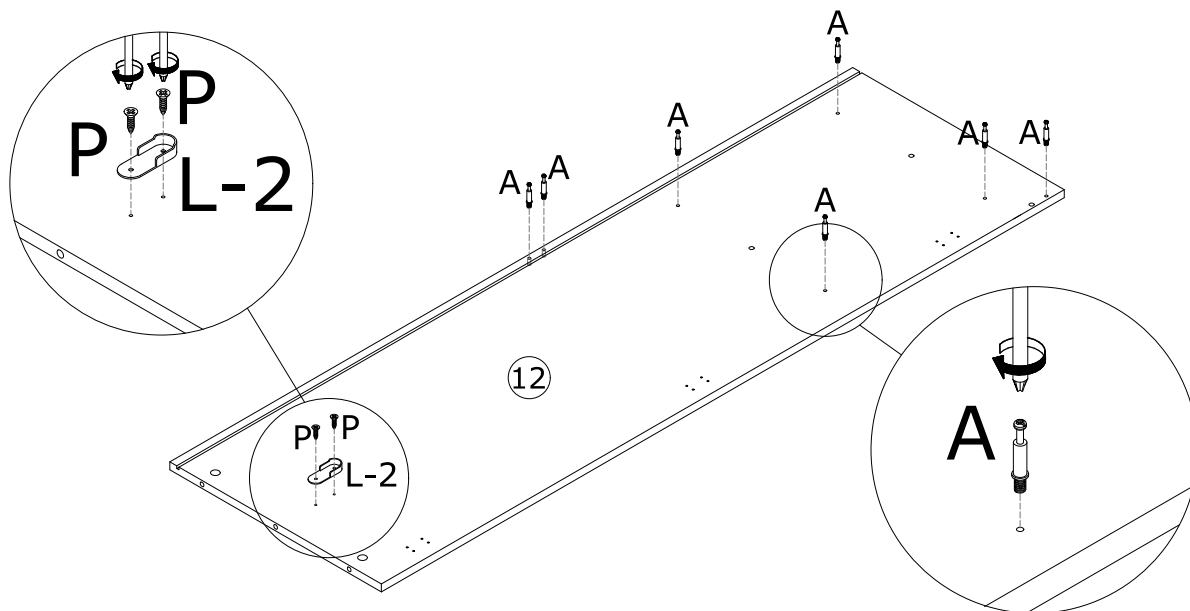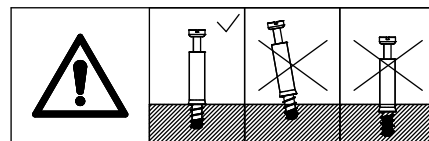

10

Connect plate #19 and #20 with plastic bar #8 at first.

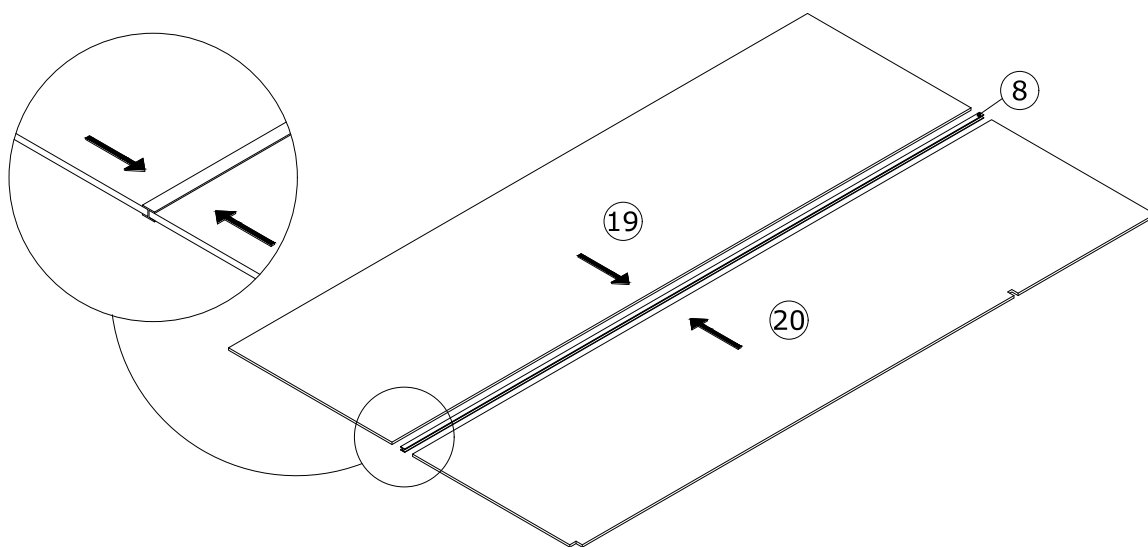

11

B x 2




Ø15 x 11mm



C x 1



Ø6 x 32mm



Attach plate #14 to plate #11 with wooden dowel(C), insert cam lock(B) into plate #14 and turn clockwise to tighten as shown.

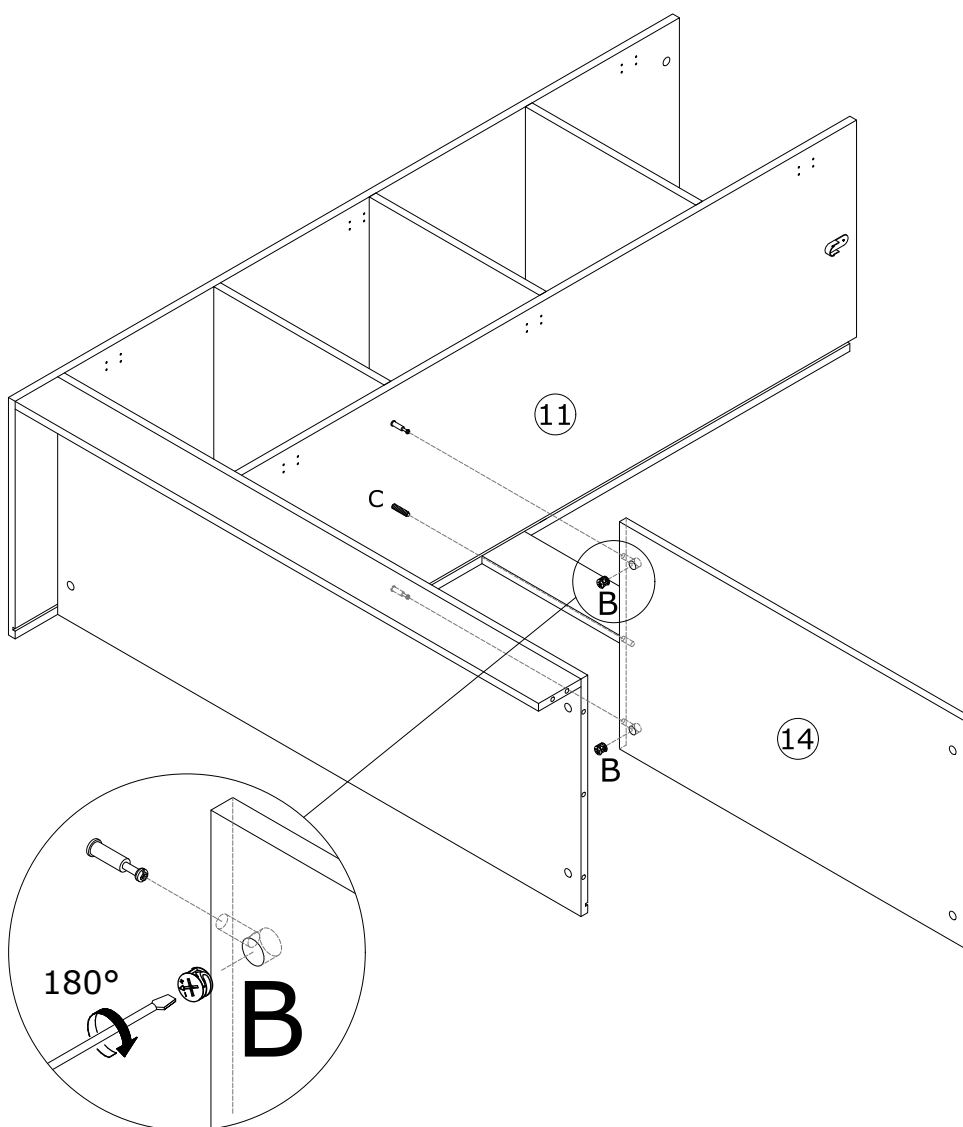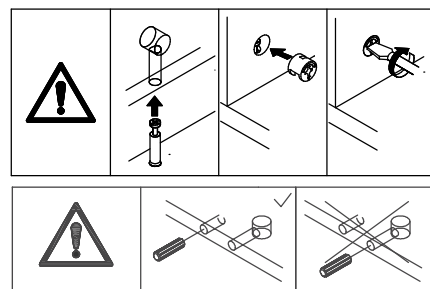

12

B x 7




Ø15 x 11mm

C x 3






Ø6 x 32mm




Insert wooden dowel(C) into plate #15,#16 and #14 at first.

Attach plate #12 to plate #15,#16,#14 and #17, insert cam lock(B) into plate #14,#15,#16,#17 and turn clockwise to tighten as shown.

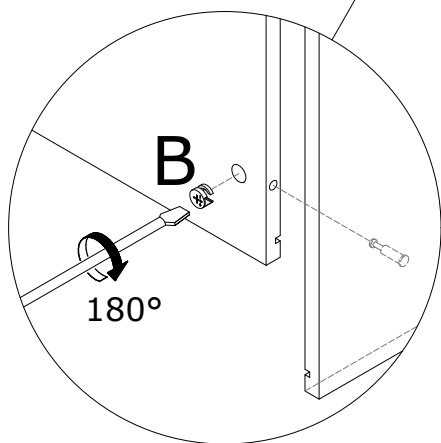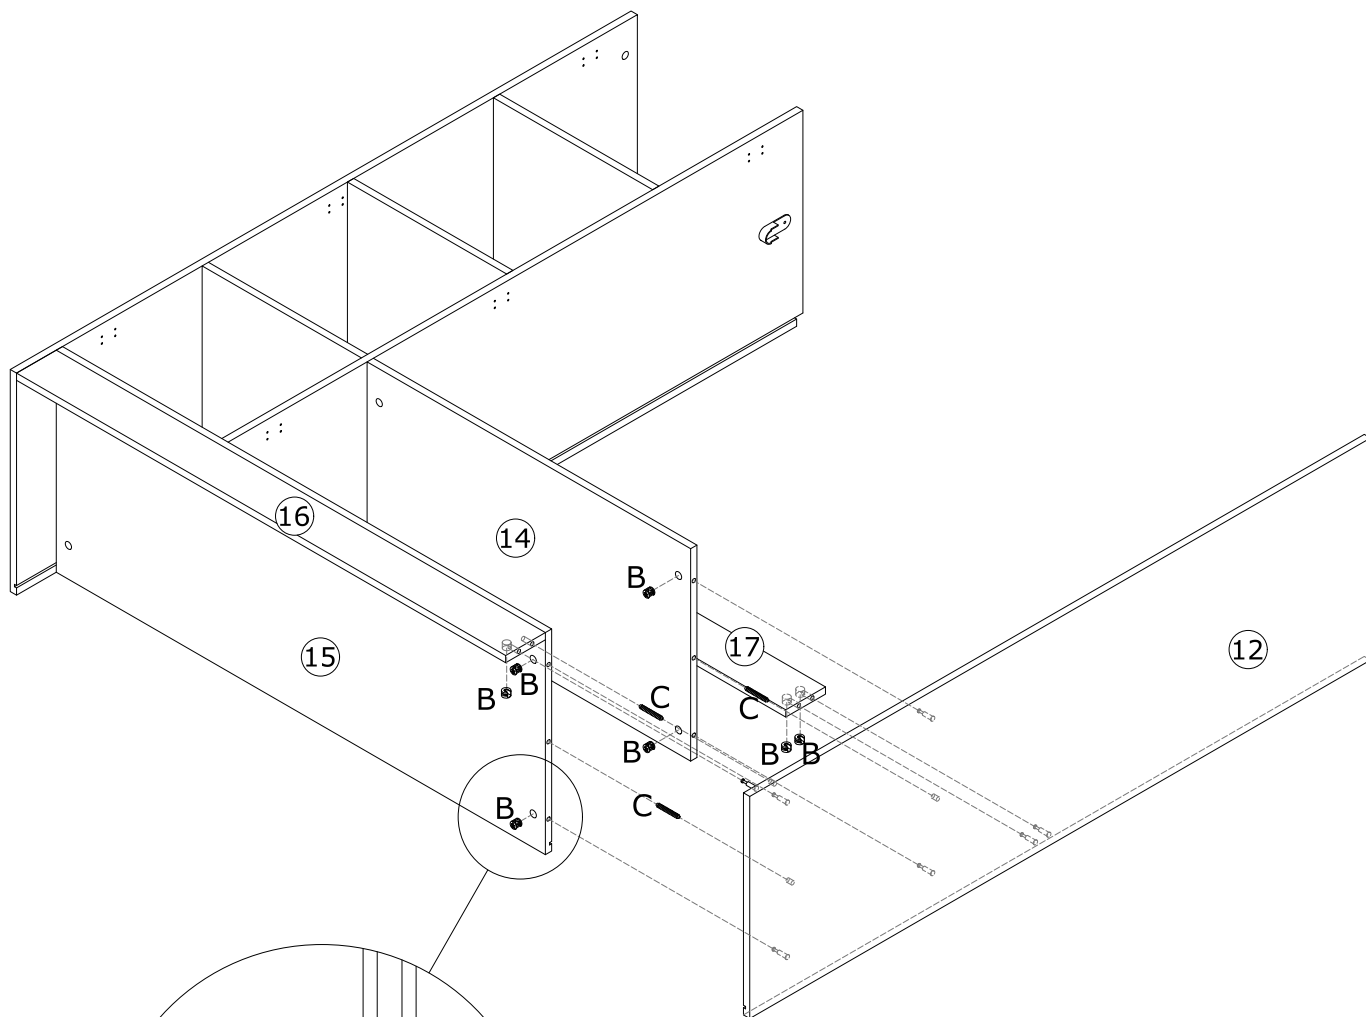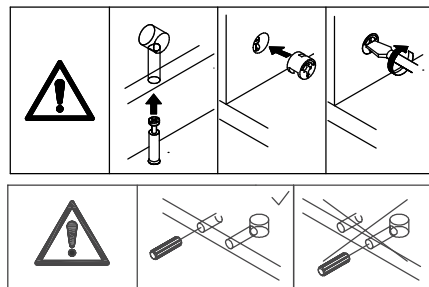


13

Slide back plate #18, #19 and #20 into available slots as shown.

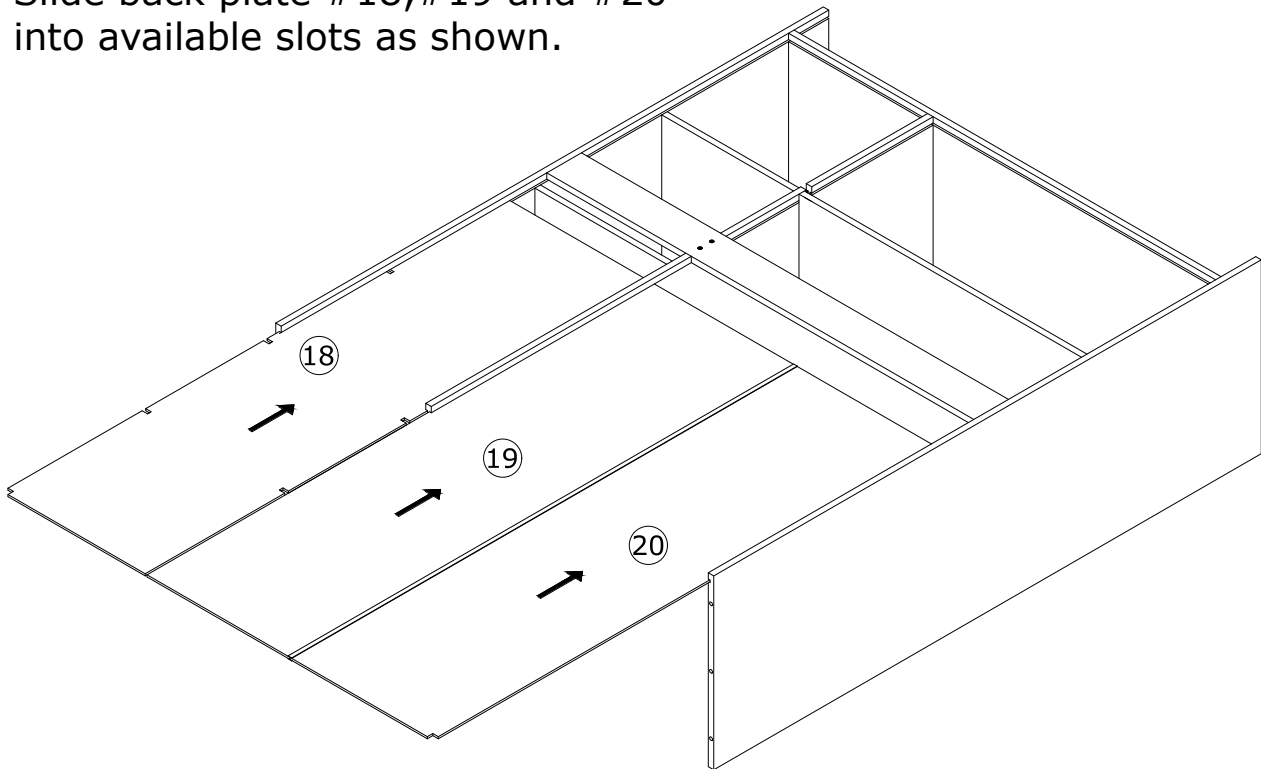


14



A x 12







M6 x 35mm



Insert quickfit screw(A) into corresponding holes in plate #4 and #9 as shown.

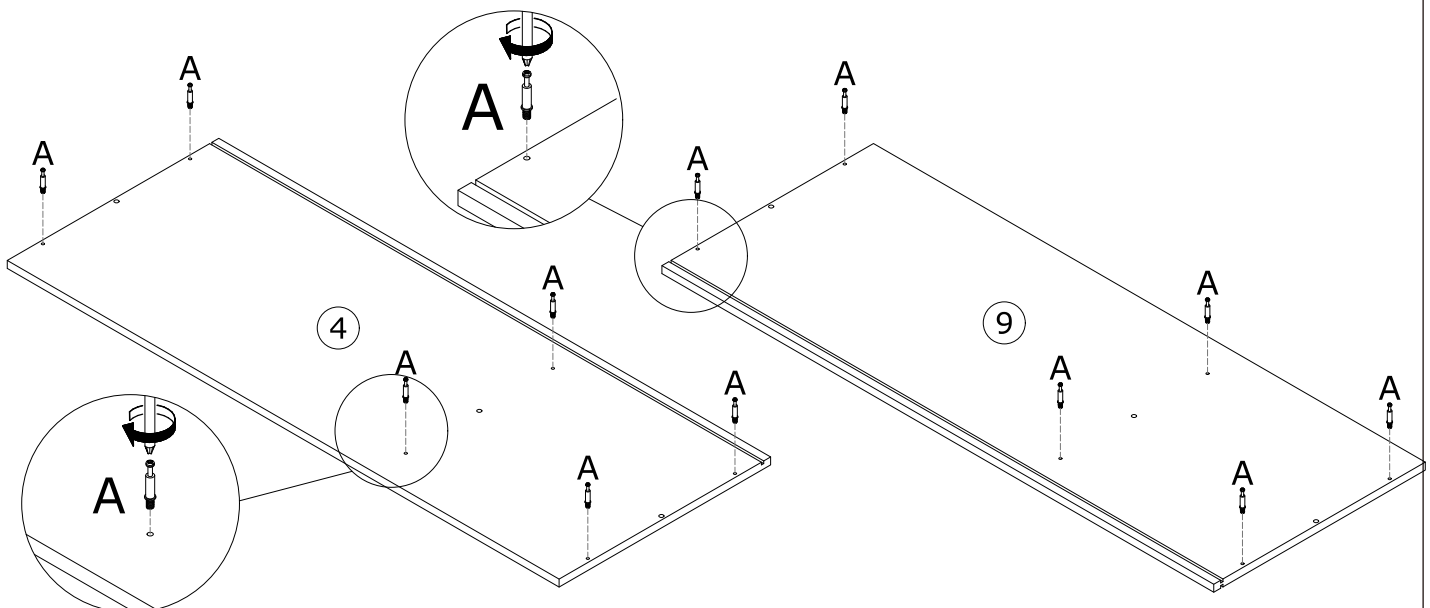
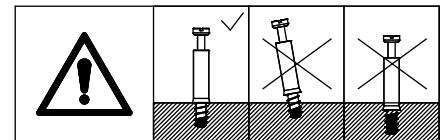


15


B x 6  Ø15 x 11mm	C x 3  Ø6 x 32mm	P x 4  M3 x 10mm	R x 2 	  
---	--	--	---	--

Attach plate #1,#2 and #3 to plate #4 with wooden dowel(C), insert cam lock(B) into plate #1,#2,#3 and turn clockwise to tighten as shown.

Slide plate #5 and #6 into available slots as shown.

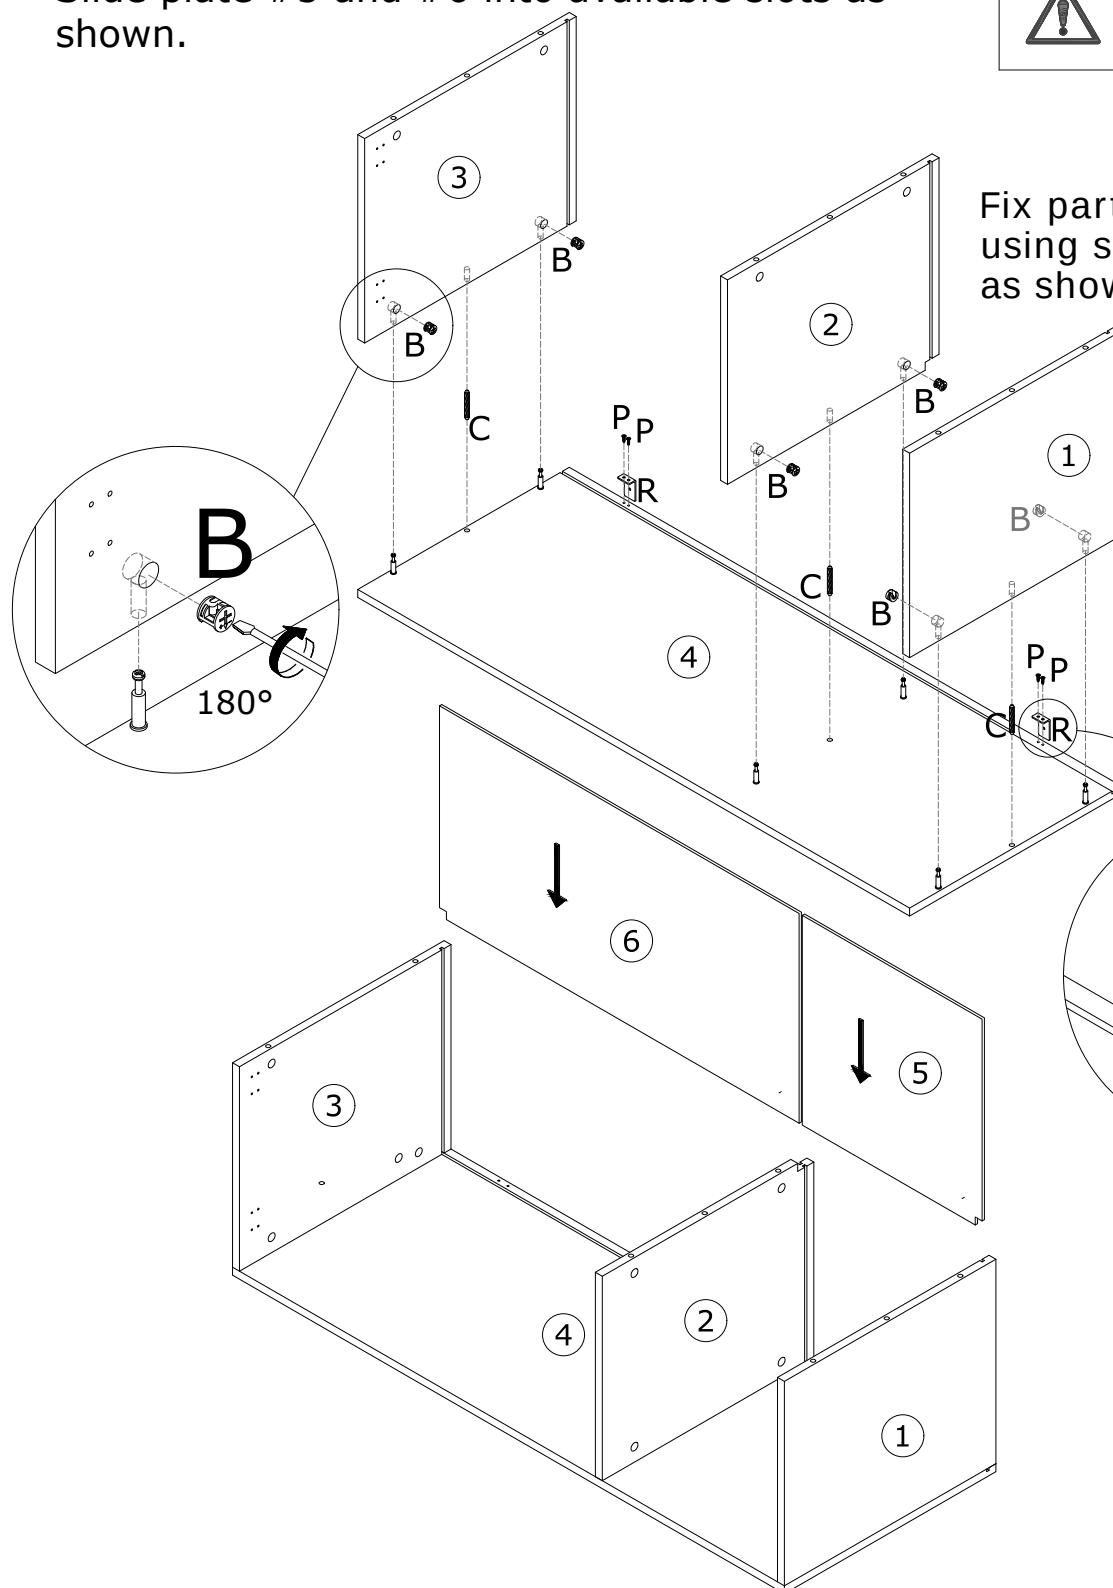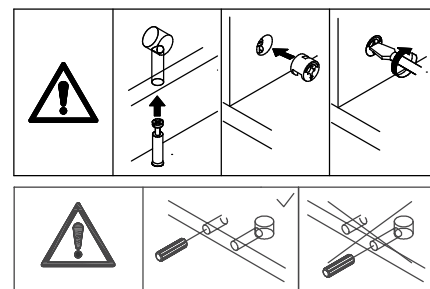


Fix part(R) to plate #4 using screw(P) as shown.

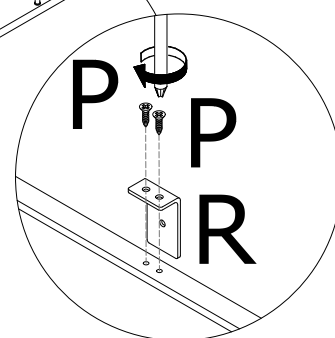

16

A x 6



M6 x 35mm

B x 6






Ø15 x 11mm

D x 3









M6 x 50mm



Cover plate #9 to plate #1, #2 and #3 with long wooden dowel (D), insert cam lock (B) into plate #1, #2, #3 and turn clockwise to tighten as shown.

Insert quickfit screw (A) into corresponding holes in plate #9 as shown.

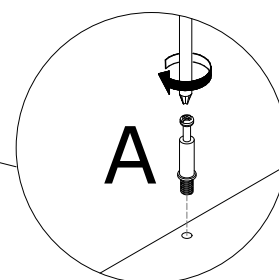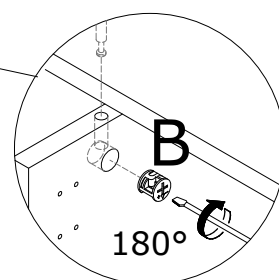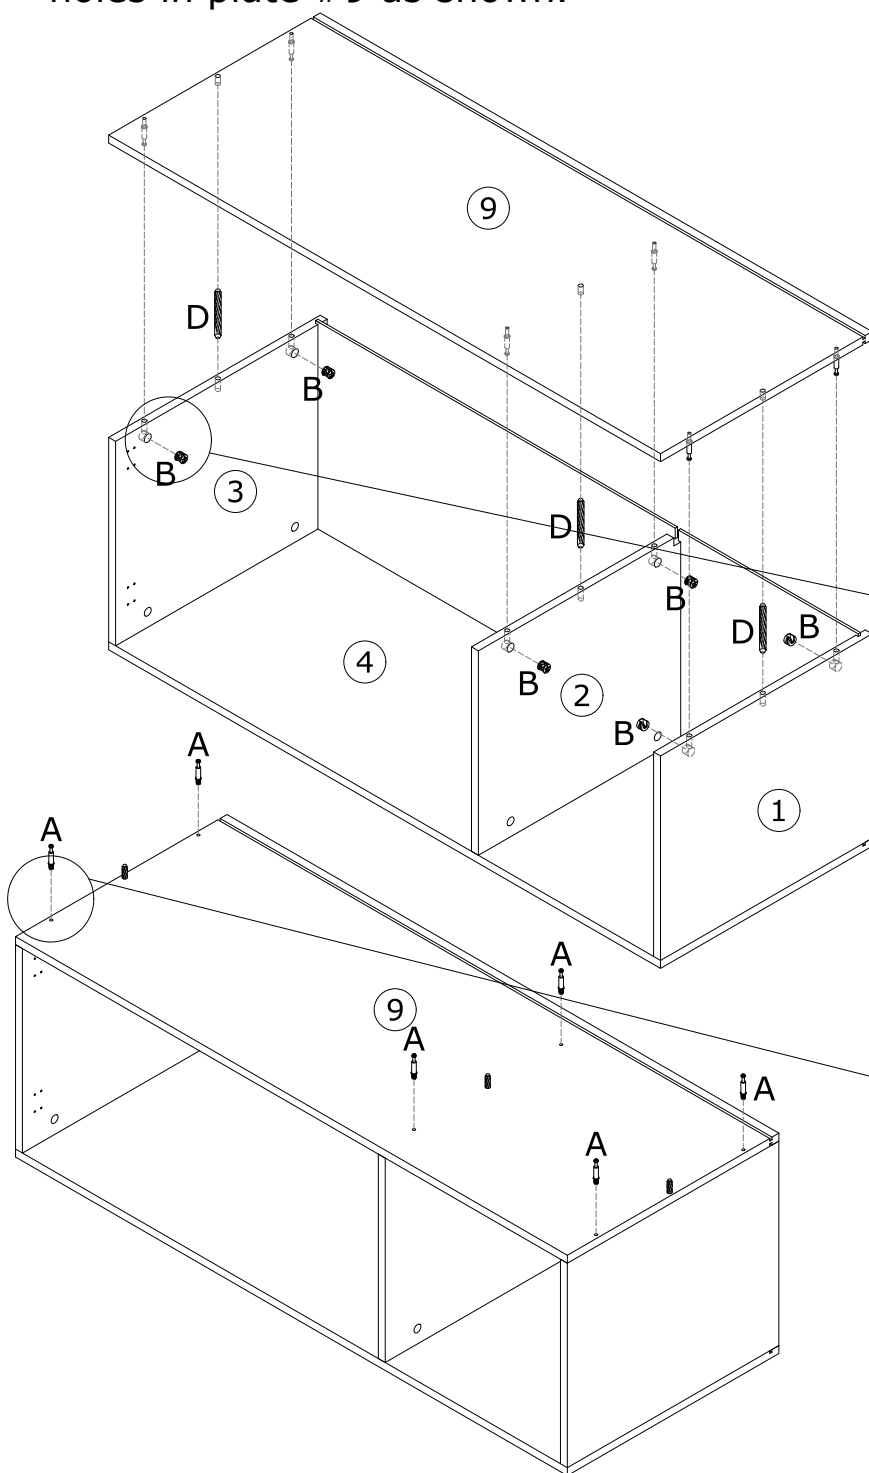
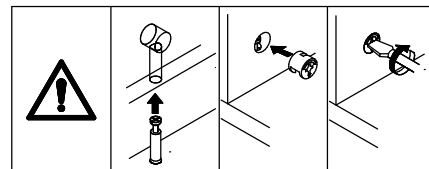
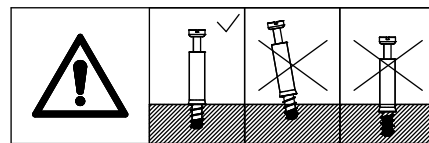


17


B x 6



Ø15 x 11mm

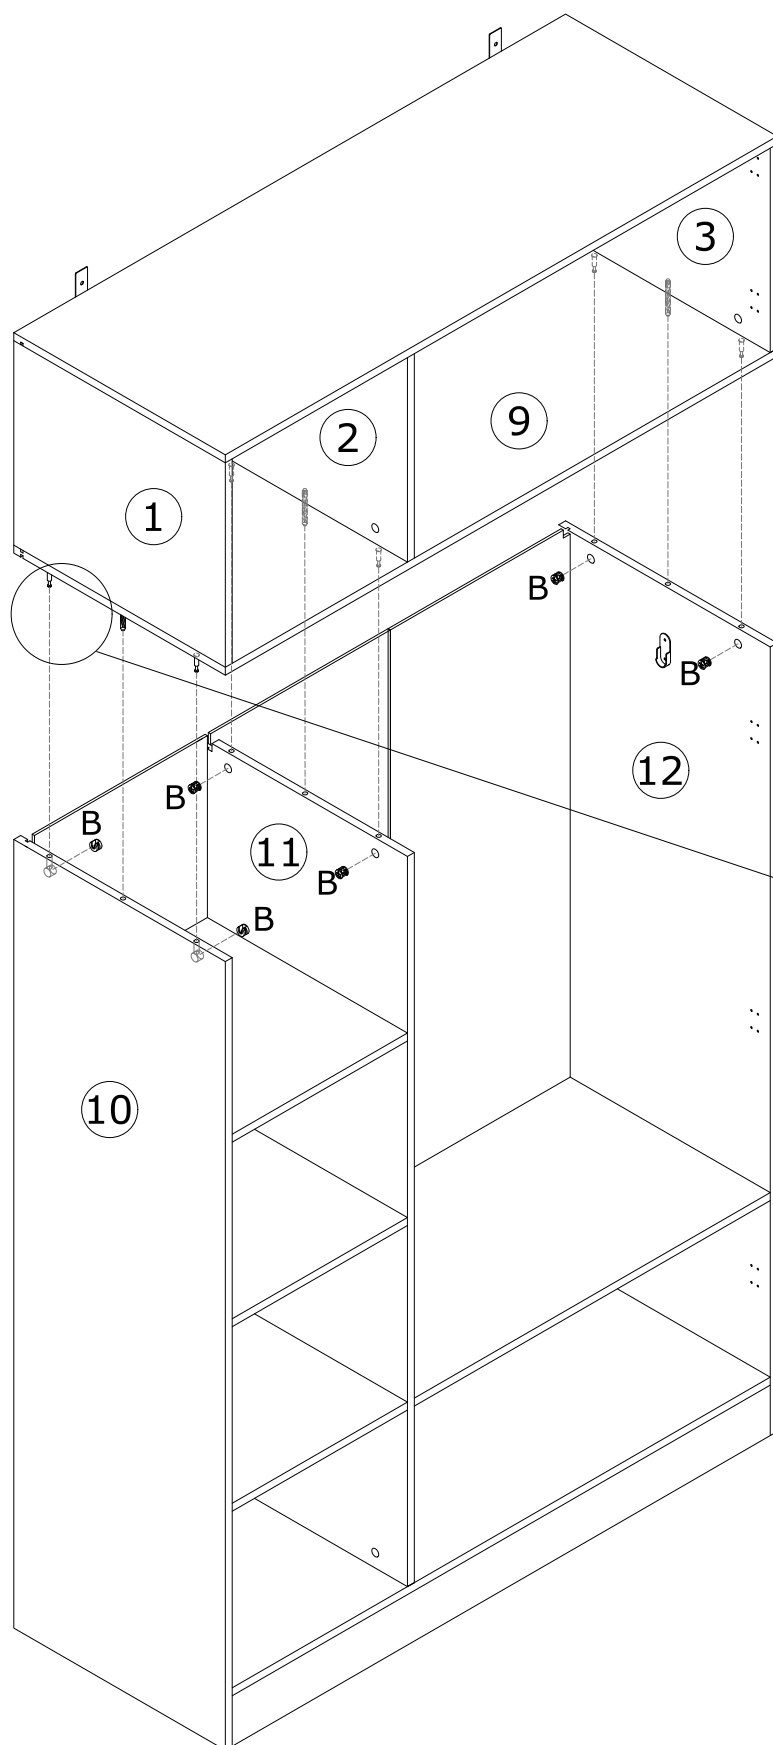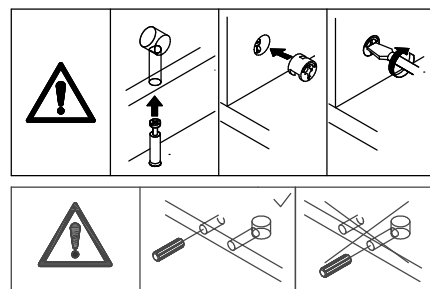

Connect two components (assembled in step 13 and step 16), insert cam lock(B) into plate #10, #11,#12, and turn clockwise to tighten as shown.

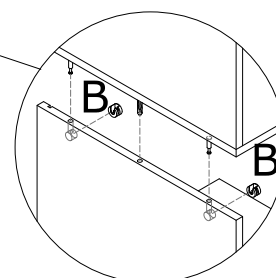

18


I x 16





O x 16






M3 x 16mm



Reinforce back plate using part(I) with screw(O) as shown.

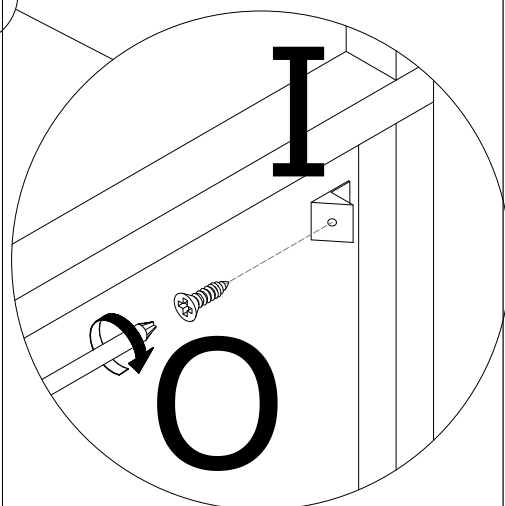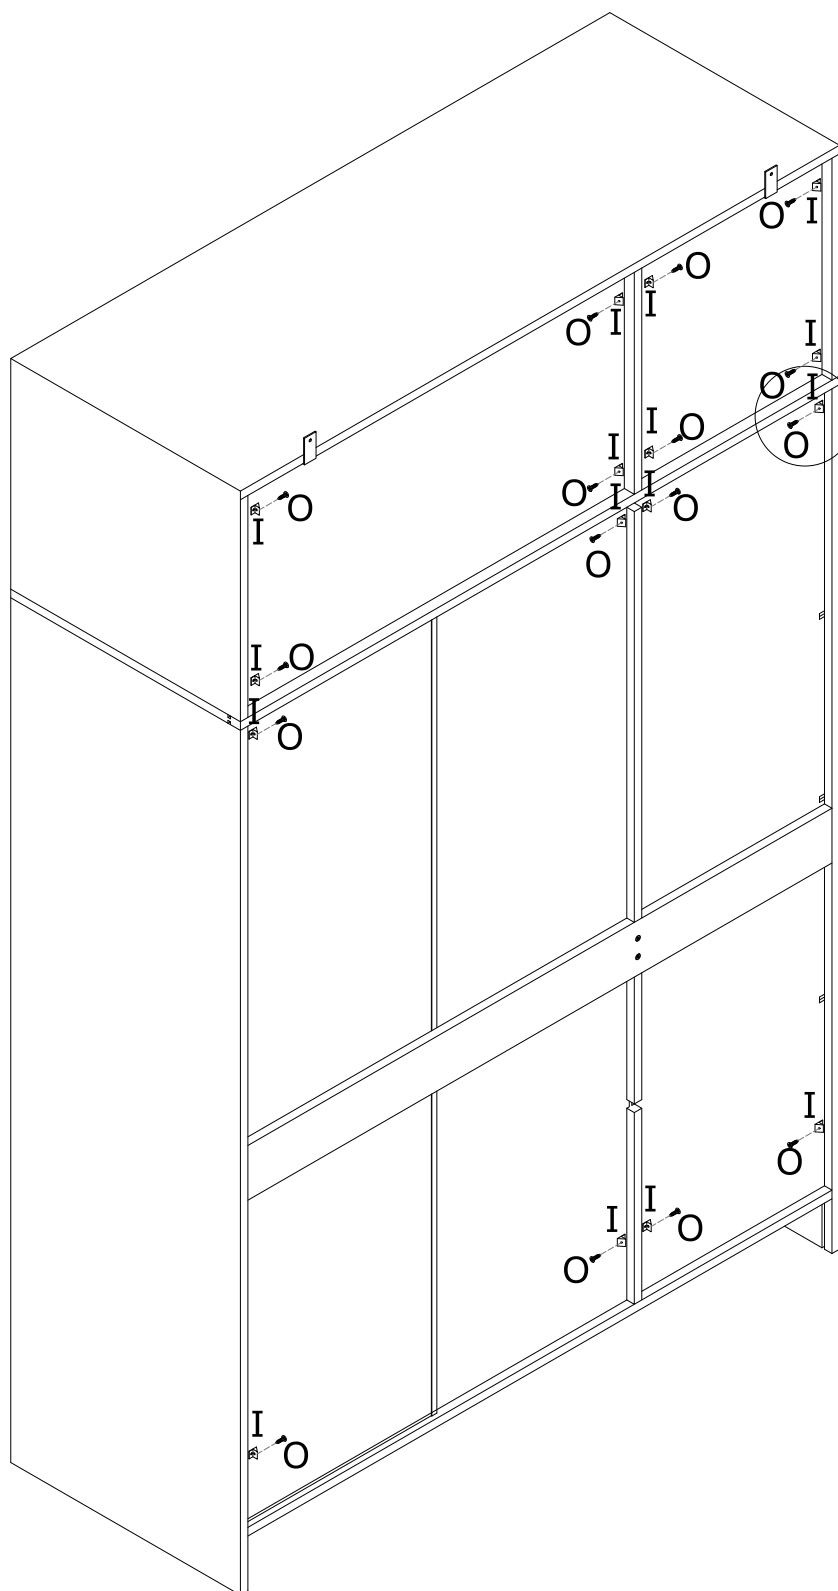


19

F x 10 	H x 30  M4 x 8mm	N x 5 	
---	---	--	---

Fix hinge(F) to plate #21,#7,#23 and #25 using screw(H) as shown.

Fix hinge(N) to plate #22 and #24 using screw(H) as shown.

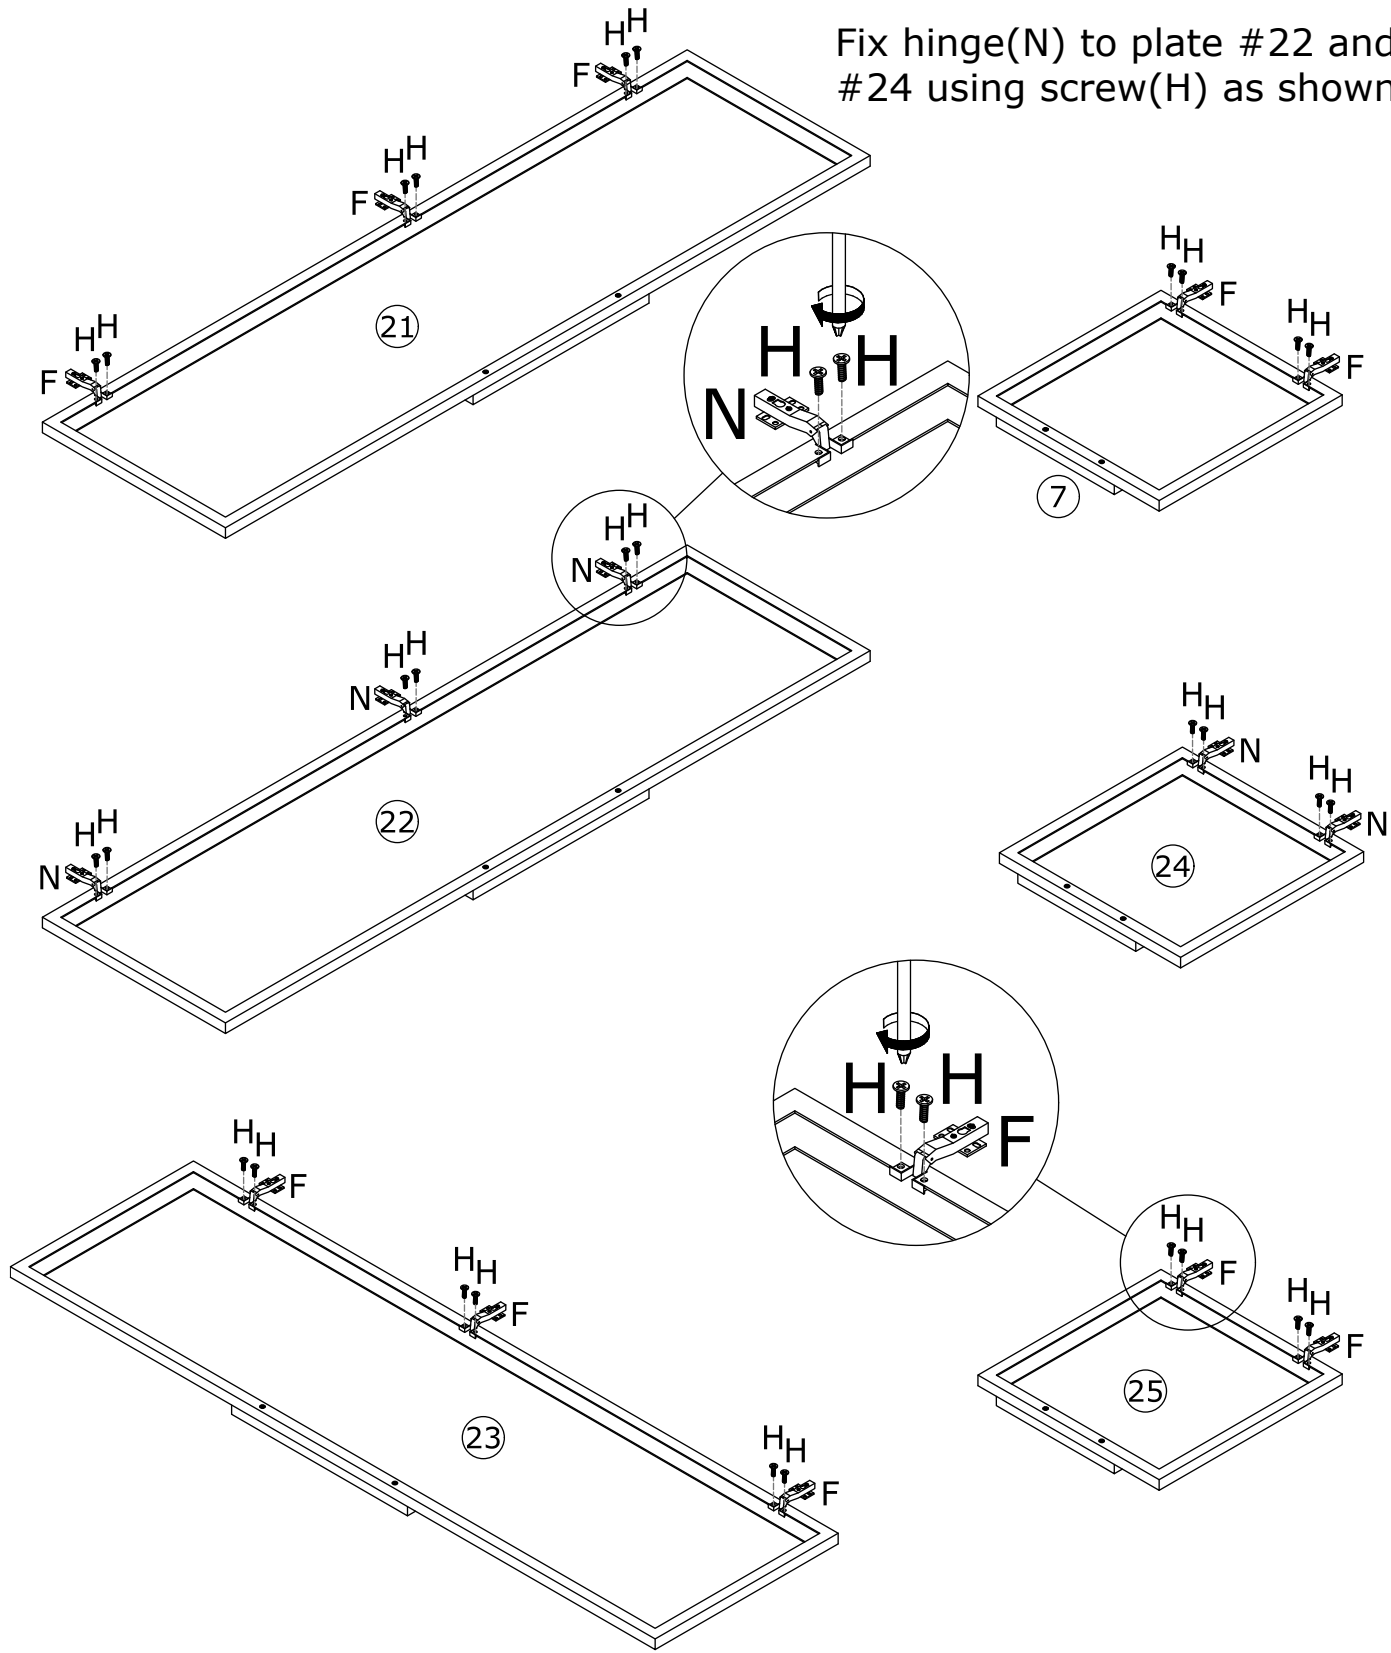


20


J x 4



K x 1




M x 1




P x 4




M3 x 10mm



K

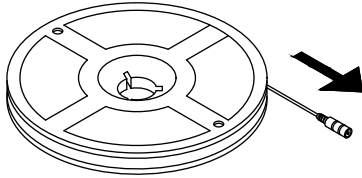

Open the package and get the LED strip,
clean the boards. keep the boards dry.

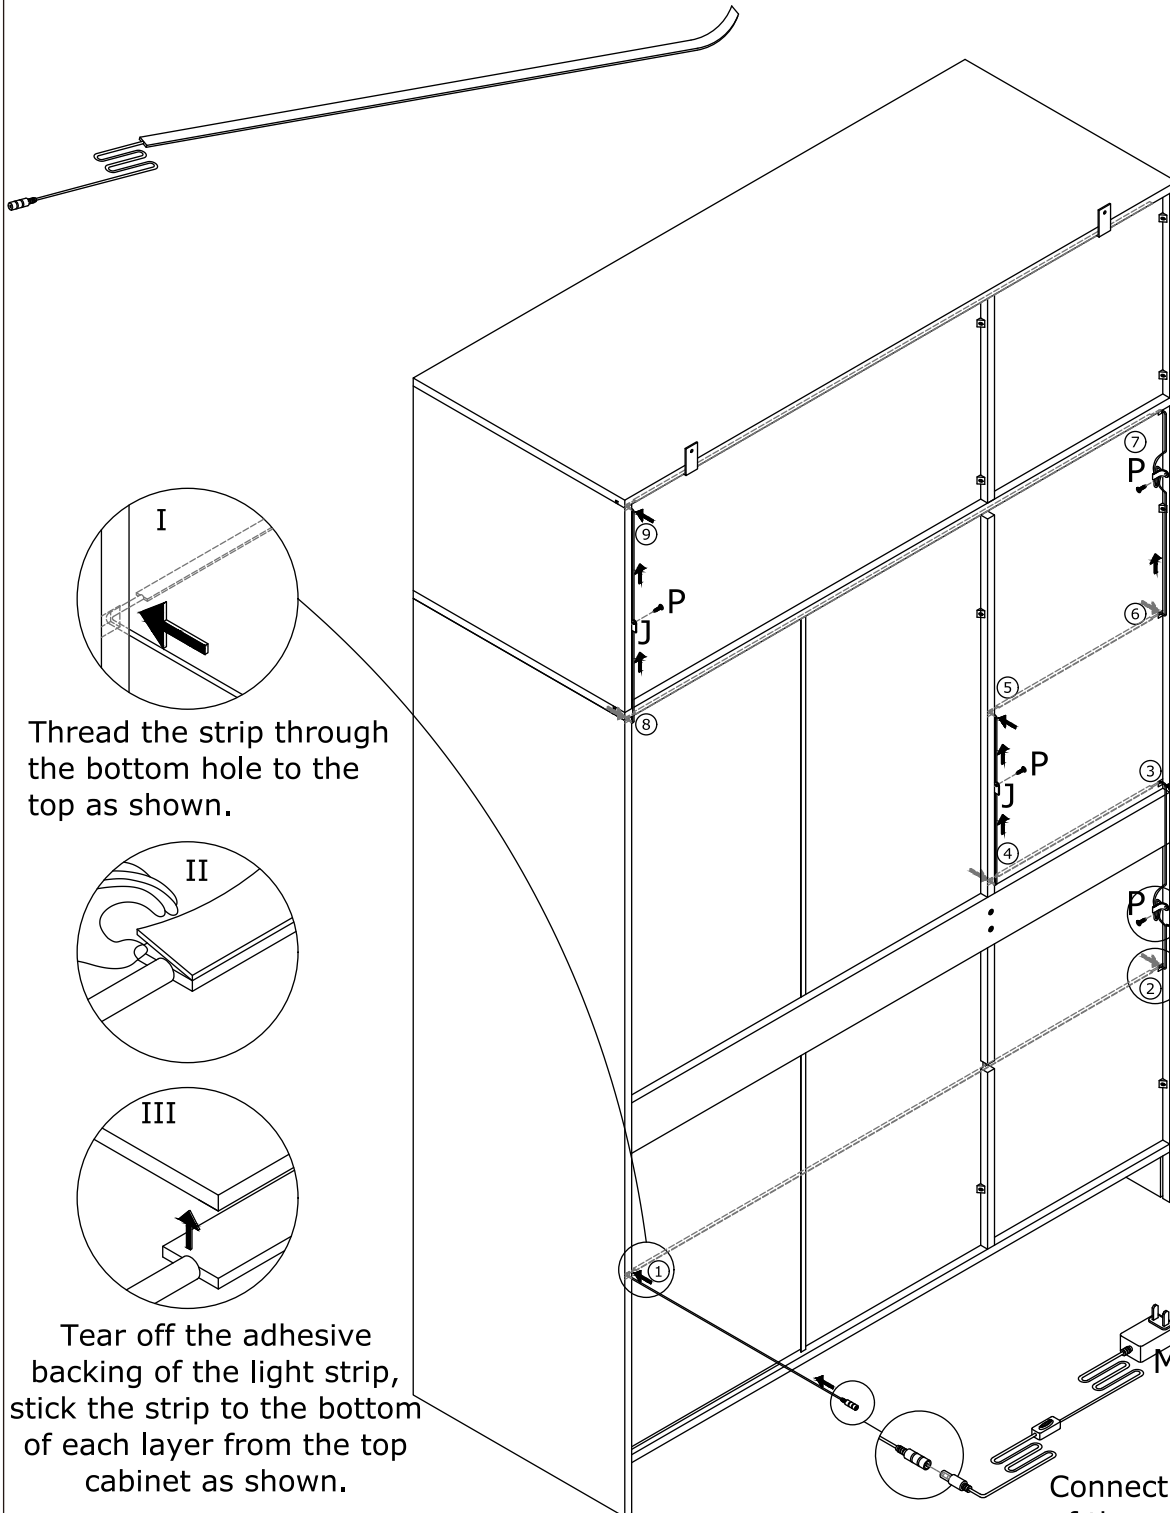

I



Thread the strip through
the bottom hole to the
top as shown.

II

III

Tear off the adhesive
backing of the light strip,
stick the strip to the bottom
of each layer from the top
cabinet as shown.

Use the cable
fastening and
screws to fix the
LED strip on the
back of the
cabinet as
shown.

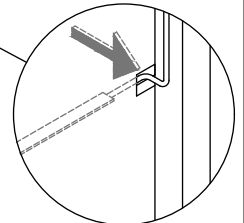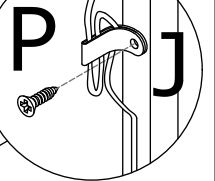

Connect the interface
of the adapter as shown.

19/24

21


J x 4



K x 1




M x 1




P x 4



M3 x 10mm



stick the strip to the bottom of each layer from the top cabinet as show. Please don't stick the strip to the back board.

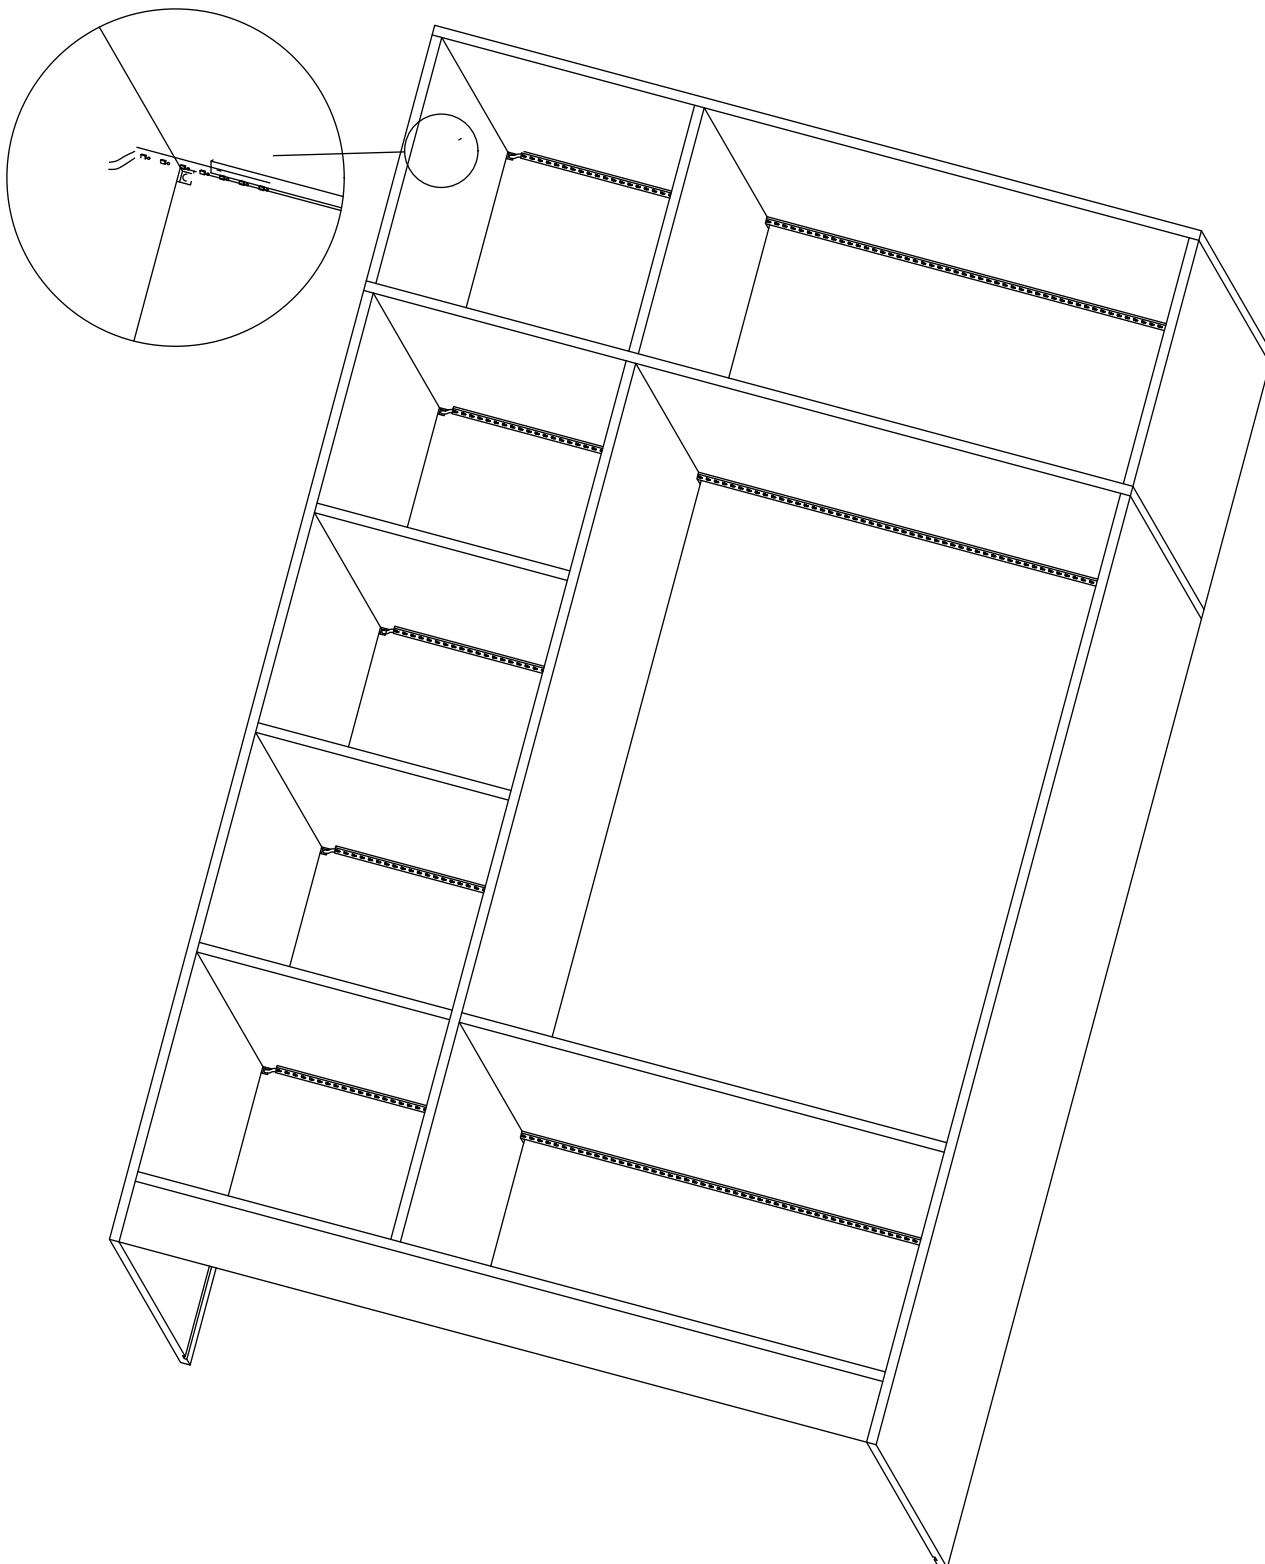


22

E x 60




M4 x 14mm

L-1 x 1



Place clothing rod(L-1) in.
Attach door plate #7 to plate #1;door plate #21
to plate #10;door plate #25 to plate #3;door plate
#23 to plate #12 by fixing hinge(F) with screw(E)
as shown.

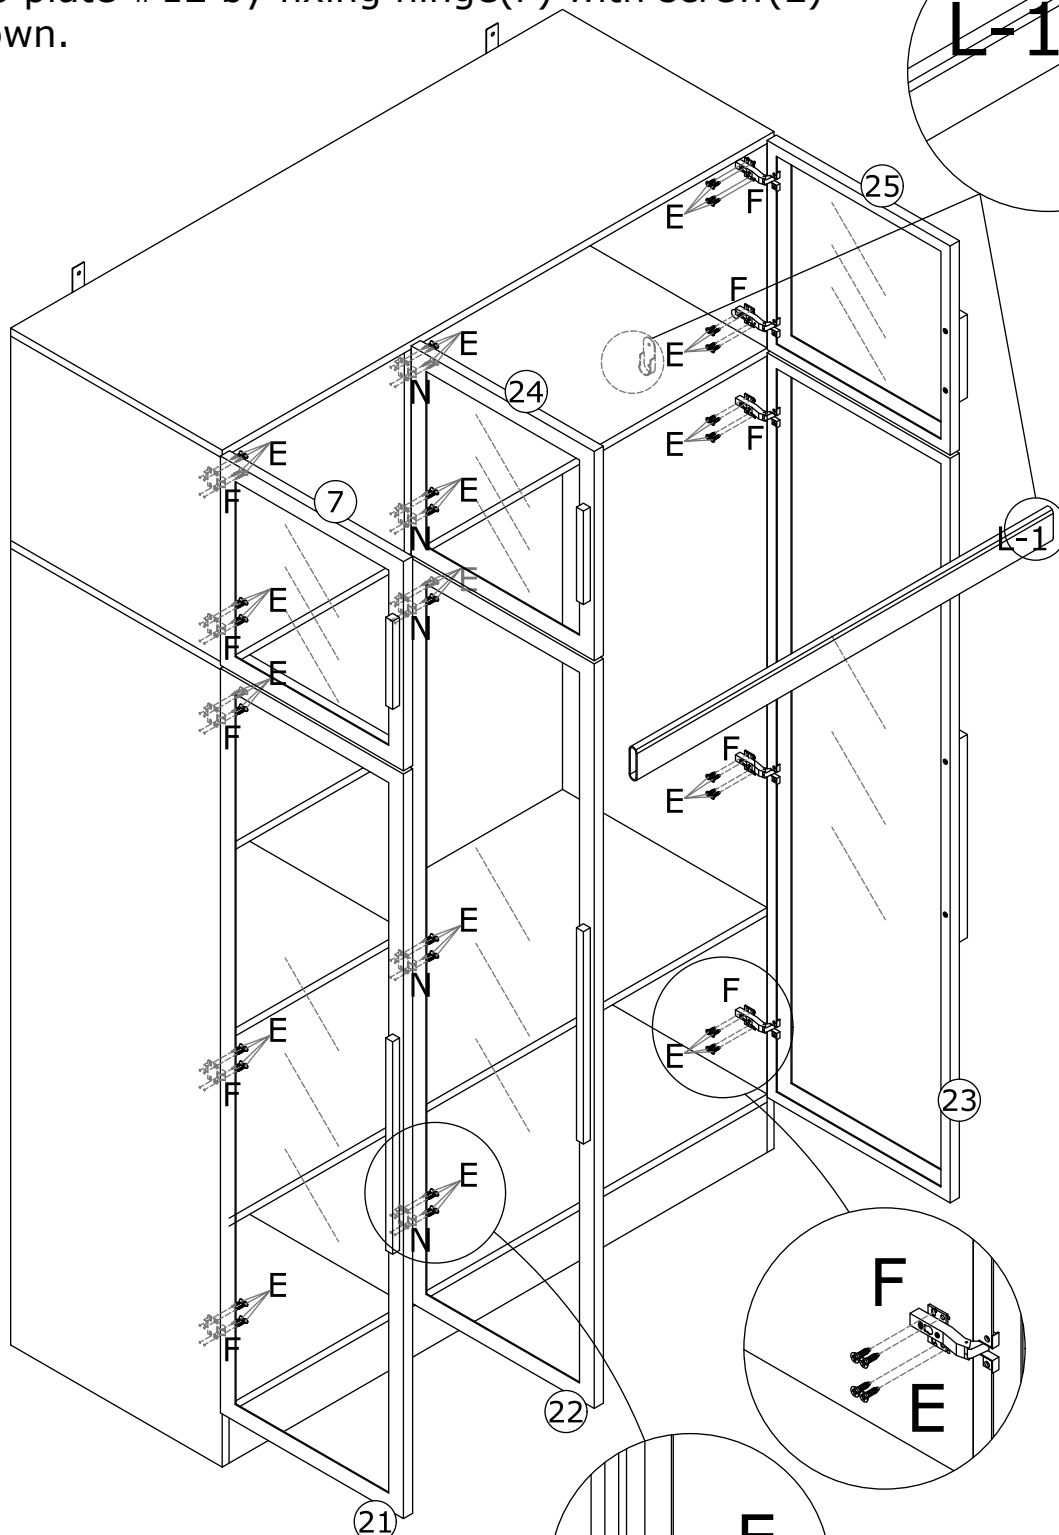

Attach door plate #24 to plate #2;
door plate #22 to plate #11 by fixing
hinge(N) with screw(E) as shown.

21/24

23

G x 2





M4 x 40mm

S x 2




Ø6 x 30mm

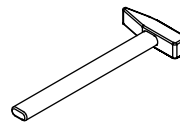

Drill holes on wall, knock part(S) into the holes.


Install anti-tipping device as shown.

WALL

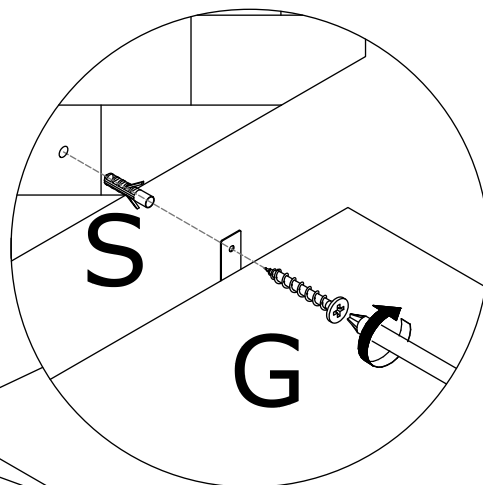


1.

WALL

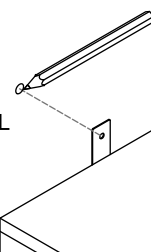


2.

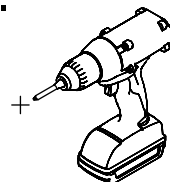

3.

WALL

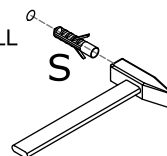



24

Q x 36



Use sticker(Q) to cover screw holes.

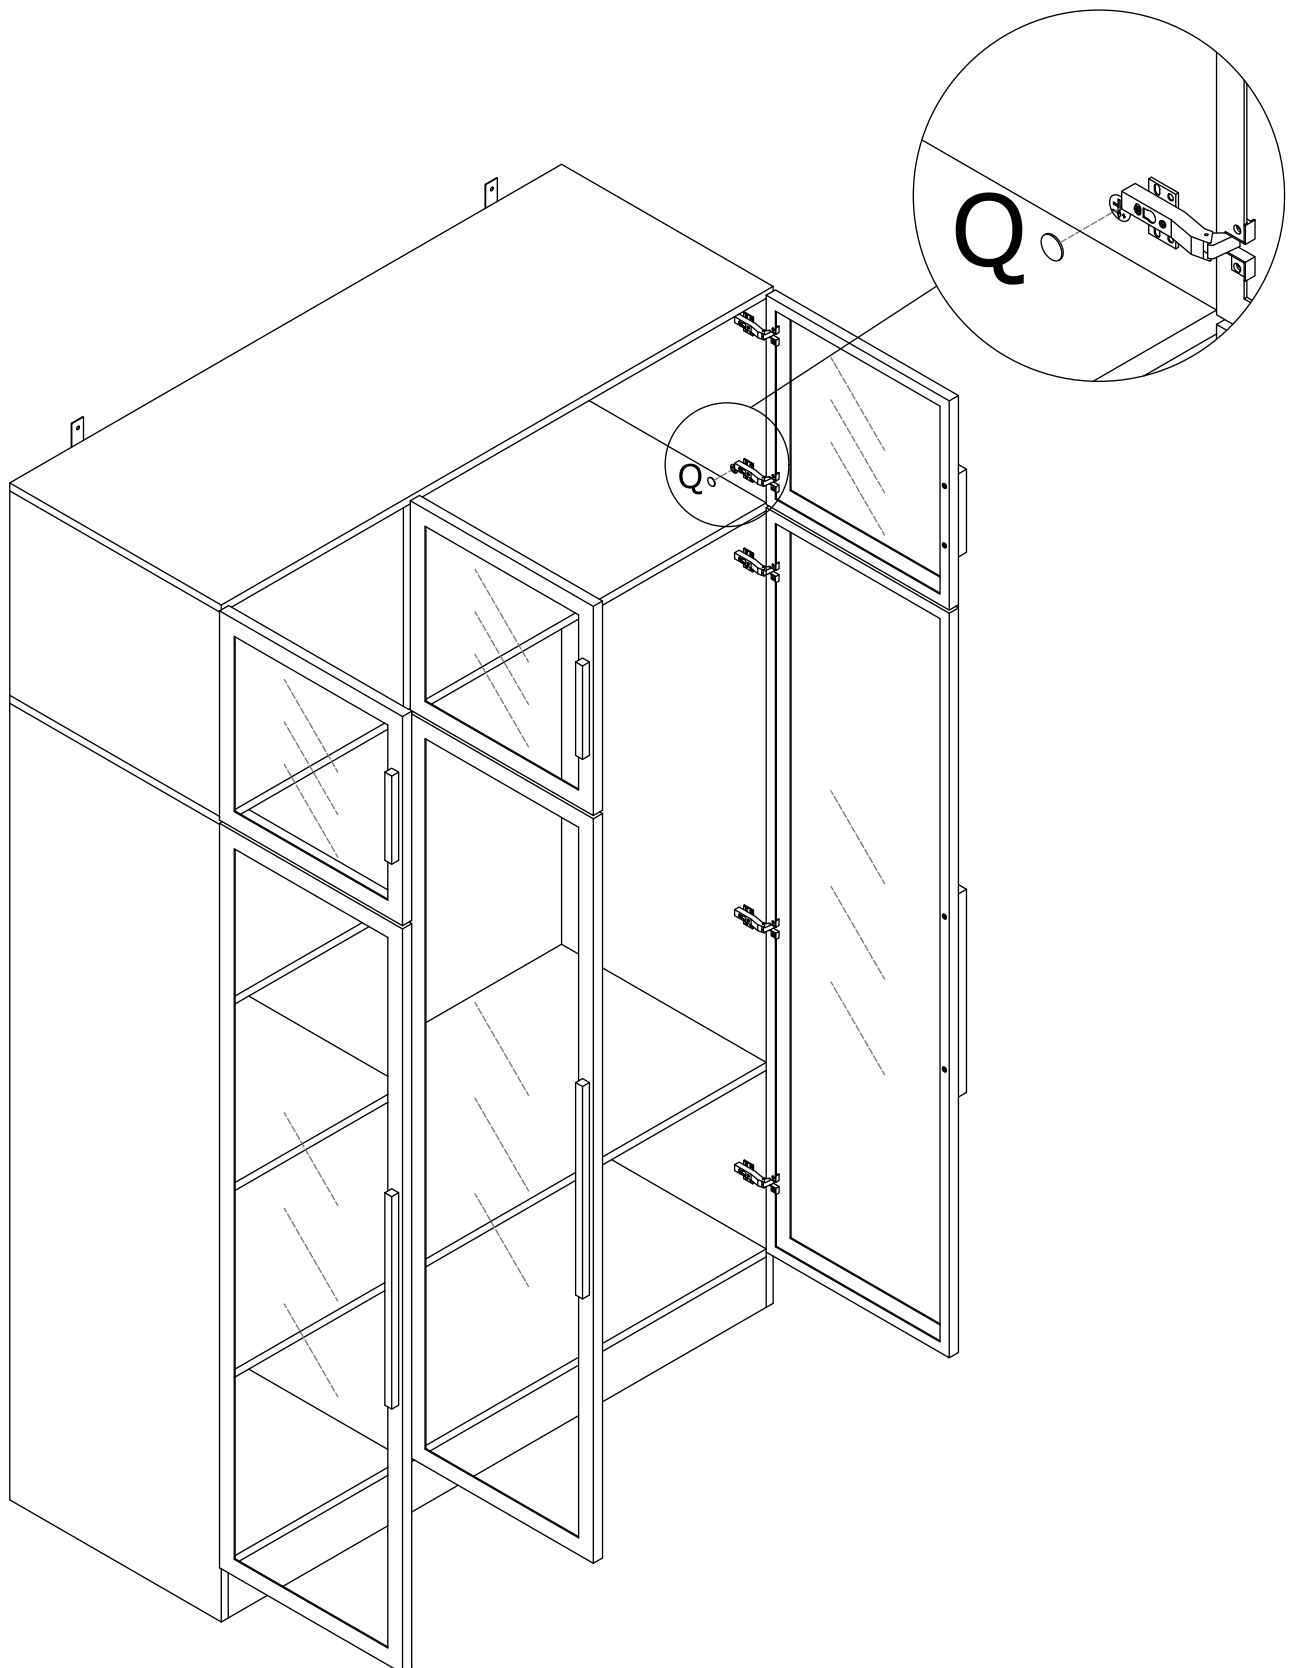




if there is misalignment after you install,adjust the screw to the best condition.





When the door position is not standard,please adjust the door according to the right picture.




Please place the cabinet on the flat floor before adjustment.

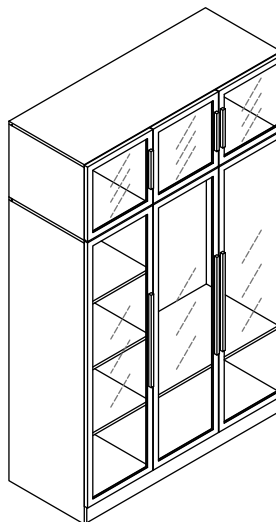


Adjust the door up and down to match the cabinet.

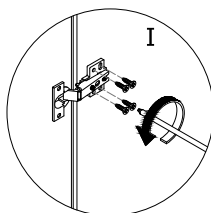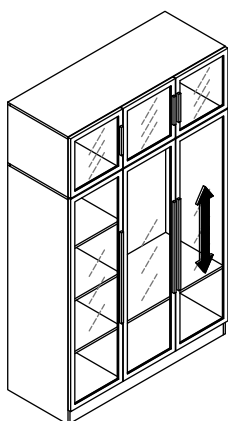

I:loosen the screw.


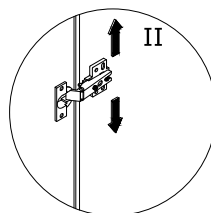


II:Adjust the upper and lower position.

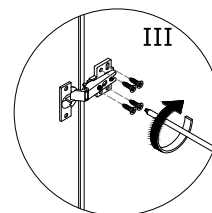


II:tighten the screw.

Adjust the door left and right to match the cabinet for suitable crack of the door

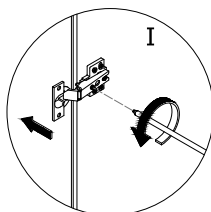
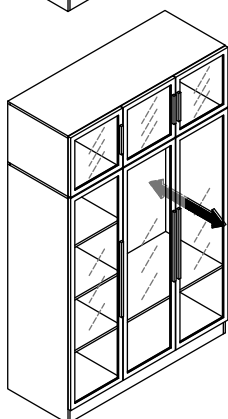


I:loosen the screw to keep hinge apply force toward the direction of arrow.

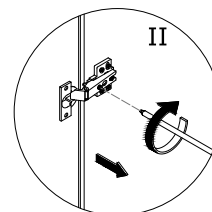


II:tighten the screw to keep hinge apply force toward the direction of arrow.

Adjust the door backwards and forwards to match the cabinet.

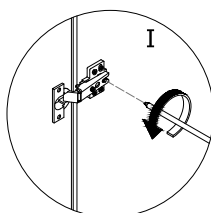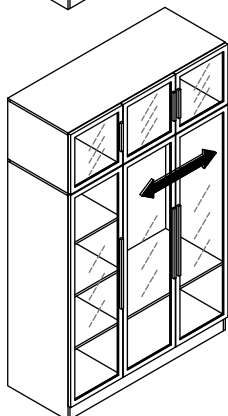

I:loosen the screw.

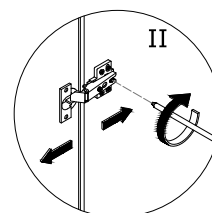

II:Adjust the distance between front and back.

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.