

כסרובור

כסרובור is constantly making efforts to improve the quality and performance of our products, so we may make changes to our appliances without updating this manual.

Electronic version of this manual is available at: www.cnhbhob.com

כסרובור®

AN EXCELLENT PARTNER FOR YOUR KITCHEN

BUILT IN GAS HOB

INSTALL, USE, CARE GUIDE & INSTALLATION INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

Carefully read the following Important information regarding installation safety and maintenance. Keep these instruction for future reference

HBG2401(-Y), HBS2301(-N), HBG4601, HBG4602
HBG4608(-Y), HBS4503, HBS4508, HBS5701(-N)
HBG5720(-Y), HBG5813(-Y), HBG5801, HBS5910

USER MANUAL

THANK YOU FOR YOUR PURCHASE.

Thank you for your purchase. We know that you have many brands and products to choose from and we are honored to know that you have decided to take one of our products into your home and hope that you enjoy it.

HBHOB appliances are designed according to the strictest safety and performance standard for the North American market. We follow the most advanced manufacturing philosophy. Each appliance leaves the factory after thorough quality inspection and testing. Our distributors and our service partners are ready to answer any questions you may have regarding how to install, use and care for your products. We hope that this manual will help you learn to use the product in the safest and most effective manner .

If you have any questions or concerns, please contact the dealer from whom you purchased it, or contact our Customer Support at:

Our Email: sales7@hbhob.cn
WhatsApp/WeChat: +86-18923216100

Website: **cnhbhob.com**

The manual also includes directions for the professional installer that will install the product in your home. We recommend using trained personnel for professional installation.

Please keep this manual for future use.

THANK YOU



IMPORTANT SAFETY INSTRUCTIONS

BEFORE YOU BEGIN:

Please Read all instructions completely and carefully.

! CAUTION !

IMPORTANT: Save these instructions for local inspector's use.

IMPORTANT : Observe all governing codes and ordinances

Note to Installer : Be sure to leave these instructions with the Consumer

Note to Consumer: Keep these instructions for future reference.

IMPORTANT: Check the leakage according to the installation instruction.

Product failure due to improper installation is not covered under the Warranty

! WARNING !

Disconnect all electrical power at the main circuit breaker or fuse box before installing. Installation of this cooktop must conform with local codes or, in the absence of local codes, with the National Fuel Gas Code ANSI Z223.

- Be sure your cooktop is installed properly by a qualified installer or service technician.
- To eliminate reaching over surface burners, cabinet storage above burner should be avoided
- Do not install the unit near an outside door or where a draft may affect its use.

! WARNING !

FOR YOUR SAFETY:

If the information in this manual is not followed exactly, a fire, explosion or gas leak may result, causing property damage, personal injury or death.

! DANGER !

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

! CAUTION !

WHAT TO DO IF YOU SMELL GAS

- Do not try to light any appliance. Do not touch any electrical switch; do not use any phone in your building.
- Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.
- Installation and service must be performed by a qualified installer, service agency or the gas supplier.



! WARNING !

- A statement that the installation must conform with local codes or, in the absence of local codes, with the National Fuel Gas Code.
- A statement that the installation of appliances designed for manufactured (mobile) home installation must conform with the Manufactured Home Construction and Safety Standard, or with local codes where applicable.
- If an external electrical source is utilized, a statement that the appliance, when installed, must be electrically grounded in accordance with local codes or, in the absence of local codes, with the National Electrical Code.
- A statement that:
 - (a) The appliance and its individual shutoff valve must be disconnected from the gas supply piping system during any pressure testing of that system at test pressures in excess of 1/2 psi (3.5kpa).
 - (b) The appliance must be isolated from the gas supply piping system by closing its individual manual shutoff valve during any pressure testing of the gas supply piping system at test pressures equal to or less than 1/2 psi (3.5kPa).
- A statement of the maximum gas supply pressure in accordance with the inlet pressure rating of the gas appliance pressure regulator supplied.
- A description of proper vent installation, if applicable, and the specific type of gas vent to be used, including a statement that the vent pipe must be mechanically fastened to the flue collar and instructions for accomplishing this attachment.
- The cooktop, as shipped from the factory, is set for use with its intended gas. If you wish to use your cooktop with the alternate gas, you must first replace the orifices and convert the pressure regulator.
- This conversion must be performed by a qualified installer or gas supplier in accordance with the manufacturer's instructions and all codes and requirements of the authority having jurisdiction. Failure to follow instructions could result in serious injury or property damage. The qualified agency performing this work assumes responsibility for the conversion.



TABLE OF CONTENTS

INSTALLATION PREPARATION	6
ELECTRICAL REQUIREMENTS	7
CONVERT LP GAS TO NATURAL GAS OPERATION	7
INSTALLATION OPTIONS	8
DIMENSIONS AND CLEARANCE	9
POWER SUPPLY LOCATIONS	11
INSTALLATION INSTRUCTIONS	12
ASSEMBLE BURNERS, CHECK IGNITION	13
ADJUST BURNER FLAMES	15
CARE AND CLEANING	16
WARRANTY AND SERVICE	18



INSTALLATION PREPARATION

1. When preparing cooktop opening, make sure the inside of the cabinet and the cooktop do not interfere with each other. (See section on preparing the opening.)
2. Slide the cooktop out of the end of the box. Remove packaging materials. Use the shipping carton as a pad to protect customer countertops or flooring.
3. Remove Installation Instructions from literature package and read them carefully before you begin. Be sure to place all literature, Owner's Manual, Installations, etc. in a safe place for future reference.
4. Make sure you have all the tools and materials you need before starting the installation of the cooktop.
5. Your home must provide the adequate electrical service needed to safely and properly you're your cooktop. (Refer to section on electrical requirements.)
6. When installing your cooktop in your home, make sure all local codes and ordinances are followed exactly as stated.
7. Make sure the wall coverings, countertop and cabinets around the cooktop can withstand heat (up to 200°F) generated by the cooktop.


PARTS INCLUDED:




MATERIALS EXCLUDED BUT YOU MAY NEED:

- Joint Sealant Pipe Fittings Shut-Off Valve,
- A regulator
- CSA-Approved Flexible Gas Line
- Gas line

A Regulator



Flexible Connector



Note: Purchase new line, do not use previously used flexible gas line.

IN THE COMMONWEALTH OF MASSACHUSETTS:

- This product must be installed by a licensed plumber or gas fitter.
- When using ball-type gas shut-off valves, they shall be the T-handle type.
- A flexible gas connector, when used, must not exceed 3 feet.



Be sure the installation of this product in a mobile home conforms with the Manufactured Home Construction and Safety Standard. If this standard does not apply, you must follow the standard for Manufactured Home Installations, Sites and Communities, or with local codes. You can get a copy of the Federal Standard by Writing: Office of Mobile Home Standards HUD Building 451 7th Street, S.W. Washington, D.C. 24010.

Electrical requirements

This appliance must be supplied with the proper voltage and frequency and connected to an individual, properly grounded branch circuit, protected by a circuit breaker or fuse having amperage as noted on the rating plate.

We recommend you have the electrical wiring and hookup of your cooktop connected by a qualified electrician. After installation, have the electrician show you where your main cooktop disconnect is located.

Check with your local utilities for electrical codes which apply in your area. Failure to wire your cooktop according to governing codes could result in a hazardous condition. If there are no codes, your cooktop must be wired and fused to meet the requirements of the


Convert LP Gas and Natural Gas Operation

Take off the burner cap and aluminum cap, then replace the nozzle "J" as show on the picture.


Replace the gas connector operation:

Take off the gas connector, replace the gas connector in parts package.

Notice: after replaced the gas connector, check the leakage by using soap and water around the connections. Do not test by flame.

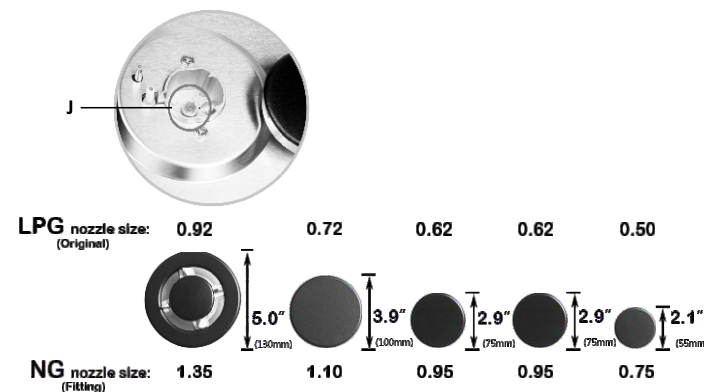

Special attention: when the fire is too small or does not catch fire after the installation is completed. Please check your gas supply should be matched.

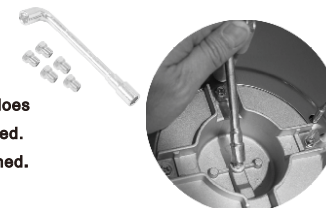

⚠ PAY ATTENTION ⚠

Special attention: when the fire is too small or does not catch fire after the installation is completed. Please check your gas supply should be matched.

ADVANCE PLANNING

- Refer to "Installation Preparation" for information on appropriate placement and necessary clearances when planning installation.
- Avoid placing cabinetry directly above cooktop when possible.
- If cabinetry is used above cooking surface:
 1. Use cabinets no more than 13" deep.
 2. Maintain 30" minimum clearance between cooktop and unprotected cabinets directly above cooktop.
 3. If clearance is less than 30", protect cabinet bottoms with flame-retardant millboard at least 1/4" thick, or gypsum board at least 3/16" thick, covered with 28 gauge sheet steel or .02" thick copper.
 4. Clearance between cooktop and protected cabinetry must not be less than 24".
 5. An exhaust hood that projects at least 5" beyond front of cabinets can reduce risk of burns caused by reaching over heated surface units.
 6. Working areas adjacent to the cooktop should have 18" minimum clearance between countertop and cabinet bottom.
- A 36" or wider exhaust hood with 350 CFM or greater airflow rating is recommended for use over this cooktop.
- Installation must conform with local codes. In the absence of local codes, the gas cooktop must comply with the National Fuel Gas Code.
- Gas supply should be located near the opening for this cooktop. The supply should provide natural gas at 7" of water column pressure (11" of water column for LP gas) and a maximum of 14" of water column for natural or LP gas.
- The electric spark ignition feature for this model requires a 120V electrical power supply be located in the immediate vicinity of this cooktop (see Electrical Connections section of this manual).

INSTALLATION OPTIONS

Cooktop and Single Oven Combination Installation

These cooktops may be installed over a Oven.


-Consideration must be given to electrical and gas supply locations.

Installation Above Cabinet Drawers

When installing the cooktop above a base cabinet with drawers, it may be necessary to use a shorter depth (front to back) drawer to allow clearance for the gas connection.

DIMENSIONS AND CLEARANCE

- To ensure accuracy, it is best to make a template for the opening.
- Make sure the sides of the opening are parallel and the rear and front cuts are exactly perpendicular to the sides.
- Make sure the wall coverings, countertop and cabinets around the cooktop can withstand heat (up to 200°F) generated by the cooktop.

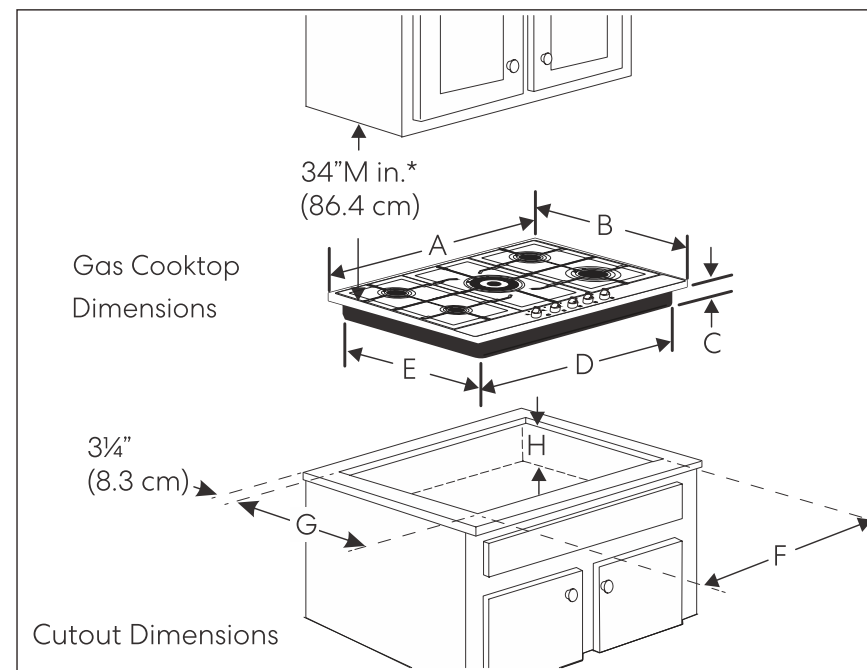

MODELS	PRODUCT DIMENSIONS			COOKTOP		CUT OUT DIMENSIONS		
	A	B	C	D	E	F	G	H
HBG2401(-Y)/HBS2301(-N)	12"(31)	20"(51)	4.7"(12)	10.6"(27)	18.5"(47)	10.8"(27.5)	18.7"(47.5)	8"(20.8)
HBG4601/HBG4602/ HBG4608(-Y)/HBS4503/HBS4508	23"(59)	20"(51)	4.7"(12)	21.8"(55.5)	18.5"(47)	22"(56)	18.7"(47.5)	8"(20.8)
HBS5701(-N) / HBG5720(-Y)	30"(76)	20"(51)	4.7"(12)	28.8"(73)	18.5"(47)	29"(73.5)	18.7"(47.5)	8"(20.8)
HBG5813(-Y)	34"(87)	20"(51)	4.7"(12)	32.6"(83)	18.5"(47)	32.8"(83.5)	18.7"(47.5)	8"(20.8)
HBG5801	35"(90)	20"(51)	4.7"(12)	32.6"(83)	18.5"(47)	32.8"(83.5)	18.7"(47.5)	8"(20.8)
HBS5910	35"(90)	20"(51)	4.7"(12)	34.2"(87)	18.5"(47)	34.4"(87.5)	18.7"(47.5)	8"(20.8)

All dimensions are stated in inches

Dimnsion H includes a 5" space underneath the cooktop for connection to gas supply line.

Install a manual shut-off valve in the gas line in an easily accessible location outside the cooktop. Be sure you know how and where to shut off the gas supply to the cooktop. Install the electrical outlet 12" below the countertop.

Electrical supply:

This cooktop features pilotless electric ignition for energy savings and reliability. It operates on a 120 volt, 60 Hz power supply. A separate circuit, protected by a 15 amp time delay fuse or circuit breaker is required.

A properly-grounded 3-prong receptacle should be located within reach of the cooktop's four-foot power cord.



(Please read carefully)


FOR PERSON SAFETY, THIS APPLIANCE MUST BE PROPERLY GROUNDED.

- The power cord of this appliance is equipped with a three-prong (grounding) plug which mates with a standard three-prong grounding wall receptacle to minimize the possibility of electric shock hazard from this appliance.
- The customer should have the wall receptacle and circuit checked by a qualified electrician to make sure the receptacle is properly grounded and has correct polarity.
- Where a standard two-prong wall receptacle is encountered, it is the personal responsibility and obligation of the customer to have it replaced with a properly grounded three-prong wall receptacle.

Do Not, Under Any Circumstances, Cut Or Remove The Third (Ground) Prong From The Power Cord.

Do not use an extension cord.

Grounding type wall receptacle

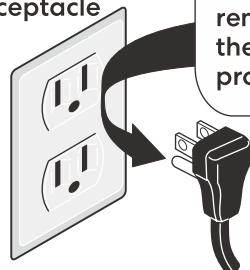

Do not, under any circumstances, cut, remove, or bypass the grounding prong.

Power supply cord with 3-prong grounding plug.

POWER SUPPLY LOCATIONS

Gas supply: These cooktops are shipped from the factory set for either LP gas or natural gas. Check to be sure you have the correct cooktop for the type of gas being used


- The pressure regulator must be connected in series with the manifold of the cooktop and must remain in series with the supply line regardless of type of gas being used.
- The natural gas model is designed to operate at 5" water column pressure. A regulator is required at the natural gas source to provide a minimum of 6" water column to the cooktop regulator
- The liquid propane model is designed to operate at 10" water column pressure. A regulator is required at the LP source to provide a minimum of 11" water column to the cooktop regulator. For ease of installation, and if local codes permit, the gas supply line into the cooktop should be 1/2" or 3/4" ID flexible metal appliance connector, three to five feet long.

NOTE: Purchase new flexible line. DO NOT USE OLD, PREVIOUSLY USED FLEXIBLE LINE

The gas inlet is located on the bottom of the burner box at the rear and center.

Make gas connection through rear wall, or on cabinet floor at rear, as illustrated.

- 1- Install the house gas supply at least 1" from the back wall.
- 2- Locate the electrical outlet 12" below the countertop.

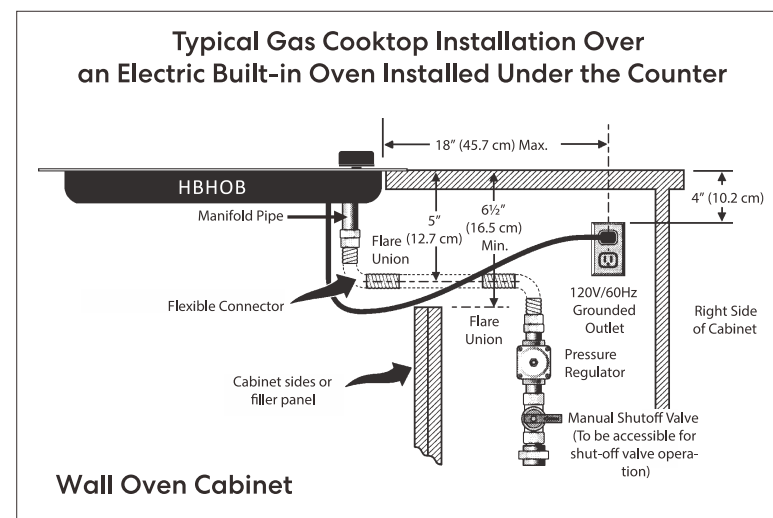

INSTALLATION INSTRUCTIONS

1-INSTALLING THE COOKTOP

A. Remove the packing materials of the cooktop, especially the tapes on burners.


B. Insert the cooktop centered into the cutout opening. Make sure the front edge of the countertop is parallel to the cooktop. Check clearances at the front, back and sides.

2-INSTALL PRESSURE REGULATOR

A. Screw the regulator onto the burner box bottom pipe connection. Make sure the top of the regulator is facing toward the cabinet front and the arrow on the back of the regulator points to the cooktop.

B. Complete the connection between the regulator and the shut-off valve.

C. Before testing for leaks, make sure all burner knobs are in the OFF position. After connecting the cooktop to gas, check system for leaks with a manometer. If a manometer is not available, turn the gas supply on to the cooktop and use a liquid leak detector at all joints and connections to check for leaks. Tighten all connections if necessary to prevent gas leakage in the cooktop or supply line.

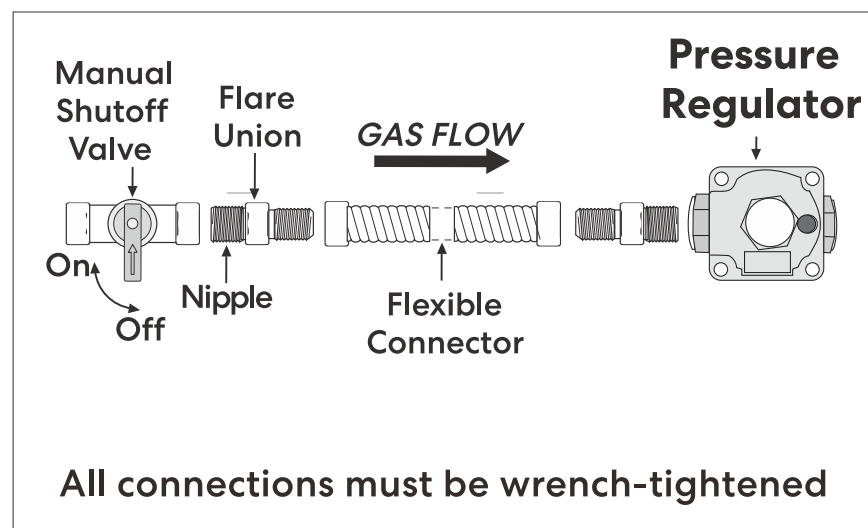

! WARNING !

- Never reuse old flexible connectors. The use of old flexible connectors can cause gas leak and personal injury. Always use new flexible connectors when installing a gas appliance.

• To reduce the possibility of gas leaks, apply Teflon tape or a thread compound approved for use with LP or Natural gas to all threaded connections.

• Do not use a flame to check for leaks.

- Disconnect the cooktop and its individual shut-off valve from the gas supply piping system during any pressure testing of that system at test pressures greater than 1/2 psig (3.5 kPa).

- Isolate the cooktop from the gas supply piping system by closing its individual shut-off valve during any pressure testing of the gas supply system at test pressures equal to or less than 1/2 psig (3.5 kPa).

3-CONNECT ELECTRICAL

• Check to be sure the receptacle is properly grounded.

• Plug in the power cord.

ASSEMBLE BURNERS , CHECK IGNITION


The electrode of the electronic ignition system is positioned above the surface of the burner base. Do not remove a burner cap or touch the electrode of a burner while another is turned on. Damage or electrical shock may occur.

A) The electrode of the electronic ignition system is positioned above the surface of the burner base. Do not remove a burner cap or touch the electrode of a burner while another is turned on. Damage or electrical shock may occur.

B) Place burner heads over the burner base. Make sure the hole in the burner head is properly aligned with the electrode in the burner base.

C) Place the burner caps on the burner heads. Make sure that the burner caps are properly seated on the burner heads. Burner cap properly seated. Burner cap not properly seated.

IMPORTANT: If the igniter electrodes continue to spark after all of the burners are lit, check that each burner component is assembled and properly seated.

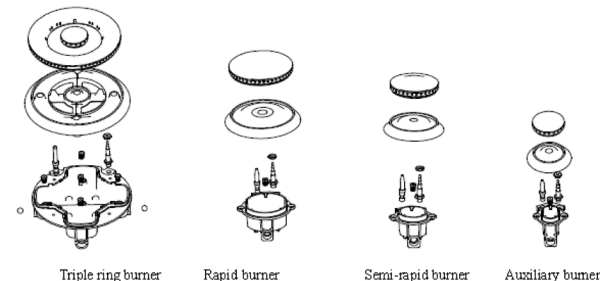

D) Check igniters. (PUSH->TURN->HOLD THE KNOB 5'S BEFORE LET GO)

- Operation of the electric igniters should be tested after the cooktop and supply line have been carefully checked for leaks and the cooktop has been connected to the electrical power.
- Push and turn a burner valve to the LITE position. All spark igniters will make a series of sparks (ticking sounds), but only the burner turned to LITE will light.
—The burner should light when gas is available to the burner.
—Once the burner lights, it should be turned to another position.
- Test each valve separately until all burners have been checked.


E) Burner ignition. Cooktop Spark Ignition—When you turn the cooktop knob to LITE, the spark igniter makes a series of electric sparks (ticking sounds) which light the burner. During a power failure, the burners will not light automatically. In an emergency, a cooktop burner may be lit with a match by following the steps below.

- Light a match and hold the flame near the burner you want to light. Wooden matches work best.
- Push in and turn the control knob slowly. Be sure you are turning the correct knob for the burner you are lighting.

NOTE: If the burner does not light within five seconds, turn the knob off and wait one minute before trying again.

F. Turn on each burner. On LP models, flames should be blue in color but may have yellow tips.

Natural gas models should have soft, blue flames. The burner flames should not flutter or blow away from the burner. The flame should be no less than 1/4" on the lowest setting and no greater than 1-1/2" on highest setting.

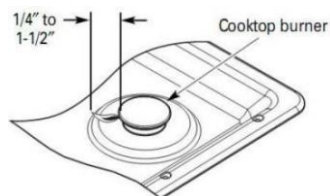

WARNING
If you attempt to measure the flame,
please use caution. Burns could result.

Burners should be checked frequently.

OPERATION CHECKLIST

1. Make sure all controls are left in the OFF position.
2. The serial plate for your cooktop is located on the bottom of the burner box. In addition to the model and serial numbers, it tells you the ratings of the burners and the type of fuel and pressure the cooktop was adjusted for when it left the factory.
3. When ordering parts, always include the serial number, model number and a code letter to ensure proper replacement parts.
4. Check again to be sure all installation procedures have been completed.

ADJUST BURNER FLAMES

A. Turn all burners on highest setting and check the flames. They should be blue in color and may have some yellow tipping at the ends of the flame. Foreign particles in the gas line may cause an orange flame at first, but this will soon disappear.

B. Turn the cooktop burner knob to "LO" while observing the flame. Adjust the setting of the upper row of flames using the valve bypass screw as follows: Adjustments must be made with two other burners in operation on a medium setting. This prevents the upper row of flames from being set too low, resulting in the flame being extinguished when other burners are turned on.

C. To adjust the flame, remove the knobs. Insert a screwdriver through the access hole in valve shaft as shown.

If the flames were too small or fluttered, open the valve more than the original setting.

If the flames blew away from the burner, close the valve more than the original setting.

D. Make the adjustment by slowly turning the screw until flame appearance is correct.

E. Testing Flame Stability:

Test 1— Turn the knob from "HI" to


"LO" quickly. If the upper row of flames goes out at this setting, increase the flame size and test again.

Test 2— With the burner on "LO", open and close the cabinet door under the cooktop. If the flame is extinguished by the air currents created by the door movement, increase the flame height and test again.

F. Flame Recheck:

After the adjustment is made, turn all burners off. Ignite each burner individually. Observe the flame at the "HI" position. Rotate the knob to the lowest setting and be sure that the flame size decreases as the knob is rotated counterclockwise.

Once the conversion is complete and checked ok, fill out a sticker and include your name, organization and date conversion was made. Apply the sticker near the cooktop gas inlet opening to alert others in the future that this appliance has been converted. If converting back to the original gas, please remove the sticker so others know the appliance is set to use its original gas.

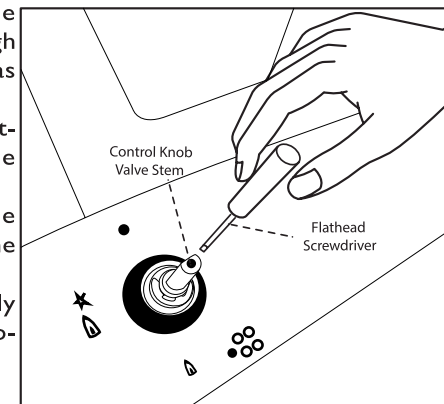

CARE AND MAINTENANCE

CLEANING COOKTOP

Removing Trivets:

- The trivets located in the recessed area of the hob.
- They can be removed for cleaning by carefully lifting them from the hob.
- Clean by washing in warm soapy water. Make sure to dry thoroughly.
- Do not drop the trivet into place. To avoid scratches and damages carefully place the trivets back to its place.


Check again to be sure all installation procedures have been completed.

Removing the Burner:

- The burner caps and heads are removable for cleaning.
- Blockage of the flame port should be cleaned using a match stick or brush.
- If the caps, heads and cups are heavily soiled, use a non-abrasive cleaning compound to help remove build-up.

Refitting the Burner Heads and Caps

1. The burner cap must be placed correctly into the burner head or damage may occur during operation.
2. To ensure correct placement, make sure the Ignitor and Flame detector are positioned into the 2 slots of the burner head. (Refer to Figure 14.)
3. The burner cap is simply positioned over the top of the burner head. (Refer to Figure 14.)

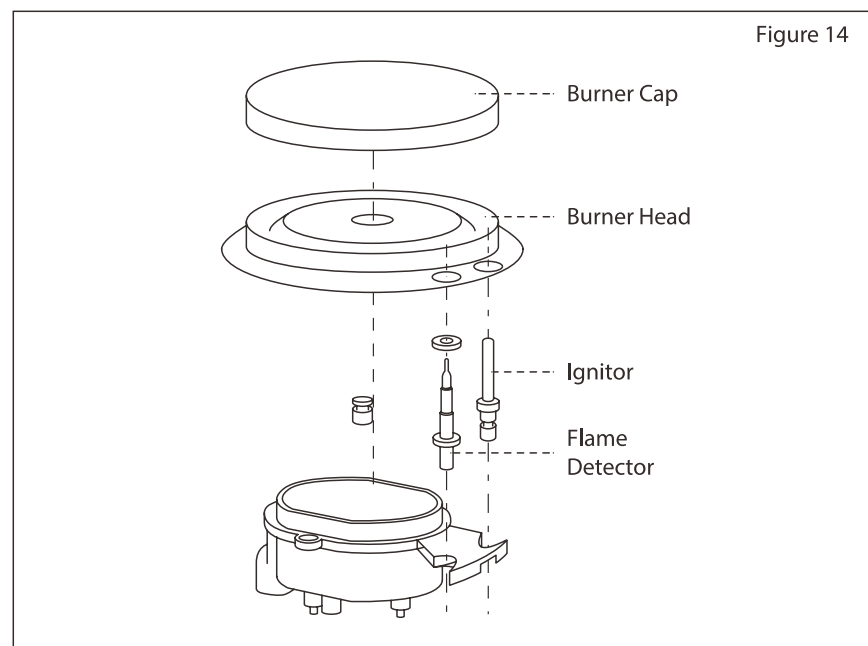

CARE AND CLEANING

IMPORTANT

To avoid possible burns use care when cleaning the cooktop. **DO NOT attempt to clean the cooktop whenever the cooktop or burner heads are still hot. To avoid possible burns DO NOT attempt any of the following cleaning instructions before turning OFF ALL of the surface burners and allowing them to cool.**

• **Control Knobs** - For general cleaning, use hot, soapy water and a cloth. For more difficult soils and built-up grease, apply a liquid detergent directly onto the soil. Rinse with a damp cloth and dry.

DO NOT use steel wool or acidic cleaners on the knobs; as they can scratch.

• **Burner Grates** - Clean burner grates in the dishwasher and dry upon removal.

• **Burner Caps** - Should you ever need to remove the burner caps for cleaning lift the burner cap off the burner head. Clean heavy soils with an absorbent cloth. Rinse with a clean, damp cloth and immediately thoroughly dry including the bottom and inside of the cap. Do not use harsh abrasive cleaners. They can scratch the cap. Do not clean burner caps in dishwasher.

• **Burner Heads** - The holes in the burners of your cooktop **MUST** be kept clean at all times for proper ignition and a complete, even flame. . Remove any food from between the burner slots using a small nonabrasive brush like a toothbrush and afterwards wipe using a damp cloth. To remove deposits from the burner cavities, remove the cap and separate the two parts. Clean the burner holes routinely with a small gauge wire or needle and especially after bad spills which could clog these holes. After cleaning, put the two parts back together and return them correctly to their position, making sure they are seated and level. **DO NOT** put burner units in the dishwasher.

• **Stainless Steel /Glass** - Clean stainless steel with hot, soapy water and a dishcloth. Rinse with clean water and a cloth. Do not use cleaners with high concentrations of chlorides or chlorines. Do not use harsh scrubbing cleaners. Only use kitchen cleaners that are especially made for cleaning stainless steel/Glass.

כסרובור

WARRANTY AND SERVICE

For full warranty details on this product
please visit:
WWW.CNHBHOB.COM
MADE IN CHINA



IMPORTANT

**Any Problem you have with this product,
Please contact HBHOB Customer Support at**

Our email: sales7@hbhob.cn What's app/Wechat: +86-18923216100

Website: WWW.CNHBHOB.COM

DATED PROOF OF PURCHASE, MODEL #, AND SERIAL #
REQUIRED FOR WARRANTY SERVICE

