

USER MANUAL

WARNING

- 1) Be sure the electricity to the wires you are working on is shut off; either the fuse is removed or the circuit breaker is turned off. Turning the power off using the light switch is not sufficient to prevent electrical shock.
- 2) Do NOT install or use the light fixture if any part is missing or damaged. Contact your dealer for replacement or missing parts.
- 3) For use with ceiling mounted track only.

IMPORTANT SAFETY INSTRUCTIONS



- 1) Read all instructions.
- 2) Do NOT install this track system in damp or wet locations.
- 3) Do NOT install any part of a track system less than 5 feet above the floor.
- 4) Do NOT install any luminaire assembly closer than 6 inches from any curtain, or similar combustible material.
- 5) Disconnect electrical power before adding to or changing the configuration of the track system.
- 6) Do NOT attempt to energize anything other than lighting track luminaires on the track. To reduce the risk of fire and electric shock, do NOT attempt to connect power tools, extension cords, appliances, and the like to the track.
- 7) Do NOT connect a track to more than one branch circuit unless the track is constructed so that it can be used with more than one branch circuit. Check with a qualified electrician. Although the track lighting system may seem to operate acceptably, a dangerous overload of the neutral may occur and result in a risk of fire.

CAUTION

HOT SURFACE! The track luminaire is hot when the power is on, wait at least 5min to touch it after the power is off.


INSTALLATION DIAGRAM

- 1 Turn on the inner switch in the adaptor to "ON" position as shown below. Turn the knob to "UNLOCK" the track head as shown right. Now the knob is on opposite side of the ground point.

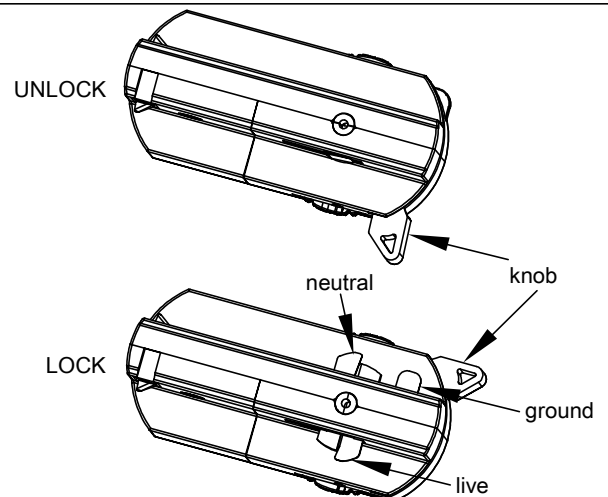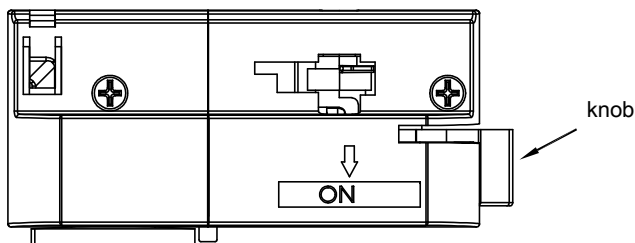


- 2 Align the ground point on the adaptor with ground line in track slot. Push the adaptor into the track slot. Turn the knob to "LOCK" the track head. Now the knob is on same side of the ground point.

track rail

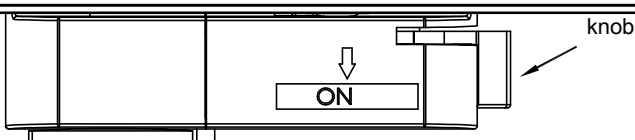


- 3 Adjust the light direction by turning the track head horizontally and vertically.

track rail

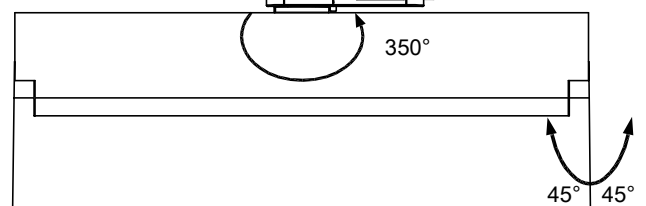


TIPS to UNMOUNT THE TRACK HEAD

- 1) Turn off the inner switch in the adaptor to "OFF" position;
- 2) Turn the track head PERPENDICULAR to the track rail;
- 3) Turn the knob to "UNLOCK" the track head;
- 4) Tilt the track head adaptor over 45° away from the track rail, and take the track head off the track rail.

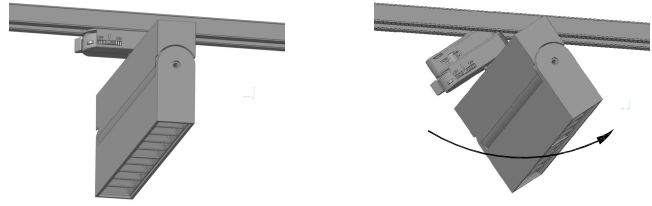

DIMENSION

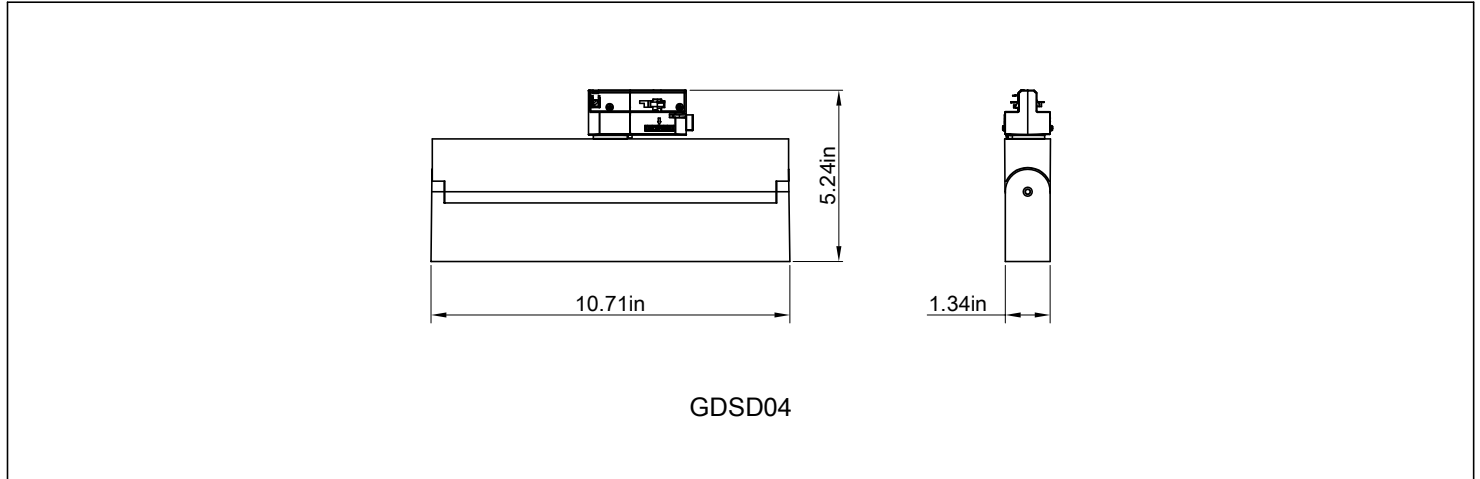

SPECIFICATIONS

Model	Voltage	Wattage	Lumen	CCT	CRI	Finish Type	Dimmable	Average Life
GDSD04	120V	20W	1200lm	3000K	> 90	Black, White	Yes	50000H

DIMMER COMPATIBILITY LIST

GDSD04	Brand	Lutron	Lutron	Lutron	Lutron	Lutron	Leviton	Leviton	Leviton
	Model	CT-600PH	CTCL-153P	MACL-153M	PD-6WCL	TGCL-153P	DSM10	IPL06-10	6631-P

LIMITED WARRANTY

The manufacturer warrants all of its lighting fixtures against defects in materials and workmanship for two years from the date of purchase. If within this period the product is found to be defective in material or workmanship, the product must be returned, with a copy of the original sales receipt as proof of purchase. The manufacturer will, at its option, replace or refund the original purchase price to the consumer. This warranty does not cover fixtures becoming defective due to misuse, accidental damage, improper handling and/or installation and specifically excludes liability for direct, incidental or consequential damages. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state.

Thank you for shopping with us, please feel free to contact us if you have any issue on product installation or application. Please save this user manual as purchase proof and future reference.

Email: support@wohoda.com

