
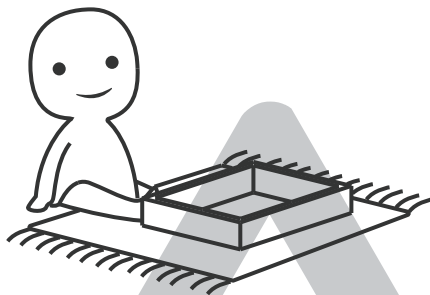



IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

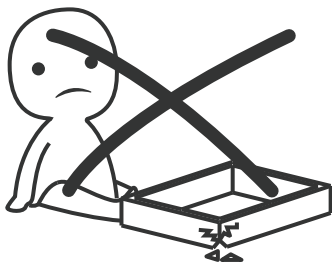



AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

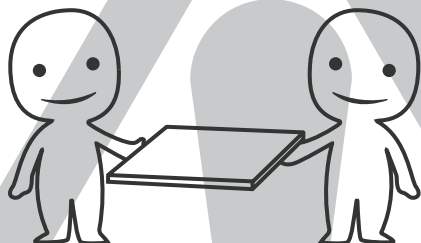

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

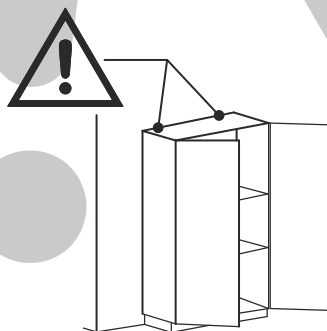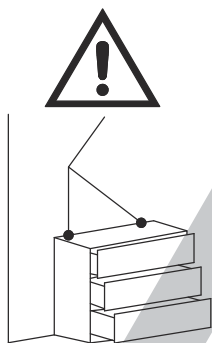

ANTI-TOPPLE WARNING !


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !




It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.










Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

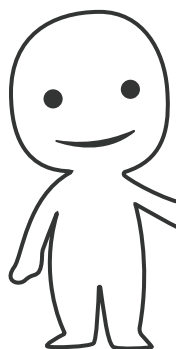


Please prepare the following tools



When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A x 28  Ø6x35mm	B x 28  Ø14x9mm	C x 14  Ø8x30mm	D x 4  Ø8x50mm	E x 6  Ø4x40mm
F x 6  Ø3x12mm	G x 2 	H x 60  Ø4x12mm	J x 10 	K x 8  M4x20mm
L x 4 	M x 2  Ø4x14mm	N x 2 	P x 32  Ø3x16mm	Q x 32 
R x 2 	S x 1 	T x 1 		

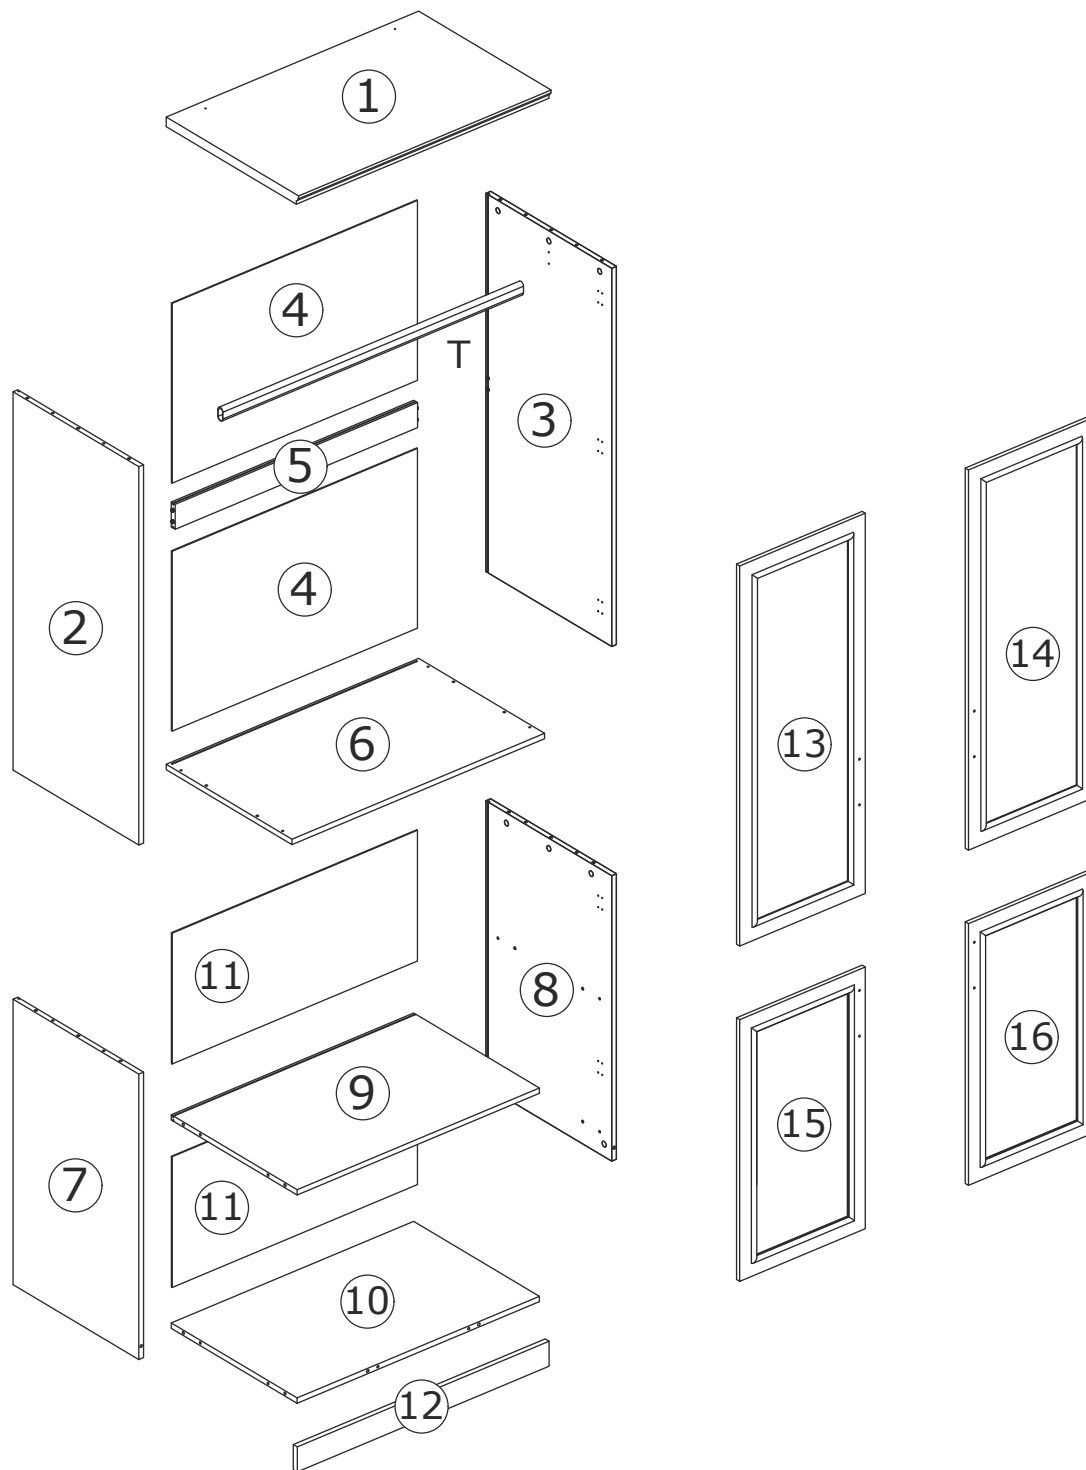


⚠ WARNING

















Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.




*This is a permanent label.
Do not remove!*

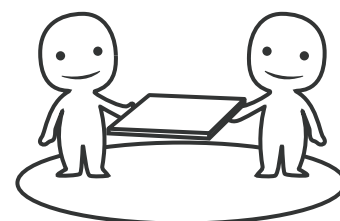



ASSEMBLED BY 2 ADULTS

①  1PC	②  1PC	③  1PC
④  2PCS	⑤  1PC	⑥  1PC
⑦  1PC	⑧  1PC	⑨  1PC
⑩  1PC	⑪  2PCS	⑫  1PC
⑬  1PC	⑭  1PC	⑮  1PC
⑯  1PC		


1

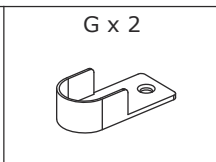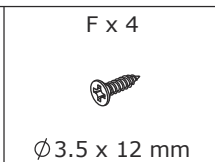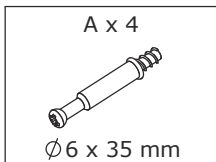



Insert quickfit screw(A) into plate 2 and 3 with a screwdriver as shown.
 Fix part(G) to plate 2 and 3 with screw(F) as shown.

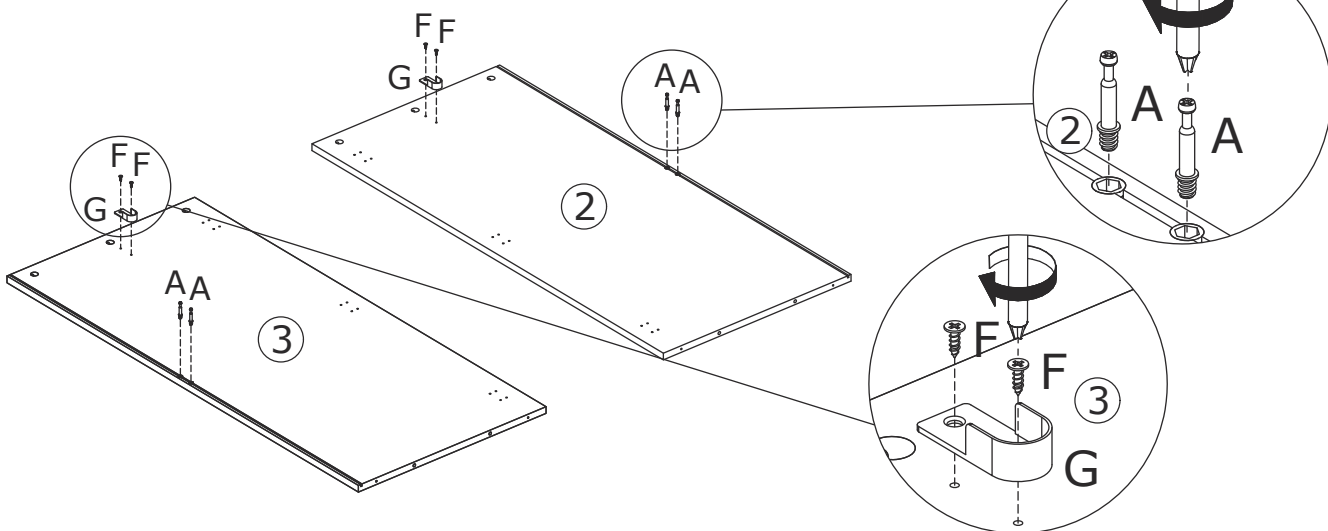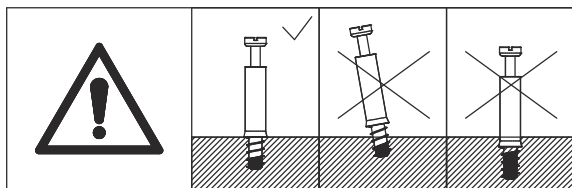

2

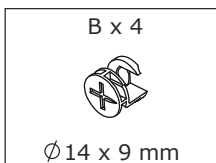


Connect plate 2 and 3 with plate 5,
 put cam lock(B) into plate 5 and turn
 clockwise to tighten as shown.

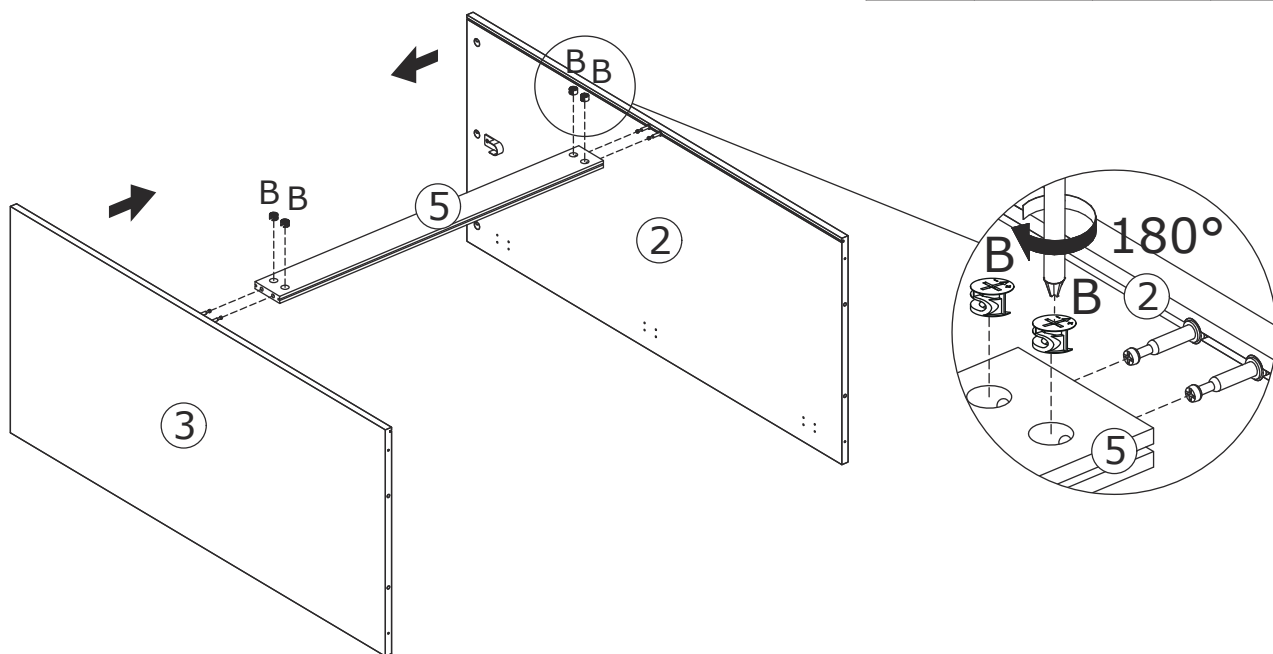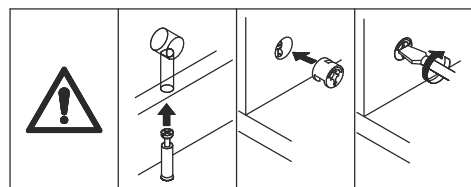

3



Slide plate 4 along available grooves as shown.

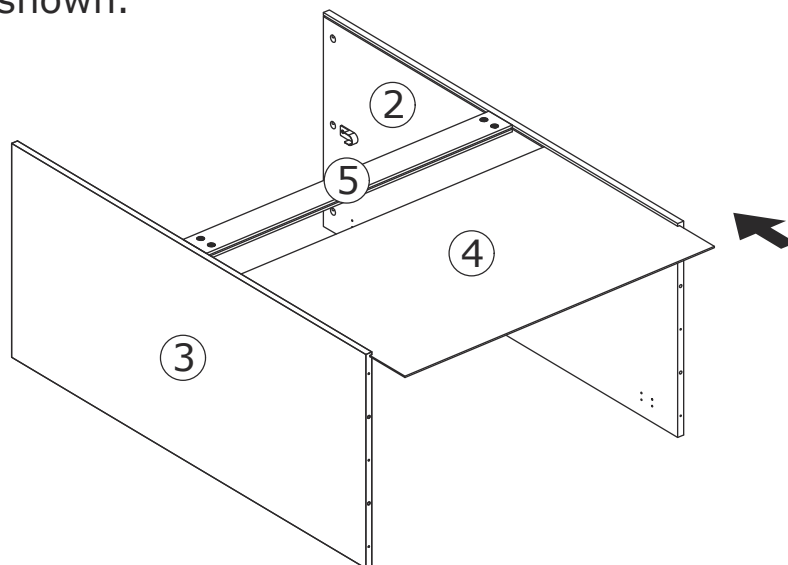


4





Insert long wooden dowel(D) into plate 2 and 3 at first, attach plate 6 and fix with screw(E) as shown.

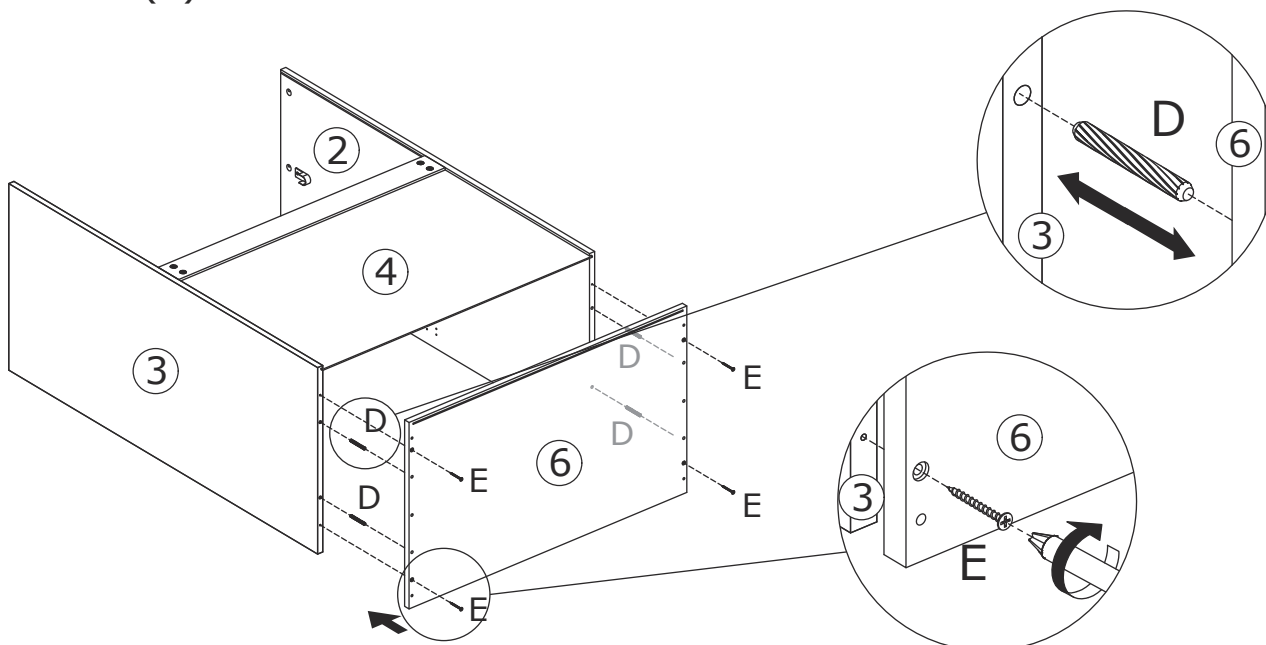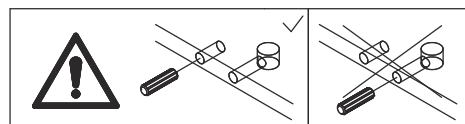

5

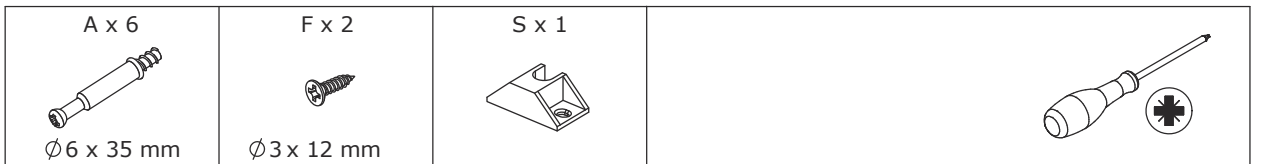


Insert quickfit screw(A) into plate 1 with a screwdriver as shown.
Fix part(S) to plate 1 with screw(F) as shown.

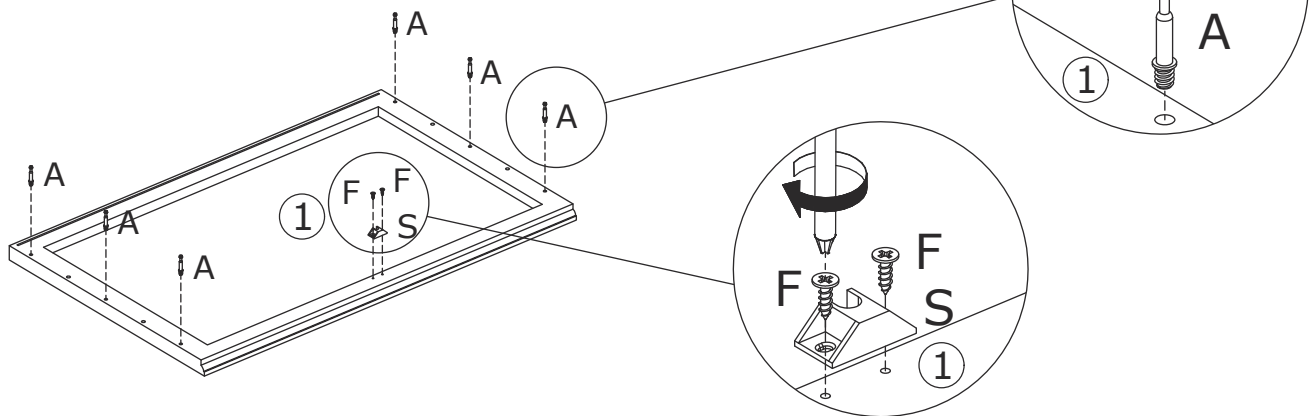
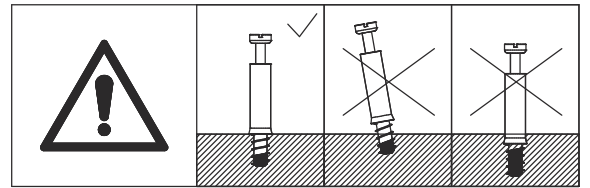


6


Slide plate 4 along available grooves as shown.

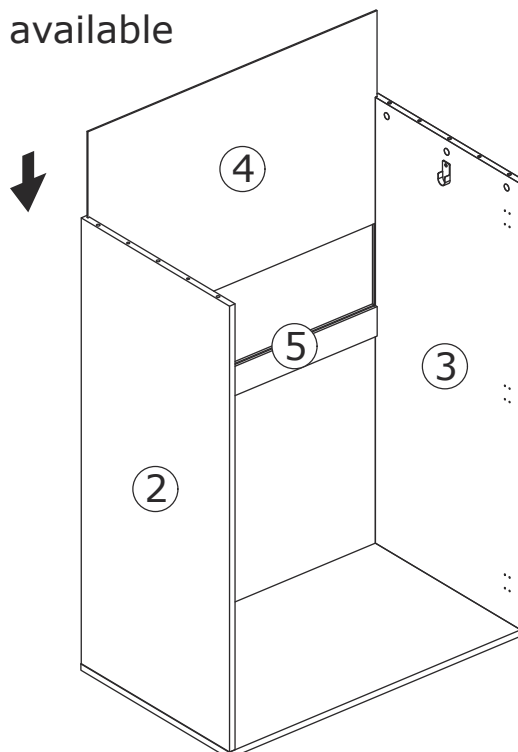



7

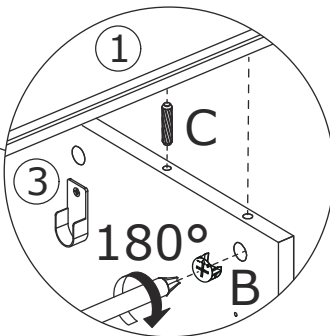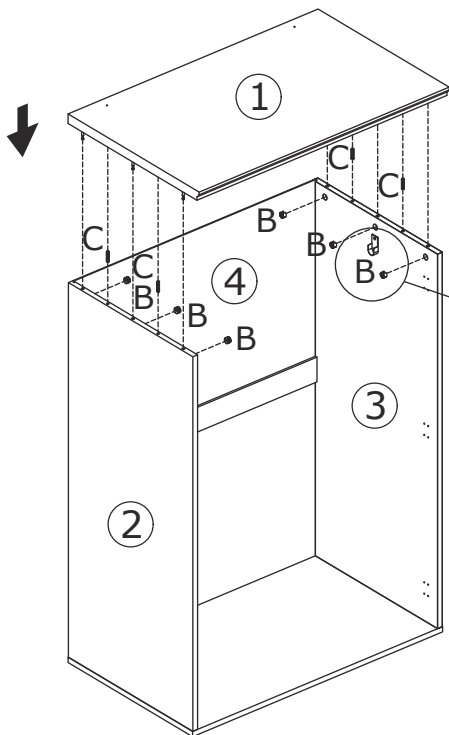

Insert wooden dowel(C) into plate 2 and 3 at first, cover plate 1.
Put cam lock(B) into plate 2, 3 and turn clockwise to tighten as shown.


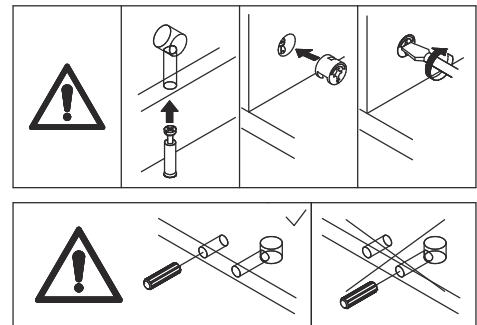


8


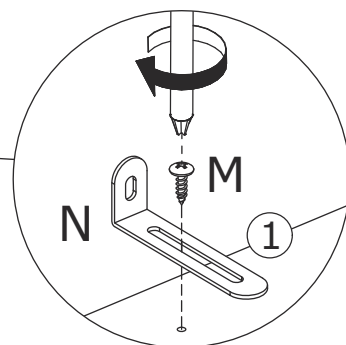
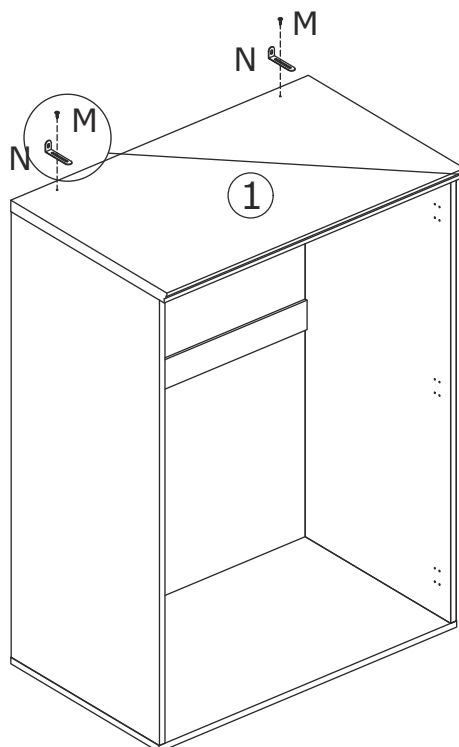


Fix anti-tipping device(N) to plate 1 with screw(M) as shown.



9

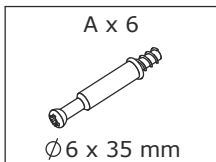




Insert quickfit screw(A) into plate 6 with a screwdriver as shown.

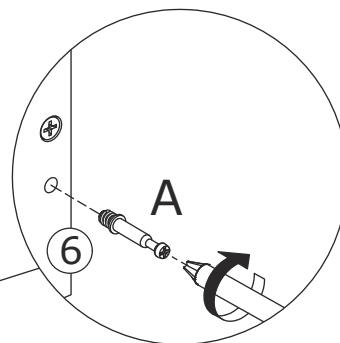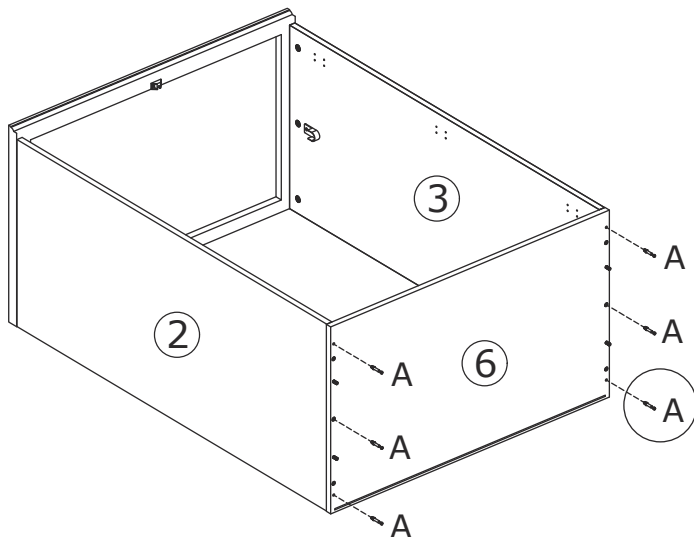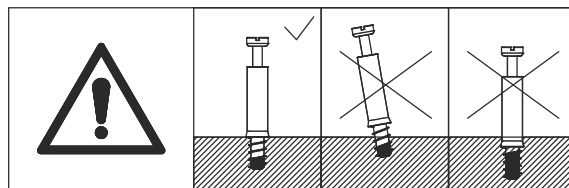

10

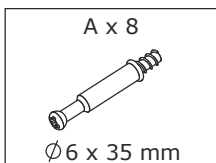

Insert quickfit screw(A) into plate 7 and 8 with a screwdriver as shown.

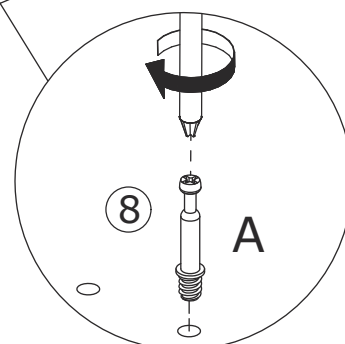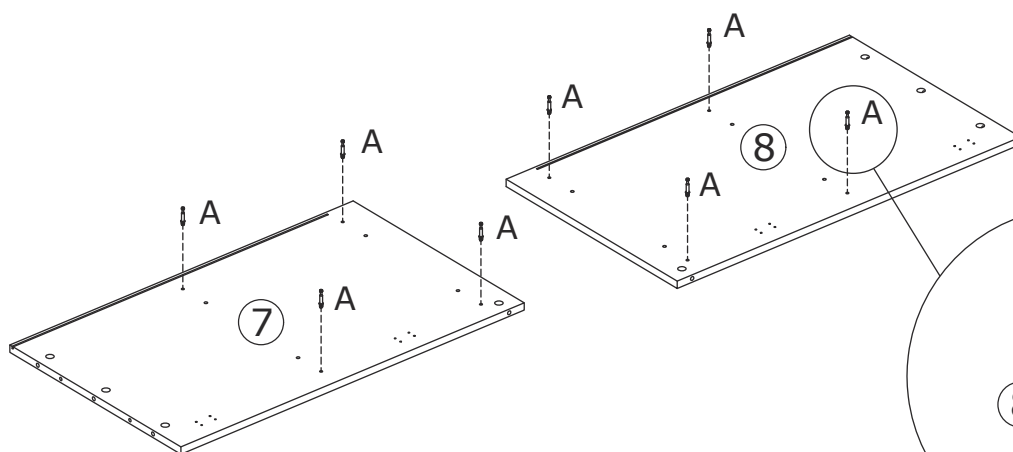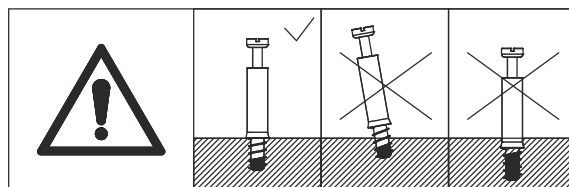

11

B x 4







Ø 14 x 9 mm

C x 4




Ø 8 x 30 mm

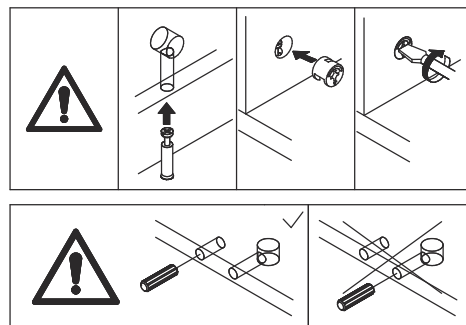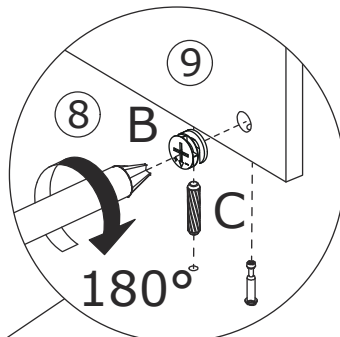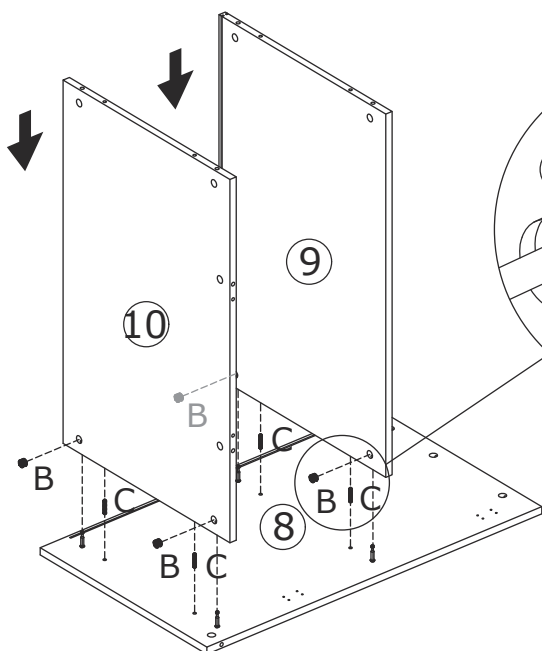

Insert wooden dowel(C) into plate 8 at first, attach plate 10 and 9. Put cam lock(B) into plate 10, 9 and turn clockwise to tighten as shown.

12

Slide plate 11 along available grooves as shown.

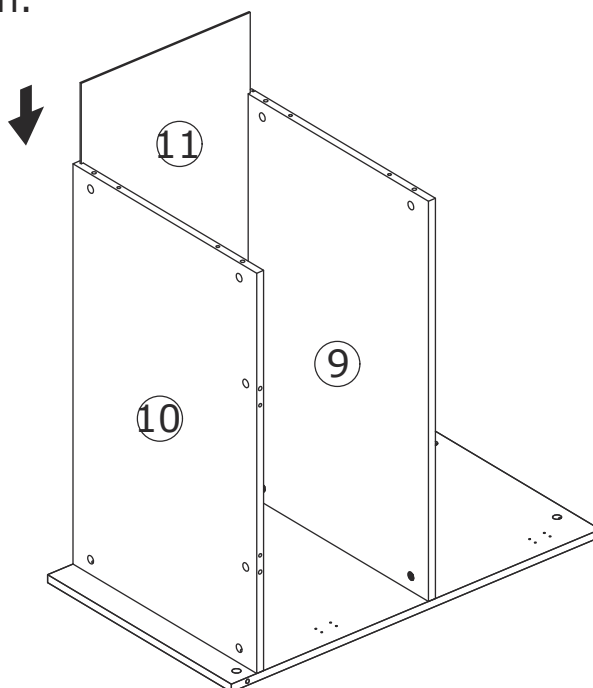

13

B x 4






Ø 14 x 9 mm

C x 4




Ø 8 x 30 mm

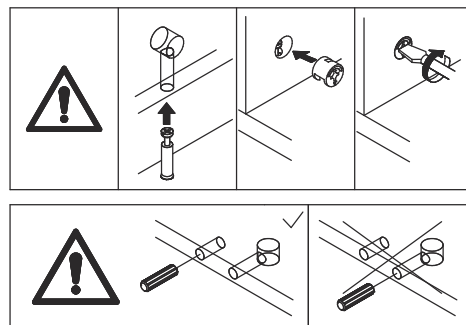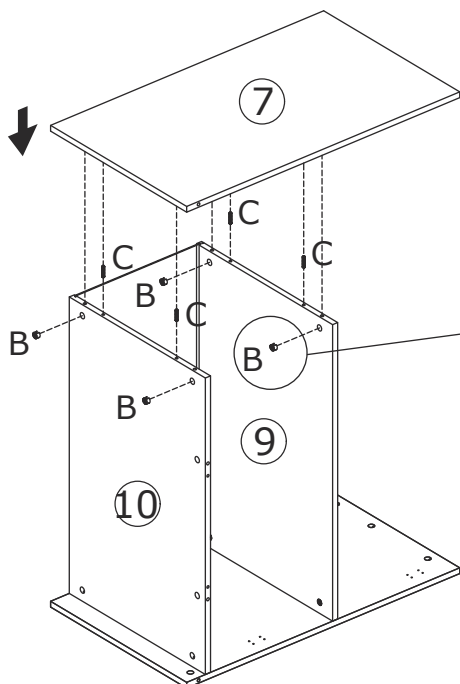

Insert wooden dowel(C) into plate 9 and 10 at first, cover plate 7.
Put cam lock(B) into plate 10, 9 and turn clockwise to tighten as shown.

14



A x 4



Ø 6 x 35 mm



Insert quickfit screw(A) into plate 12 with a screwdriver as shown.

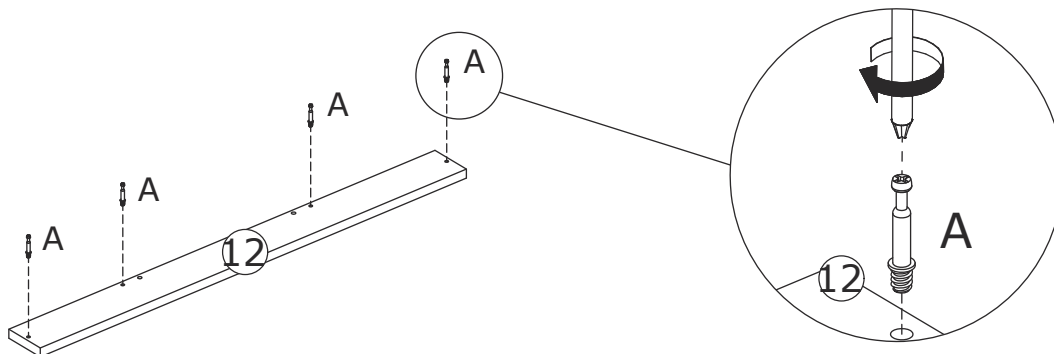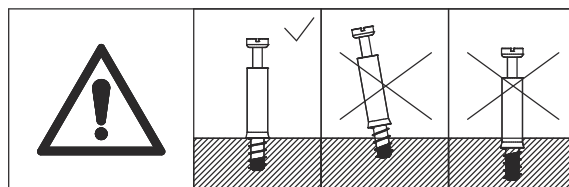

15

B x 4






Ø 14 x 9 mm

C x 2




Ø 8 x 30 mm

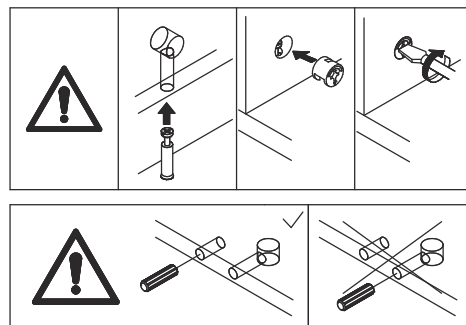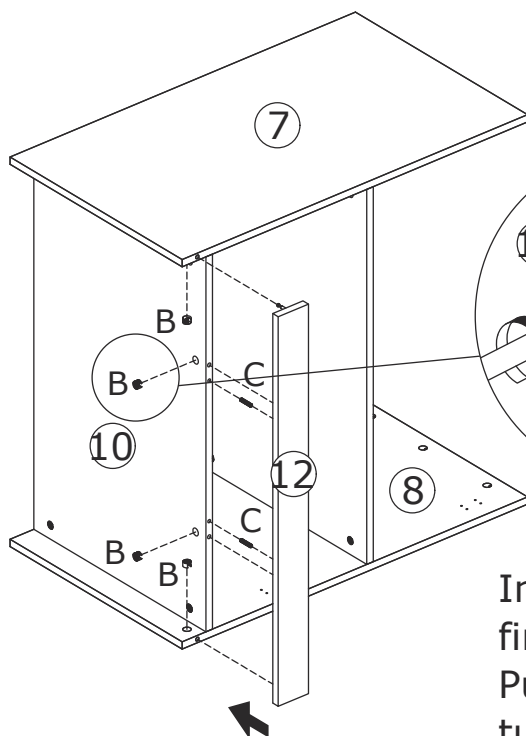

Insert wooden dowel(C) into plate 12 at first, attach plate 12 to plate 7, 10 and 8. Put cam lock(B) into plate 7, 10, 8 and turn clockwise to tighten as shown.

16

Slide plate 11 along available grooves as shown.

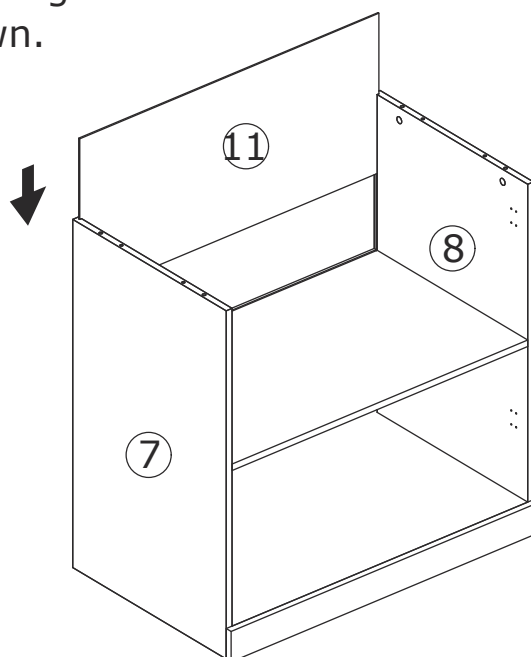


17

B x 6






Ø 14 x 9 mm



Connect the two component.
Put cam lock(B) into plate 7, 8 and
turn clockwise to tighten as shown.

**We suggest more than two people
to assemble in this step.**

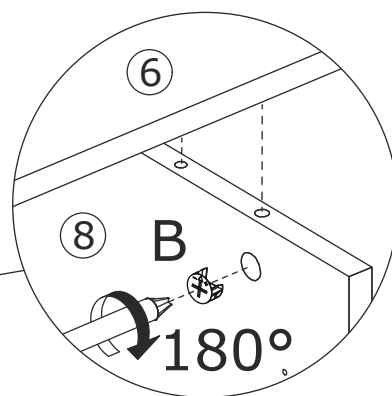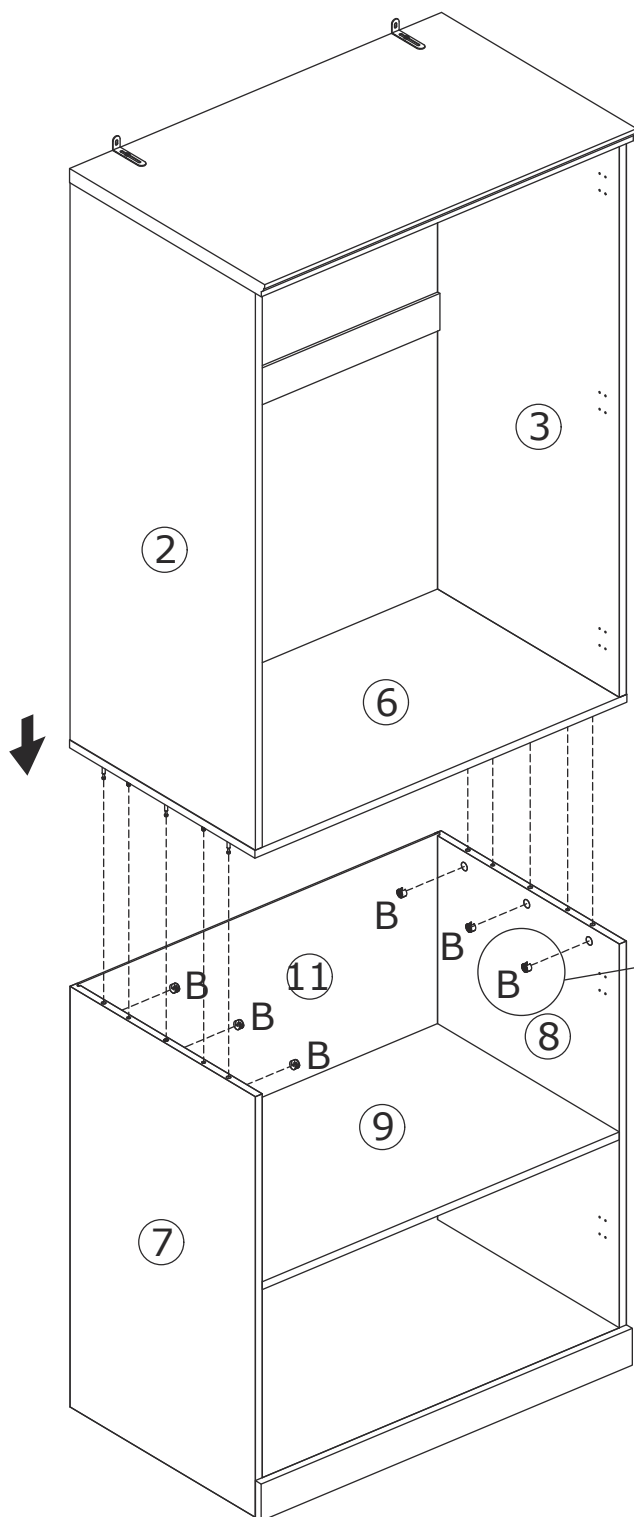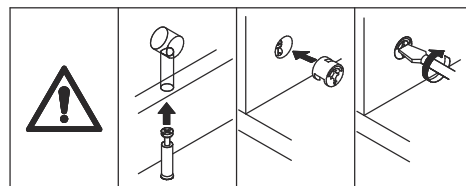


18

H x 20



Ø4 x 12 mm

J x 10





K x 8








M4 x 20 mm

L x 4



Fix hinge(J) to plate 13, 14, 15 and 16 with screw(H) as shown.
Fix handle(L) with screw(K) as shown.

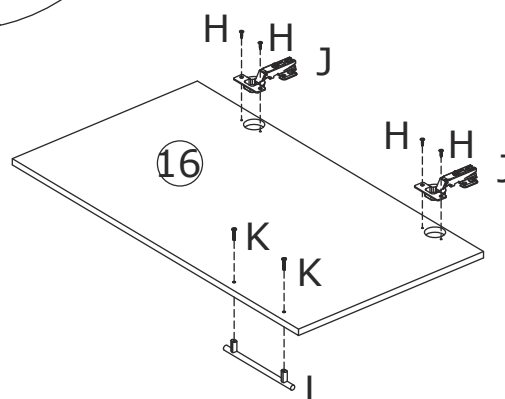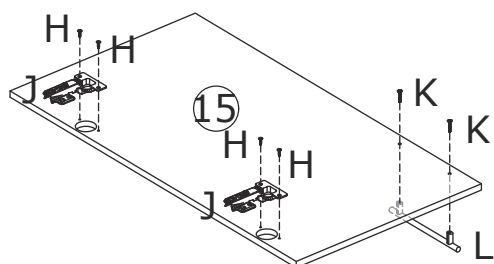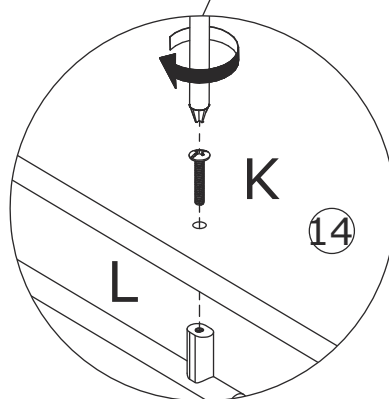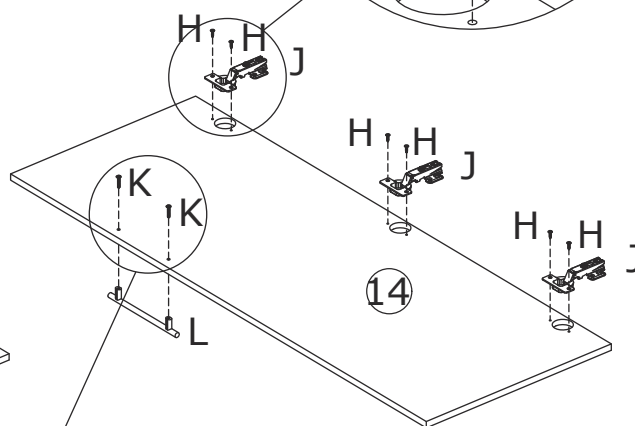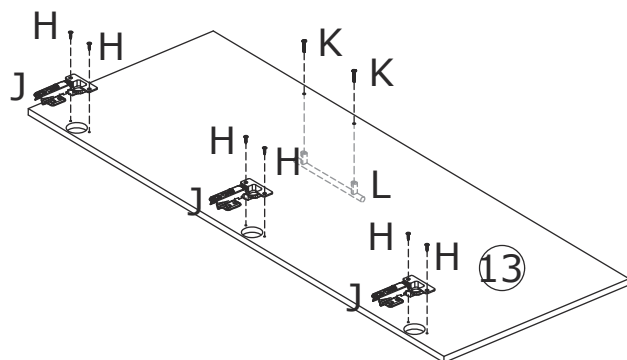


19








H x 40



Ø4 x 12 mm



Attach door plate 13 to plate 2; door plate 15 to plate 7; door plate 14 to plate 3; door plate 16 to plate 8 by fixing hinge with screw(H) as shown.

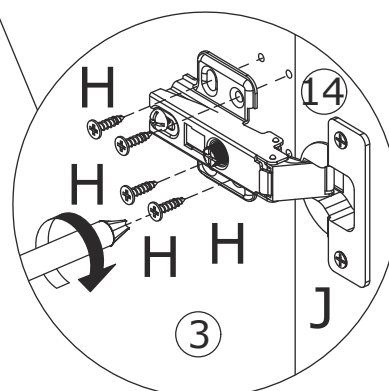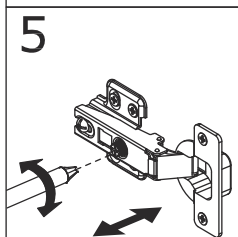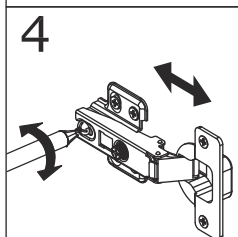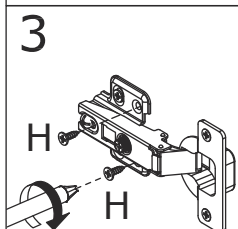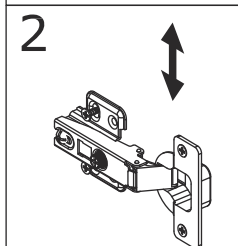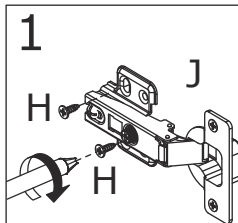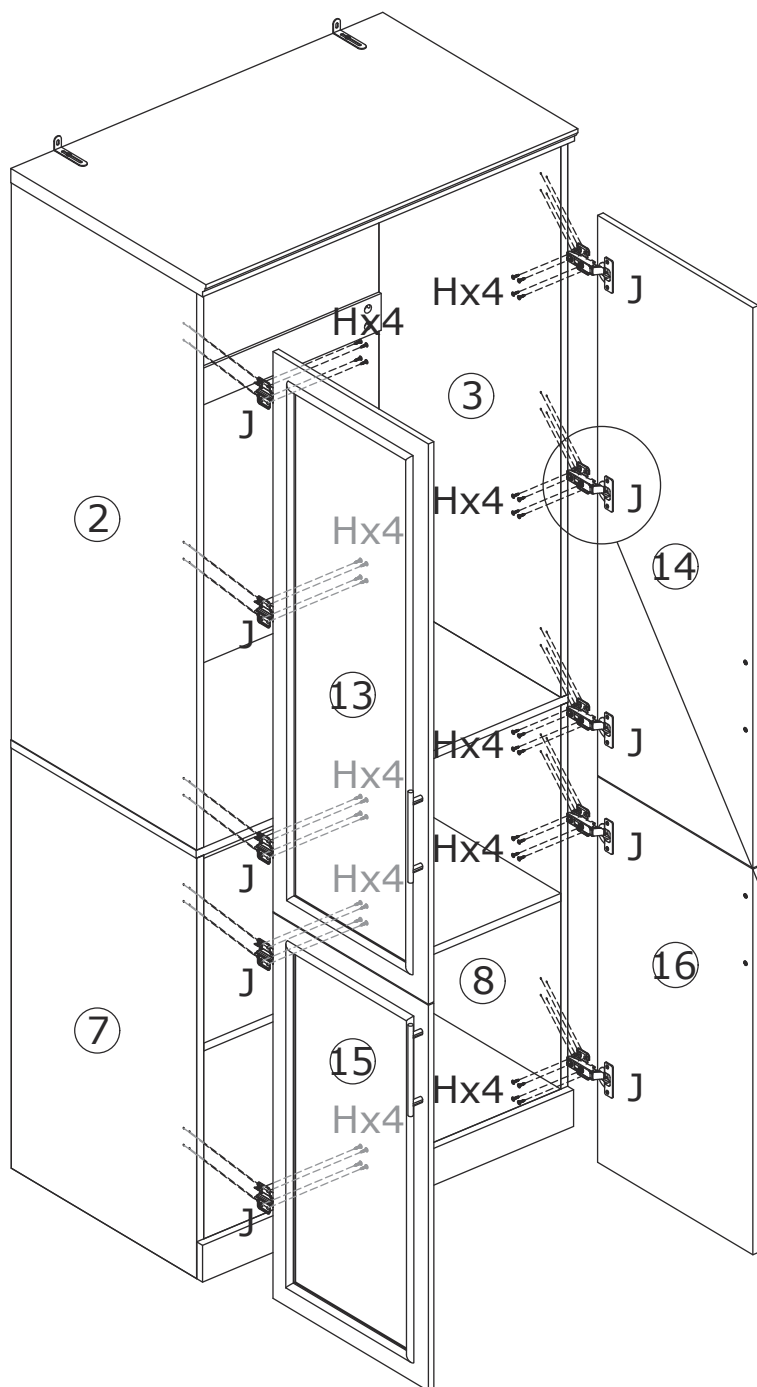


20



T x 1






Place clothing rod(T) in.

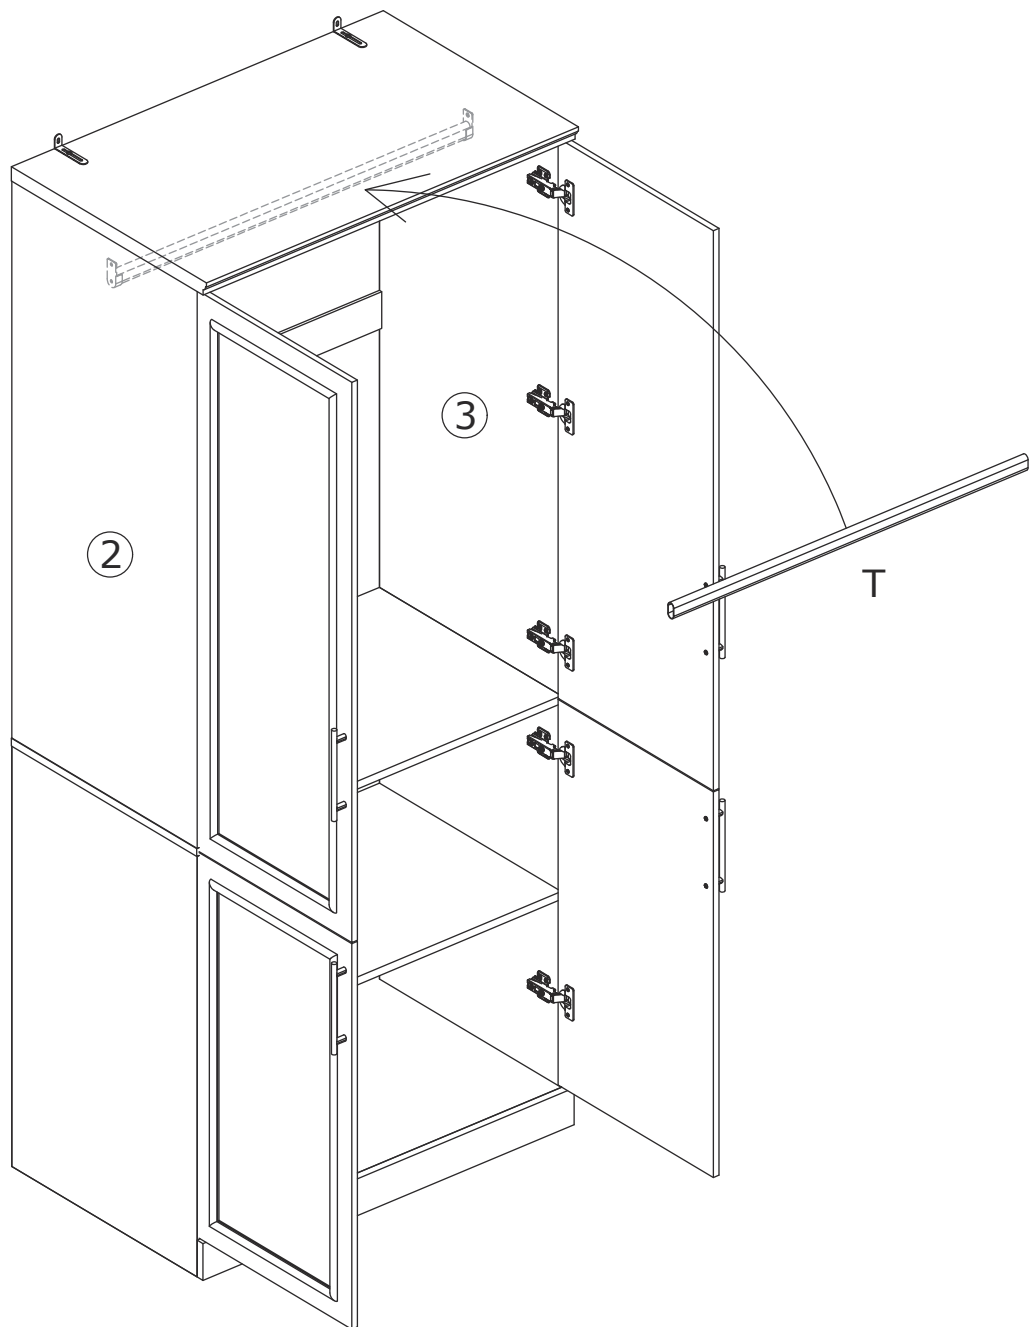

21

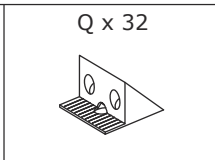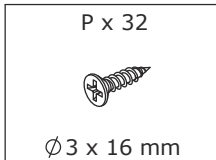

Insert buckle(Q) into back slots,
and fix with screw(P) as shown.

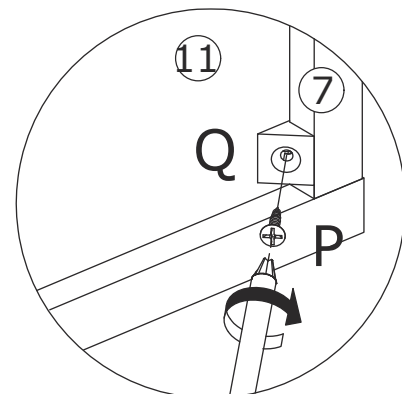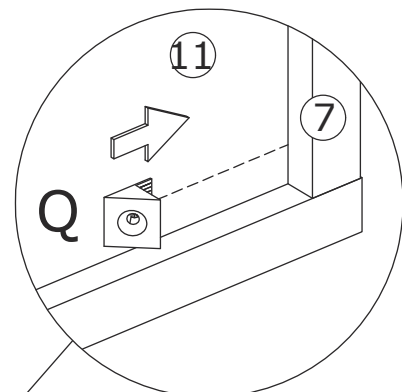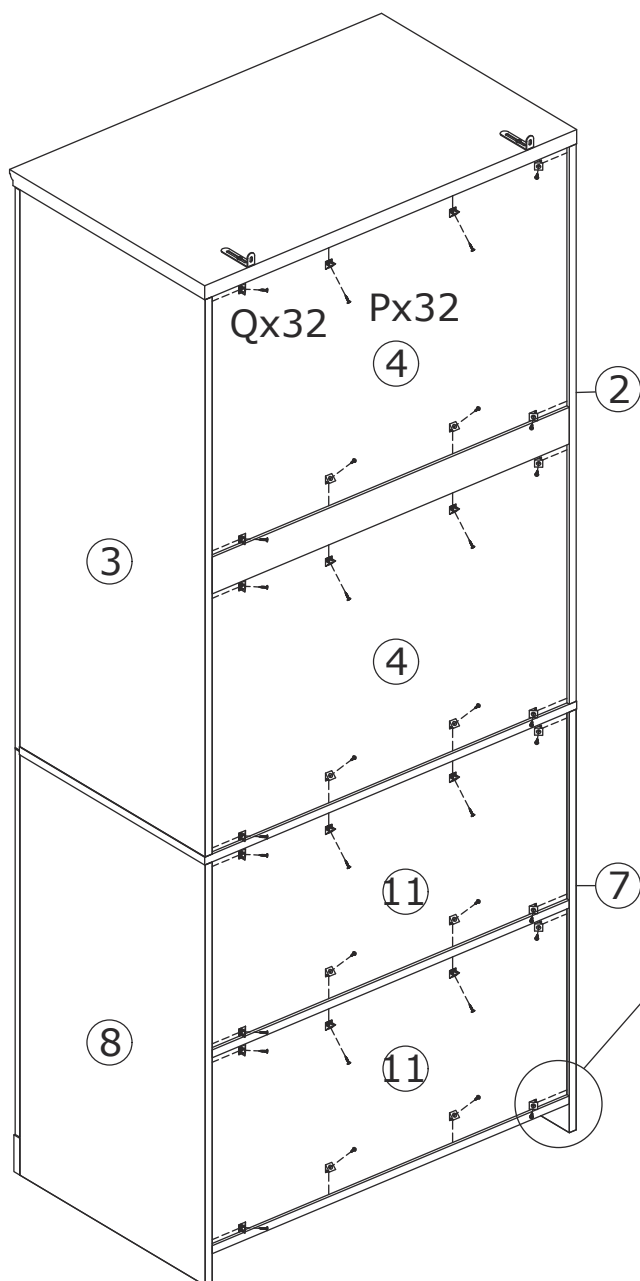









22

E x 2




Ø4 x 40 mm

R x 2




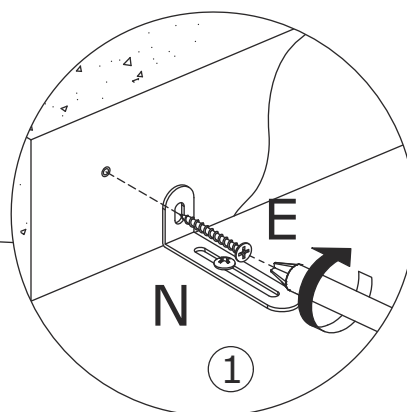
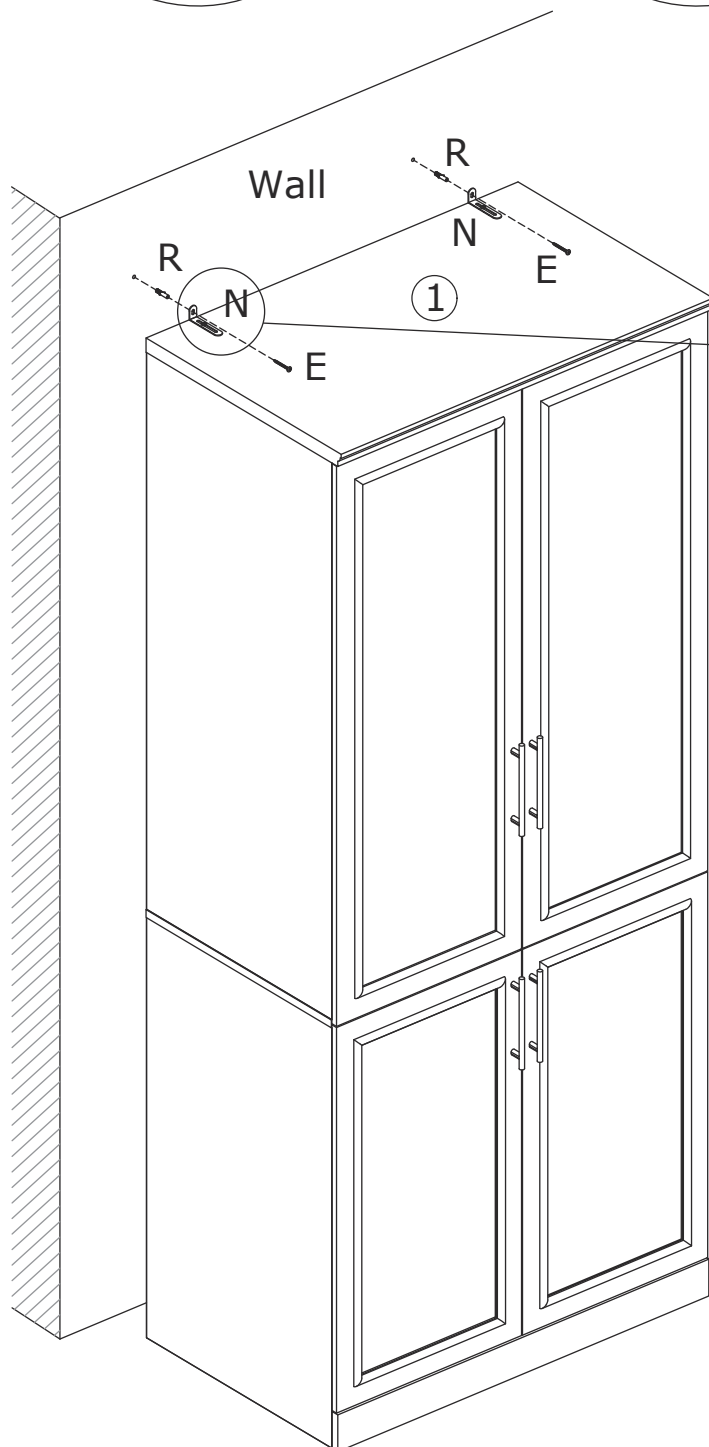
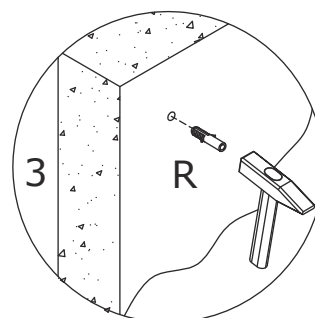
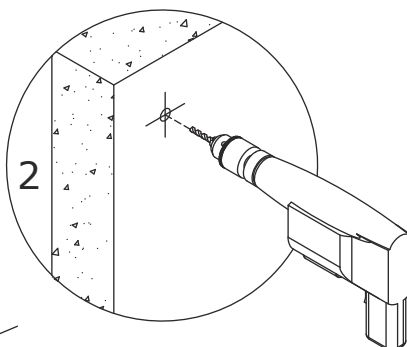
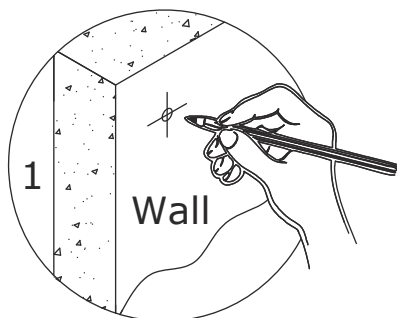





Install anti-tipping device as shown.



More detailed hinge adjustment mode:

- 1) Rotate out the screws connected with the cabinet counterclockwise, adjust the gap between the overall door frame and the upper and lower, and then rotate the screws clockwise after adjusting;
- 2) Rotate the screws at the end of the hinge counterclockwise to adjust the gap between the whole door frame and the cabinet before and after the adjustment, and then rotate the screws clockwise (rotate out to the movable door frame, do not need to over-rotate out);
- 3) Counterclockwise rotation of the screws in the middle of the hinge will offset the corresponding part of the rear door frame to the left, and clockwise rotation of the screws in the middle of the hinge will offset the corresponding part of the rear door frame to the right.

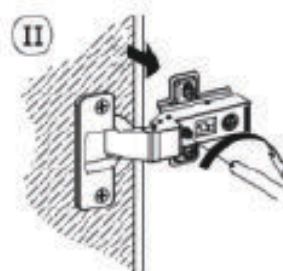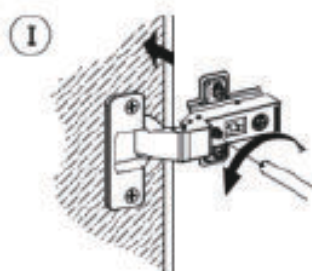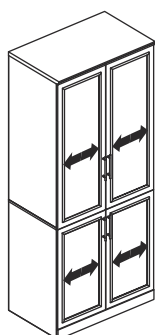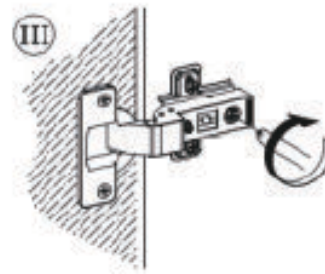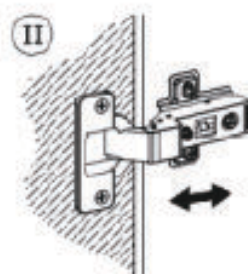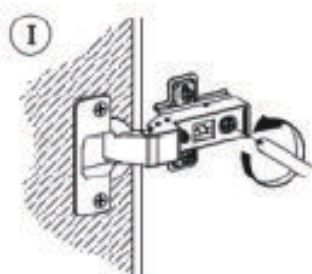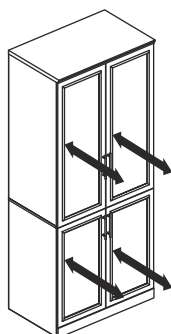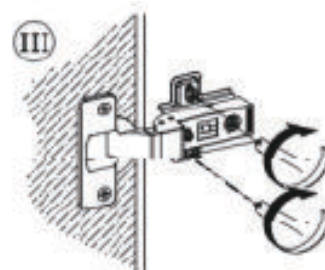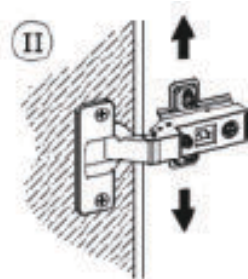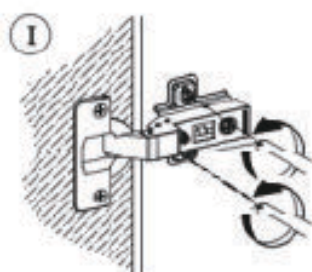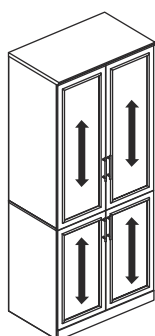

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.