



USER MANUAL AND INSTALLATION GUIDE
VEZENI UNDER CABINET VENT HOOD

APPLICABLE MODELS:
VHD3001, VHD3602, VHD4803

WELCOME TO THE VEZENI FAMILY

This manual provides detailed instructions on how to install and set up your new vent hood, and also offers insights into the various unique features of our product. Please keep this manual for future reference, as it contains answers to any questions you may have while starting your cooking journey.

Thank you

VEZENI

Manufacturer's Limited Warranty

This product has been manufactured by Vezeni , Vezeni provides the following limited warranty:

1. This warranty only applies to products purchased and located in the United States. Products purchased or located outside of this area are not covered.
2. The warranty does not cover damage resulting from abuse, accidents, natural disasters, loss of electrical power, alterations, outdoor use, improper installation, improper operation, or repairs performed by unauthorized service agencies or representatives.

Warranties and Duration:

Full Warranty for Parts & Labor: 2 years

Implied warranties are terminated upon expiration of the limited warranty.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to your implied warranty.

Vezeni will cover:

1. All repair labor and the cost of replacement parts found to be defective due to materials and workmanship. Service must be provided by an authorized Vezeni service agency during normal working hours. Please visit our website at www.vezeni.com or call our service number 888-283-9364 / 888-2-VEZENI to find the nearest service agency.

Vezeni will not cover:

1. Service by an unauthorized agency or repairs performed using unauthorized parts.
2. Service visits for appliance usage instructions, installation corrections, or resetting of circuit breakers or home fuses.
The customer is responsible for providing electrical wiring and other necessary facilities.
3. Damage caused by accidents, alterations, misuse, abuse, improper installation or installation not in accordance with local electrical or plumbing codes, or improper storage of the appliance.
4. Repairs for uses other than normal home use.
5. Travel or trip fees and associated charges incurred when the product is installed in a location with limited or restricted access (e.g., airplane flights, ferry charges, isolated geographic regions).
6. Service to provide instructions on using or correcting house wiring or replacing/repairing house fuses, or correcting the installation of the range.
7. Repairs when the range is used for anything other than normal single-family household use or contrary to the published user/operator instructions and installation instructions.

8. Cosmetic damage, including chips, dents, scratches, or other damage to the finish of your range, are not covered unless such damage results from defects in materials or workmanship and is reported to Vezeni within 30 days from the date of purchase.
9. Costs associated with the removal of your range from your home for repairs are not covered. This range is designed to be repaired in the home, and only in-home service is covered by this warranty.
10. Damage resulting from misuse, alteration, accidents, abuse, fire, flood, acts of God, improper installation (not in accordance with electrical or plumbing codes), or use of consumables or cleaning products not approved by Vezeni is not covered.
11. Service to repair or replace consumable parts, such as filters or bulbs, is not included in the warranty coverage.
12. The removal and reinstallation of your range are not covered if it is installed in an inaccessible location or not installed in accordance with the published installation instructions.
13. This warranty is void if the factory-applied serial number has been altered or removed from your range.
14. Repairs to parts or systems resulting from unauthorized modifications made to the appliance are not covered.
15. Expenses for travel and transportation for product service are not covered if your range is located in a remote area where service by an authorized Vezeni servicer is not available. This warranty applies to appliances purchased and used by consumers for personal, family, or household purposes only. It does not cover appliances used in commercial applications. If the appliance is sold by the original purchaser during the warranty period, the warranty extends to the new owner until the expiration date of the original purchaser's warranty period.

Warranty and Product Registration

VEZENI is not responsible for any incidental or consequential damages. Under no circumstances will VEZENI's liability exceed the cost that you paid for the product. Some provinces/states may not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty provides you with specific legal rights, and you may also have other rights that vary from state to state.

Please have your complete model number and serial number ready when you contact our Customer Service for technical information, parts sales, or to request service for your appliance in the United States. The model and serial number can be found on the product data plate. Please provide the requested information in the spaces provided below:

Model No. _____
Serial No. _____
Date Purchased _____
Date Installed _____
Purchased From _____
Address _____
Phone _____

NOTE: You must provide proof of purchase or installation date for in-warranty service. You can contact our Customer Service team:

By Phone: 888-283-9364 / 888-2-VEZENI
Online: www.vezeni.com

For more information,
please visit our official website at
www.vezeni.com

IMPORTANT SAFETY INSTRUCTIONS

WARNING: TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS, READ THE FOLLOWING:

Use this unit only in the manner intended by the manufacturer. If you have questions, please contact the manufacturer.

Before servicing or cleaning the unit, switch the power off and lock the service panel. This will prevent the power from accidentally turning on. If the service panel does not lock, secure a warning label, such as tag, to the service panel.

Installation work and electrical wiring must be done by a qualified professional(s) in accordance with all applicable codes, standards, and fire-rated constructions.

Do not operate any fans with a damaged cord or plug. Discard the fan or return it to an authorized service facility for further examination and/or repair.

To prevent back draft, sufficient air is needed for proper combustion. Gas from fuel burning equipment needs to exhaust through the flue (chimney). Follow the heating equipment manufacturer's guideline and safety standards such as those published by the National Fire Protection Association (NFPA), the American Society for Heating, Refrigeration and Air Conditioning Engineers (ASHRAE), and the local code authorities.

When cutting or drilling into walls or ceilings; be aware of electrical wires, piping, and other utilities.

Ducted fans must always be vented outdoors.

CAUTION: For general ventilation use only. Do not use to exhaust hazardous or explosive materials and vapors.

CAUTION: To reduce the risk of fire and to properly exhaust air, be sure to duct air outside. - DO NOT vent exhaust air into attics, crawl spaces, garages, or within walls and ceilings.

WARNING: TO REDUCE THE RISK OF A RANGE TOP GREASE FIRE, READ THE FOLLOWING:

Never leave surface units unattended at high settings. Boil-over can cause smoke and grease to spill over that may ignite. Heat oils slowly on low or medium settings.

Always turn the hood ON when cooking at high heat or when flambeing food (i.e. Crepes Suzette, Cherries Jubilee, Peppercorn Beef Flambe).

Use proper pan size. Always use cookware appropriate for the size of the surface element.

WARNING: TO REDUCE THE RISK OF INJURY. IN THE EVENT OF A RANGE TOP GREASE FIRE, READ THE FOLLOWING:

SMOTHER FLAMES with a close fitting lid, cookie sheet, or metal tray, then turn off the burner. BE CAREFUL TO PREVENT BURNS. If the flames do not go out immediately, EVACUATE AND CALL THE FIRE DEPARTMENT.

NEVER PICK UP A FLAMING PAN - you may get burned

DO NOT USE WATER, including wet dishcloths or towels - a violent steam explosion will result.

Use a fire extinguisher ONLY if:

- You know you have a class ABC extinguisher, and you already know how to operate it.
- The fire is small and contained in the area where it started.
- The fire department is being called.
- You can fight the fire with your back to an exit.

Based on "Kitchen Fire Safety Tips" published by NFPA

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT USE THIS FAN WITH ANY SOLID-STATE SPEED CONTROL DEVICE.

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, INJURY TO PERSONS, OBSERVE THE FOLLOWING:

1. Use this unit only in the manner intended by the manufacturer. If you have questions, contact the manufacturer at the address or telephone number listed in the warranty.
2. Before servicing or cleaning unit, switch power off at service panel and lock the service disconnecting means to prevent power from being switched on accidentally. When the service disconnecting means cannot be locked, securely fasten a prominent warning device, such as a tag, to the service panel.
3. Installation work and electrical wiring must be done by a qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction codes and standards.
4. Sufficient air is needed for proper combustion and exhausting of gases through the flue (chimney) of fuel burning equipment to prevent backdrafting. Follow the heating equipment manufacturer's guideline and safety standards such as those published by the National Fire Protection Association (NFPA), and the American Society for Heating, Refrigeration and Air Conditioning Engineers (ASHRAE), and the local code authorities.
5. When cutting or drilling into wall or ceiling, do not damage electrical wiring and other hidden utilities.
6. Ducted fans must always be vented to the outdoors.
7. Acceptable for use over a tub or shower when connected to a GFCI (Ground Fault Circuit Interrupter) - protected branch circuit (ceiling installation only).
8. This unit must be grounded.

CAUTION

1. For general ventilating use only. Do not use to exhaust hazardous or explosive materials and vapors.
2. This product can be installed in a wall if mounted 8-ft. or more above the floor.
3. To avoid motor bearing damage and noisy and/or unbalanced impellers, keep drywall spray, construction dust, etc. off power unit.
4. Please read specification label on product for further information and requirements.

TOOLS & PARTS REQUIRED FOR INSTALLATION

Electrical drill or ratchet driver
1/2" drill bit for drilling pilot holes
1 1/4" drill bit for drilling electrical wiring access hole
Screwdriver: Phillips & Straight blade
Pliers
Tape Measure or ruler + pencil
Electrical supplies for wiring
Aluminium foil tape and/or HVAC tape
Hammer
Jigsaw or saber saw
Stud finder

CONTENT OF THE BOX

Body (Main Unit): 1 pc
Installation Manual: 1 pc
Metal Grease Filter: 1-4 pcs
Hardware: 1 set

LOCATION REQUIREMENTS

Observe all governing codes and local ordinances. Have a qualified technician install the range hood. It is the installer's responsibility to comply with installation clearances specified on the model serial rating plate.

Canopy hood's location should be away from strong draft areas, such as windows, doors, and strong heating vents.

Recommended heights are shown. Given dimensions provide minimum clearance.

VENTILATION REQUIREMENTS

Range hoods must be ventilated to the outdoors, except for non-vented (recirculating) installations.

Do not ventilate the range hood into an attic or other enclosed areas.

Do not use 4" (10.2 cm) laundry-type wall caps.

The length of the range hood exhaust and the number of elbows should be kept to a minimum to provide maximum performance.

Use no more than three 90° elbows.

Make sure there is a minimum of 24" (61 cm) of straight duct between the elbows if more than one elbow is used.

Do not install two elbows together.

Use clamps to seal all joints in the vent system.

The vent system must have a damper. If the roof or wall cap has a damper, do not use the damper supplied with the range hood.

Use caulking to seal exterior walls or roof openings around the cap.

The size of the vents should be uniform

MAKEUP AIR

Local building codes may require the use of makeup air systems, when using ventilation systems greater than specified CFM of air movements in your area.

COLD WEATHER INSTALLATIONS

An additional back draft damper should be installed to minimize backward cold air flow. A thermal break should be installed to minimize conduction of outside temperatures as part of the vent system. The damper should be on the cold air side of the thermal break. The break should be as close as possible to where the vent system enters the heated portion of the house.


VENTING METHOD

This canopy hood is factory set for through the roof wall. A 6" (15.2 cm) round vent system is needed for installation.

The hood exhaust opening is 6" (15.2 cm) round. To vent through a wall, a 90° elbow is needed. If exhaust ducting with a diameter of less than 5.91" (150 mm) or if flat ducting is used, the noise level of the range hood will increase and extraction will be less efficient.

REAR DISCHARGE

A 90° elbow may be installed immediately above the hood.

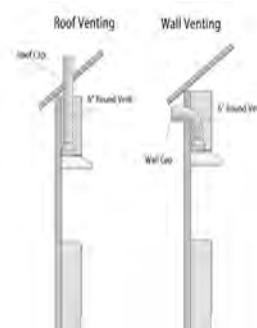

ELECTRICAL REQUIREMENTS & SPECIFICATIONS

IMPORTANT: Observe all governing codes and ordinances.

It is the customer's responsibility to contact a qualified electrical installer.

A 120 Volt, 60 Hz, AC only, fused electrical supply is required on a 15-amp circuit.

DO NOT have a fuse in the neutral or ground circuit.

The 3-prong outlet should be grounded. If the power cord plug is not used, the power cord's green wire should be connected to ground.

Check with a qualified electrician if you are not sure that the range hood is properly grounded.

DO NOT ground to a gas pipe.

The range hood must be connected with copper wire/plug only.

The range hood should be connected directly to the fused disconnect (or circuit breaker) box through flexible armored or non-metallic sheathed copper cable. ETL listed strain relief must be provided at each end of the power supply cable.

ITEM	Unit	Parameter
Rated Voltage	V	110
Rated Frequency	Hz	50
Motor Power	W	50
Lamp Power	W	≤2x1.5
Air Pressure	Pa	>160
Noise Level	dB(A)	<67
Air Output Diameter	mm	150



ATTENTION HOMEOWNER

These installation steps are meant to be a general guideline for mounting and installing your under cabinet range hood. If you require assistance, please contact your local contractor.

Please exercise extreme caution when handling a range hood to prevent risk of injury and electric shock.

Building codes will vary. It is the buyer or contractor's responsibility to know local county or state regulations before installation of this range hood.

PREPARATIONS:

NOTE: To avoid damage to your hood, prevent debris from entering the vent opening

Decide the location of the venting pipe from the hood to the outside. Please see "Venting Method" section.

A straight, short vent will allow the hood to perform more efficiently.

Try to avoid as many transitions, elbows, and long run as possible. This may reduce the performance of the hood.

IMPORTANT: Peel white or blue plastic protective film off the hood.

Use HVAC foil tape / duct tape to seal joints between the pipe sections.

For installing under cabinets with a recessed bottom, attach 4-inch wide wood filler strips (not provided) on each side. Refer to Figure 1.

Using references in measurements and diagrams provided, create an opening for electrical wires and hood exhaust under the cabinet

CAUTION: If moving the cooking range is necessary to install the hood, first turn off the power.

Always turn off the gas before moving a gas range.

Puncture the knockout holes (for mounting under the cabinet) on the hood as shown in Figure 2.

If necessary, attach two rubber panels with adhesive tape to the rear corners of the range hood.

This will help reduce vibrations and shaking when in operation.

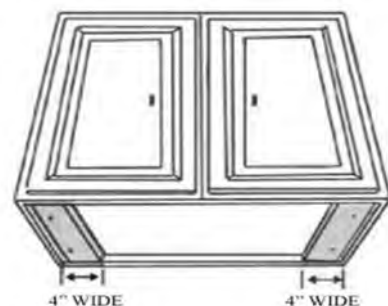


Figure 1



Figure 2

ATTENTION HOMEOWNER

Two people will be required to lift and install the main unit. We highly recommend professional help and an extra set of hands.

Measure the distance between the stove top and the bottom of the range hood. A distance of 24" to 32" is recommended.

There are **two methods** (A or B) to mount the range hood, choose the one that better fits your setup and model.

STEP 1 | METHOD A

Proceed if you would like to mount this range hood without using the hood mounting bracket.

1. Using references in the Location Requirements section, center the hood beneath the cabinet and flush with the front of the cabinet.
2. Draw the electrical wires through the cabinet access opening if not done so already.
3. From inside of the hood, place screws into the exact center of each knockout hole and secure to cabinet bottom. Finish tightening all screws until secure. Be careful when using electrical screwdrivers, they may cause damage to the range hood.

Skip Method B below and proceed to step 2.




CAUTION: Make certain the range hood is fully secured before releasing!

STEP 1 | METHOD B

Proceed if you would like to mount this range hood using the provided hood mounting bracket (If included).

1. Using references in the Location Requirements section, mark the leveling point of the hood. Position two mounting screws on the wall, leaving 1/8" space away from the wall. Mounting the hood on wall studs is highly recommended.
2. Attach the hood mounting bracket to the back of the hood with four screws as shown in Figure 3.
3. Puncture the knockout wire access hole at the back of the hood and draw the electrical wires.
4. Align hood-mounting brackets to the screws on the wall and hook the hood into place as shown on the next page.
5. Tighten screws to secure hood to the wall.

CAUTION: Make certain the range hood is fully secured before releasing!

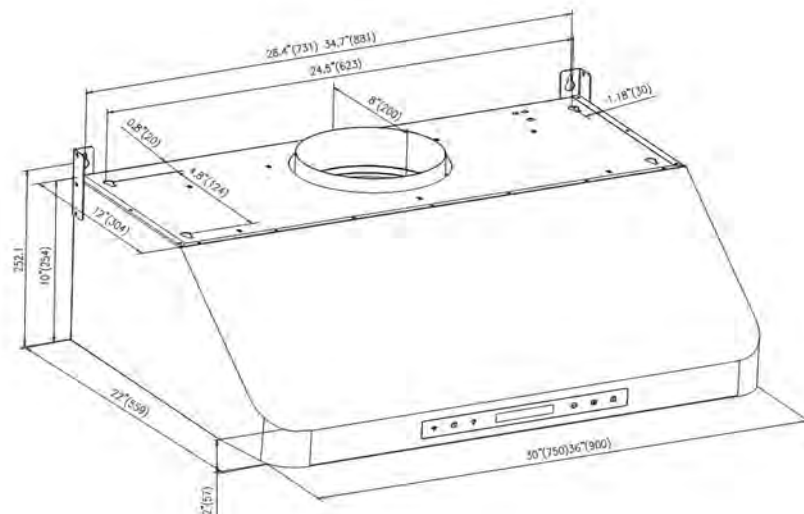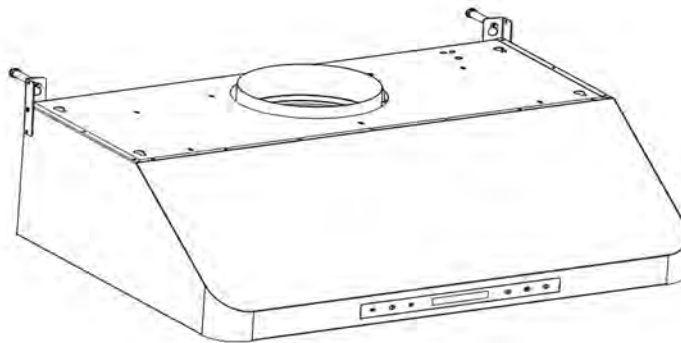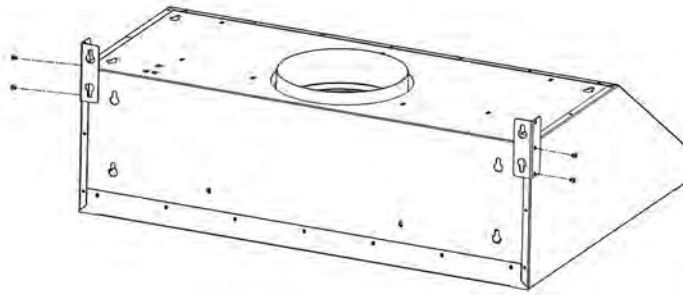

STEP 2

For safety purposes, pre-drilled mounting holes are provided through the back of the hood. For a more secure installation, use as many mounting holes as needed to secure the unit from the inside of hood.

STEP 3

Use a 8" diameter (size may vary) venting pipe (follow building codes in your area) to connect the exhaust on the hood to the ductwork above. Use HVAC foil tape / duct tape to make all joints secure and air tight.

SAFETY WARNING: Risk of electrical shock. This range hood must be properly grounded. Make sure this is done by qualified electrician in accordance with all applicable national and local electrical codes. Before connecting wires, switch power off to prevent power from being switched on accidentally.

STEP 4

Connect the range hood to a designated standard outlet or cut off the plug and connect three wires (black, white and green) to house wires and cap with wire connectors. Connect according to colors (i.e. black to black, white to white, and green to green.) (If applicable).

STEP 5

Store excess wires in the wiring box.

STEP 6

Place oil tray into recess support near the rear of the hood. Refer to Figure 6.

STEP 7




To install baffle filters, refer to Figure 7 for placement.

1. Angle baffle filter toward the back of hood.
2. Push baffle filter up until almost leveled.
3. Slide iforward into recess behind the front of the hood.
4. Lower the baffle filter.
5. Slide back until it fits into resting position.

STEP 8

Turn power ON with Control Panel. Check all lights and fan operation

Make sure to leave this installation guide for the homeowner if you are a contractor.

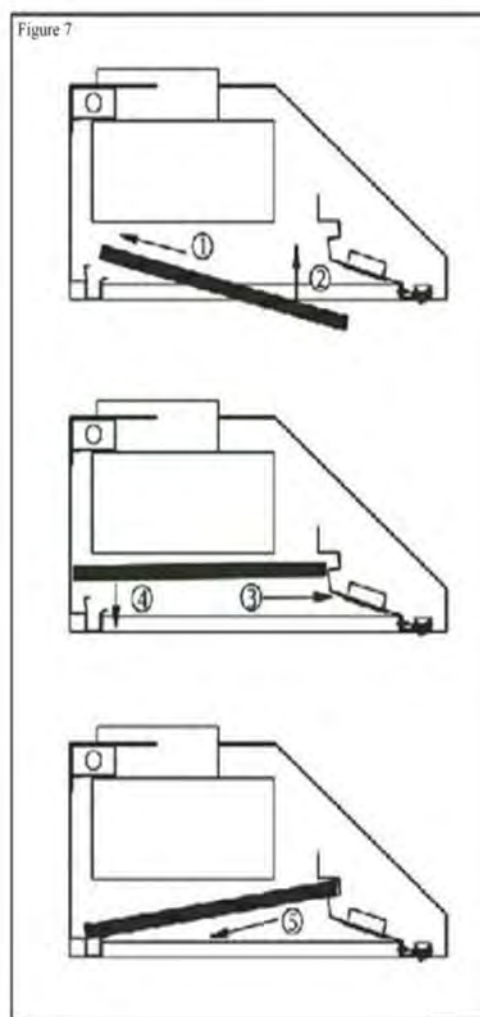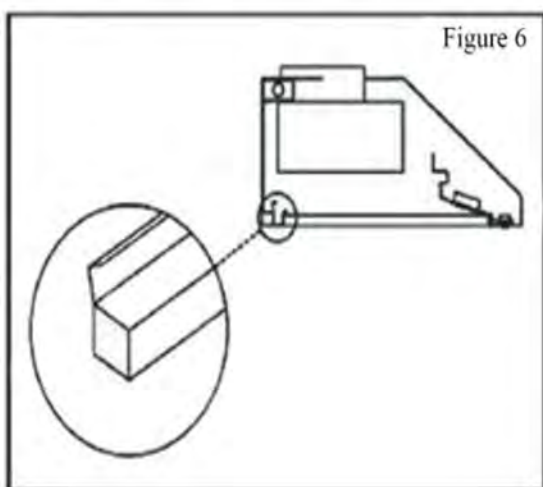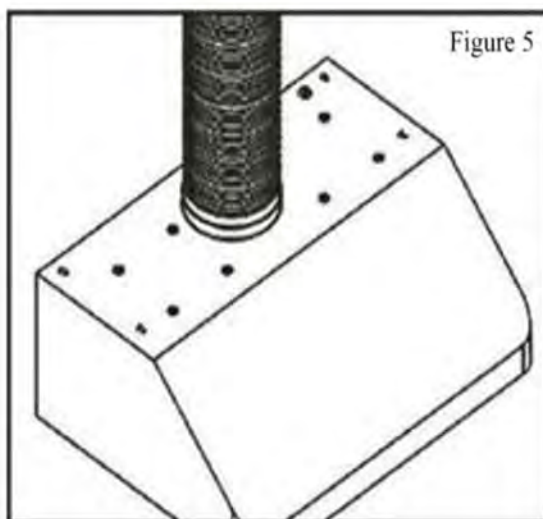

CONTROL PANEL LAYOUT AND BUTTONS SETTINGS



A B C

D E F

- A) **REMOTE CONTROL:** Same function as “power” button
- B) **CLOCK / DELAY SETTING:** When fan is running, press time delay button, time delay button will blink, press + or - the system will automatically shut down after 1 - 15 minutes. press + or - to choose the time delay or exit function.
- C) **LAMP:** Press the lamp icon one time to active the light, press it again to turn the light off.
- D) **“-” :** In standby mode, press this button one time, the range hood will start at F1 speed, if this button is pressed again, the speed will remain the same.
- E) **“+”:** In standby mode, press this button one time, the range hood, will start at F4 speed, if this button is pressed again, the speed will remain the same.
- F) **POWER:** Turns on the hood / set it to standby mode and show the time.

HOW TO ADJUST THE TIME CLOCK OR SET THE TIME

- 1) Press the clock (B) Button
- 2) Change Hour time using “+” and “-” buttons
- 3) Press the clock (B) Button again
- 4) Change Minute time using “+” and “-” buttons
- 5) Press the clock (B) Button again to finish



**PROFESSIONAL
FASHIONABLE
LUXURY**

WWW.VEZENI.COM

**Phone: 888-283-9364
888-2-VEZENI**