

INSTALLATION

Product Manual



IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.





AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer - could be a rug.



IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

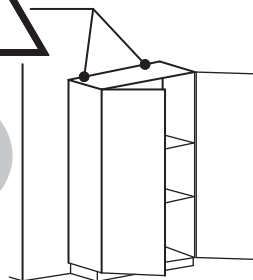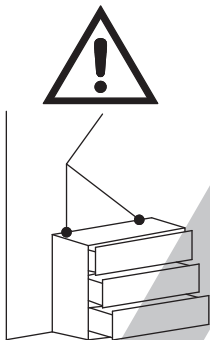

ANTI-TOPPLE WARNING !


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

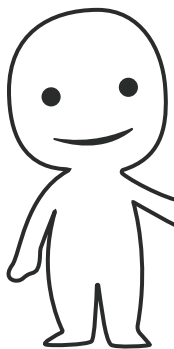


Please prepare the following tools



When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A x 85




Ø 6 x 40 mm

B x 85



Ø 12 x 12 mm

C x 65



Ø 8 x 30 mm

D x 20




Ø 4 x 30 mm

E x 30




Ø 3.9 x 16 mm

F x 4

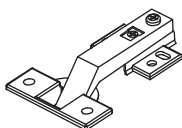


G x 3

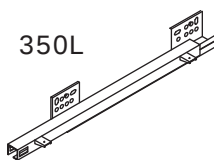


L=14 inch

H x 3

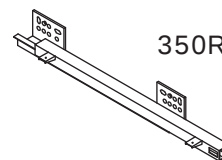


L=14 inch

J x 1

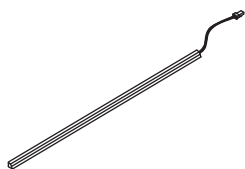


L=1760mm

K x 1

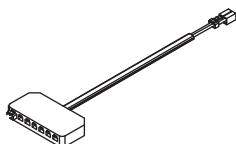


L x 1

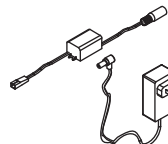

M x 1



N x 2

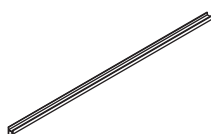


L=1745mm

O x 4



Ø 3 x 14 mm

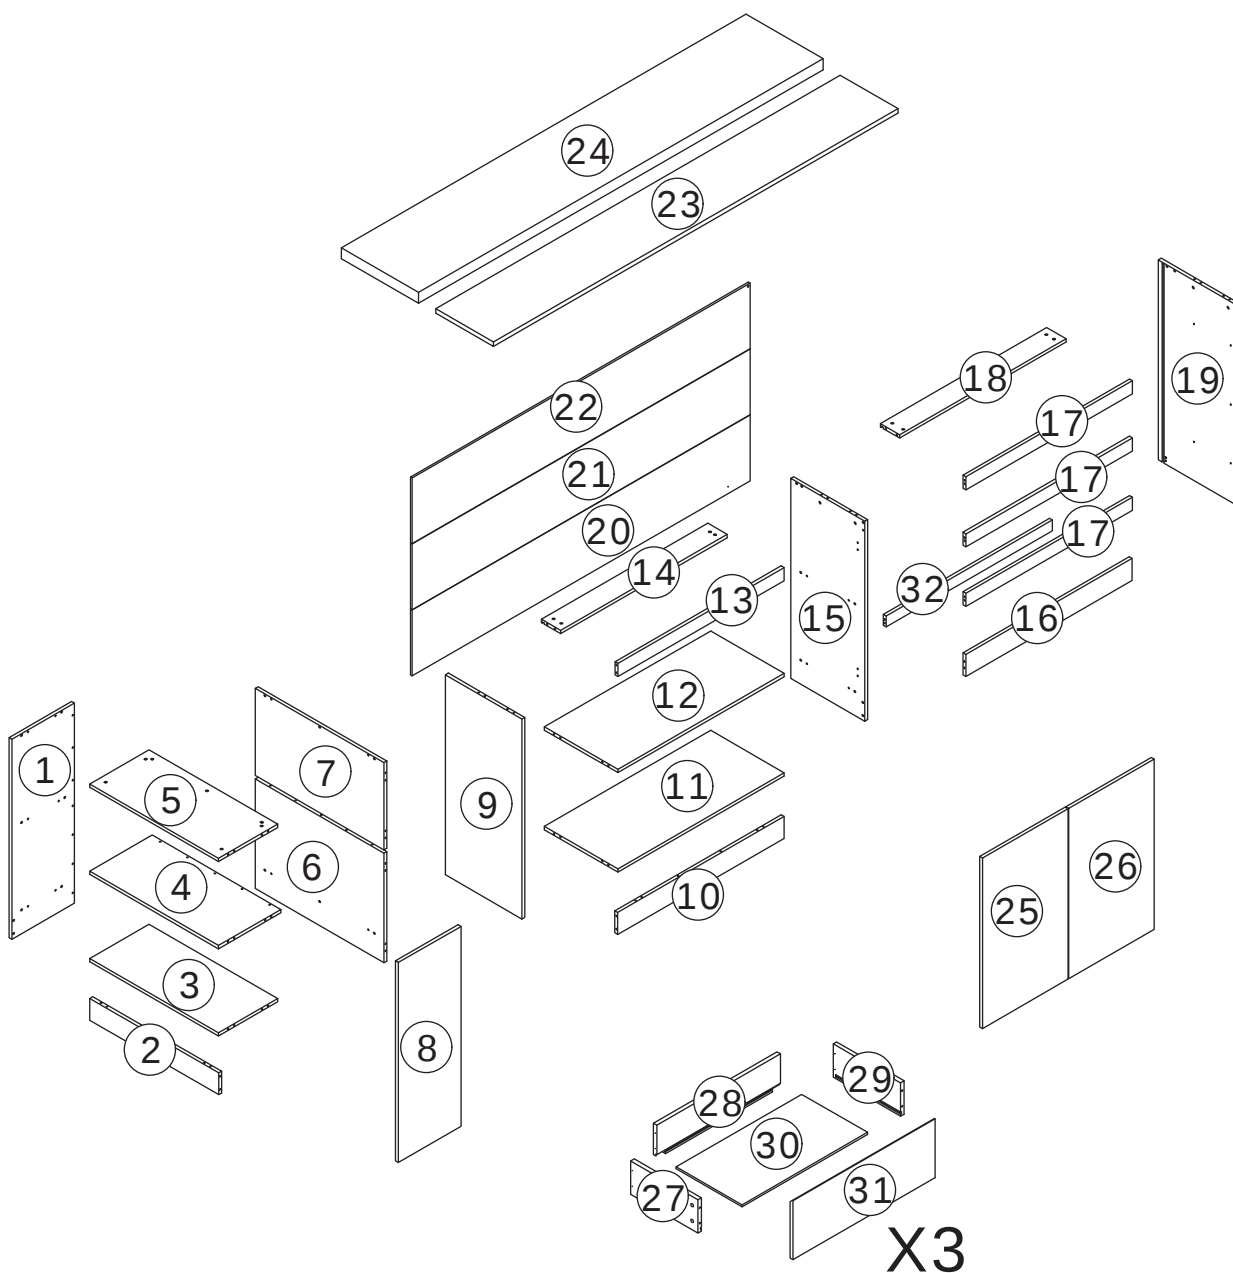


⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:


- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

*This is a permanent label.
Do not remove!*

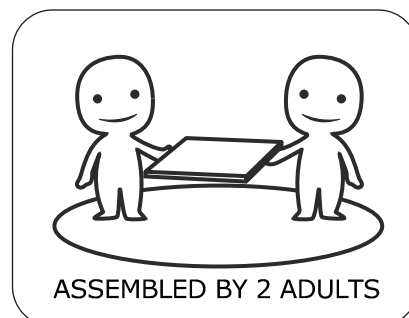


Part List

Box 1 / 2

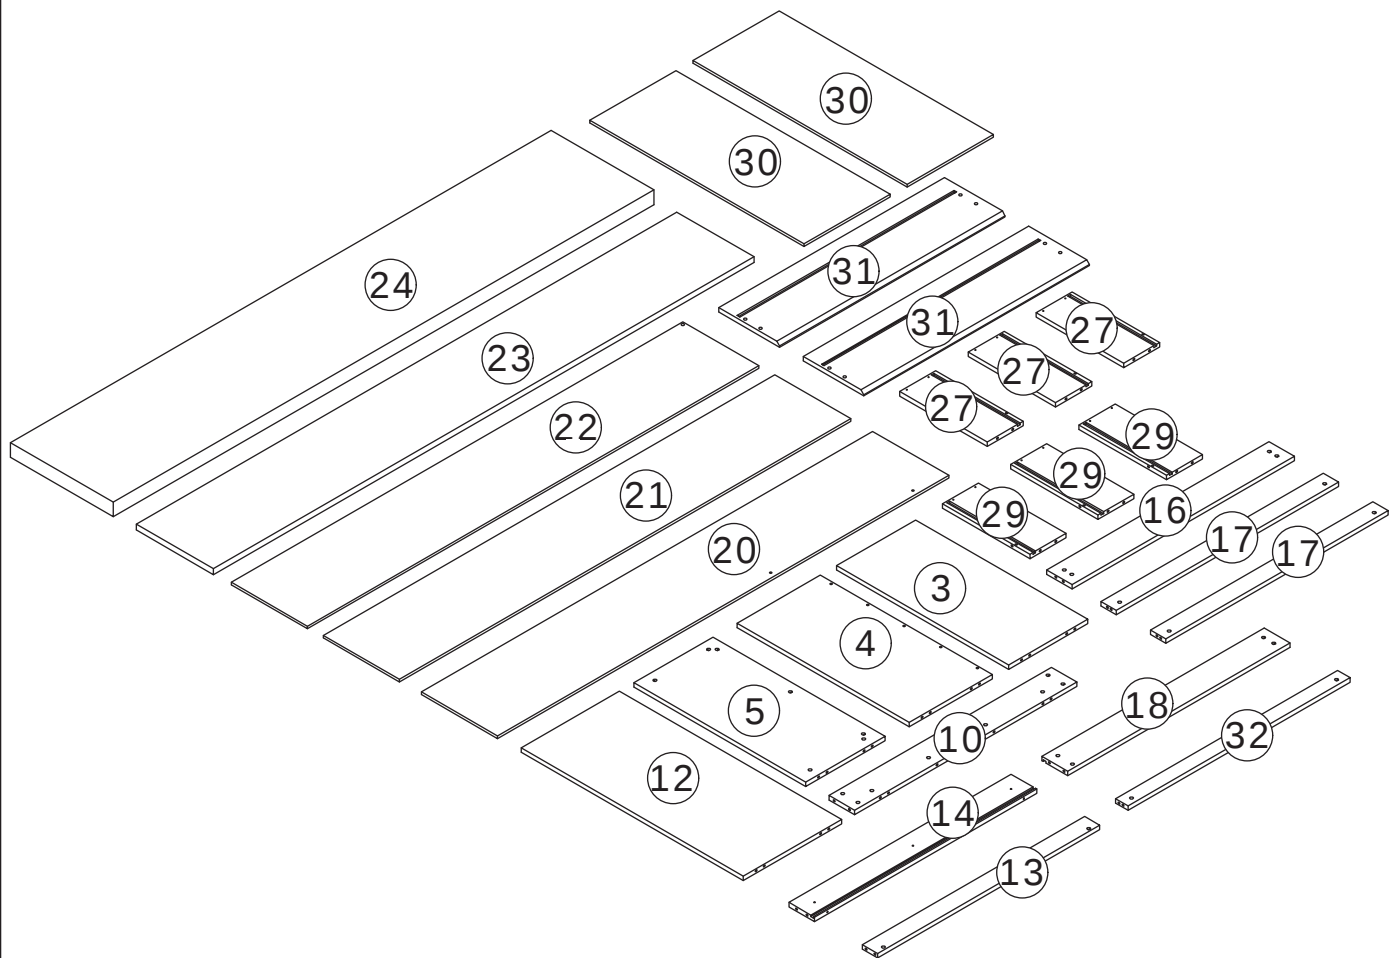

Part List

Box 2 / 2

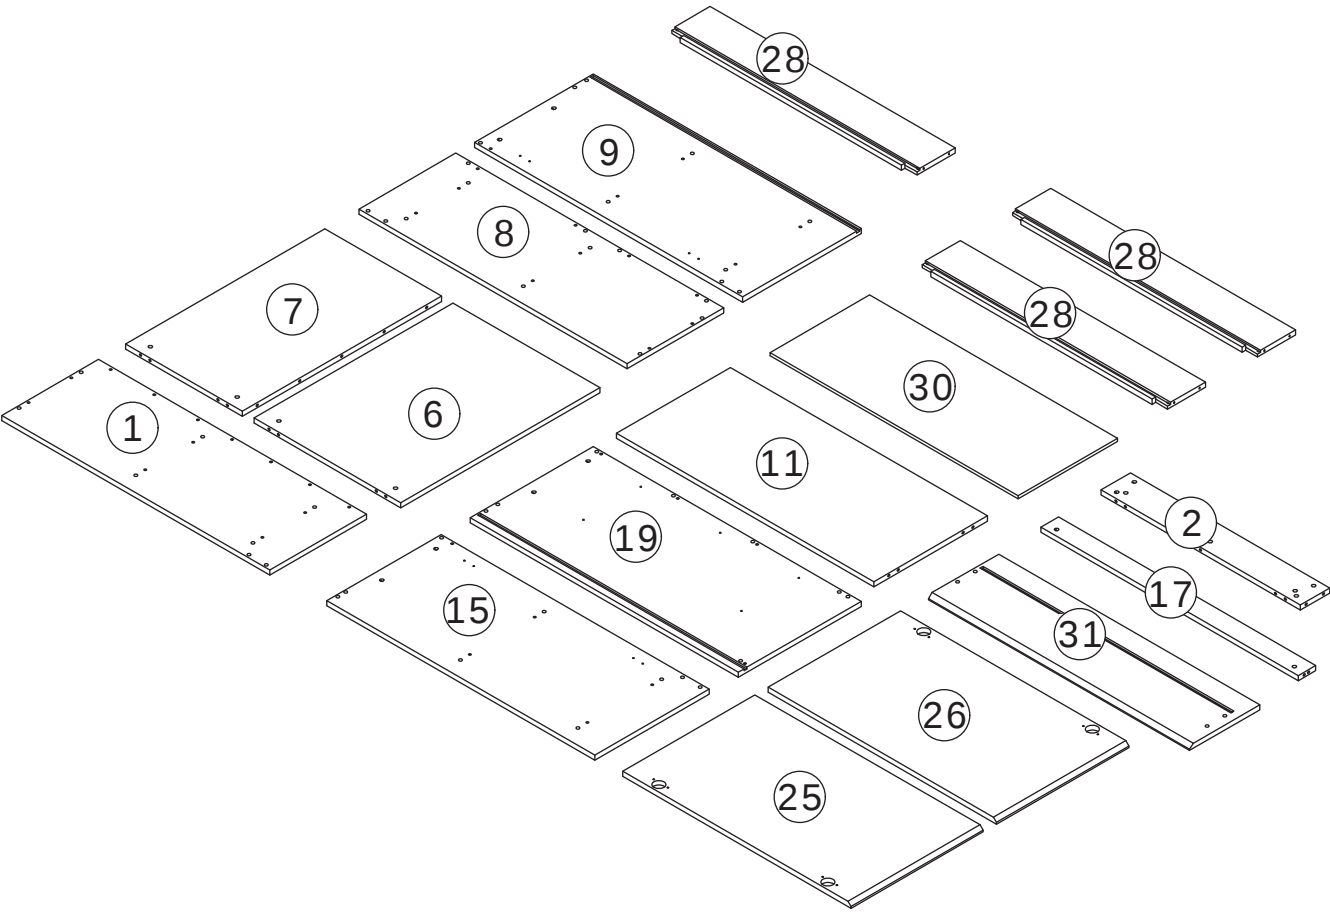


1

A x 9




Ø6 x 40 mm



C x 5



Ø8 x 30 mm




Screw self-tapping rod (A) and insert wooden dowel (C) into panel 9.

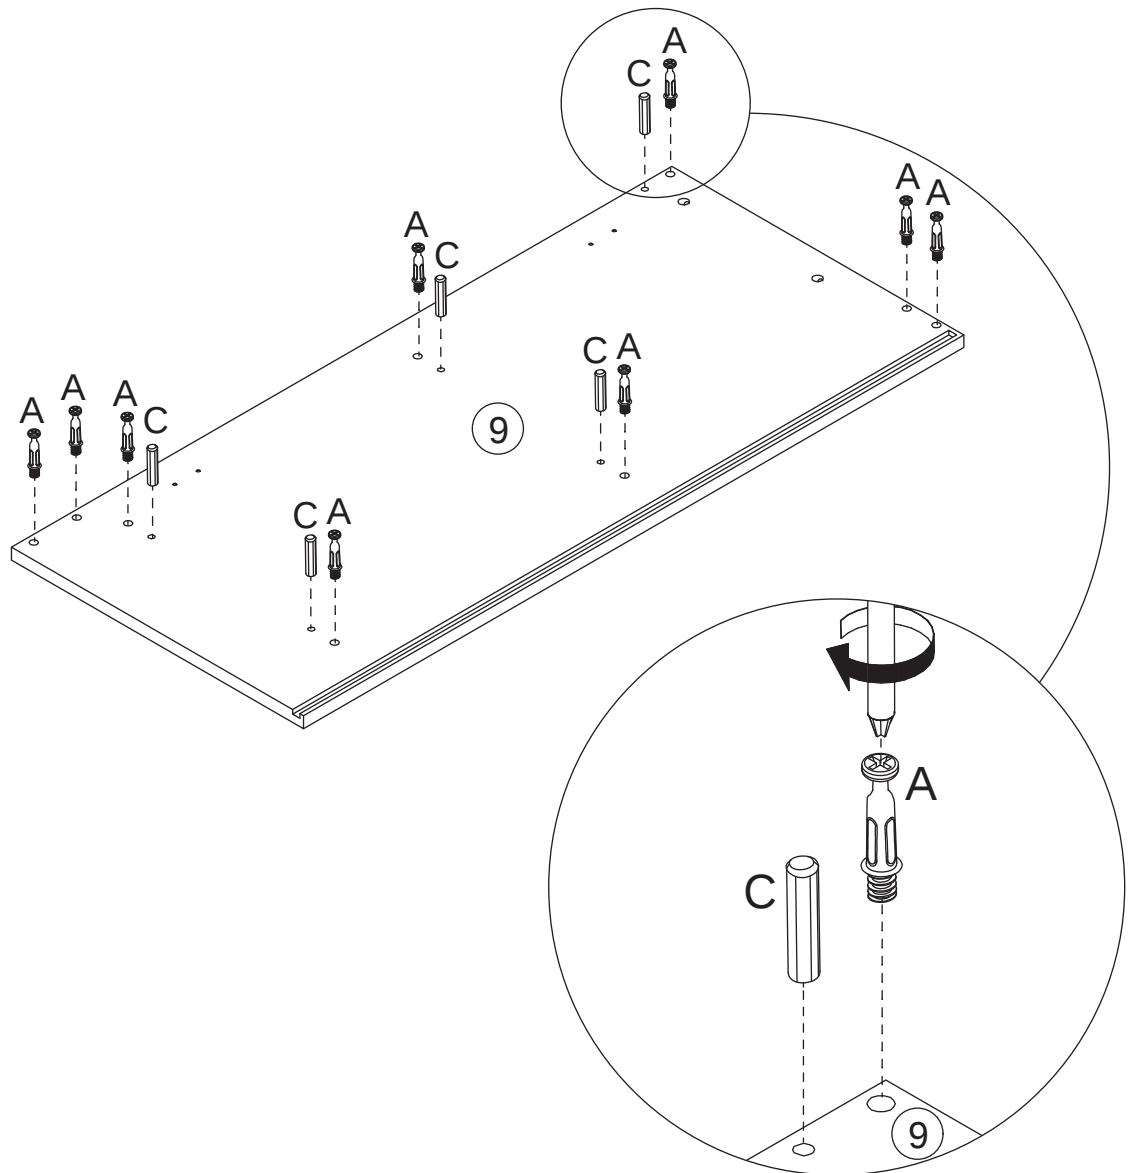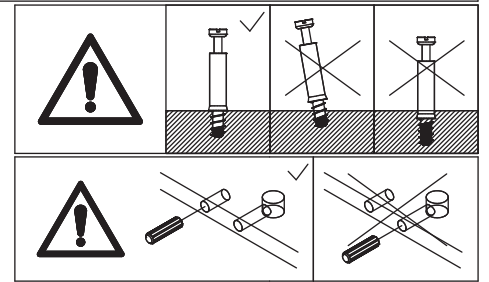



2

B x 1

 $\varnothing 12 \times 12 \text{ mm}$



Connect panel 13 to panel 9, then tighten by turning cam lock (B) clockwise.

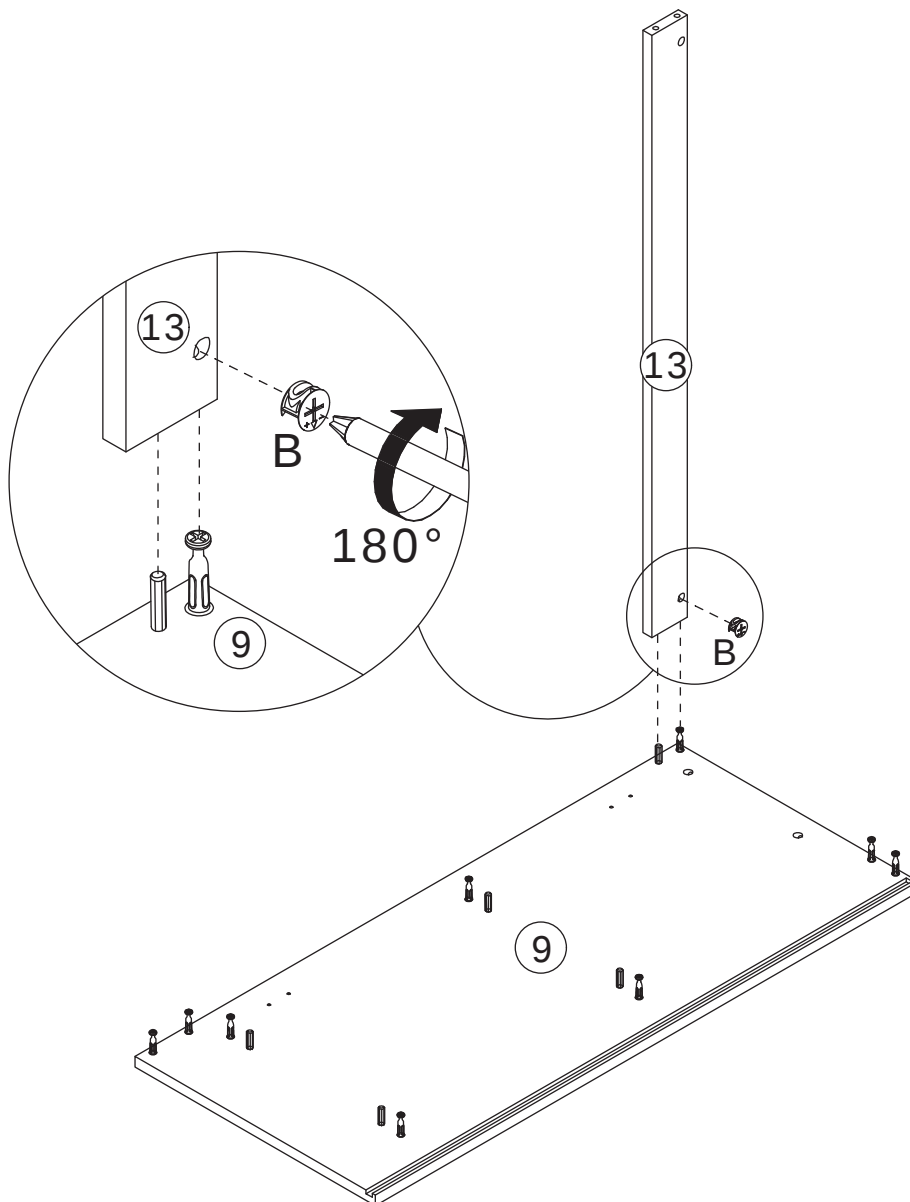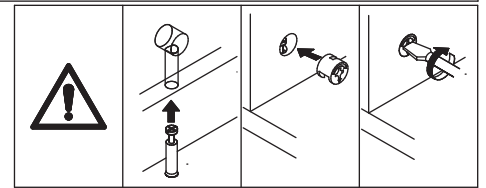


3



B x 2



Ø12 x 12 mm



Connect panel 14 to panel 9, then tighten by turning cam lock (B) clockwise.

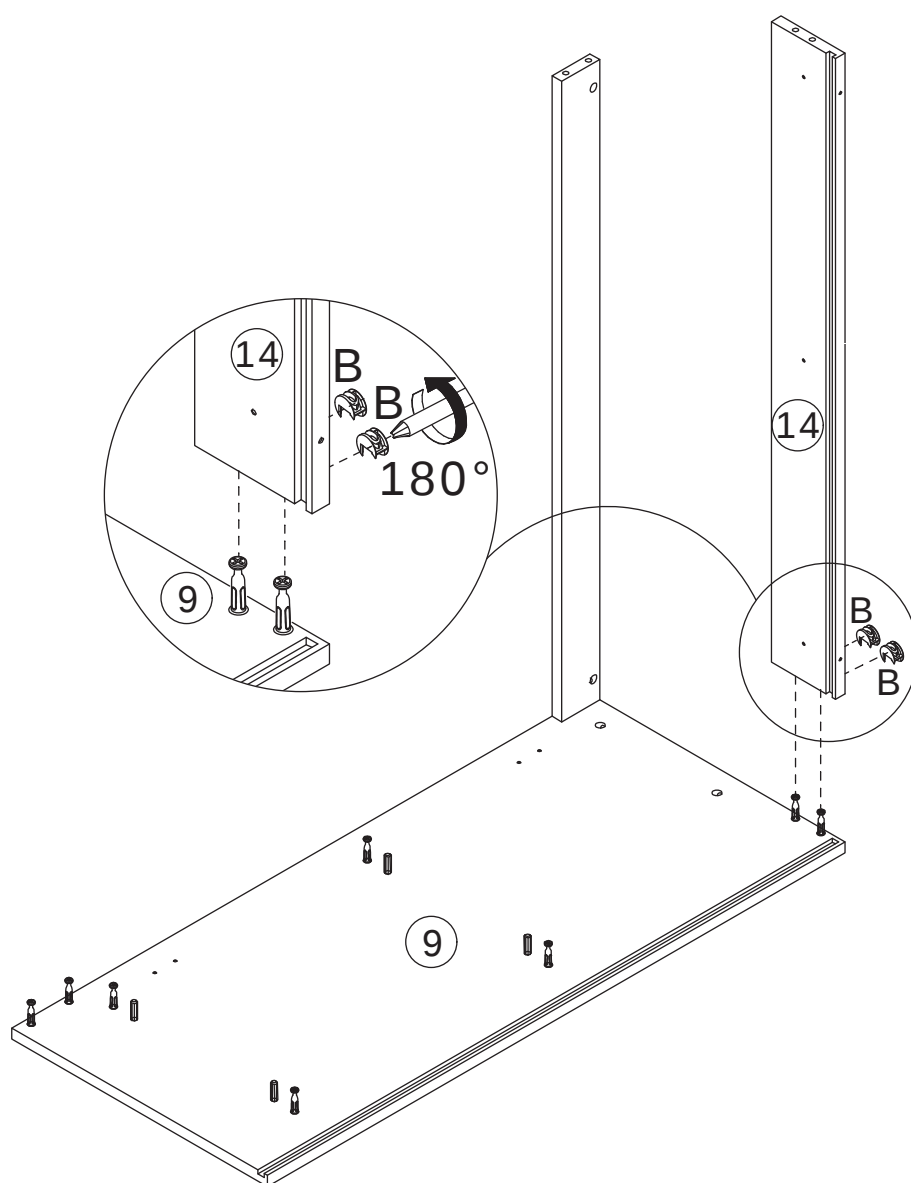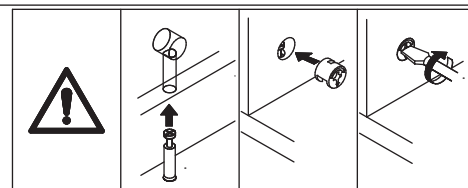


4



B x 2






Ø12 x 12 mm







Connect panel 12 to panel 9, then tighten by turning cam lock (B) clockwise.

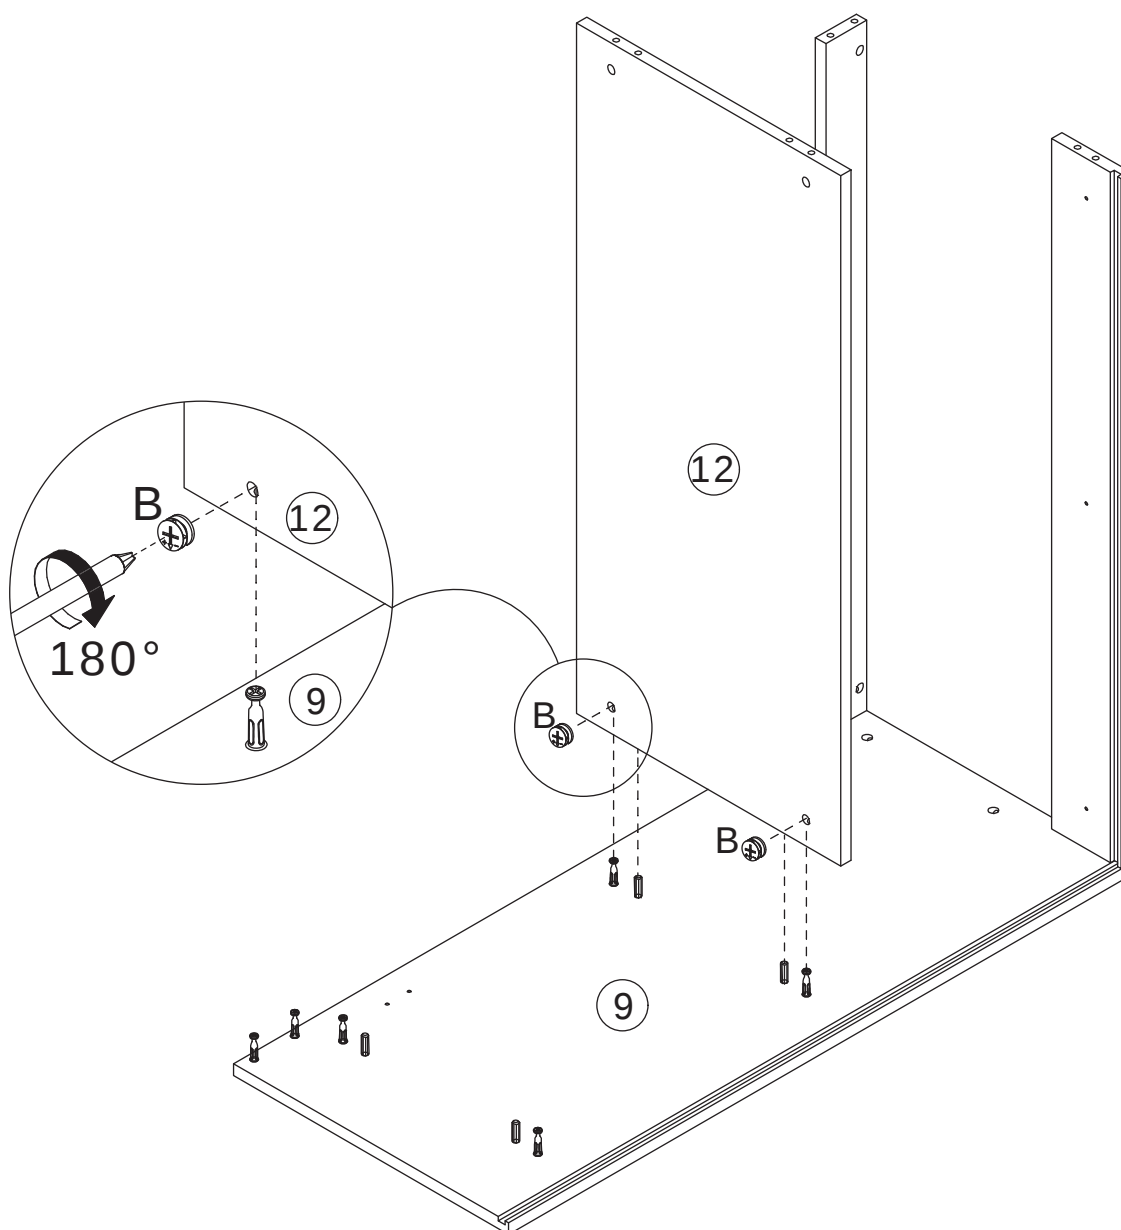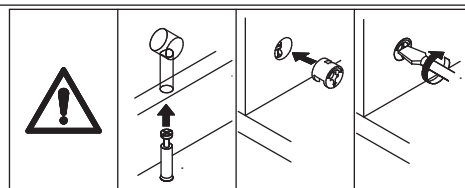

5

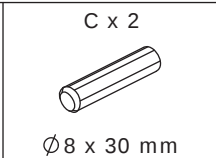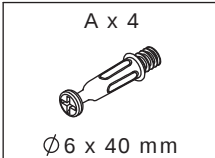


Screw self-tapping rod (A) and insert wooden dowel (C) into panel 11.

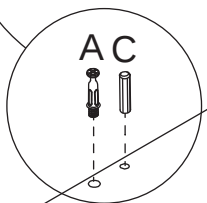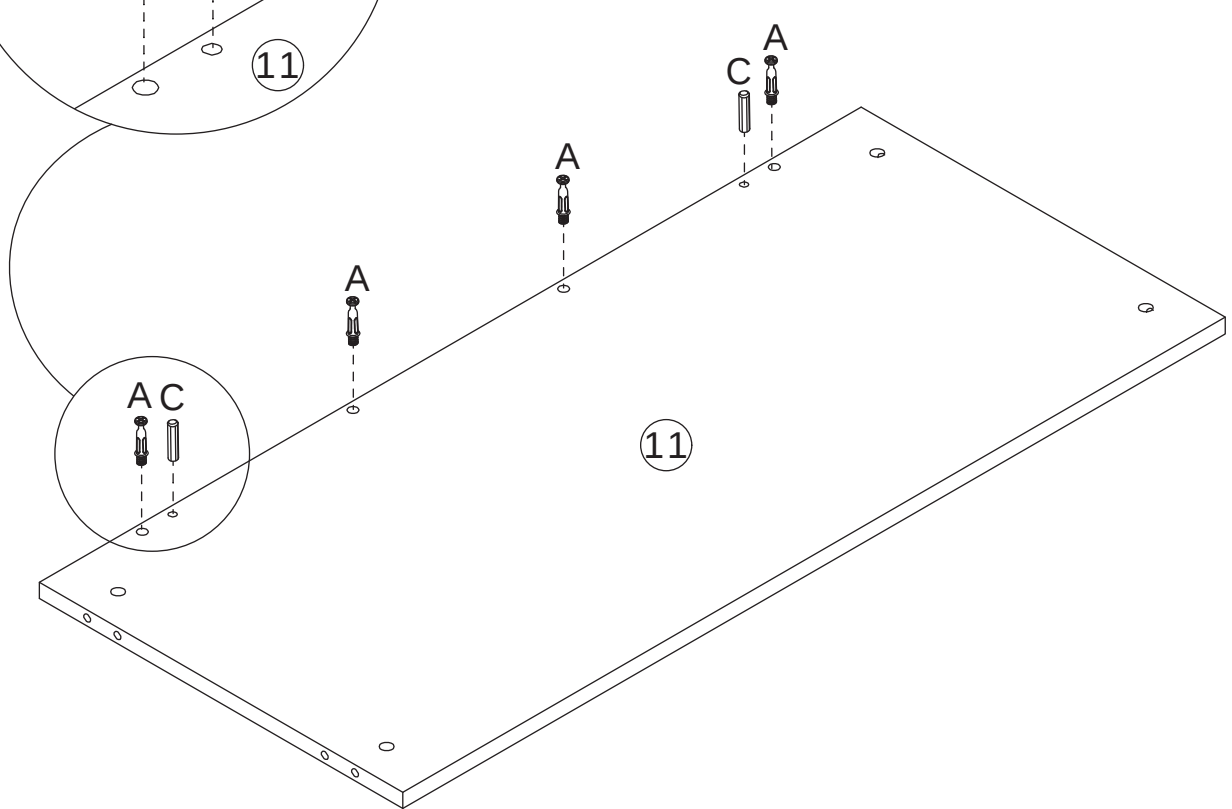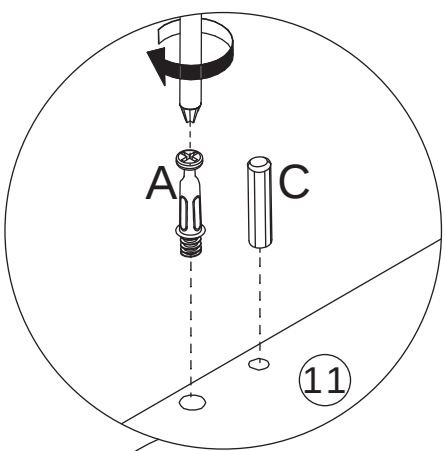
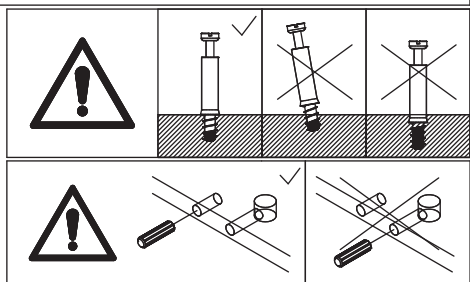


6

B x 4

 $\varnothing 12 \times 12 \text{ mm}$ 

Connect panel 10 to panel 11, then tighten by turning cam lock (B) clockwise.

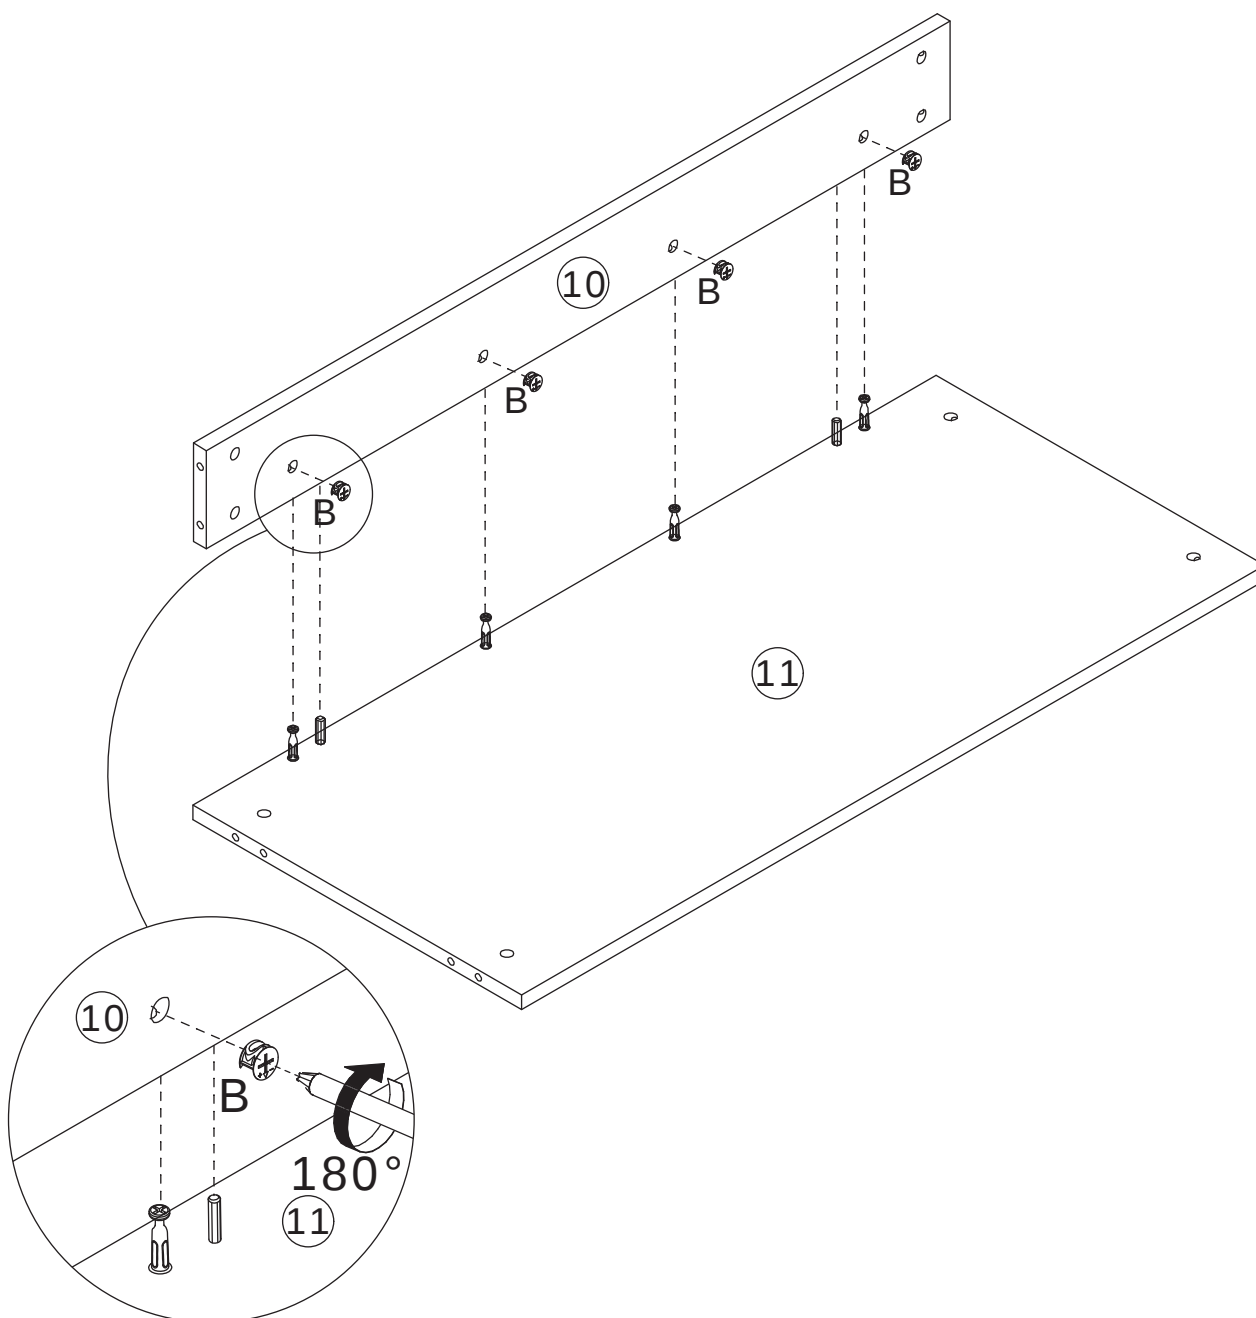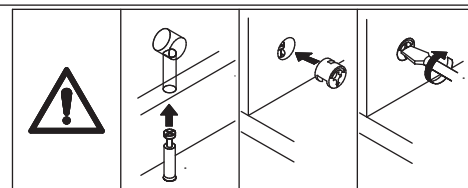


7




B x 4



Ø12 x 12 mm



Connect panel 10 and 11 to panel 9, then tighten by turning cam lock (B) clockwise.

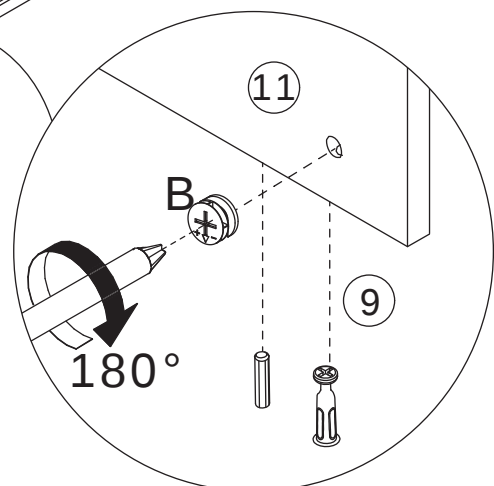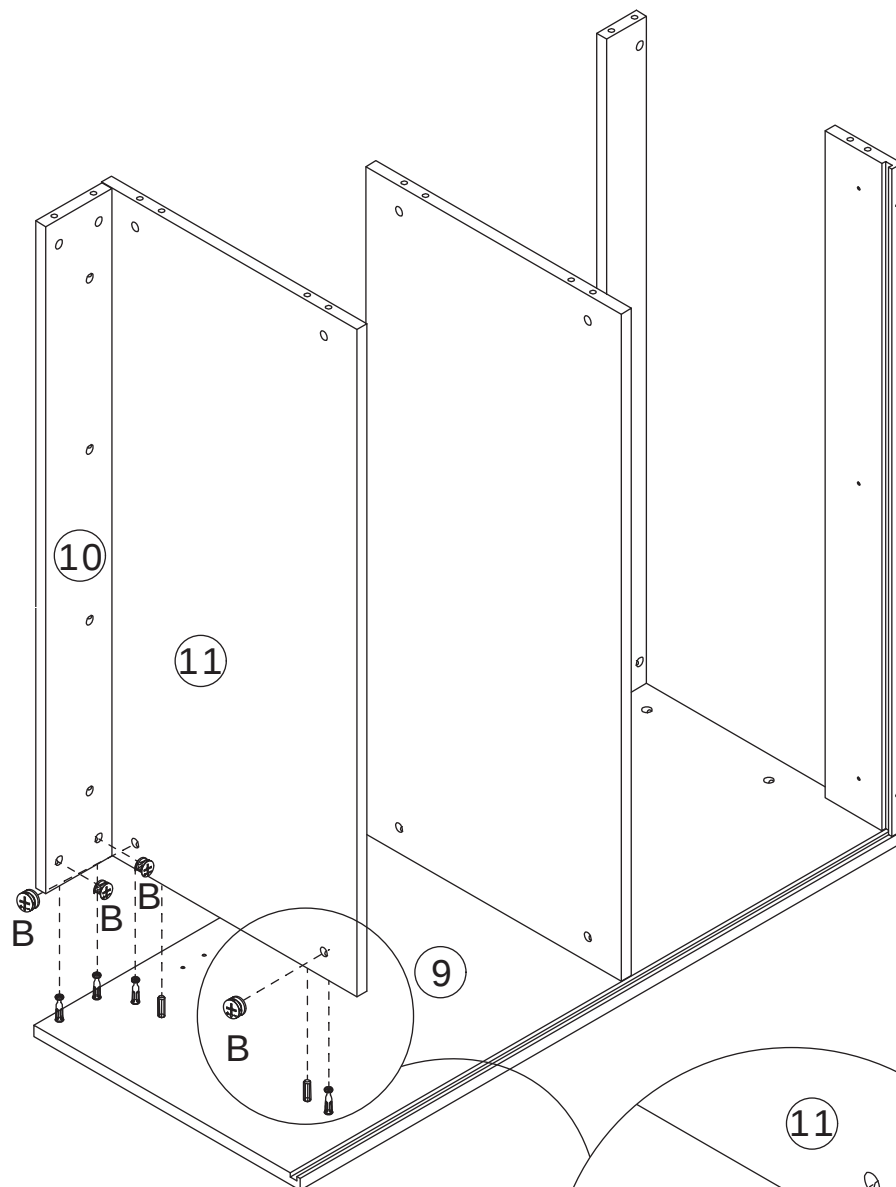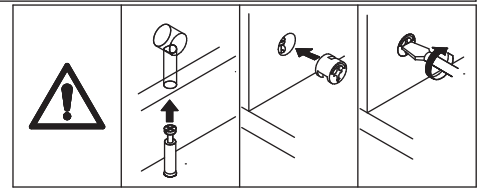


8

A x 17




C x 9


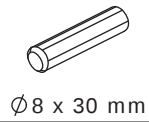


Ø6 x 40 mm

Ø8 x 30 mm




Screw self-tapping rod (A) and insert wooden dowel (C) into **both sides of** panel 15.

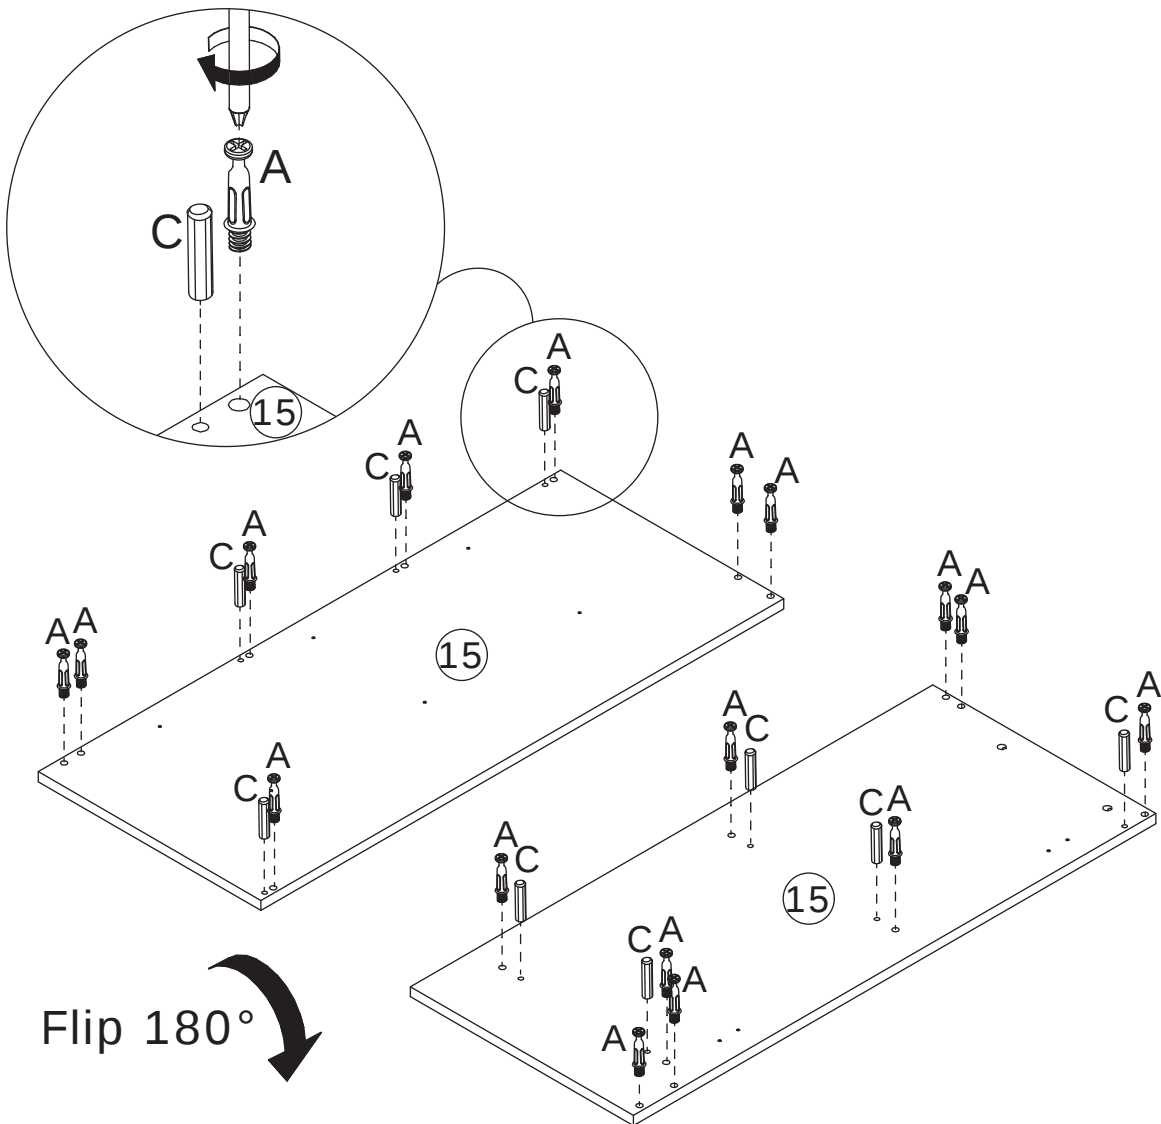
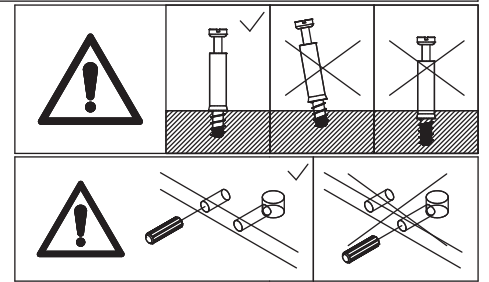


9

B x 9

 $\varnothing 12 \times 12 \text{ mm}$ 

Connect panel 15 to panel 10, 11, 12, 13 and 14, then tighten by turning cam lock (B) clockwise.

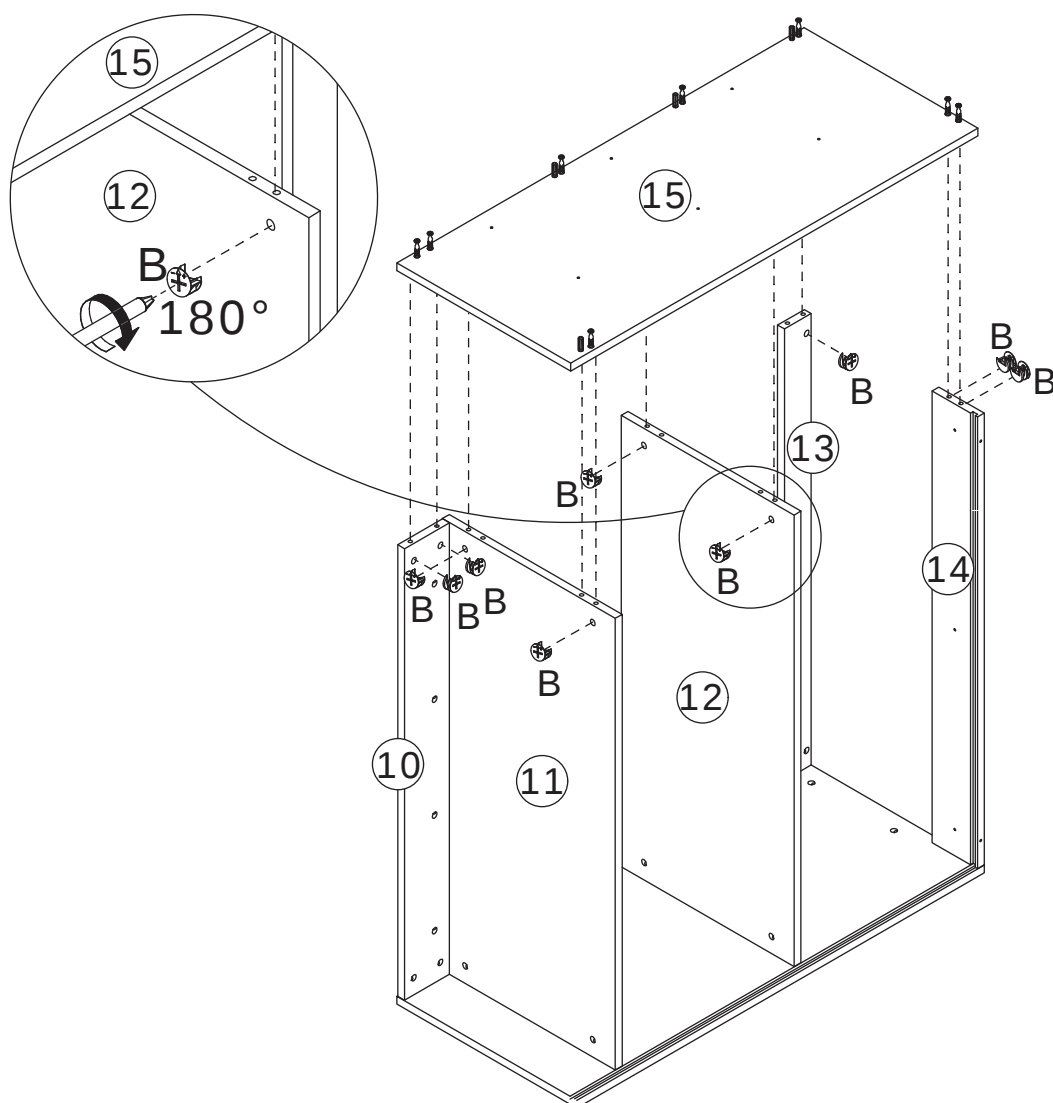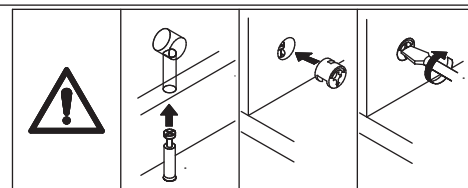


10



B x 2



Ø12 x 12 mm



Connect panel 18 to panel 15, then tighten by turning cam lock (B) clockwise.

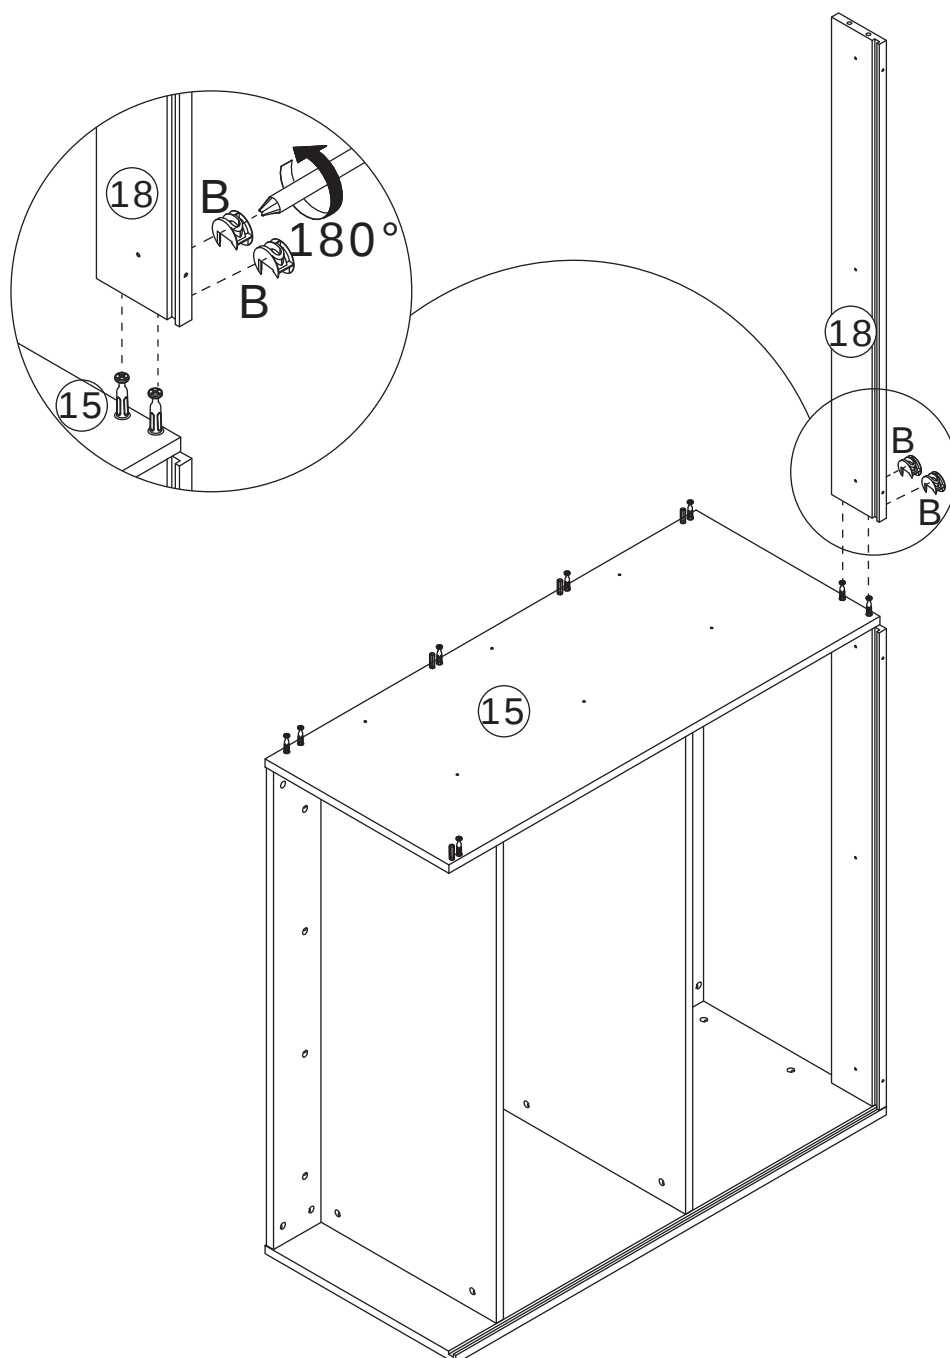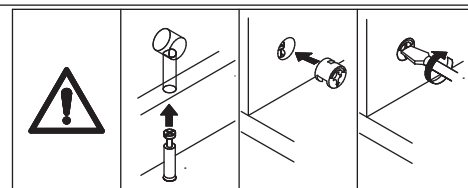


11



B x 4



Ø12 x 12 mm



Connect panel 17 and 32 to panel 15, then tighten by turning cam lock (B) clockwise.

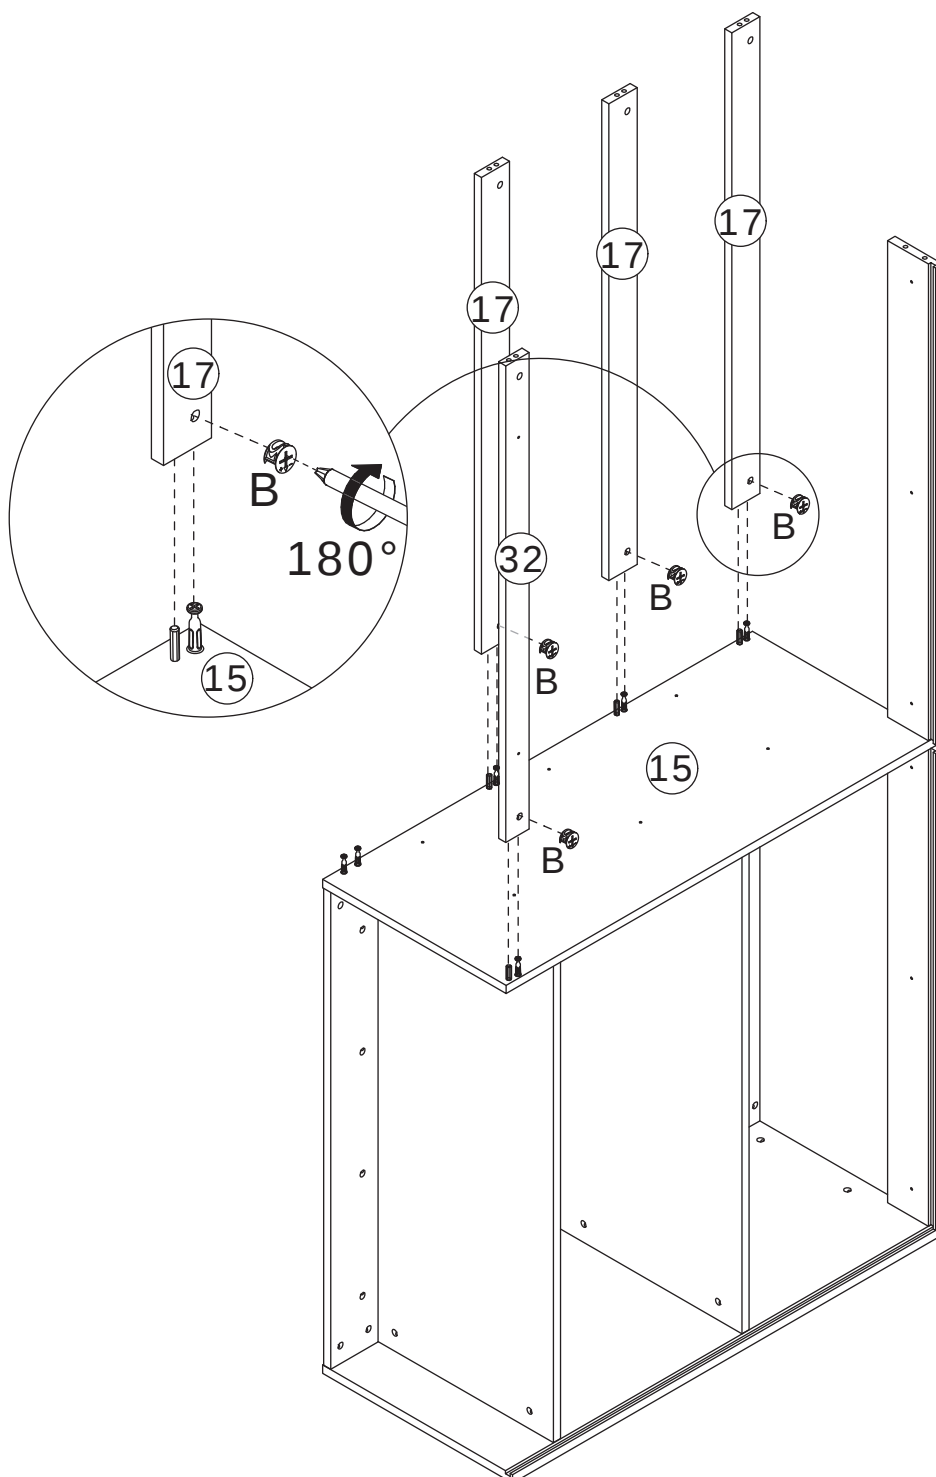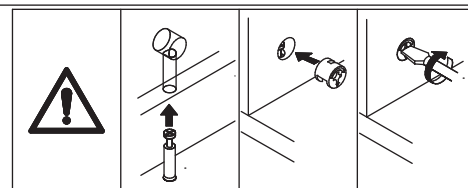


12




B x 2





Ø12 x 12 mm





Connect panel 16 to panel 15, then tighten by turning cam lock (B) clockwise.

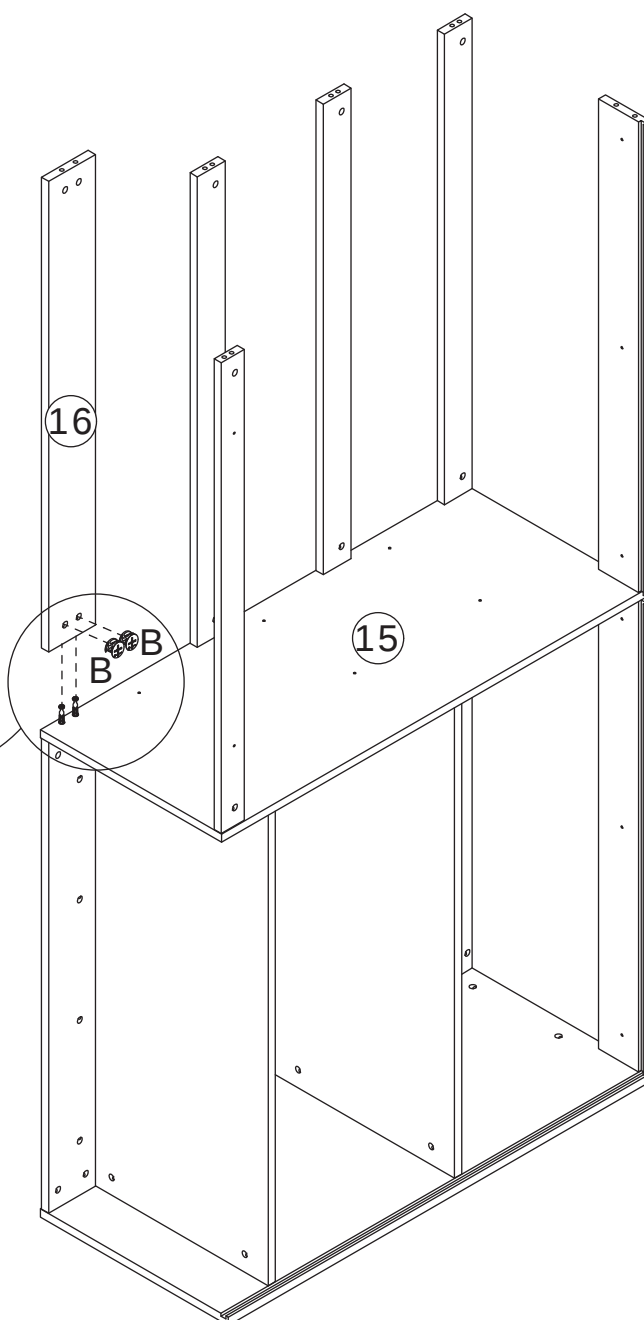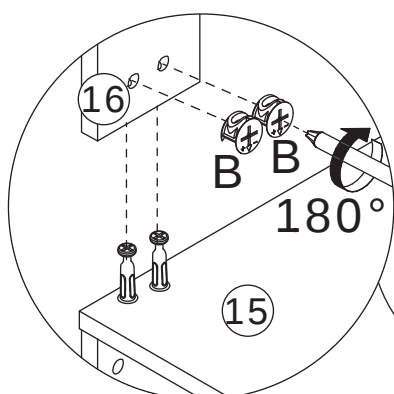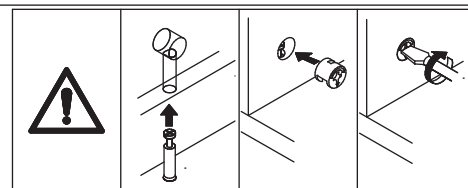

13

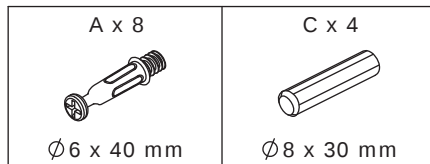

Screw self-tapping rod (A) and insert wooden dowel (C) into panel 19.

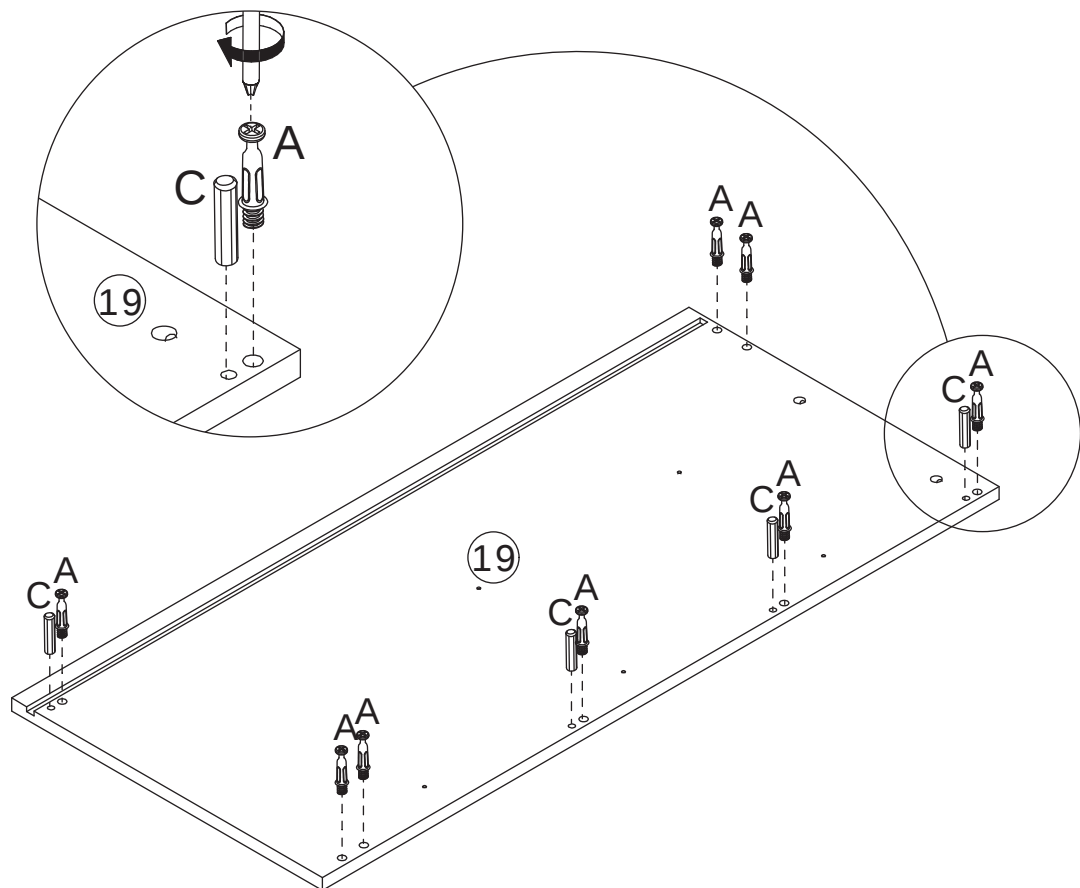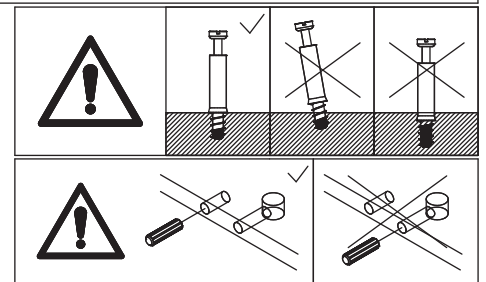


14



B x 8



Ø12 x 12 mm




Connect panel 19 to panel 16, 17, 18 and panel 32, then tighten by turning cam lock (B) clockwise.

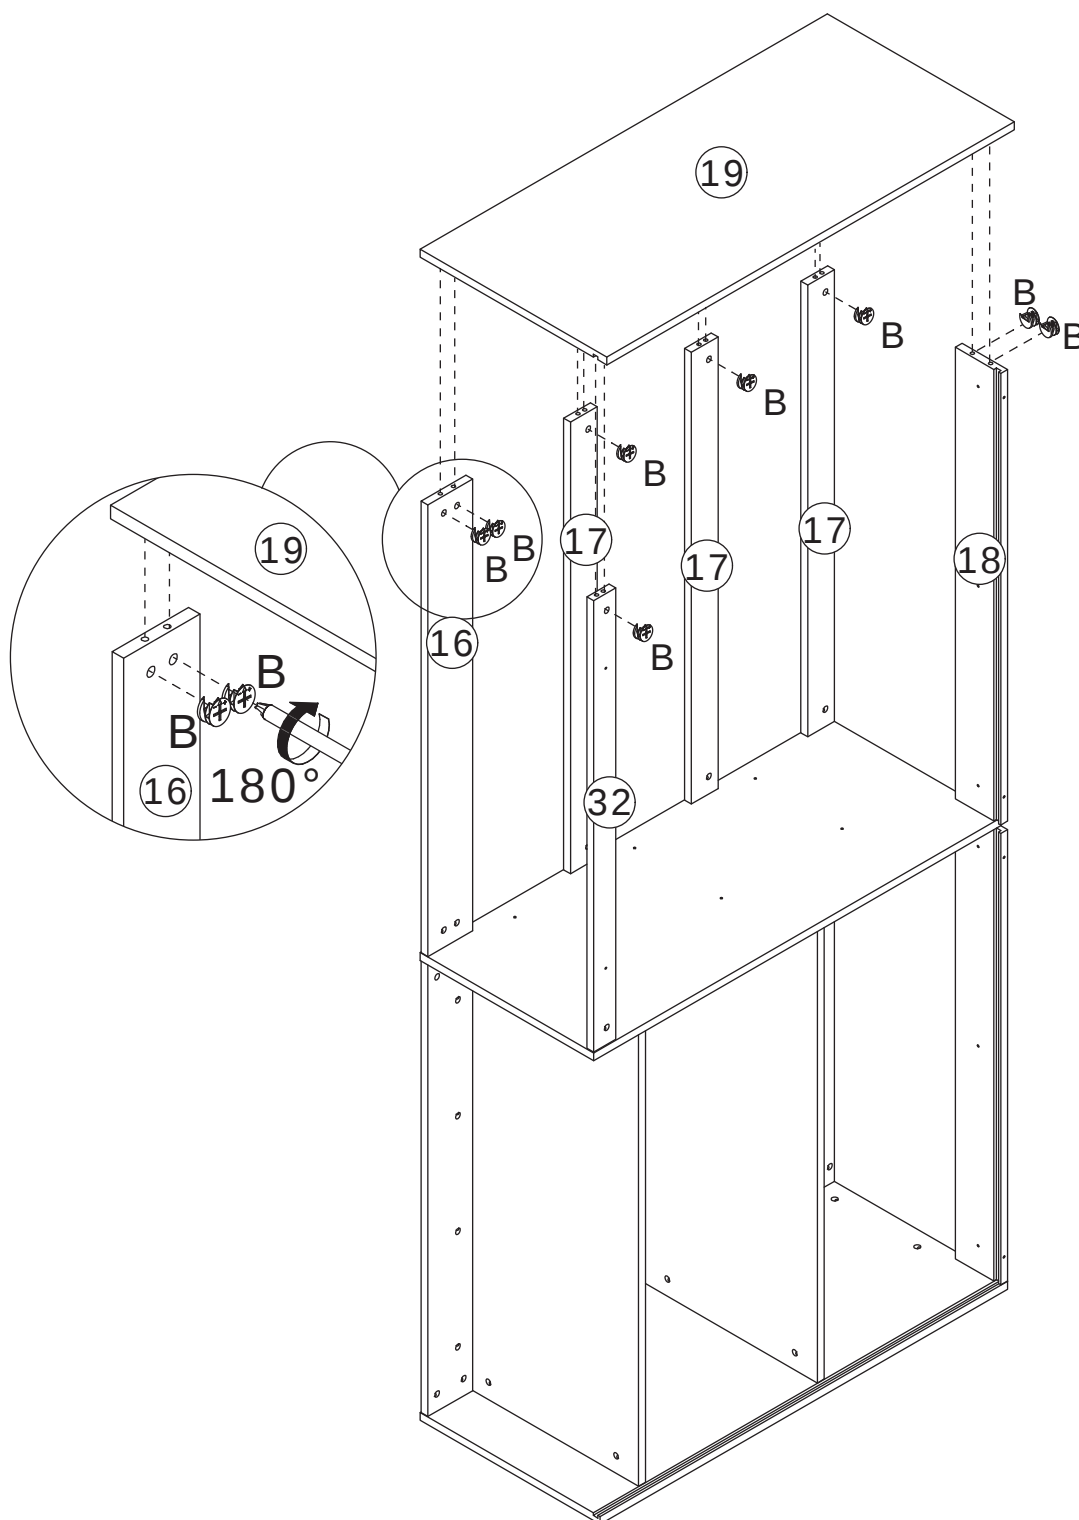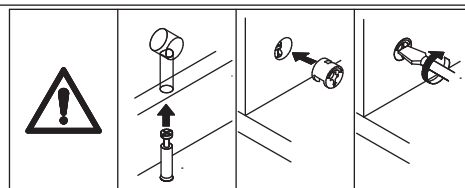


15




Turn the cabinet bottom up and insert panel 22 along the available slots.

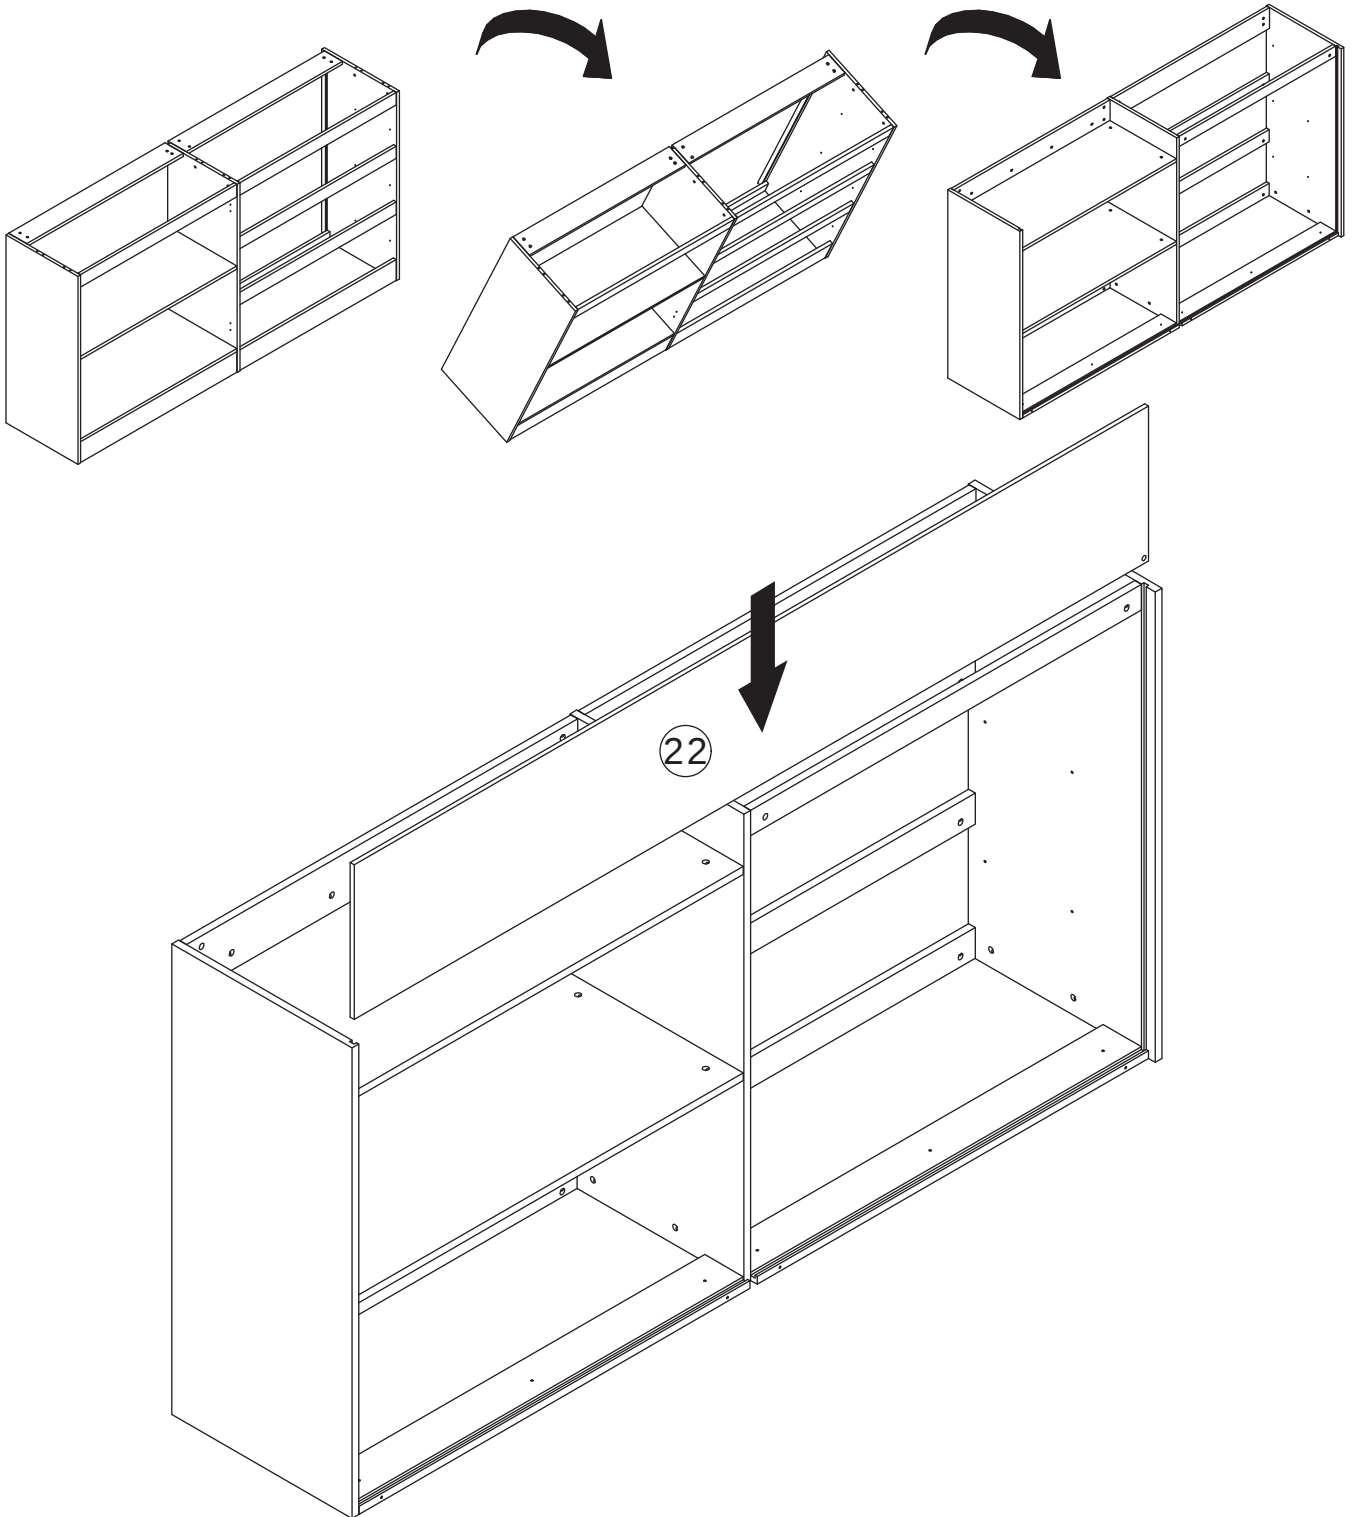

16

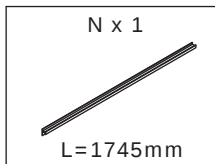


Snap part (N) into panel 22.

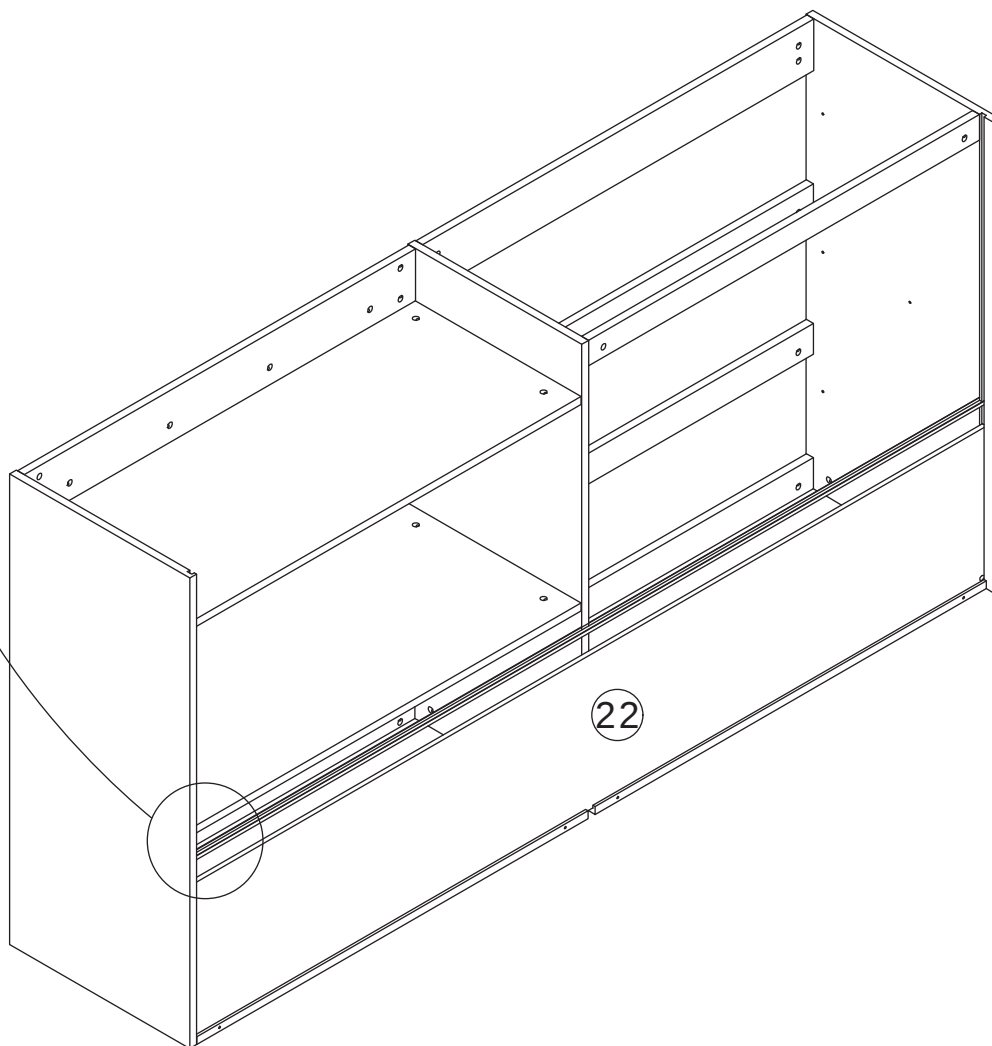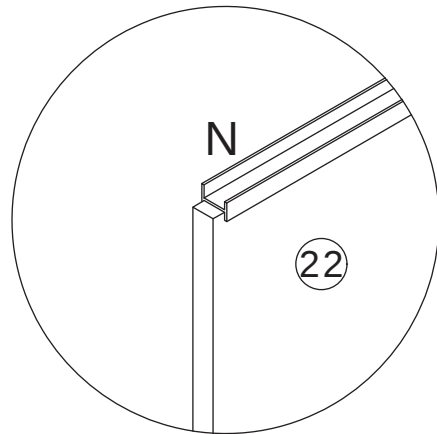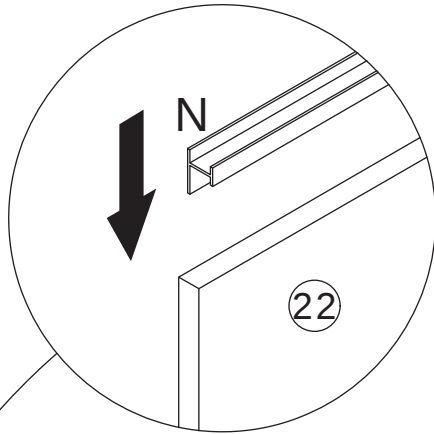


17



Insert panel 21 along the available slots.

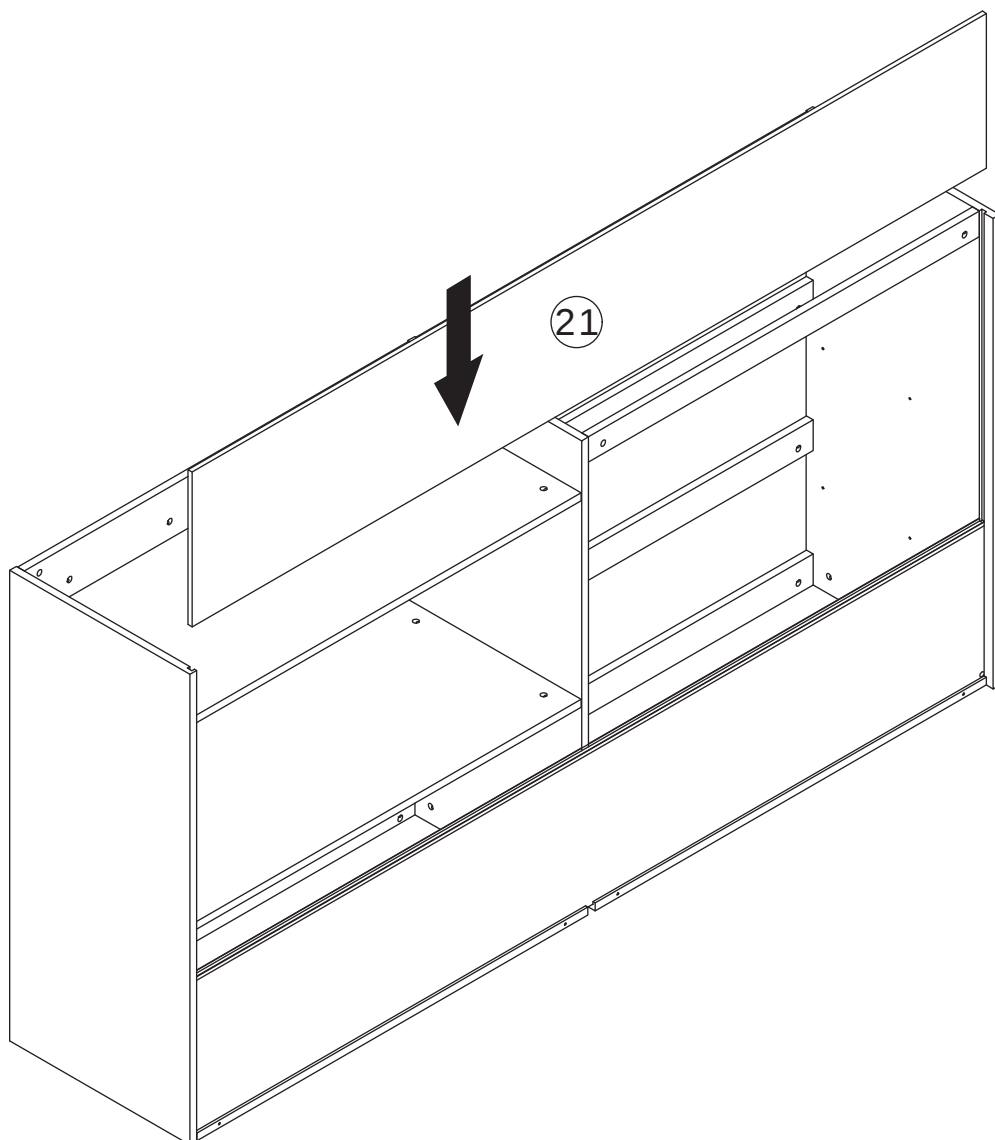

18

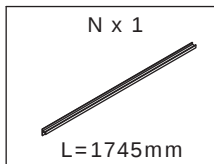


Snap part (N) into panel 21.

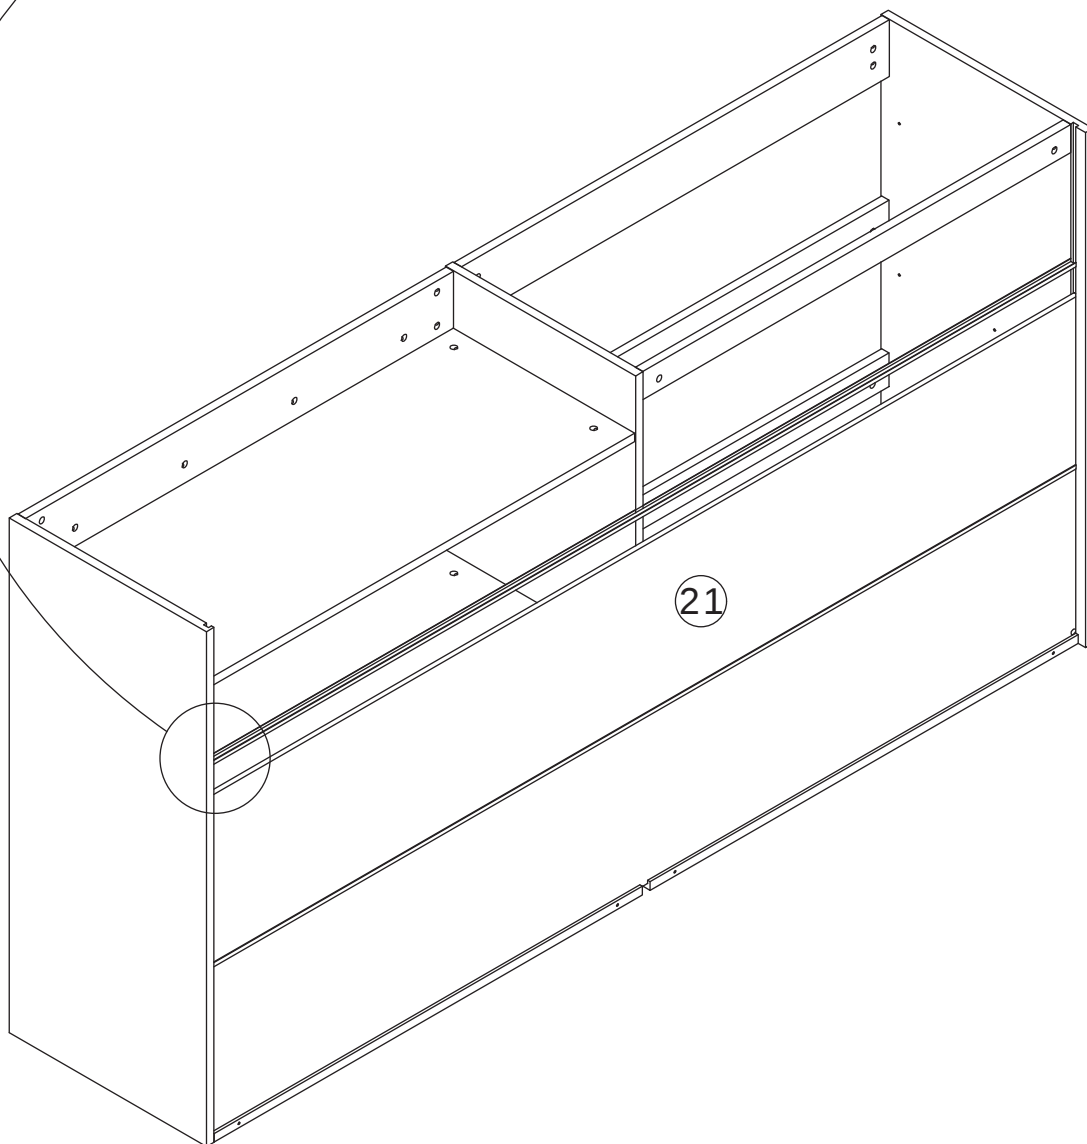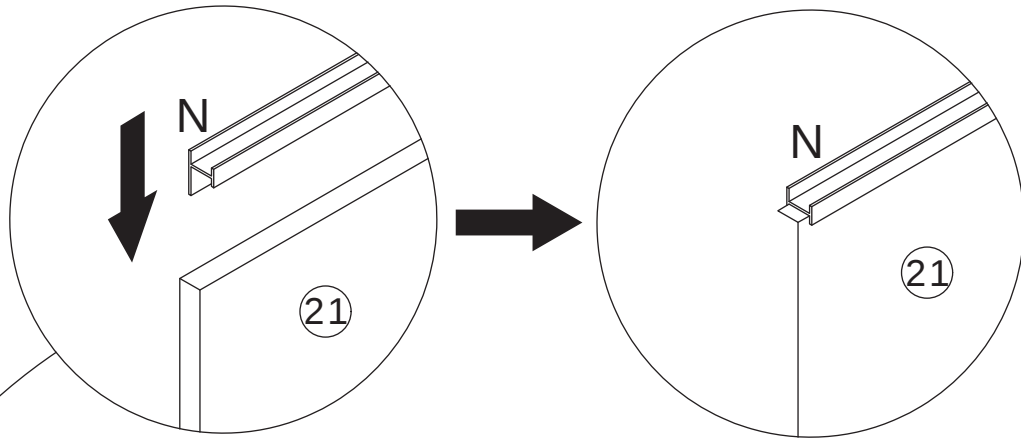

19

Insert panel 20 along the available slots.

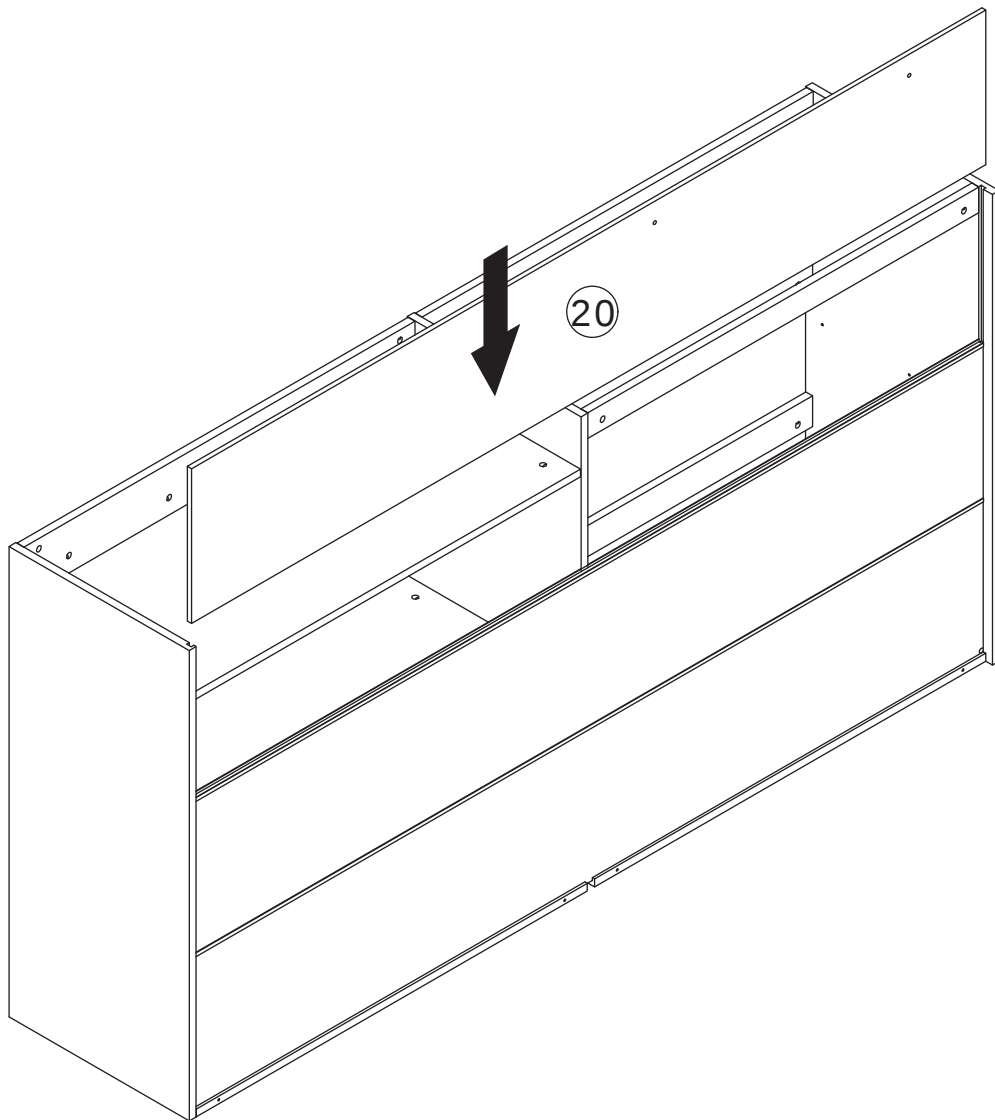


20

E x 2



Ø 3.9 x 16 mm



E









Ø 3.9 x 16 mm

D



Ø 4 x 30 mm

Secure panel 32 to panel 20 using screw (E).

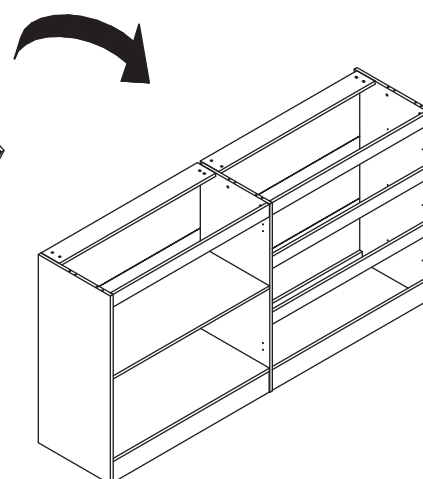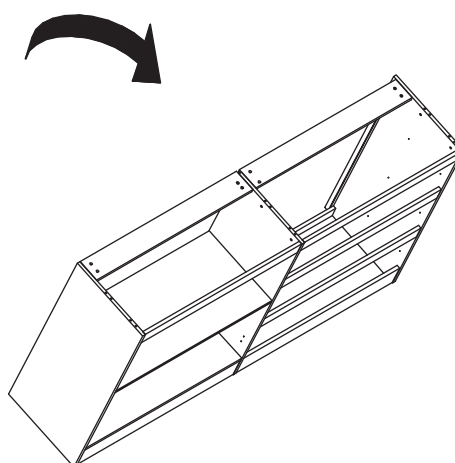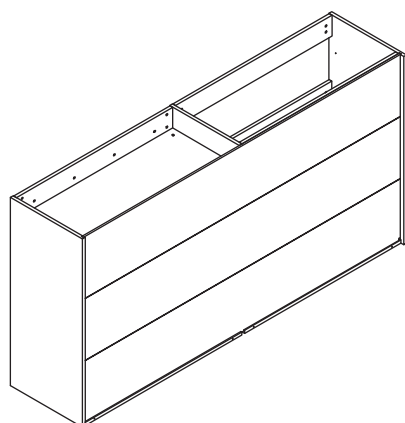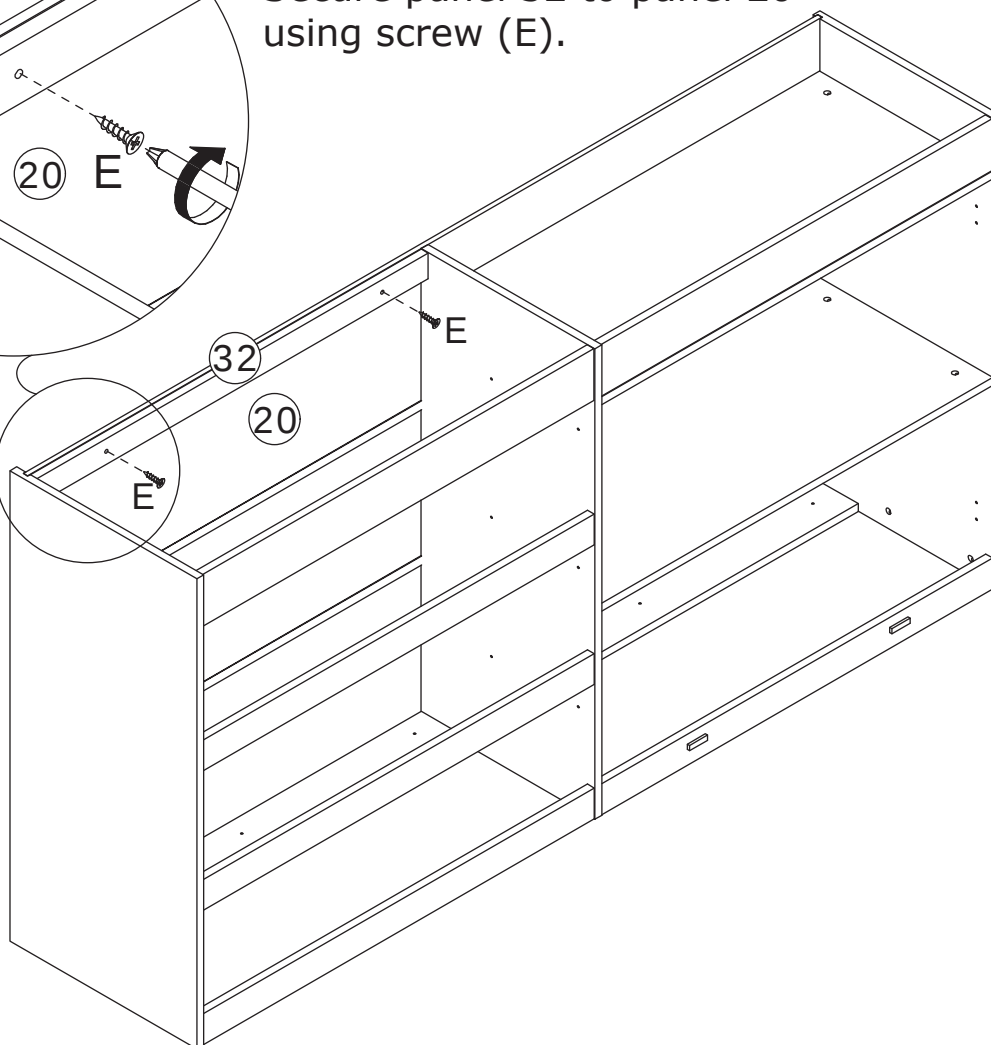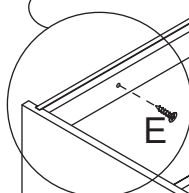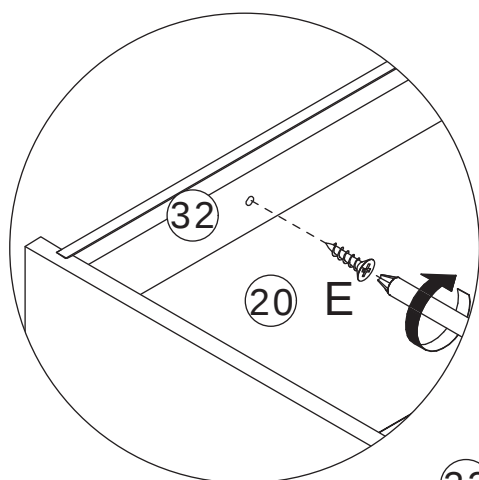


21

A x 3




Ø6 x 40 mm



C x 7



Ø8 x 30 mm



Screw self-tapping rod (A) and insert wooden dowel (C) into 7.

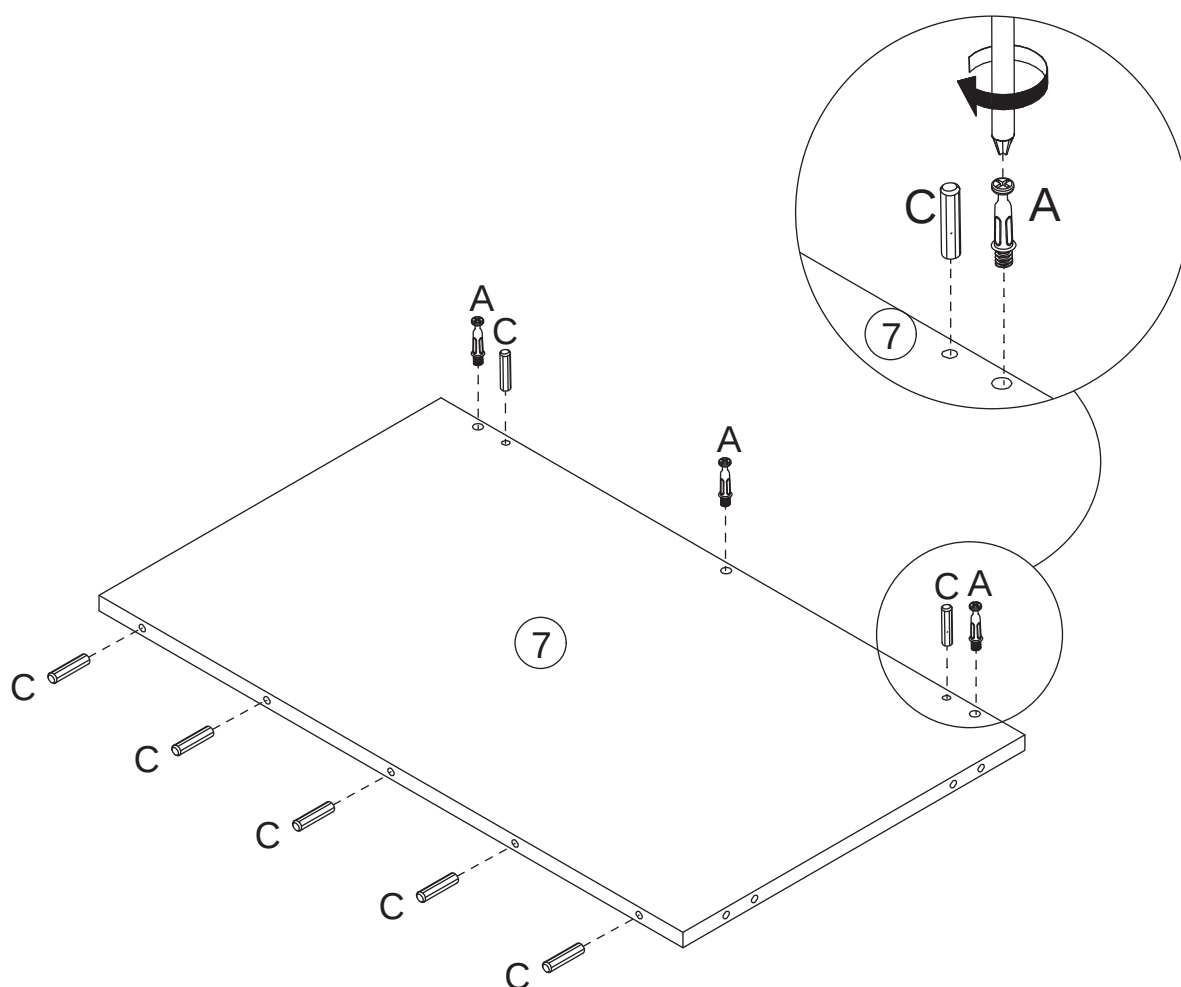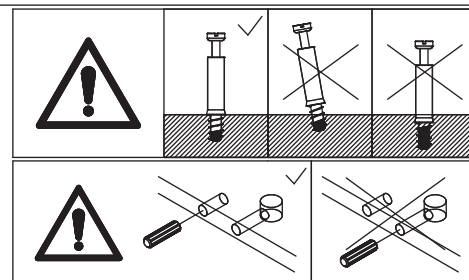


22



B x 3



Ø12 x 12 mm




Connect panel 5 to panel 7, then tighten by turning cam lock (B) clockwise.


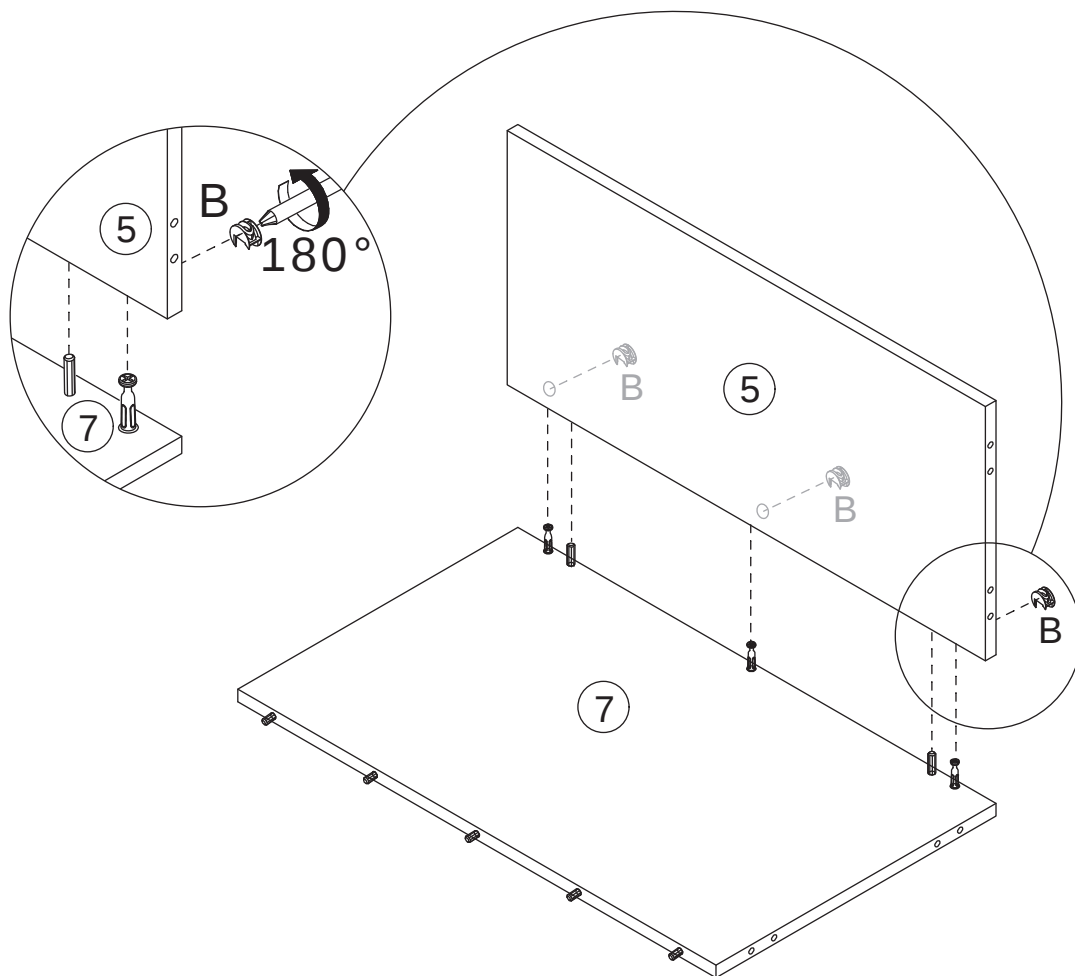
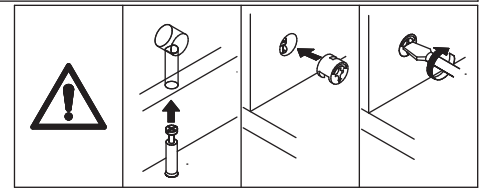


23



Connect panel 4 to panel 7.

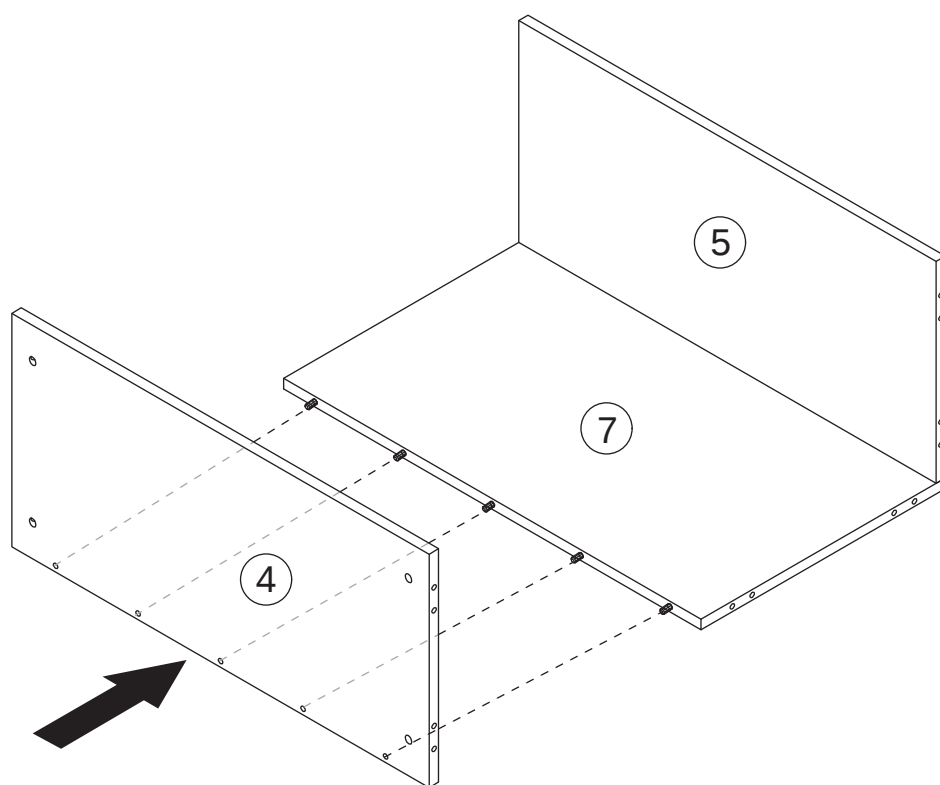

24

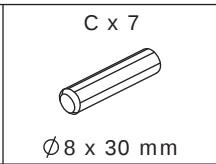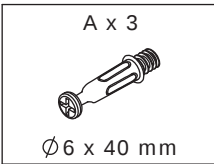


Screw self-tapping rod (A) and insert wooden dowel (C) into panel 6.

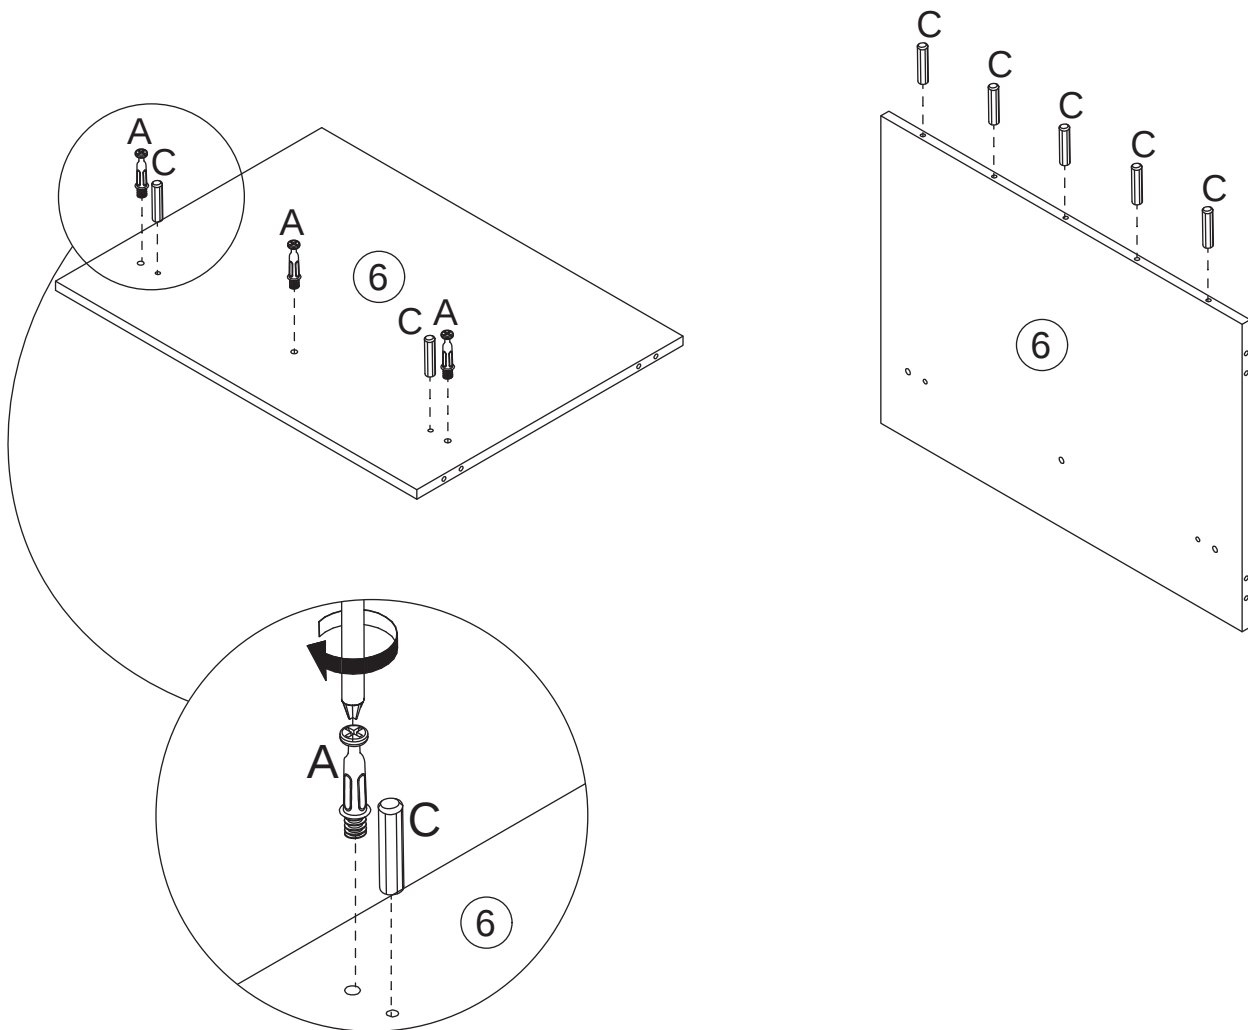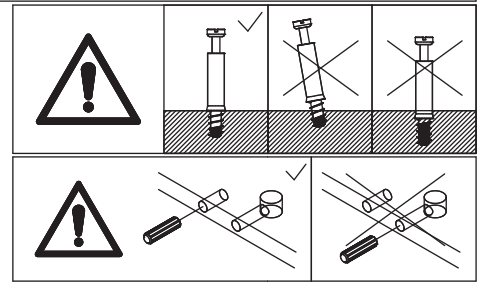

25

Connect panel 6 to panel 4.

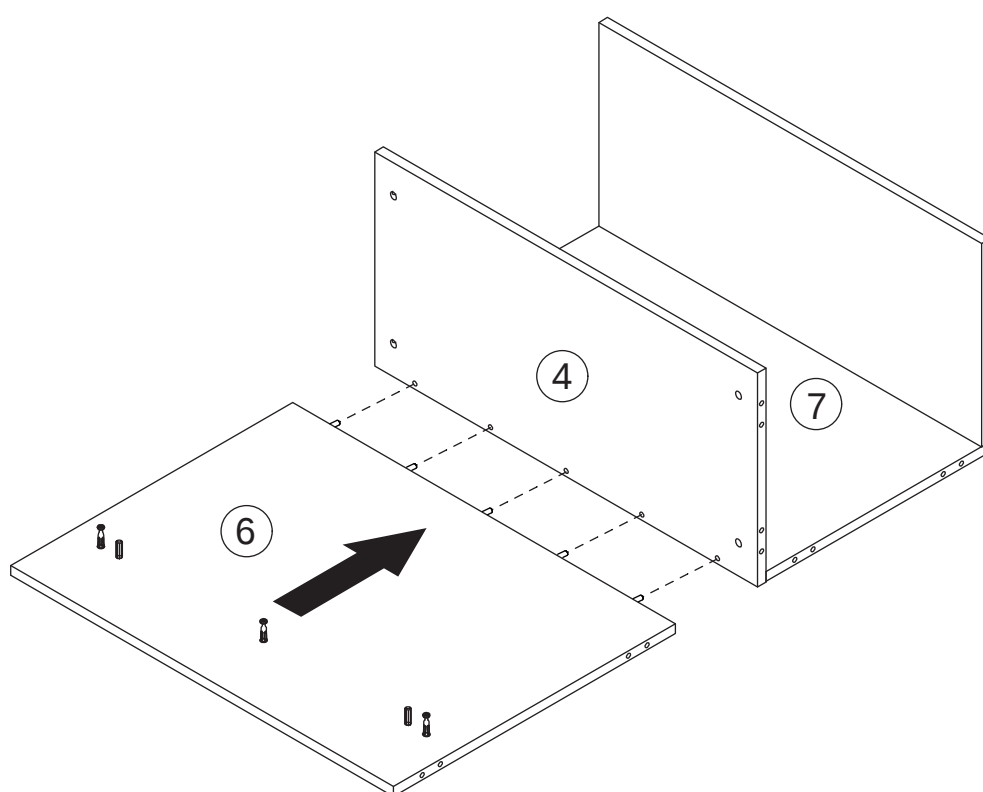


26

A x 3




Ø6 x 40 mm



C x 2



Ø8 x 30 mm



Screw self-tapping rod (A) and insert wooden dowel (C) into panel 3.

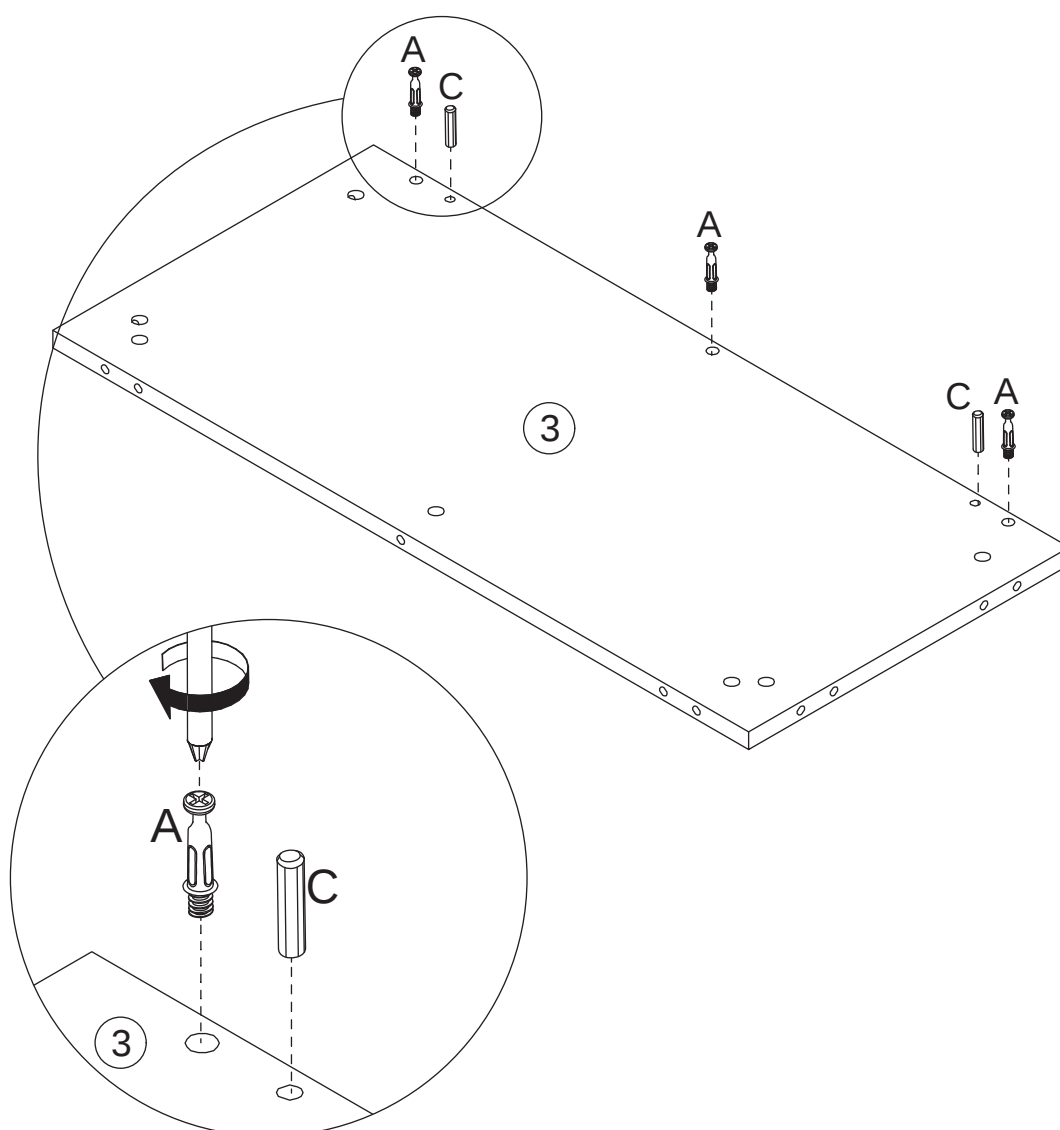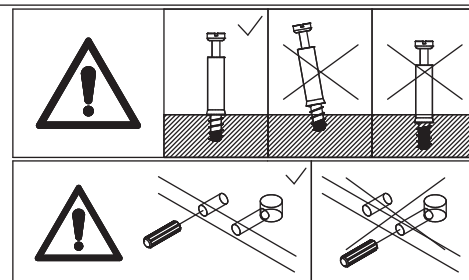


27



B x 3



Ø12 x 12 mm



Connect panel 2 to panel 3, then tighten by turning cam lock (B) clockwise.

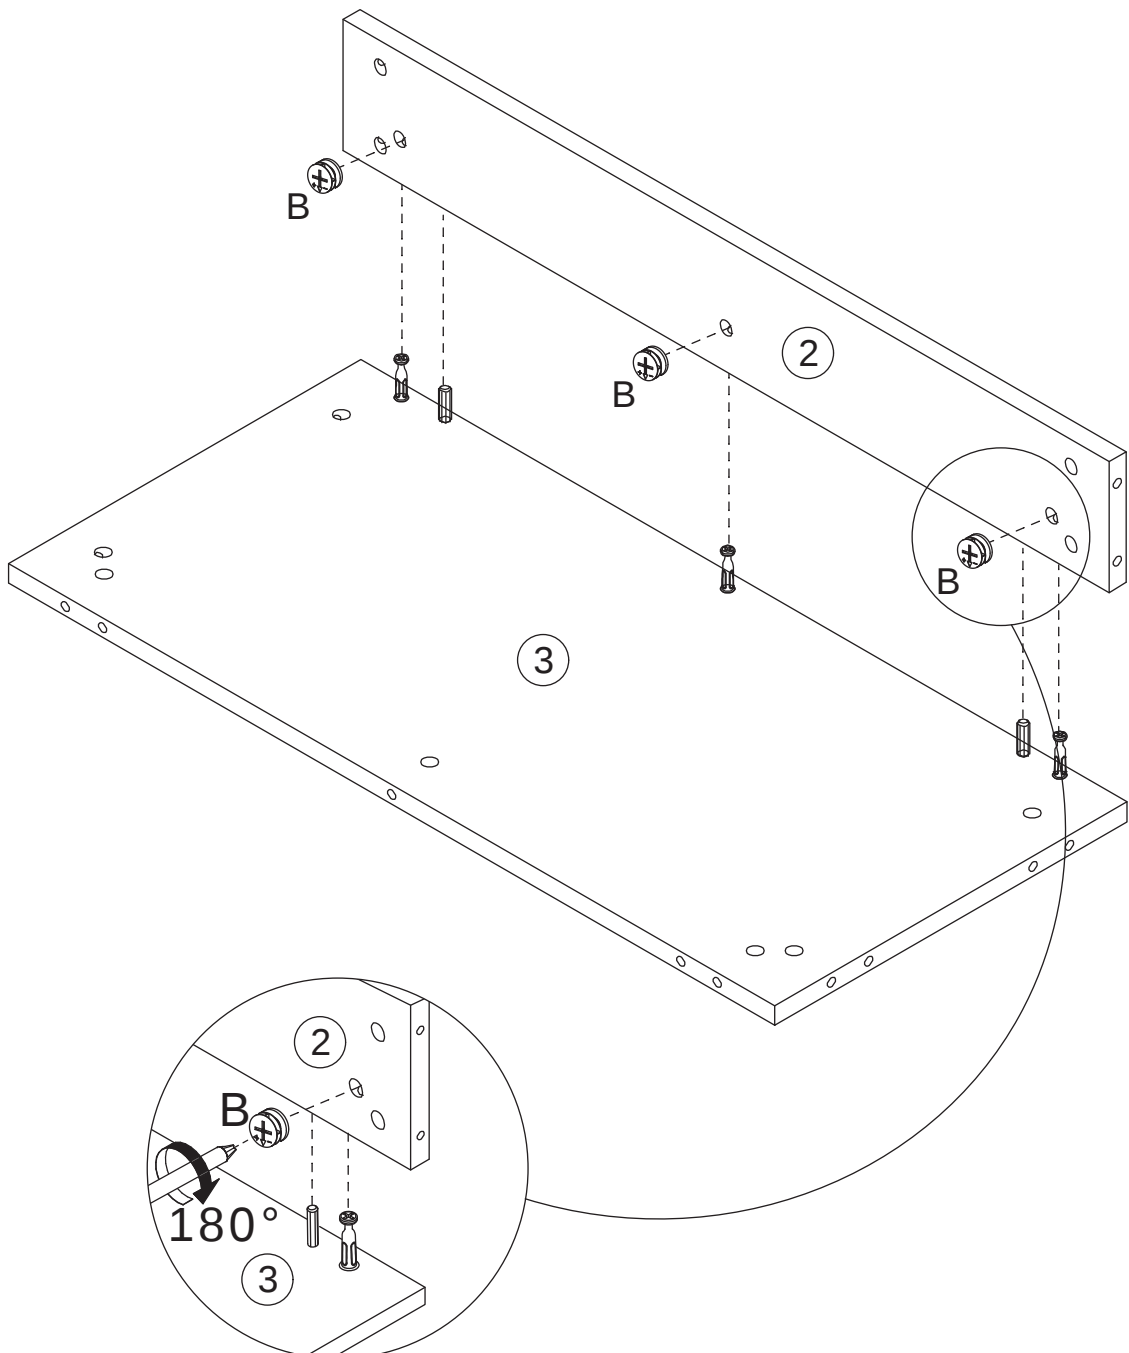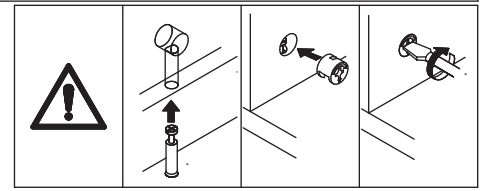


28



B x 3



Ø12 x 12 mm



Connect panel 3 to panel 6, then tighten by turning cam lock (B) clockwise.

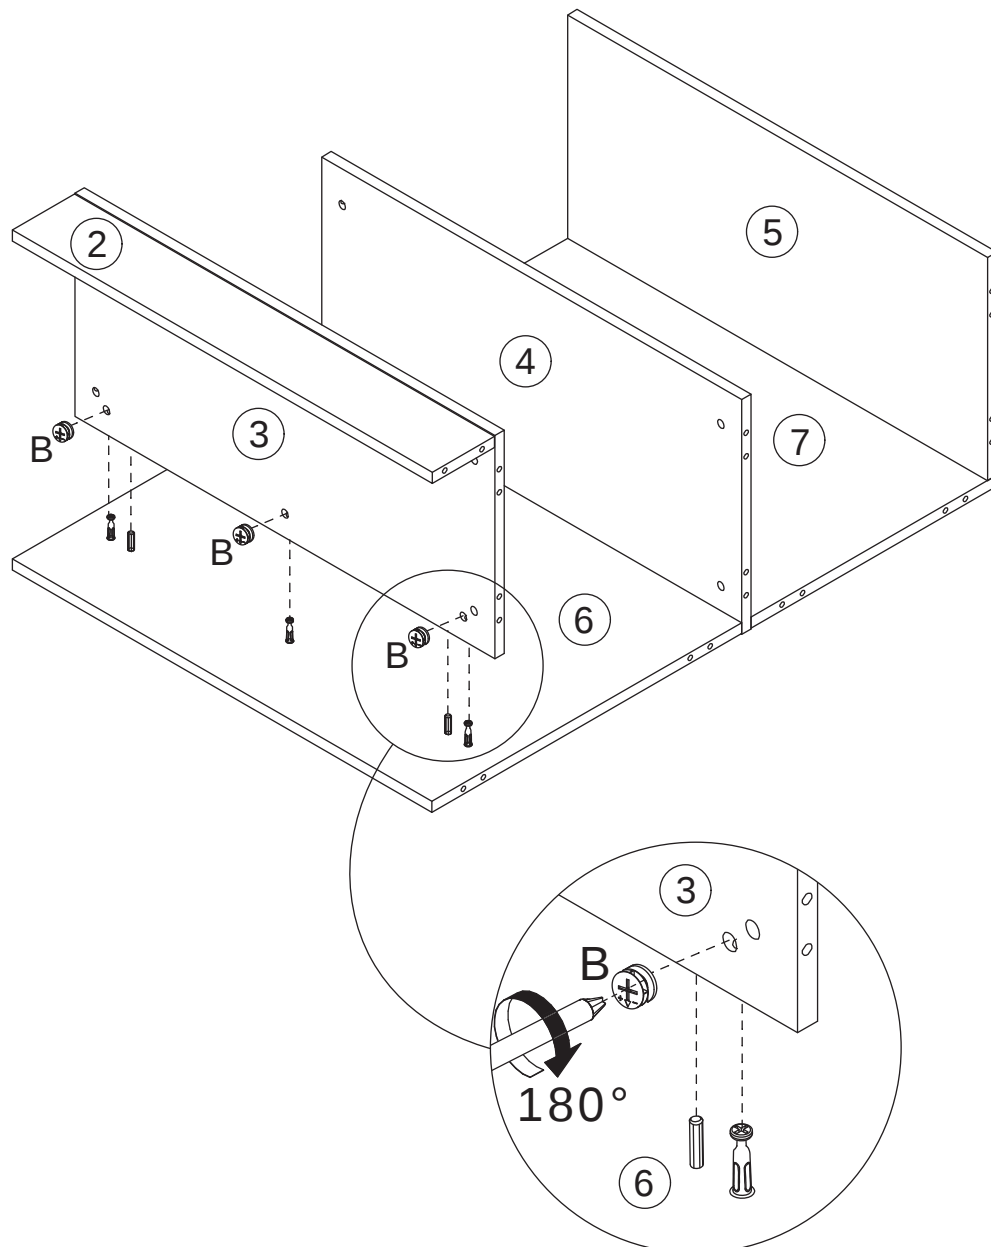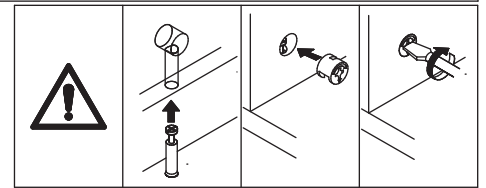


29

A x 12




Ø6 x 40 mm



C x 10



Ø8 x 30 mm



Screw self-tapping rod (A) and insert wooden dowel (C) into panel 8.

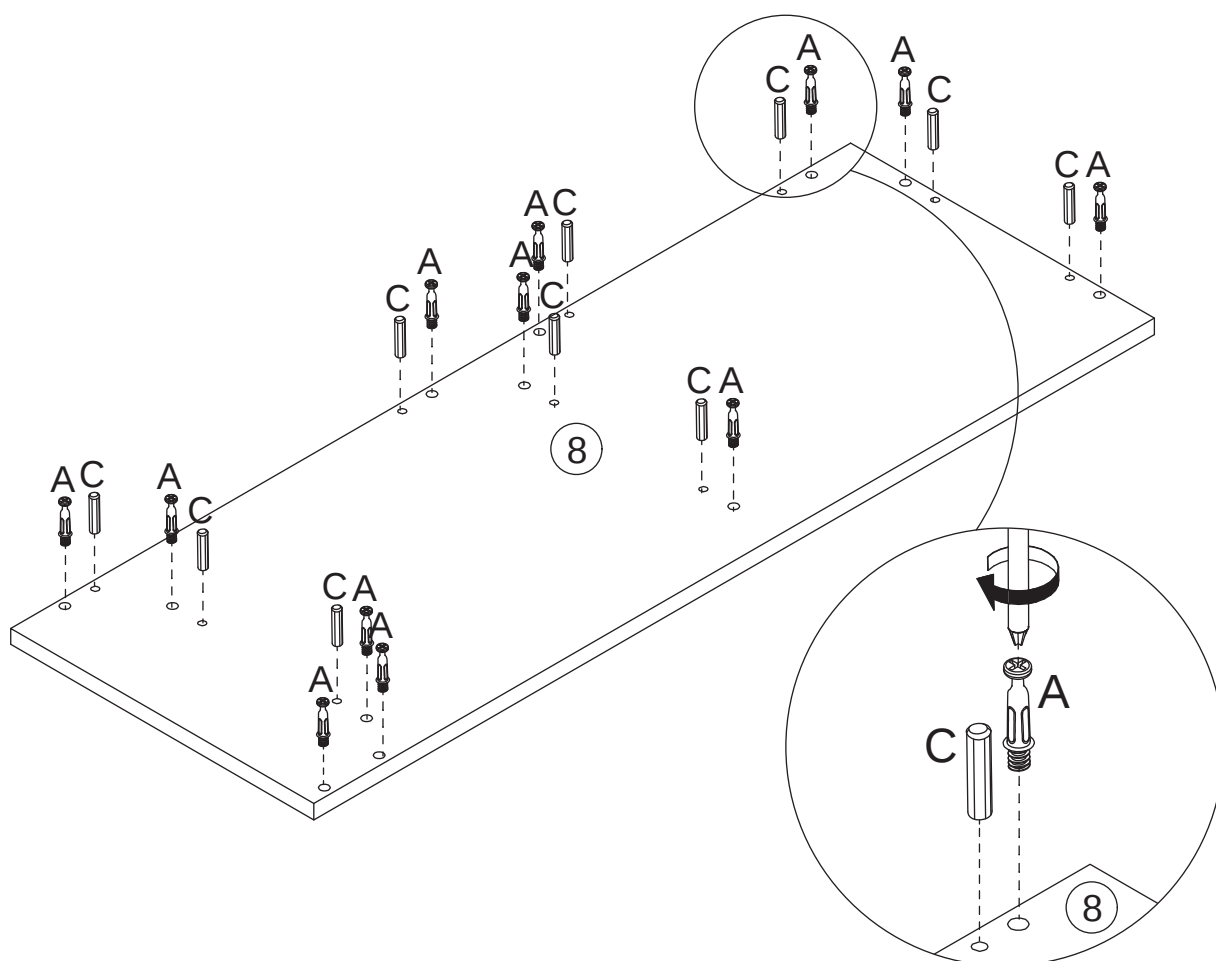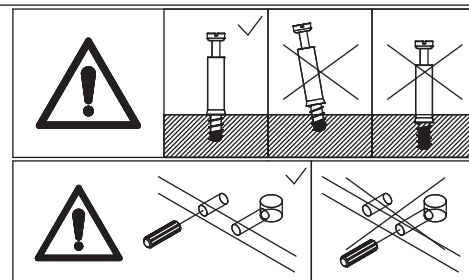


30



B x 12



Ø12 x 12 mm



Connect panel 8 to panel 2, 3, 4, 5, 6 and 7, insert the cam lock (B), and tighten by rotating clockwise.

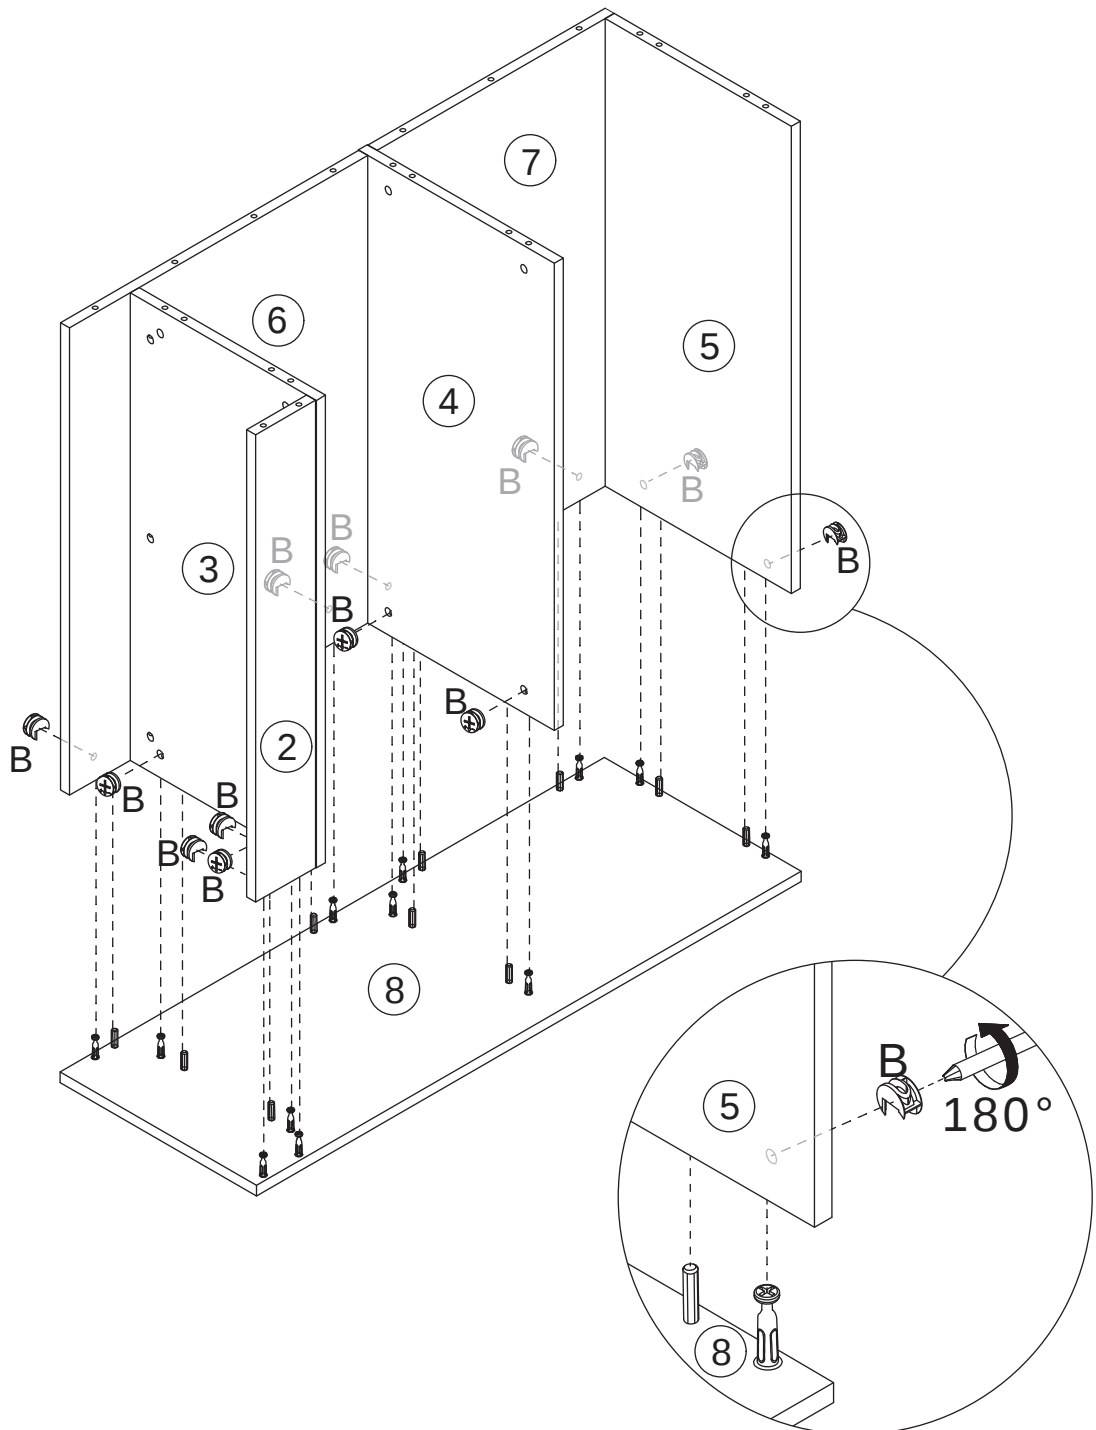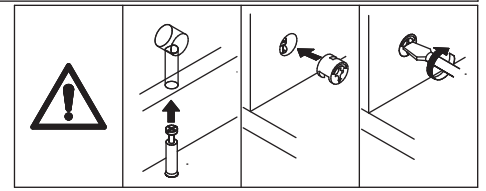


31

A x 8




Ø6 x 40 mm



C x 13



Ø8 x 30 mm



Screw self-tapping rod (A) and insert wooden dowel (C) into panel 1.

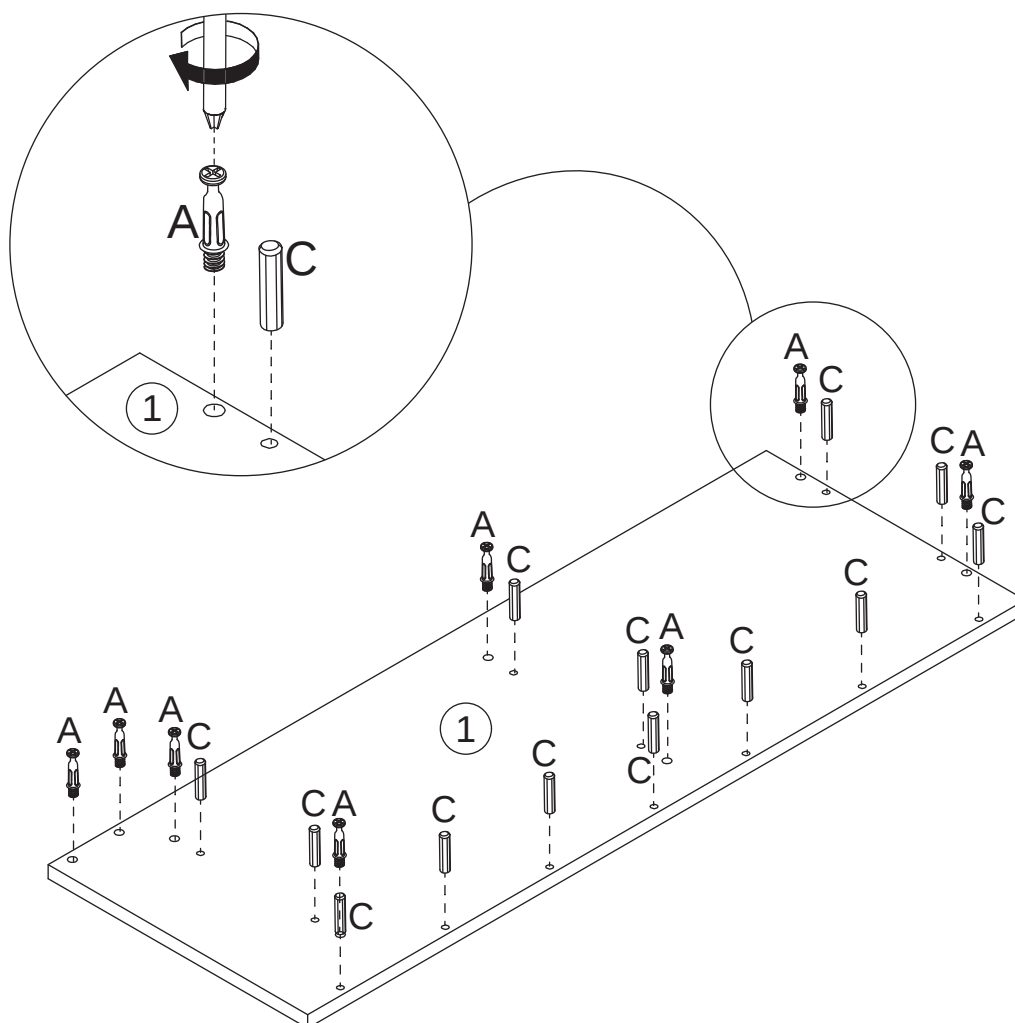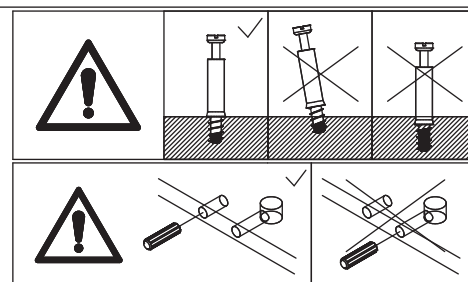


32



B x 8



Ø12 x 12 mm




Connect panel 1 to panel 2, 3, 4 and 5, then tighten by turning cam lock (B) clockwise.

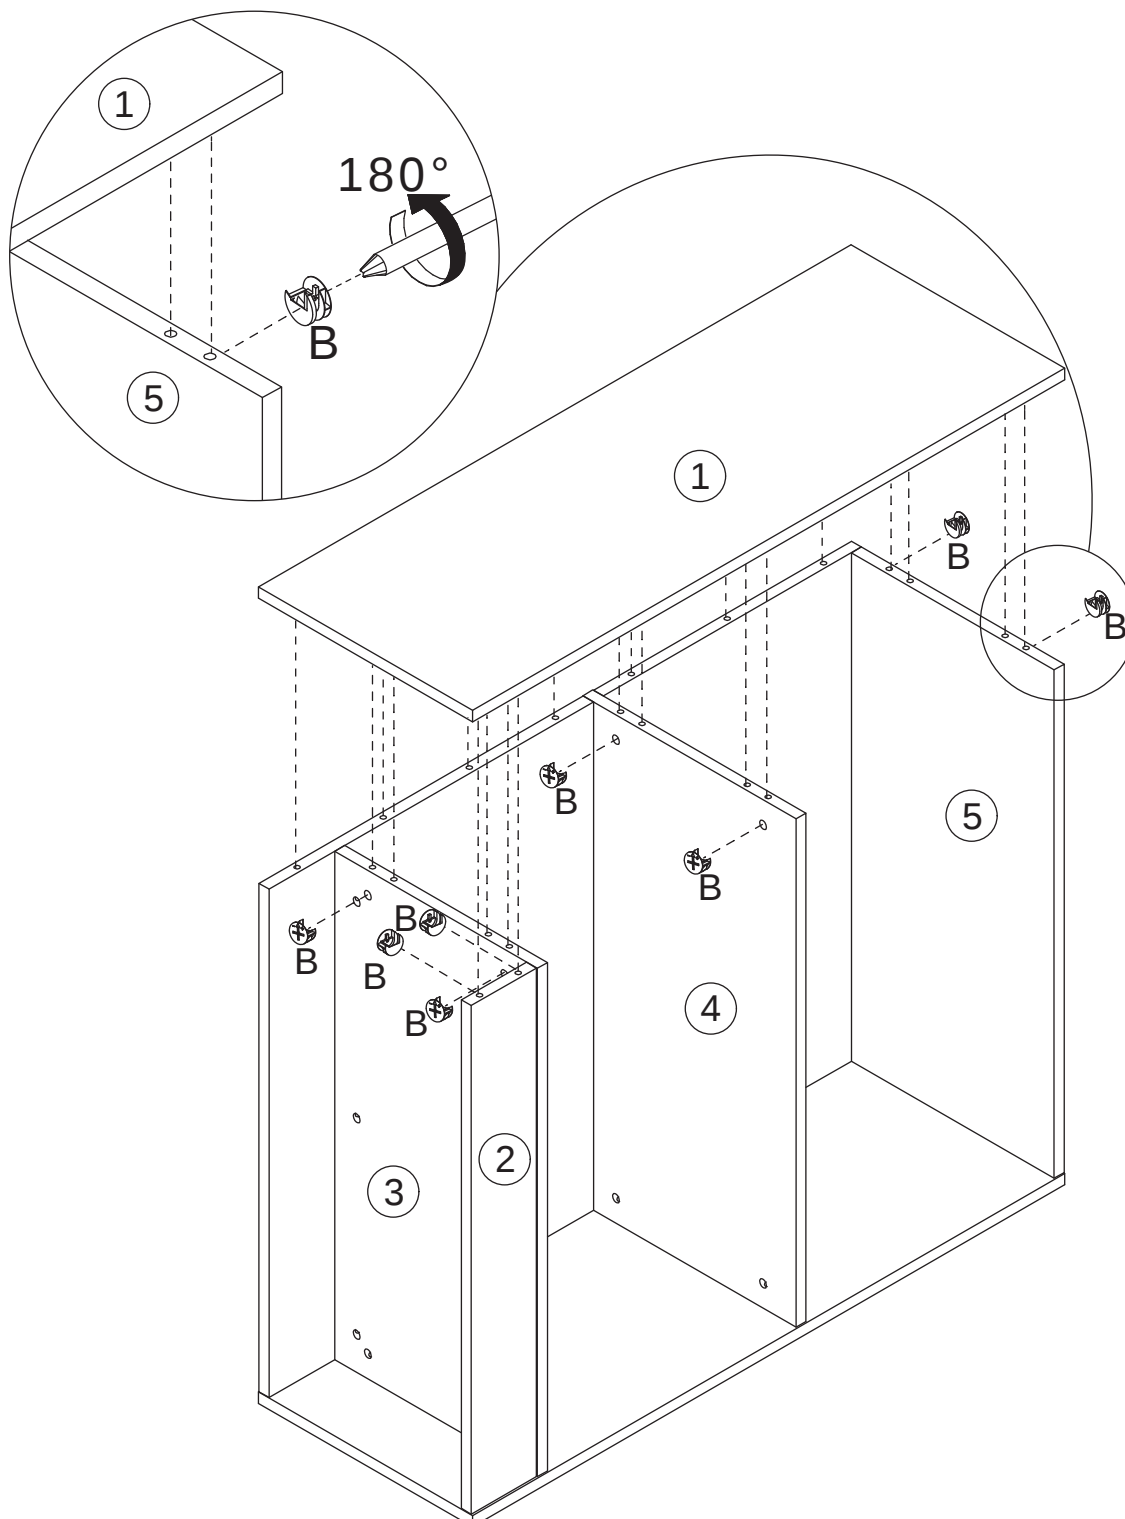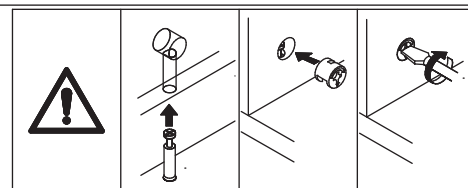


33

Assemble the two cabinet units together.

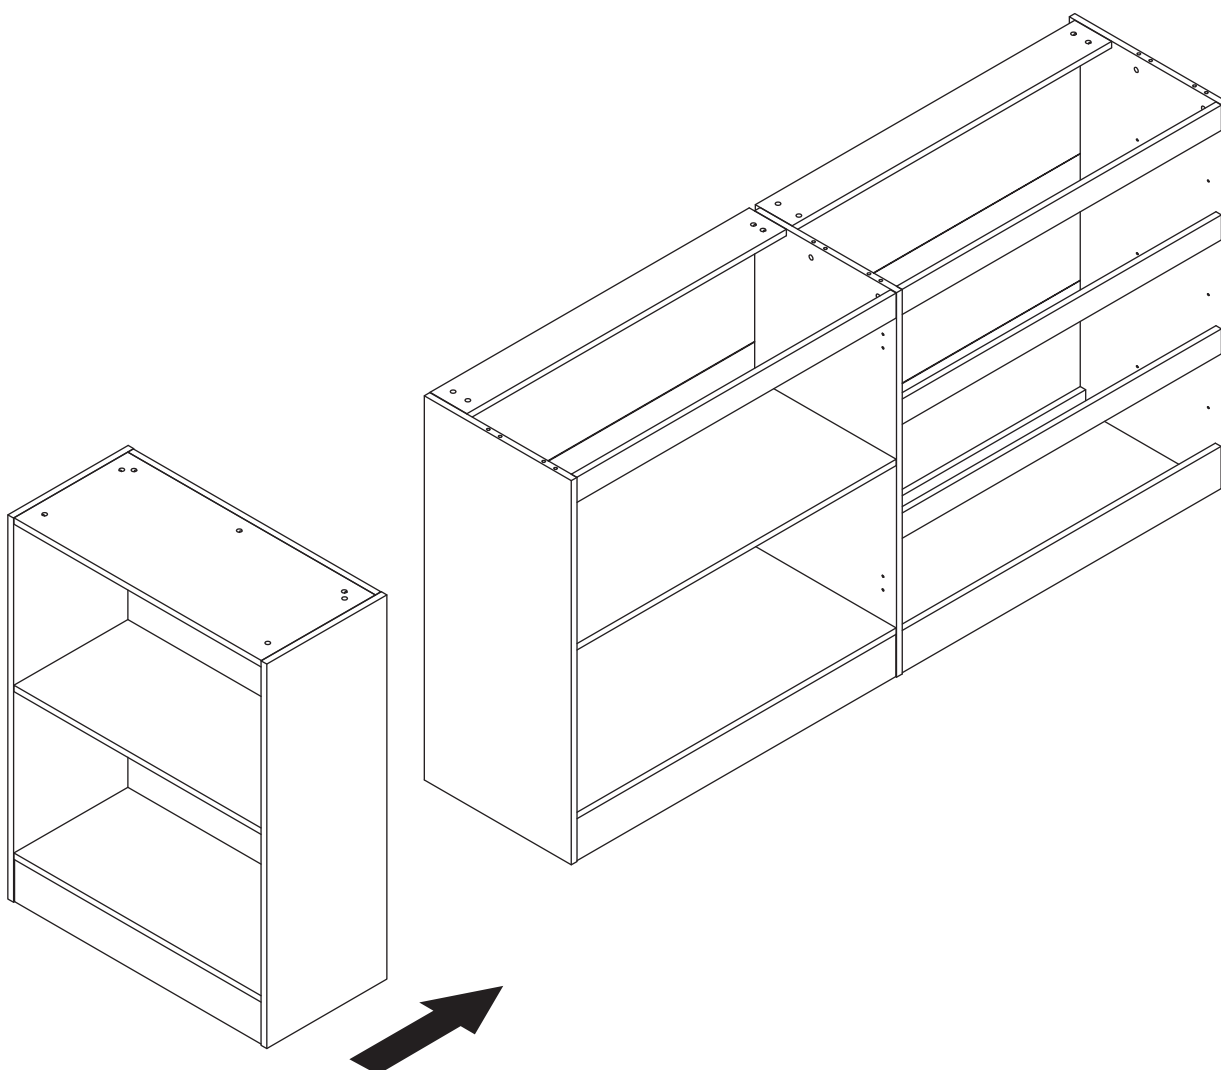

34

Assemble the two cabinet units together.

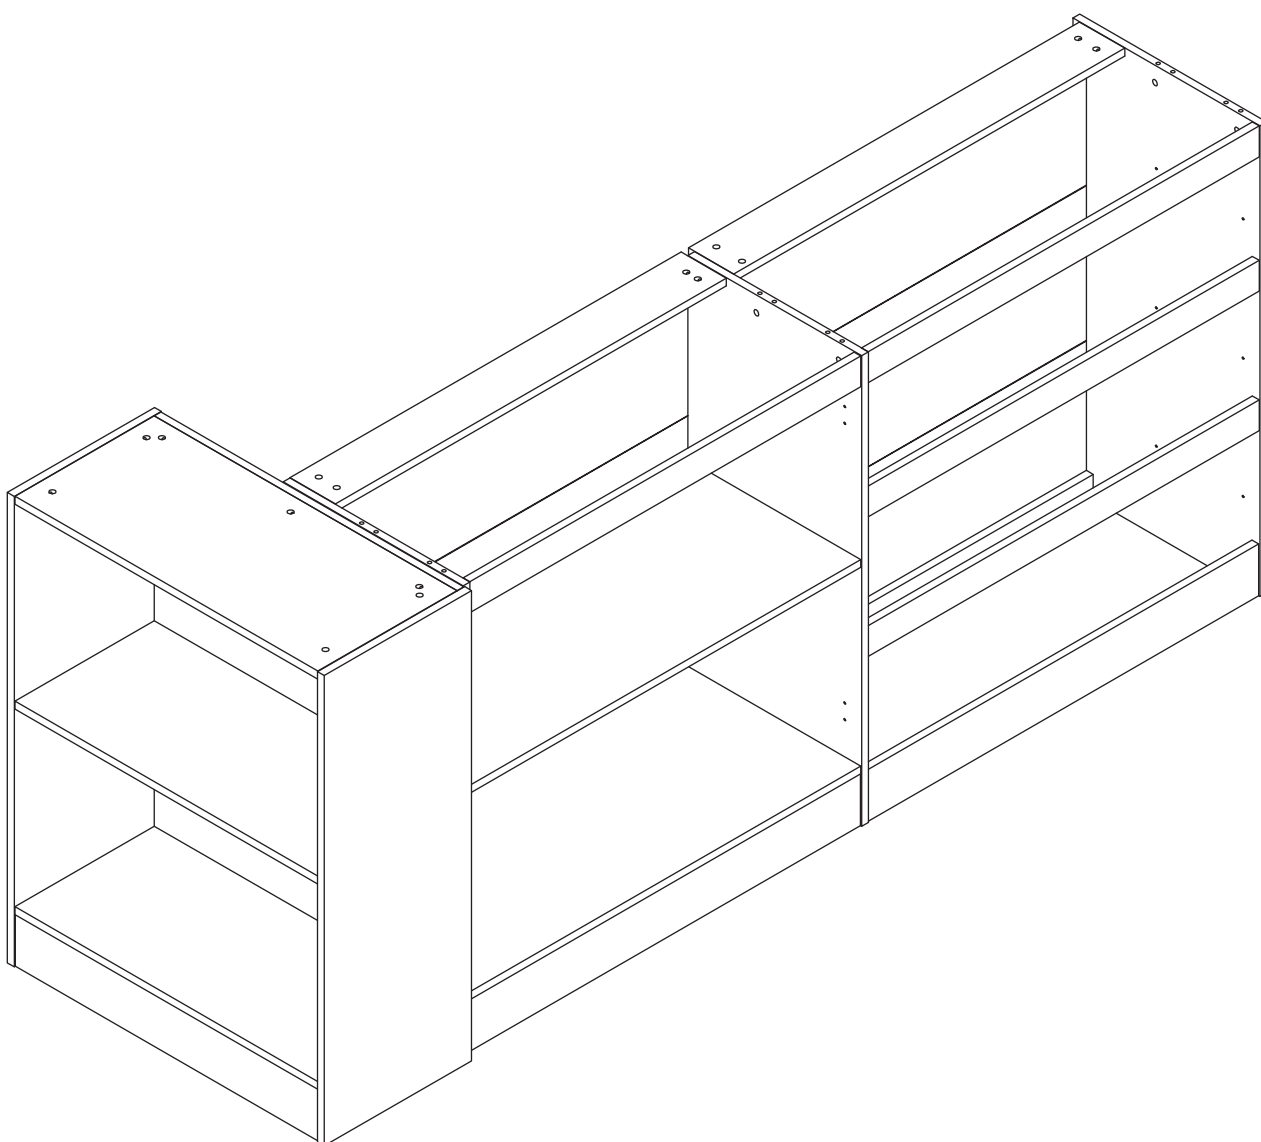


35

A x 6




Ø6 x 40 mm



C x 6



Ø8 x 30 mm



Screw self-tapping rod (A) and insert wooden dowel (C) into panel 23.

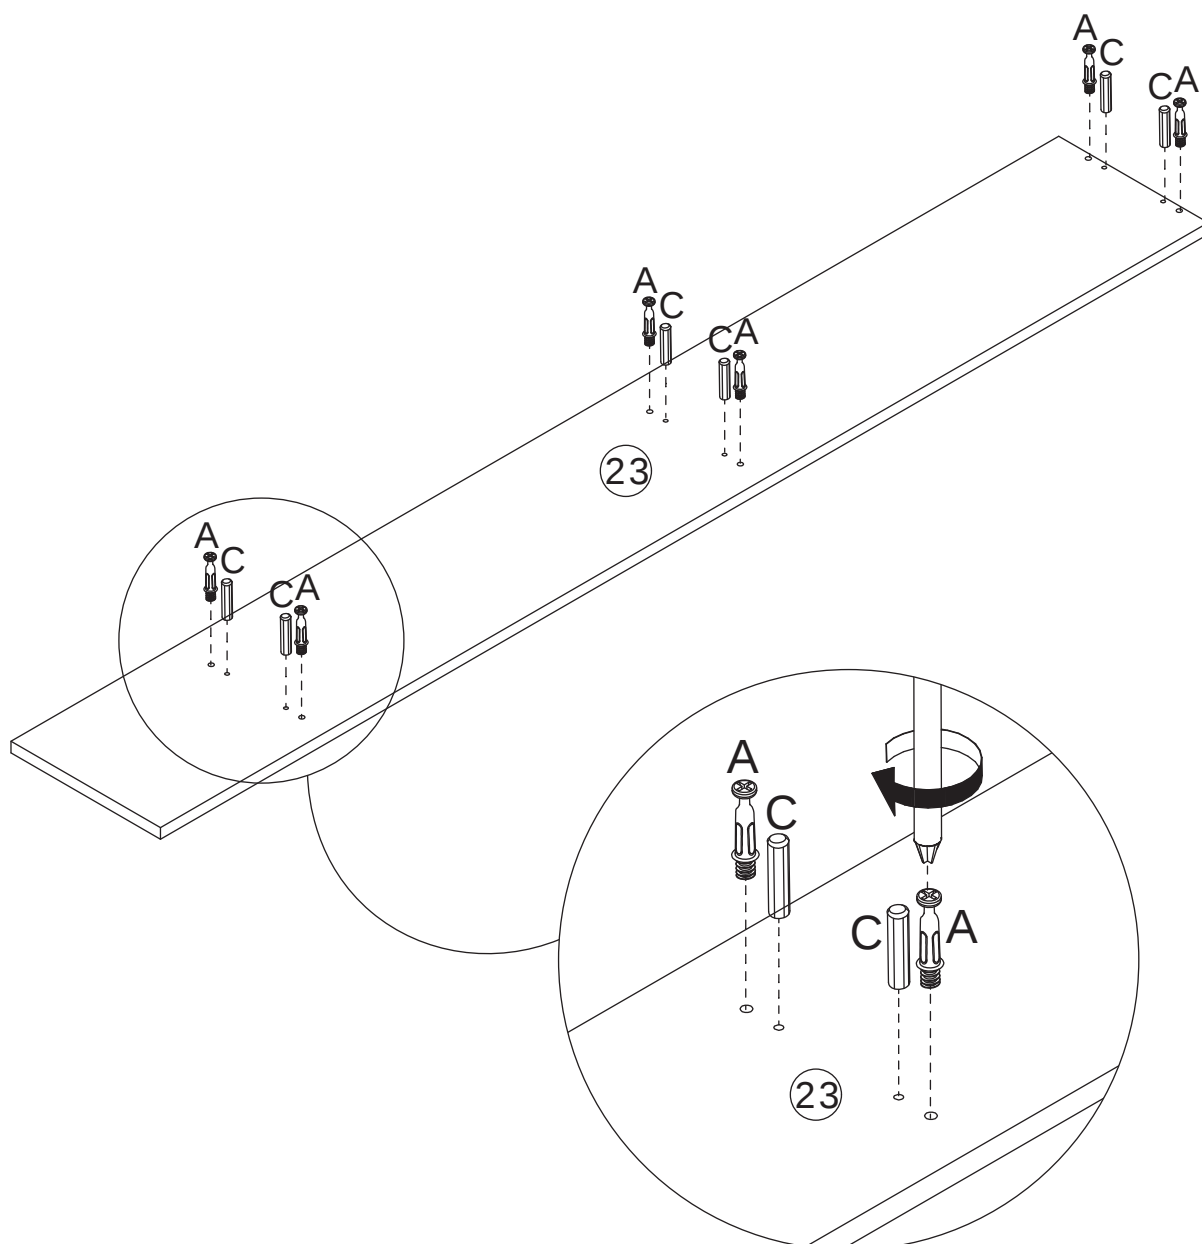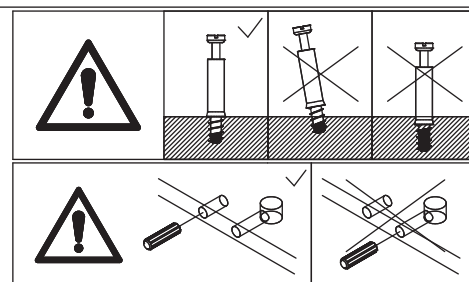


36



B x 6





Ø12 x 12 mm





Connect panel 23 to the cabinet, then tighten by turning cam lock (B) clockwise.

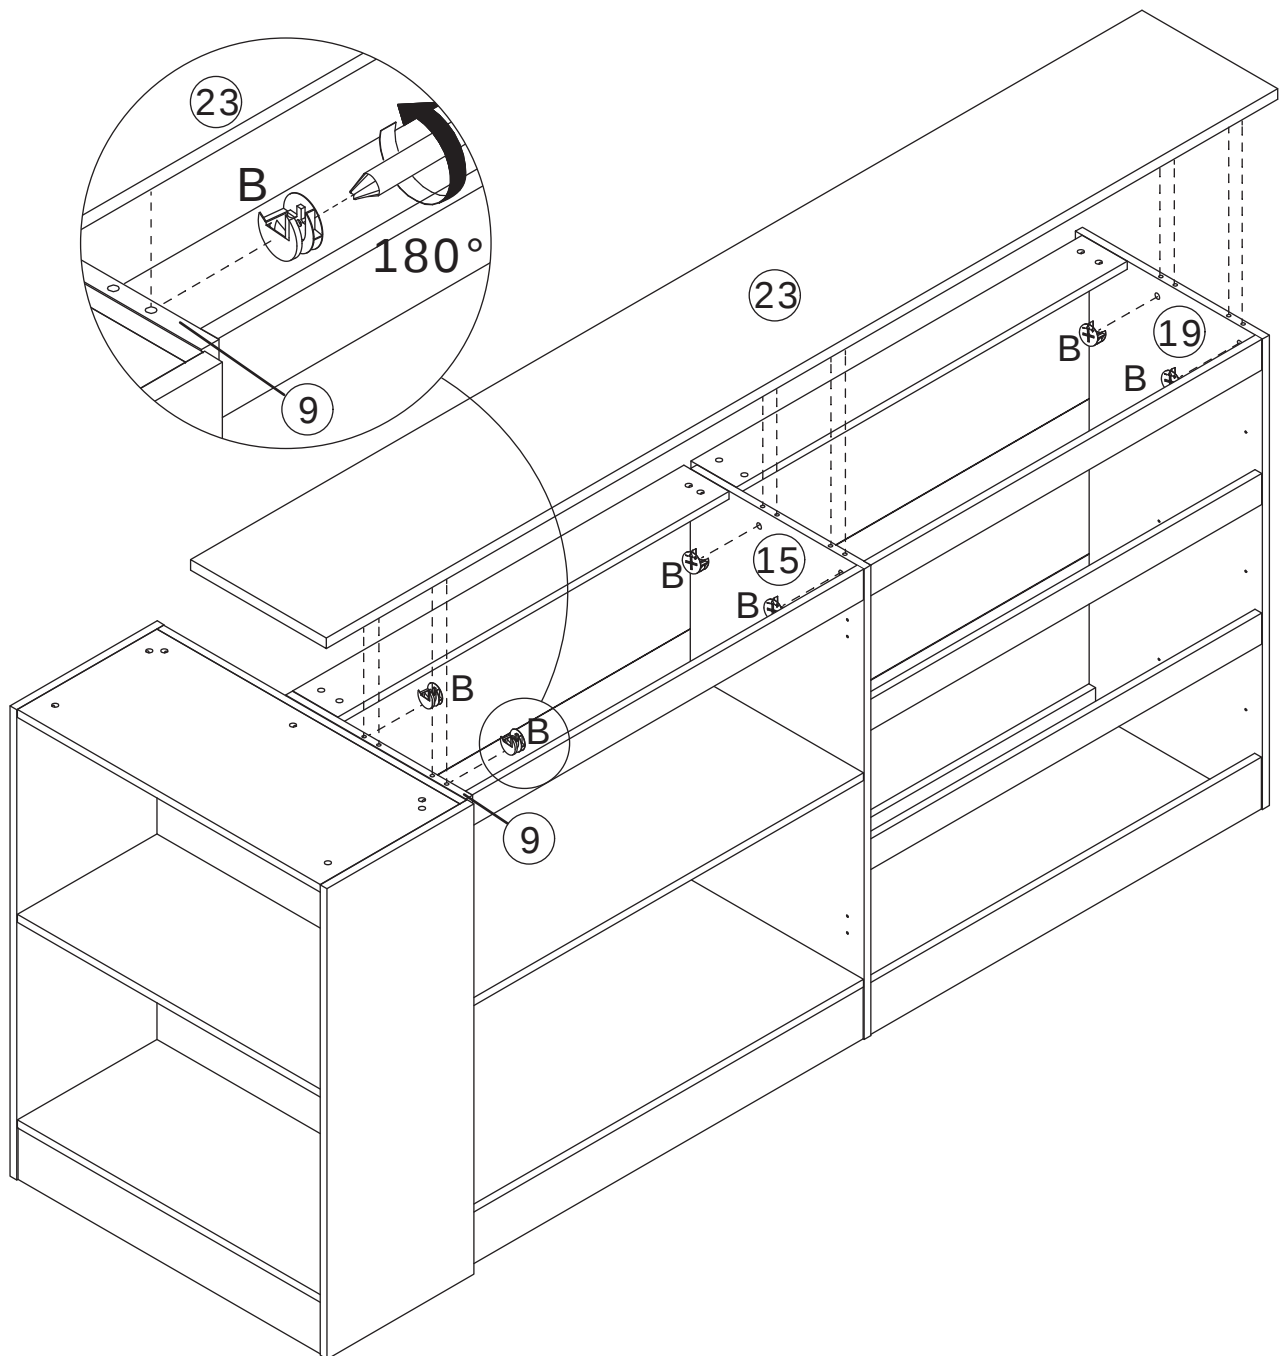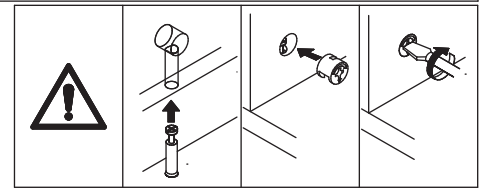


37

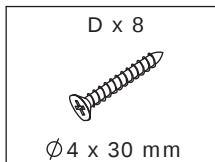

Secure panel 24 to the installation unit using screw (D).

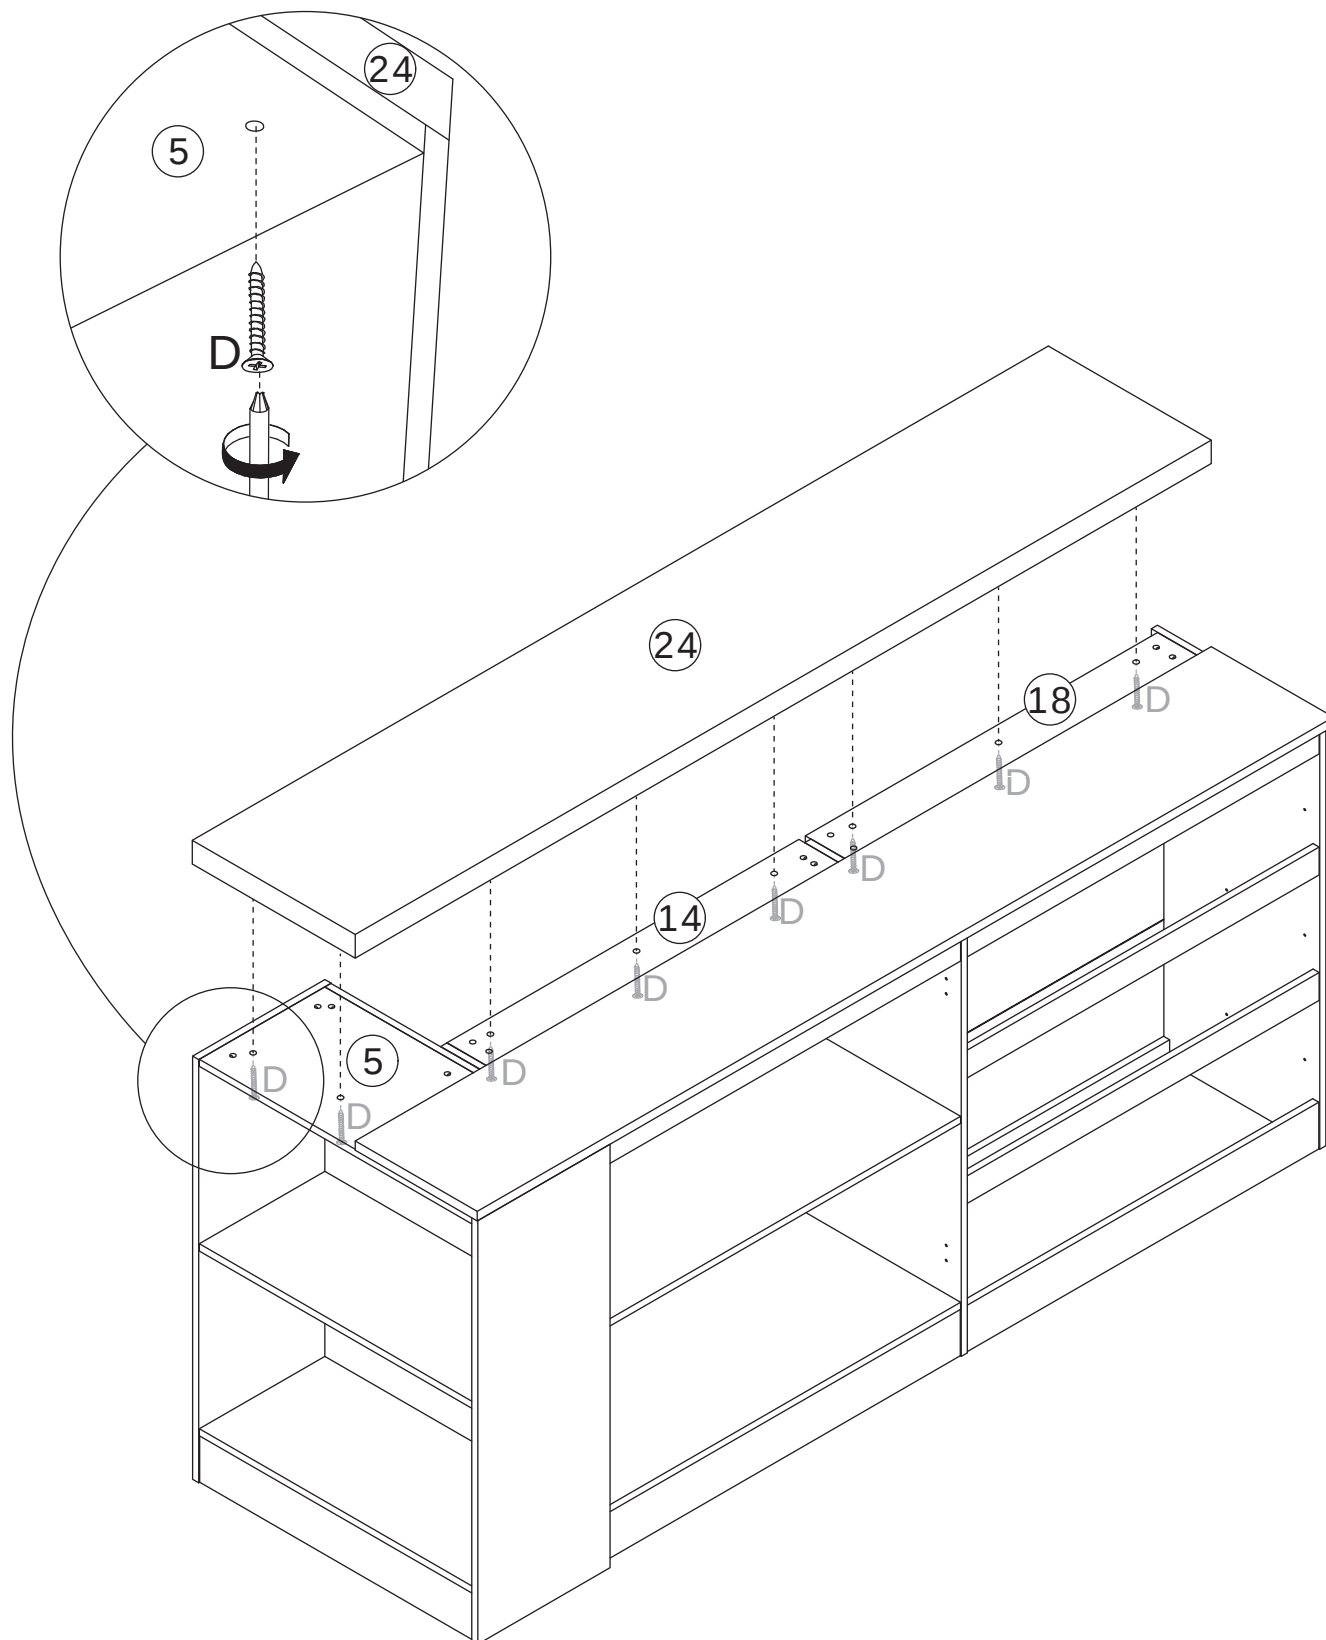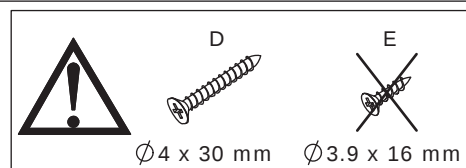

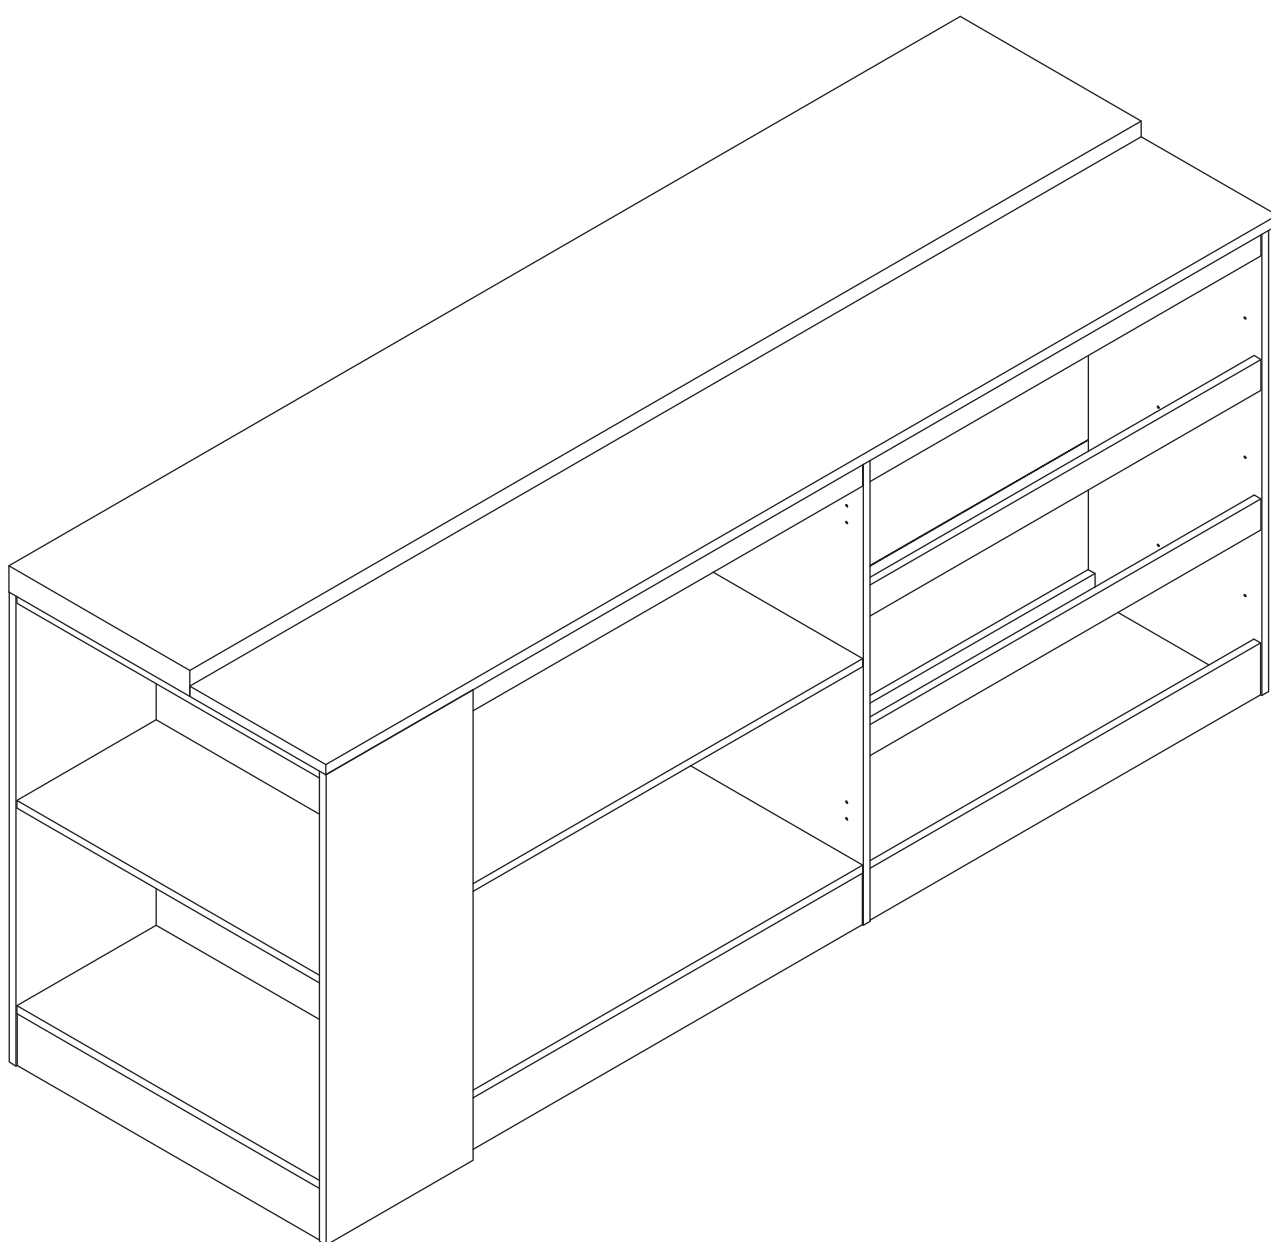



39

E x 8



Ø 3.9 x 16 mm

F x 4



E




Ø 3.9 x 16 mm

D



Ø 4 x 30 mm

Secure hinge (F) to panel 25 and 26 using screw (E).

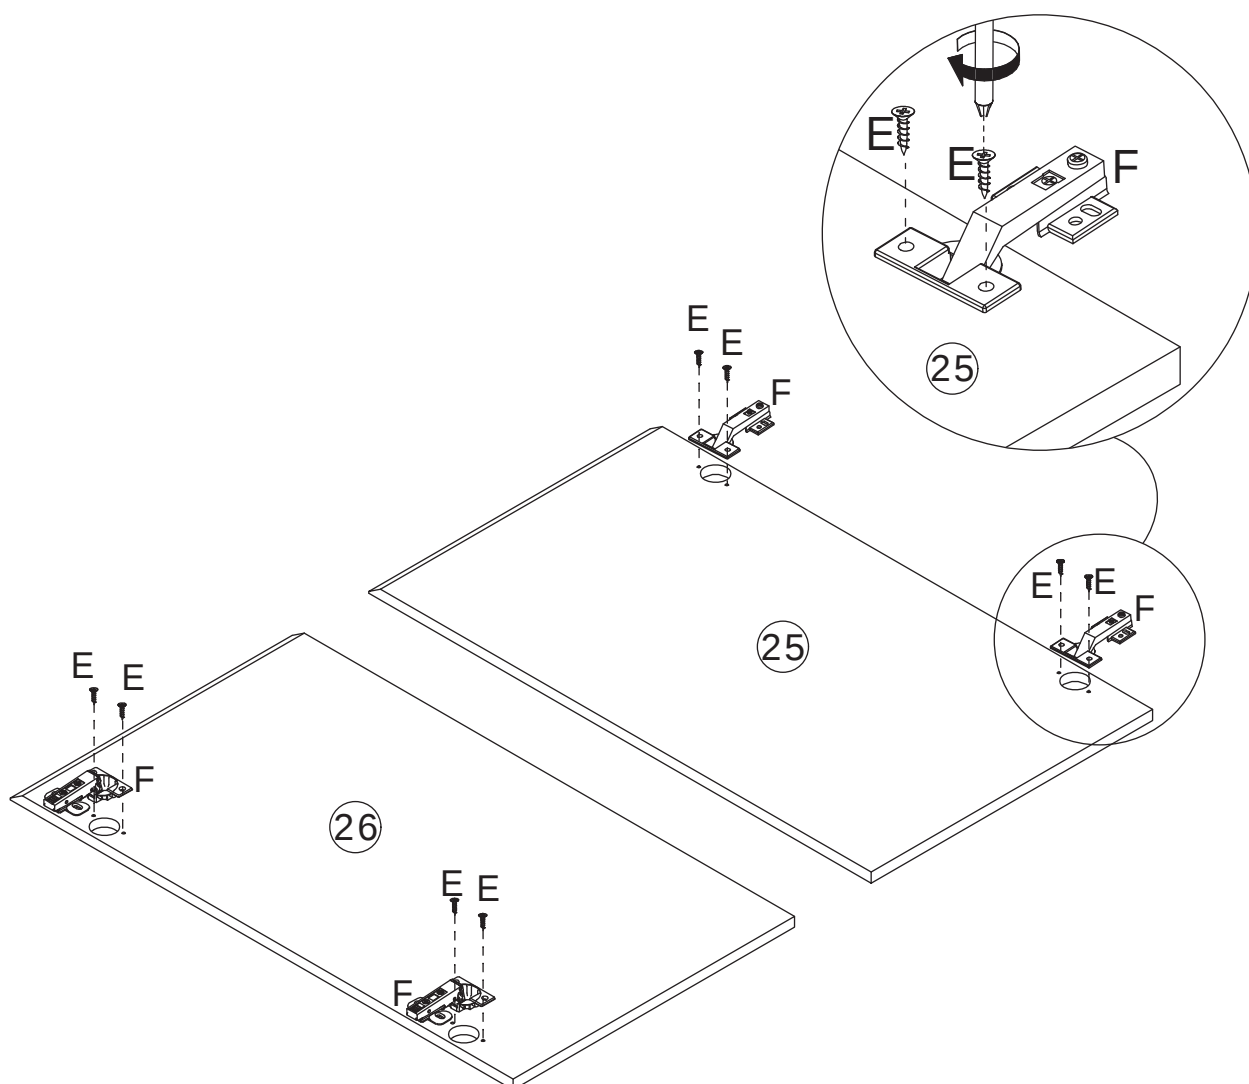


40

E x 4



Ø 3.9 x 16 mm



E





Ø 3.9 x 16 mm

D



Ø 4 x 30 mm

Secure panel 26 to panel 15 via hinges using screw (E).

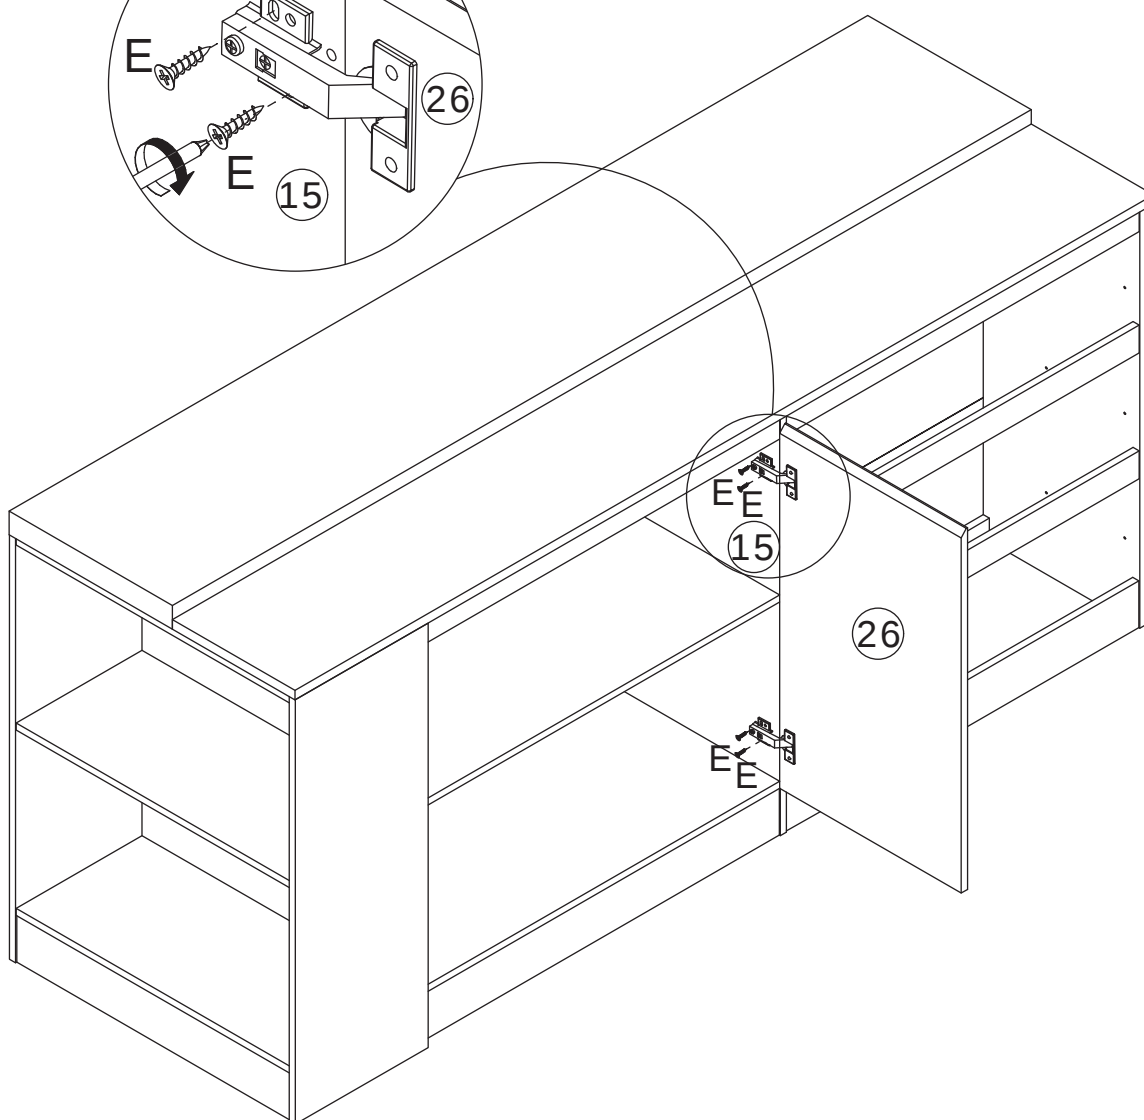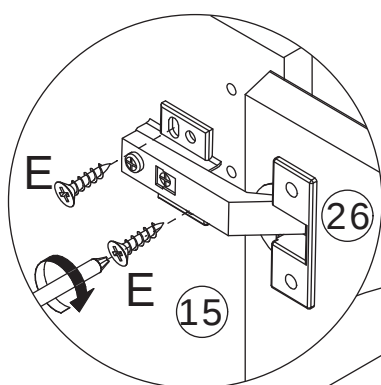


41

E x 4



Ø 3.9 x 16 mm



E




Ø 3.9 x 16 mm

D



Ø 4 x 30 mm

Secure panel 25 to panel 9 via hinges using screw (E).


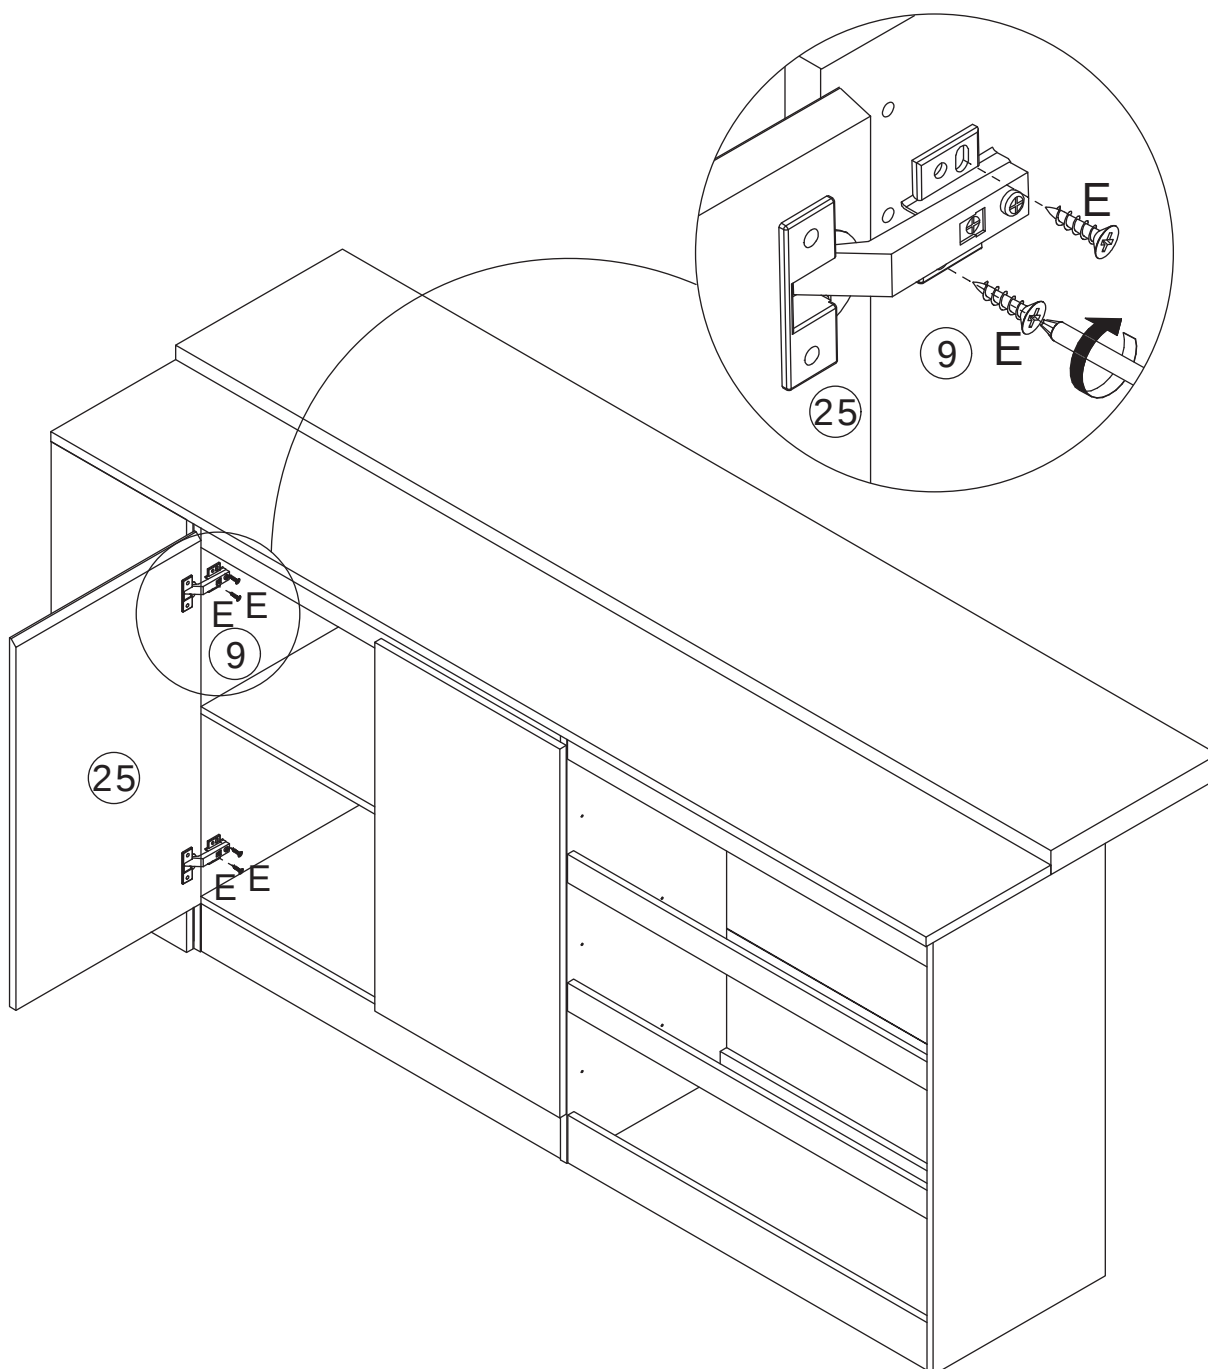


42



A x 12



B x 12

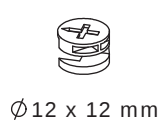

Screw self-tapping rod (A) into panel 31.
Connect panel 31 to panel 27 and 29, then
tighten by turning cam lock (B) clockwise.
Insert panel 30 along the available slots.

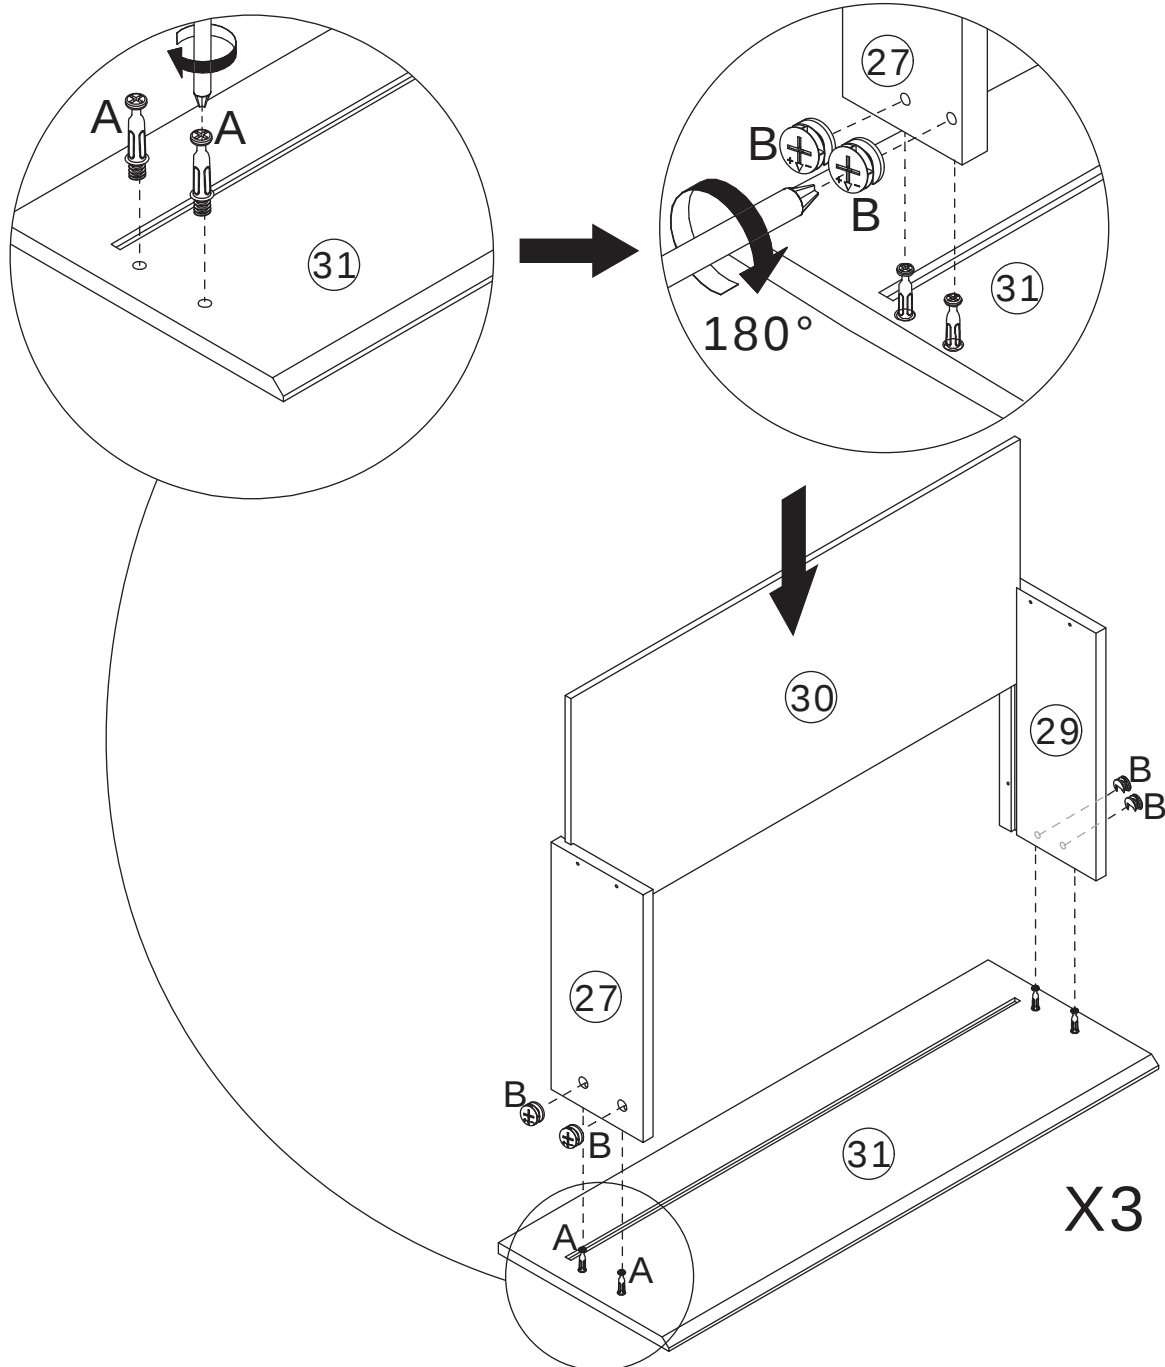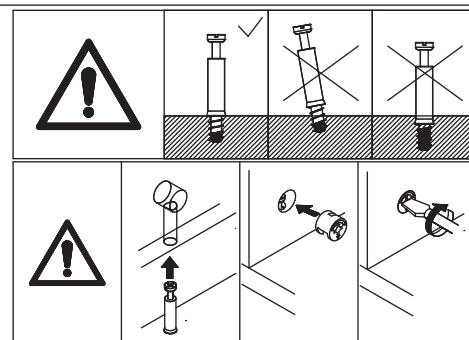


43


D x 12



Ø 4 x 30 mm






Secure panel 28 to panel 27 and 29 using screw (D).



Ø 4 x 30 mm



Ø 3.9 x 16 mm

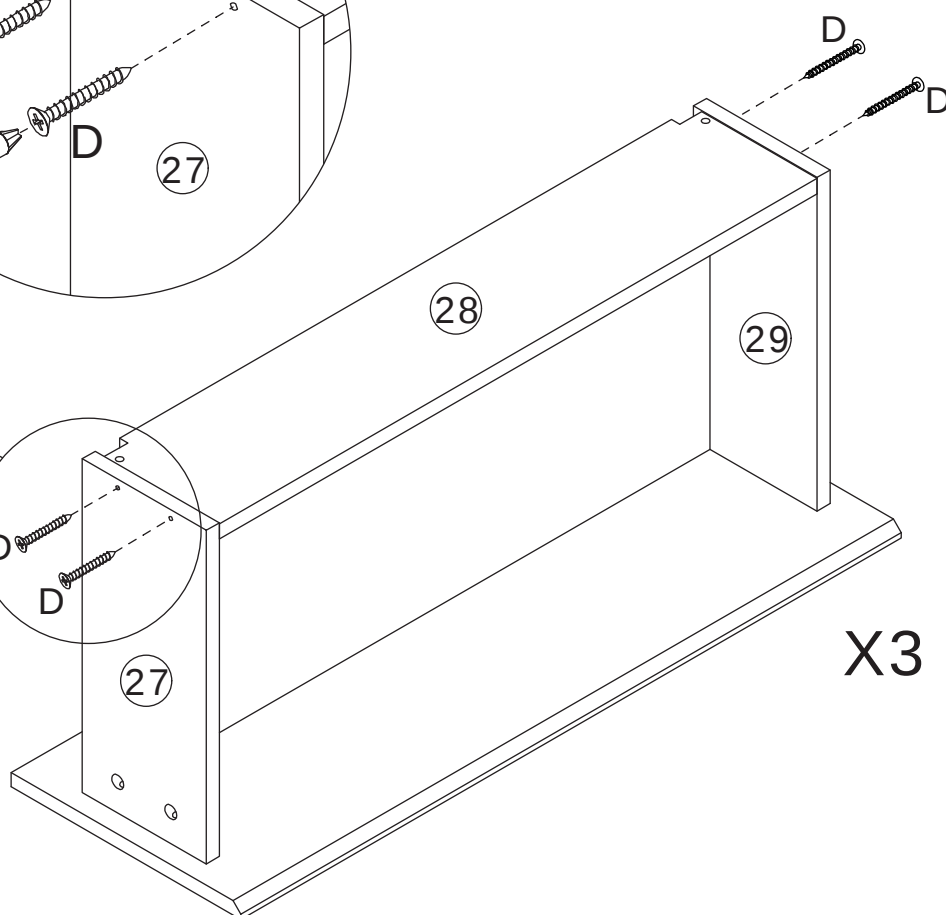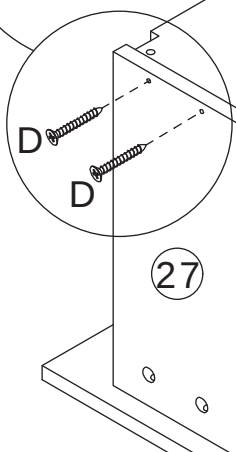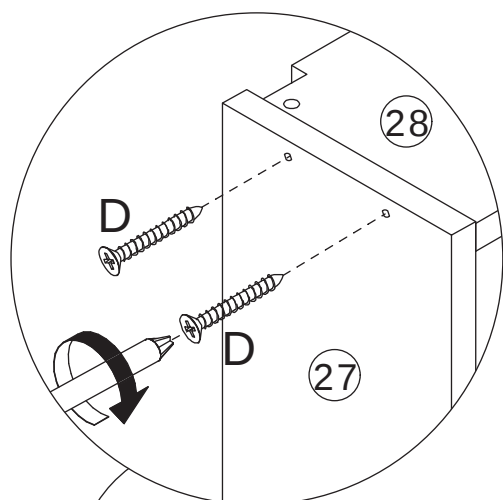


44

E x 12





Ø 3.9 x 16 mm

G x 3

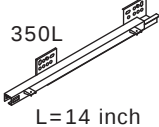

H x 3

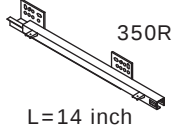

Secure slide rail (G) and (H) to panel 15 and 19 using screw (E).



E






Ø 3.9 x 16 mm

D




Ø 4 x 30 mm

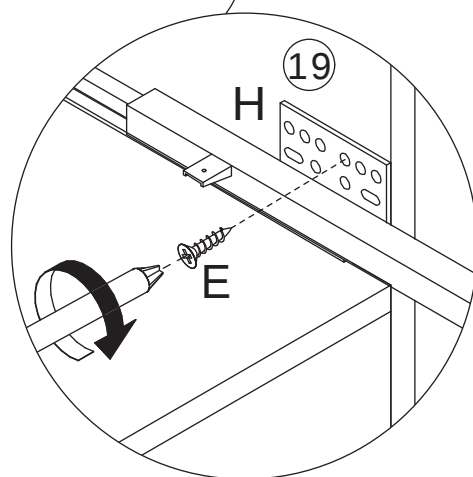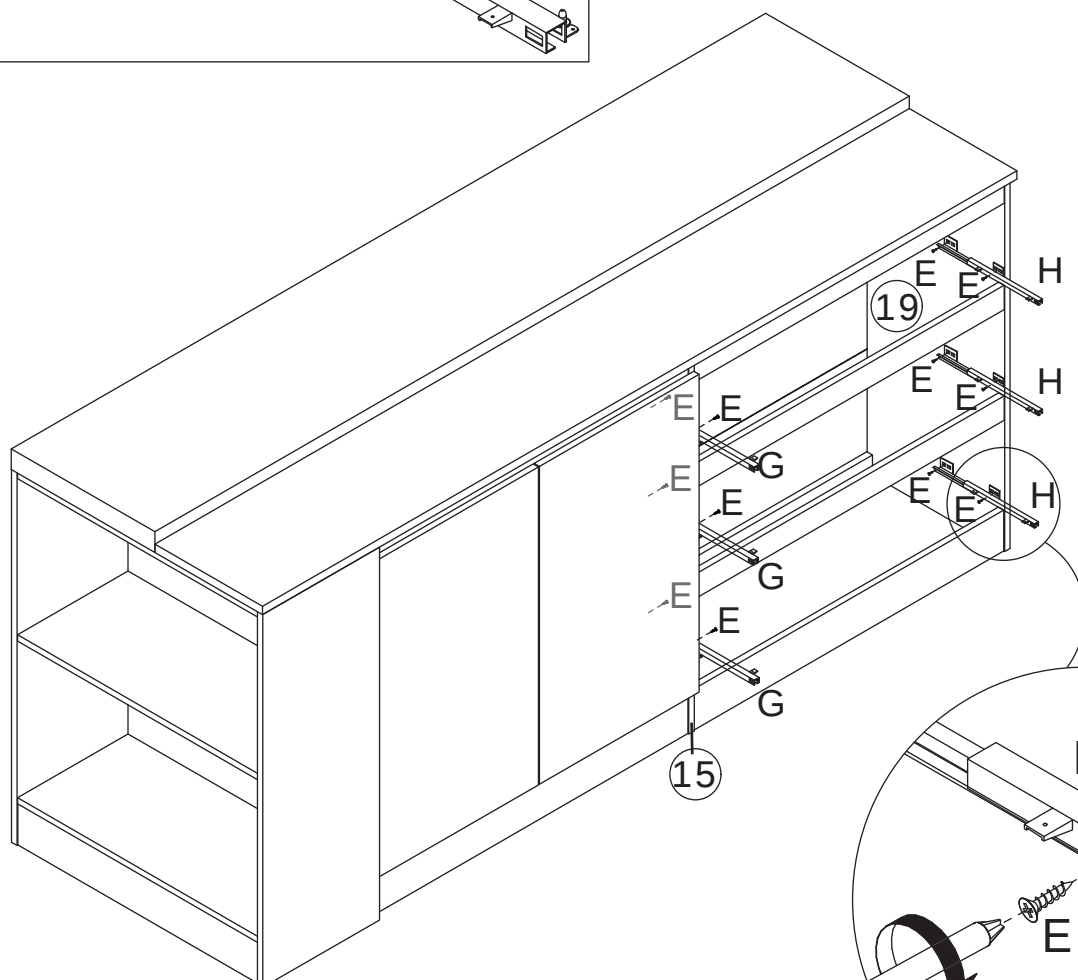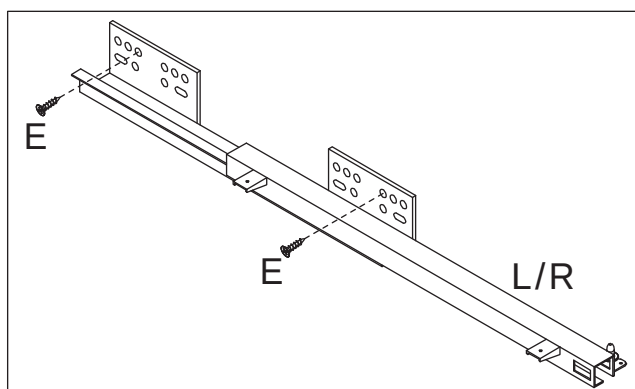


Tutorial for installing drawers

STEP 1: insert the rear hook of the slide rail into the hole at the back of the drawer box.

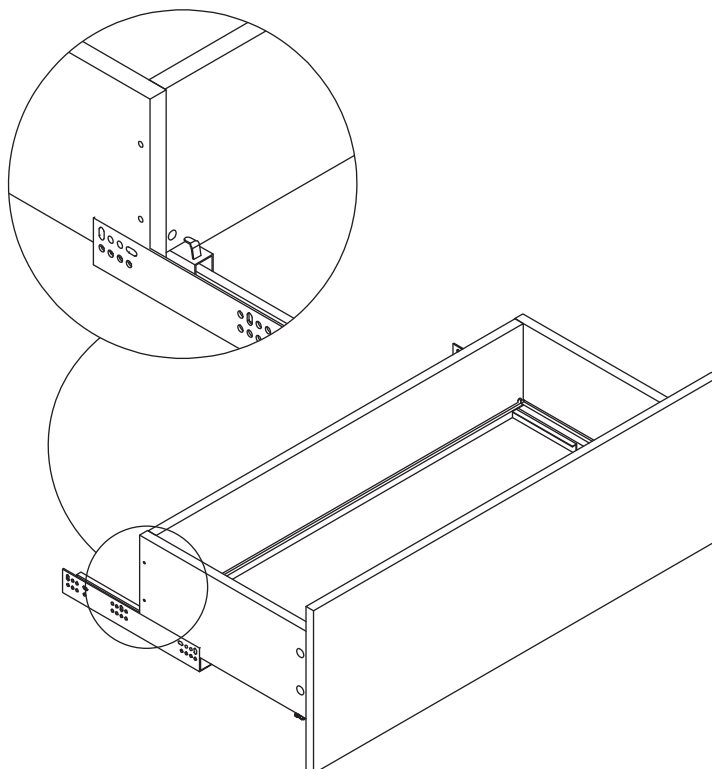


STEP 2: align the slide rail and insert the slide rail buckle into the side hole of the drawer.

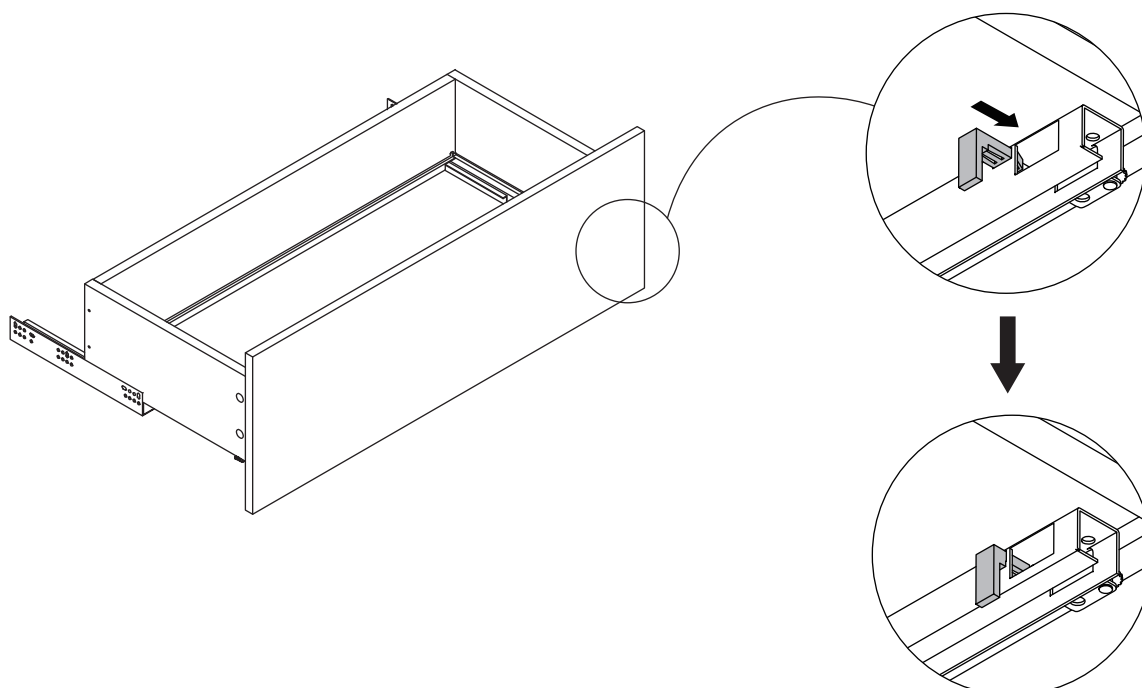


46

Push the drawer box into place.

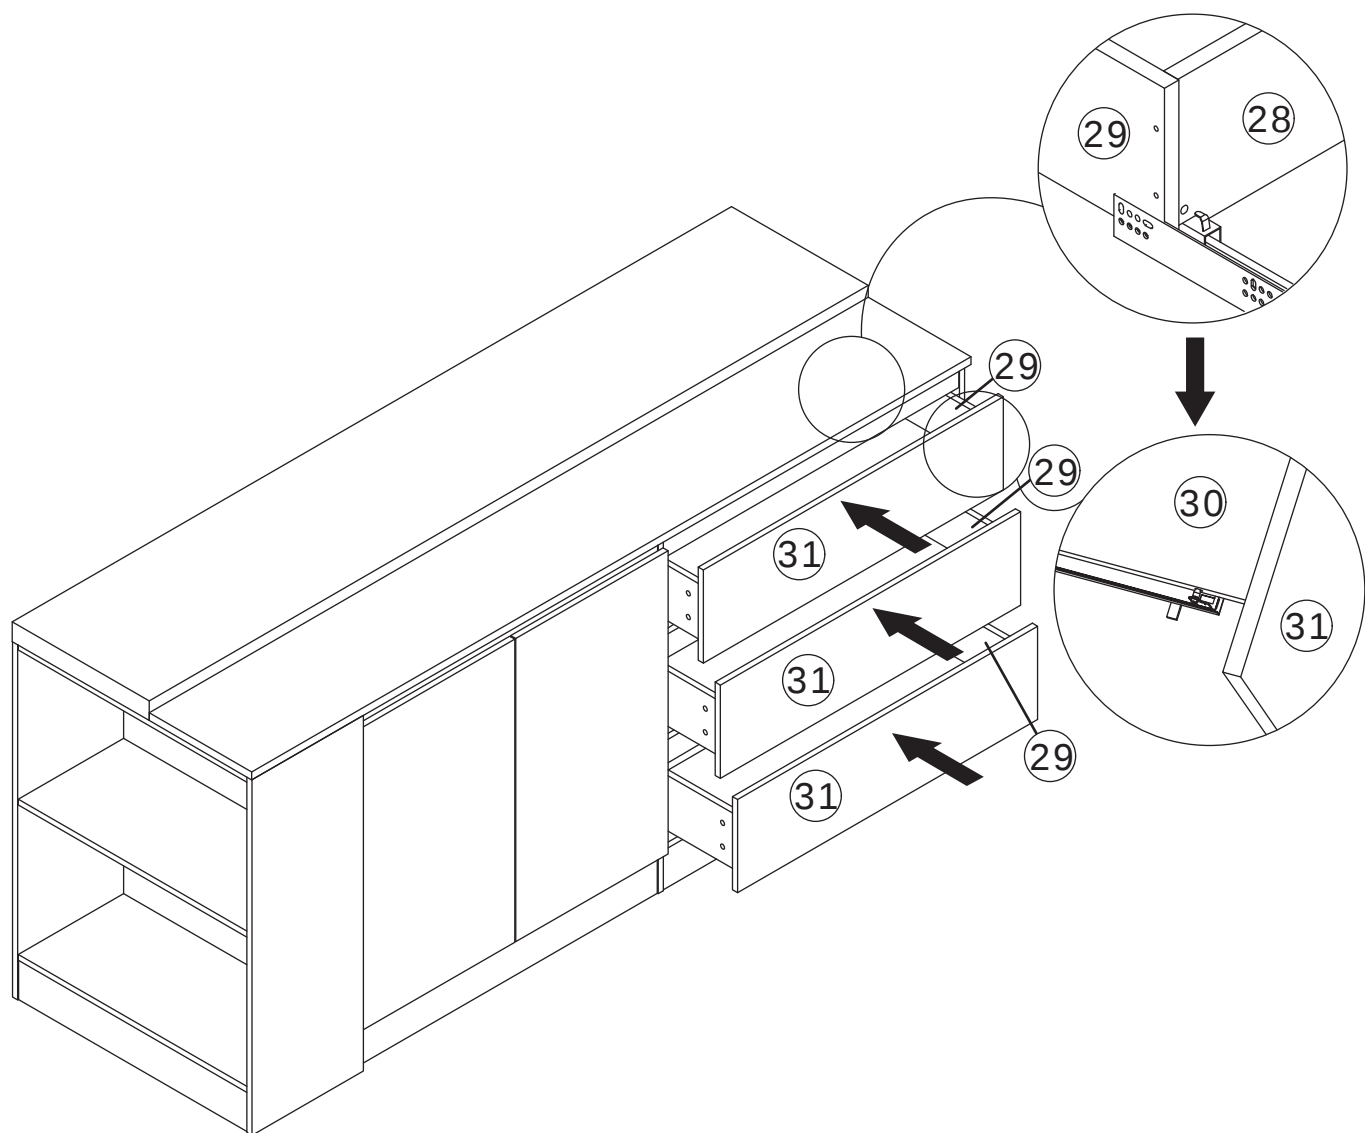

47

Adjust the drawer gap by rotating the knob at the bottom of the drawer.


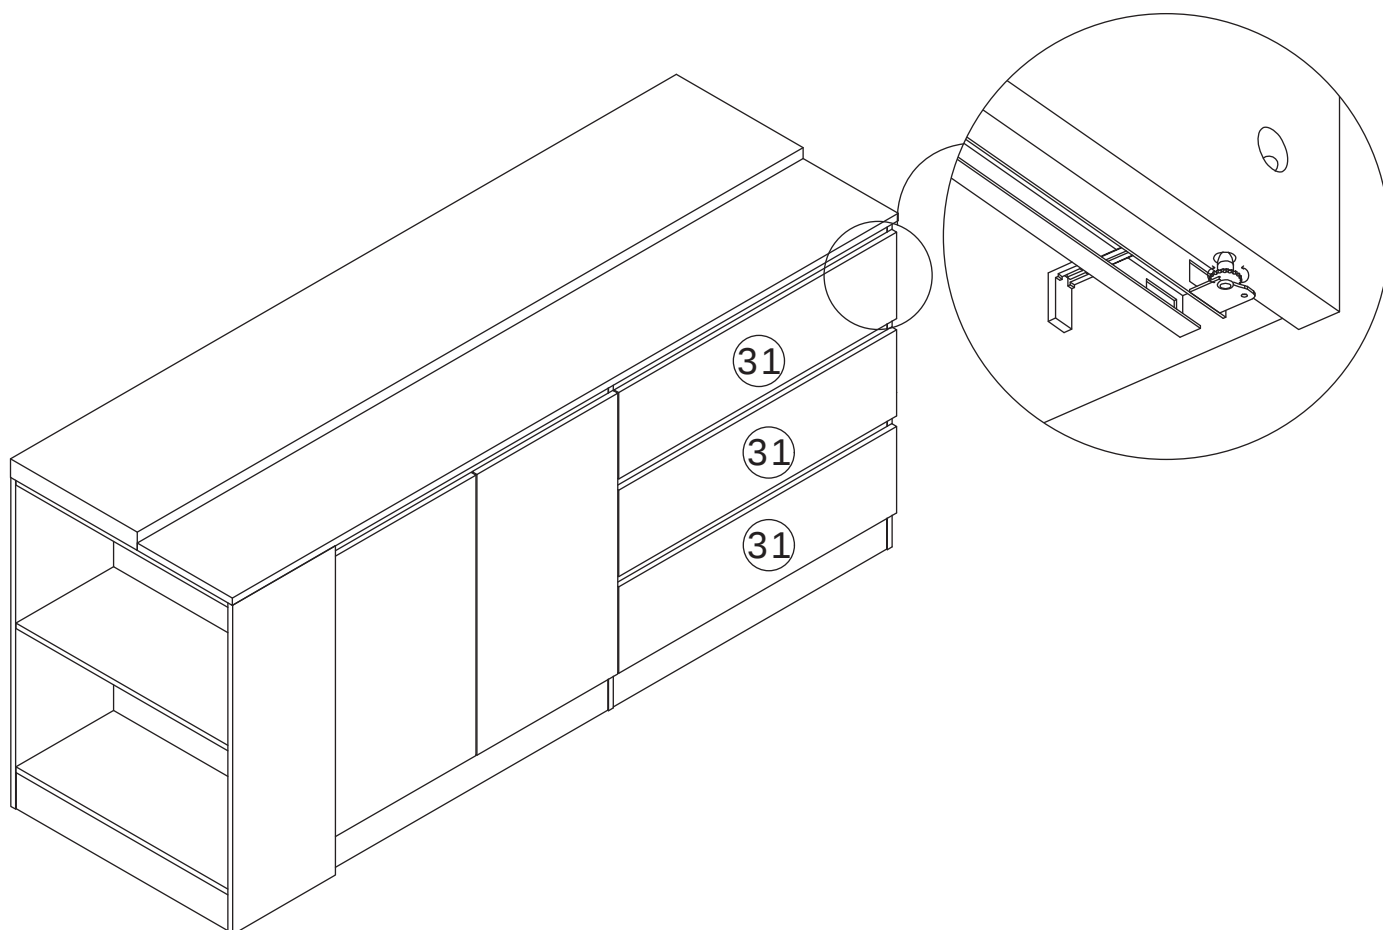


48






O x 4




Ø3 x 14 mm

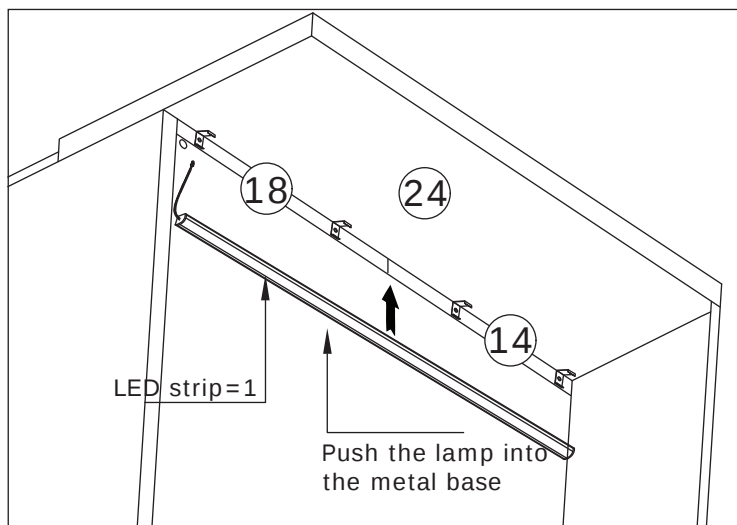





As shown in the diagram, secure the LED light base to the installation unit using screw (O), and push the LED light firmly into the base.

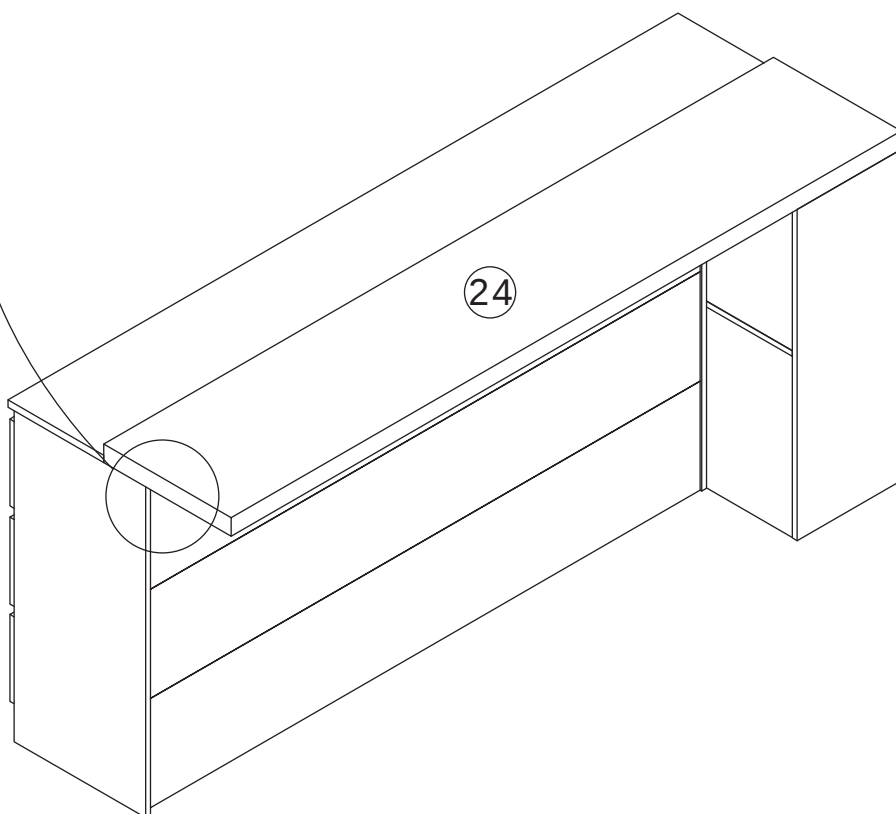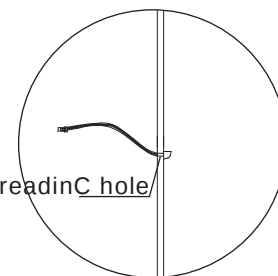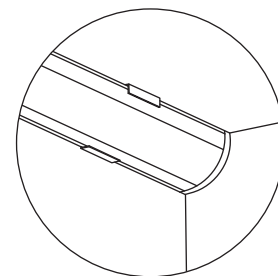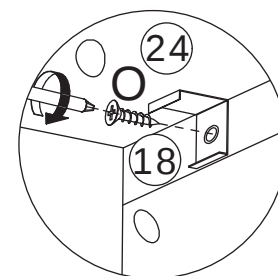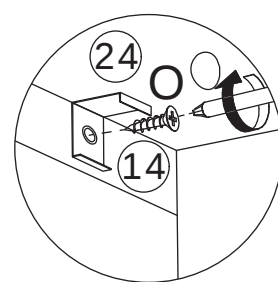


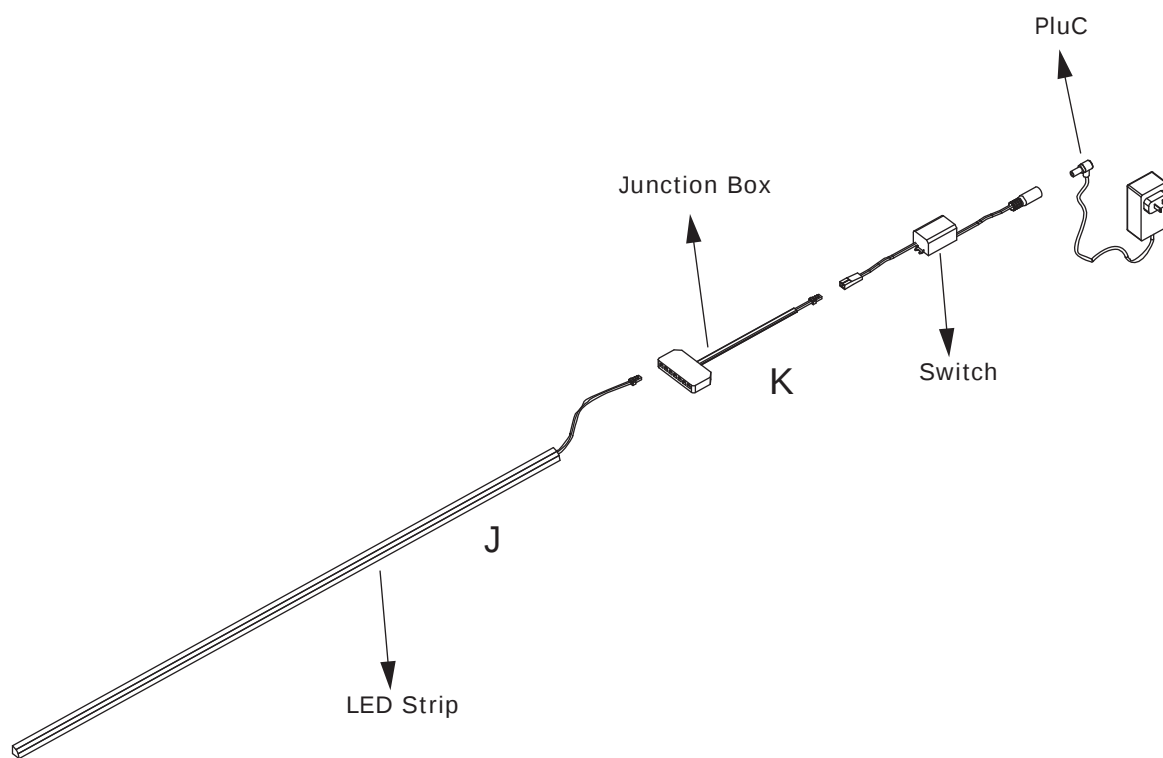

The instruction for the light control switch.

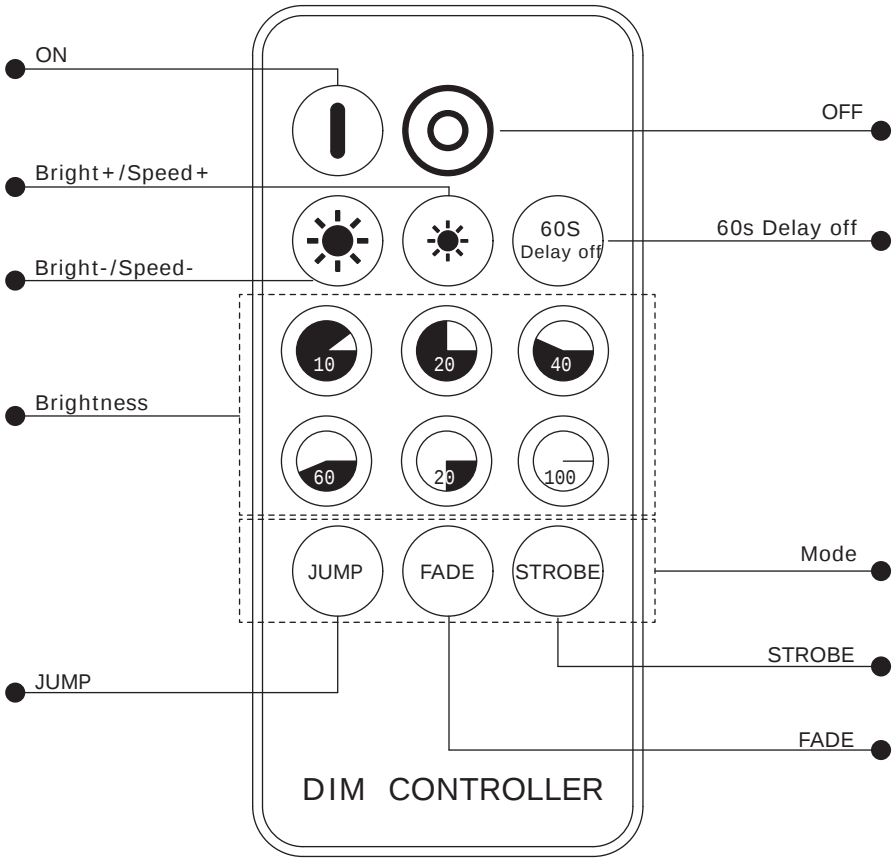

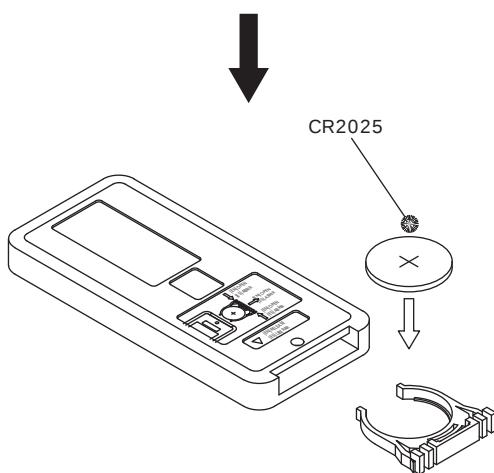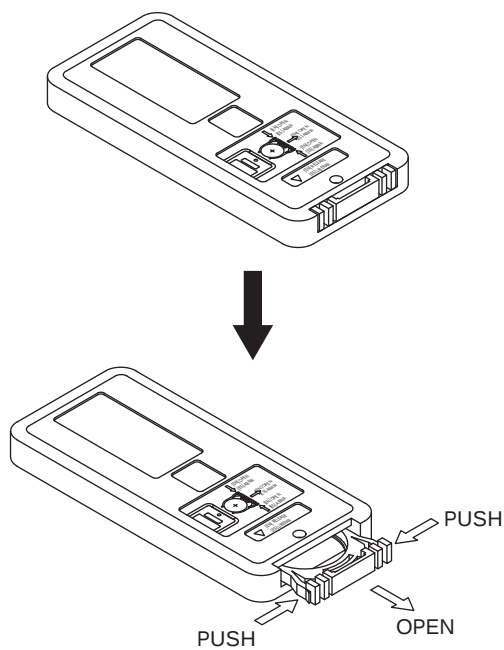
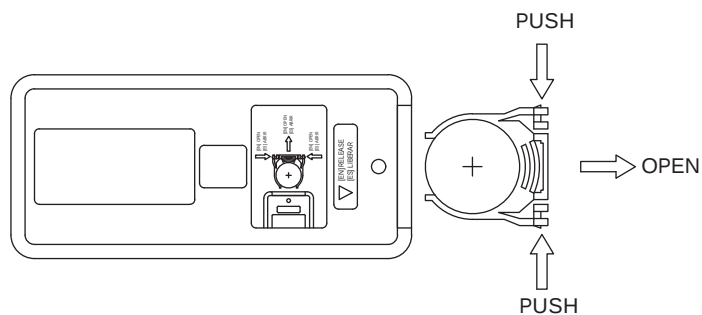





If the door panels are not aligned, please adjust the screws on the hinges according to the illustration.

Or you can search this link to view the teaching video.


<https://youtu.be/n0Lb36SoODM>

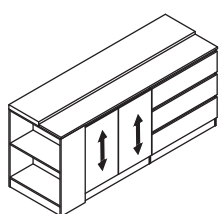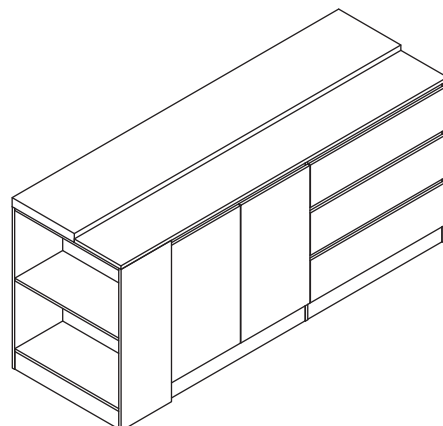



①

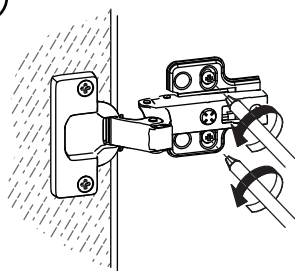


②

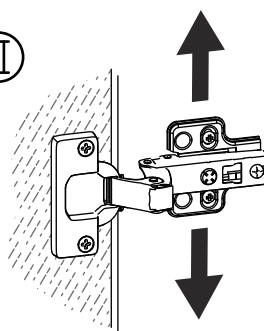


③

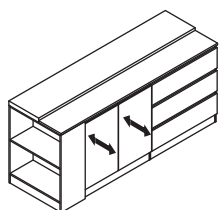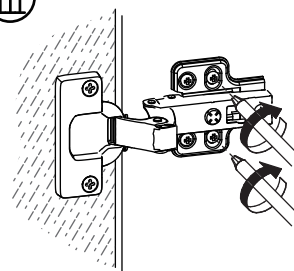



①

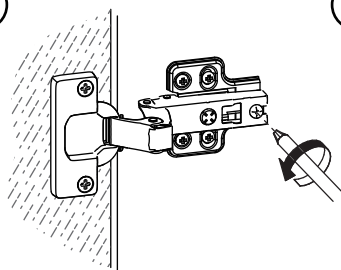


②

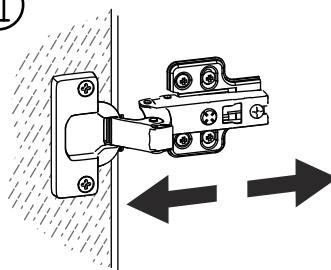


③

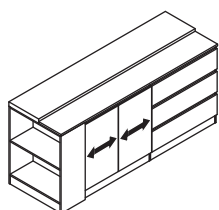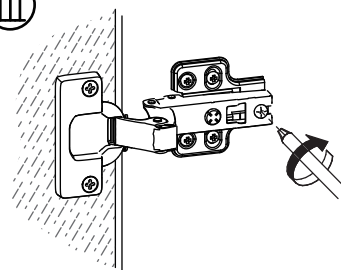

①

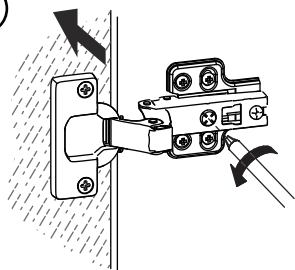

②

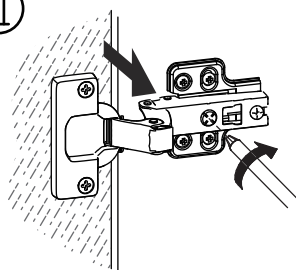

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.