

1 Read and Follow These Safety Precautions

1. Turn off electricity at main switch before wiring or servicing fan in order to avoid possible electrical shock.
2. All wiring must be in accordance with the National Electric Code (ANSI/NFPA70-1999) and local electrical codes. Electrical installation should be performed by a qualified licensed electrician.
3. After making the wire connections, the wires should be spread apart with the grounded conductor and the equipment-grounding conductor on one side of the outlet box and the ungrounded conductor on the other side of the outlet box.
4. The splice after being made should be turned upward and pushed carefully up into the outlet box.
5. Conductor of a fan identified as grounded conductor to be connected to grounded conductor of power supply; conductor of a fan identified as ungrounded conductor to be connected to an ungrounded conductor of power supply; conductor of fan identified for equipment grounding to be connected to an equipment-grounding conductor.
6. Fan should not be mounted in an area where it might get wet.
7. To reduce the risk of fire, electric shock or personal injury, mount to outlet box marked "Acceptable for Fan Support" and use mounting screws provided with the outlet box.
8. The outlet box and its support must be able to support the moving weight of the fan (at least 35lb).
9. For safety and best operating results, we recommend that you have a qualified electrician assemble and install your fan.
10. **WARNING:** To reduce the risk of fire or electric shock, do not use this fan with any solid state speed control device.
11. To reduce the risk of personal injury, do not bend the blade brackets when installing the brackets, balancing the blades or cleaning the fan. Do not insert foreign objects in between rotating fan blades.
12. Check downrod length to ensure blades are at least 7 feet (2.1m) above the floor.

Troubleshooting Steps

Problem A: Fan Will not Start

1. Check fuse or circuit breaker and replace it if necessary.
2. Turn off electrical power and check all wire connections.
3. See operation instructions.

Problem B: Fan is Excessively Noisy

1. Check if all screws in fan assembly are tight and properly seated.
2. Check and make sure mounting bracket is installed properly.
3. Check and make sure light kit and glass are installed properly and tight.

Problem C: Fan Wobbles

1. Check and make sure all blades are screwed firmly into blade holders.
2. Check and make sure all blade holders are screwed firmly into motor.
3. Check the weight of blades. All fan blades are weighed on electronic scales. The weight is marked on the reverse side of the fan blade near the motor end. All of the blades should be the same weight to prevent fan from wobbling.
4. Use the enclosed balancing kit if needed.

2 Before Assembly

1. Make sure that the fan voltage (120) is compatible with your own electrical system.
2. Check to make sure that your carton contains all the parts mentioned in the parts list.

NOTE: The box can be used as a work space to prevent any damage on the ornamental surface.

CAUTION: Before installing, choose a location for mounting the fan where the blades have at least 7 feet of clearance from all objects and floor. Mount an outlet box to the ceiling or use an existing box.

CAUTION: Do not mount fan to sheetrock or drywall type materials. To ensure proper support, use the two #1 wood screws to secure mounting bracket to joist or beam. If the location you choose does not have a suitable support beam, install a 2" x 4" brace between ceiling joists for a proper support.

Screw Package

Screw Package	Quantity
S1. Blade Screws	10
S2. Decorative Nuts	10
S3. Wire Nut	3
S4. Dual mounting Screws	1
S5. Pull chain and fobs	2
S6. #8Screws & Lock Washers	2
S7. Wood Screws & Flat Washers	2
S8. Balance Piece & Tape	1
S9. Balance Clip	1
S10. Instruction Sheet	1

Tools you Need

- 1. Phillips Screwdriver
- 1. Adjustable Wrench
- 2. Pliers
- 2. Hex Wrench
- 1. Wire Cutter


What You Have

- Mounting Bracket
- Canopy
- Downrod
- Cover
- Fan Housing & Motor
- Light Kit
- Light Kit Glass


3 Turn off circuit breakers and wall switch to the fan supply line leads.

Preparation & Caution

Important: When using an existing outlet box, be sure the box is securely attached to the building structure and can support the full weight of the fan. Failure to do so can result in serious injury or death.

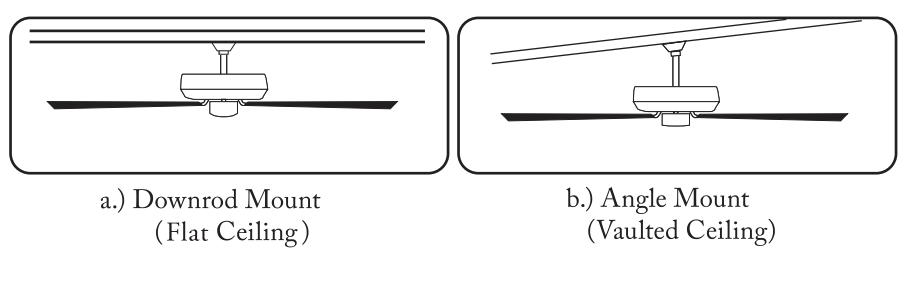

IMPORTANT: If using the angle mount method, check to make sure the ceiling angle is not steeper than 18°. Angles greater than 18° will require a 35° angle adapter.

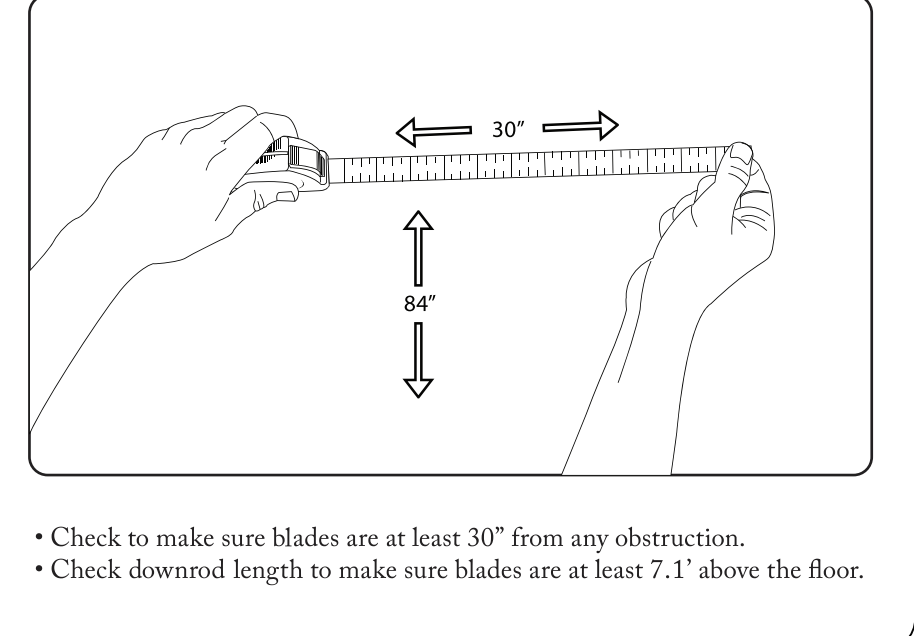

- Check to make sure blades are at least 30" from any obstruction.
- Check downrod length to make sure blades are at least 7.1' above the floor.

4 Installing Mounting Bracket

5 Installing Drop-mount

6 Wiring Instructions

WARNING: Failure to holding the fan assembly may result in serious injury or death.

IMPORTANT: If you are not sure if the electrical outlet box and fan are grounded, contact a licensed electrician for advice. They must be grounded for safe operation.

WARNING: To avoid possible electrical shock, be sure electricity is turned off at the main fuse box before wiring.

Your outlet box should have 3 wires. If they are not there, contact a certified electrician to help set this part up. Match up and connect wires from the ceiling fan to the wires from your outlet box according to the chart below:

Connect with wire connector	on fan	In outlet box
Ground & ground	2 ground wires (green)	Ground wire (typically copper or green)
Motor, light & live	Motor wire (black) Light wire (blue)	Live wire (typically black)
Neutral & neutral	Neutral wire (white)	Neutral wire (white)

When wires are matched up, connect them by twisting frayed ends together; screw wire connector(s) are provided) onto the tops of the twisted wires; Tighten them with electrical tape.

WARNING: Be sure no bare wire or wire strands are visible after making connection. Place green and white connections on opposite side of box from the black and blue (if applicable) connections.

7 Assembly

Unhook the assembly from the mounting bracket. Hold the assembly by the canopy and raise up to align the two holes in the canopy with the holes in the mounting bracket. Tighten the loosened screws. Now re-secure the screws and washers which were removed.

WARNING: To reduce the risk of serious bodily injury, DO NOT use power tools to assemble the blades. If overtightened, blades may crack and break.

Tip: Break apart fiber washers from set and then place one washer on each blade screw prior to installing blades.

Locate 9 blade attachment screws and 9 decorative nuts in one of the hardware packs. Place blade arm on TOPSIDE of blade, aligning holes in blade arm with holes in blade as shown. [Be sure to note label on blade arm indicating THIS SIDE UP and turn blade so that label faces up]. Insert 9 decorative nuts from UNDERSIDE of blade (i.e., the side that will face the floor), making sure to completely insert each decorative nut so that the blade arm can be attached correctly. Insert 9 blade attachment screws from TOPSIDE of blade with fingers first and then tighten screws securely with a Phillips screwdriver. Repeat procedure for remaining blades.

Align blade holes and attach blade with blade screws and washers. Before securing screws permanently, repeat with remaining blade. Securely tighten all screws.

8 Remove blade arm screws and lock washers from fan motor and set aside. [WARNING: Do NOT remove the 4 screws located on the outer rim of the underside of the motor housing doing so or any attempt at doing so will void the warranty.] Align blade arm holes with motor screw holes and attach blade arm with lock washers and blade arm screws. Before securing screws permanently, repeat this procedure with remaining blade arms. Secure all screws.

IMPORTANT: Tighten blade screws twice a year.

Light Kit Installation

Remove one motor plate screw from motor plate preassembled on the underside of the motor assembly and partially loosen the other two motor plate screws. Align slotted holes in filter plate with loosened motor plate screws, allowing male plug from motor assembly to come through hole in filter plate. Twist filter plate to lock. Re-insert the motor plate screw that was removed and securely tighten all three motor plate screws.

Connect male plug from motor assembly to female plug from filter plate, matching up the colors on the plugs for correct fit. Make sure plugs connect tightly.

Remove 1 screw from motor plate on underside of motor and partially loosen the other 2 screws. Connect blue wire from motor assembly to black wire from the LED light kit. Connect white wire from motor assembly to white wire from LED light kit. Make sure molex connections snap together completely. Re-insert screw that was previously removed and tighten all 3 screws securely.

9 Gently push up on glass shade and turn to the RIGHT (clockwise) until it slides completely into place.

NOTE: Pull down VERY GENTLY on glass shade to make sure it's properly fitted.

Assemble decorative fob chains from hardware bag to fan and light kit pull chains. Insert end chain into chain coupling. Check that chains are held by lightly pulling both chains in coupling.

Operation

Turn fan on/off & select fan speed. Restore power to ceiling fan and test for proper operation.

The fan pull chain controls the fan speed settings:

1. Turn on the fan at high speed;
2. Turn on the fan at medium speed;
3. Turn on the fan at low speed;
4. Turn off the fan.

The light pull chain controls the light:

1. Turn on the light;
2. Turn off the light.

Forward and reverse direction function

This ceiling fan is equipped with a Reverse Switch for downward or upward air-flow.

10 NOTE: Do not use the Reverse Switch when the fan blades are in motion.

Forward and reverse direction function

This ceiling fan is equipped with reverse switch for downward or upward air-flow.

NOTE: Do not change the direction of rotation while the fan blades are in motion. To change direction, turn off the fan and wait for the blades to stop rotating before setting the switch to the desired rotation direction, either forward or reverse.

IMPORTANT: Reverse switch must be set either completely left or completely right for fan to function. If the reverse switch is set in the middle position, fan will not operate.

11 NOTE: Do not use the Reverse Switch when the fan blades are in motion.

Forward function

On this setting, the fan will turn counterclockwise to create a cooling effect. Use this function during warmer weather to circulate the hot air away from your living space.

Reverse function

On this setting, the fan will turn clockwise. Use this function during cooler weather to re-circulate warm air.

Maintenance

- Because of the fan's constant spinning movement, some connections may become loose. Check the support connections, brackets and blade attachments twice a year. Make sure they are secure.
- There is no need to oil your fan. The motor has permanently-lubricated bearings.

Care and Cleaning

- Dust your fan periodically with a soft, dry cloth. Do not use harsh cleaners or materials as they may damage the unit.
- To prevent bending the blades during cleaning, support the blades so that no pressure is applied to them.

Caution!

Do not allow water to come in contact with fan blades or the ceiling fan. Doing so will create fire and/or shock hazards, damaging property.

12 FCC/IC Information

This device complies with part 15 of the FCC Rules and Industry Canada license-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) This device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation. Modifications not expressly approved by Carro USA Inc. could void the user's authority to operate this equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Carro USA Inc.
1431 S. Baker Ave. Ontario CA 91761
Tel: 888-253-2374
www.carrohome.com | cs@carrohome.com