

Kitchen digital scale



Reference: DOM354
Version: 1.4
Langue: English

LIVOO
Feel good moments
User Manual

You have purchased a product LIVOO brand and we thank you. We take great care in design, ergonomics and ease of use of our products. We hope that this product will give you complete satisfaction. Please read the instruction carefully before operating.

This instruction manual is available too on our website www.livoo.fr

Please read these instructions carefully before using your kitchen scale. Keep the manual for any need for further reference.

1. This kitchen scale is for home use only. Any other use (medical or commercial) is excluded.
2. Always place the scale on a level, flat and stable. Do not place the balance on the edge of a table or work surface.
3. The balance is a precision electronic weighing machine: use it with care. Do not try to disassemble and avoid heavy vibration and shocks.
4. Do not push it, do not drop it, do not drop objects on the glass.
5. Do not store objects on the appliance.
6. Do not expose to direct sunlight. Keep it away from any heat and moisture.
7. Children shall not play with children.
8. Do not overload the balance (maximum capacity: 5 Kg).
9. If the result is displayed incorrectly, check the batteries and contact points are touching well. Replace the batteries if the scale has not been used for a long time and then try again.
10. Avoid using the kitchen scale in places where magnetic fields would interfere with the information transmitted by the scale.
11. When you move the balance to a place with a temperature difference of more than 10 ° C, let it rest for at least two hours before the start.
12. Do not immerse in water or any other liquid or expose not to splash water.

Product Feature

1. Touch on/Auto off/Touch off
2. Max Capacity: 5kg
3. Division: 1g/
4. Tare function
5. Two weight units: g-lb:oz
6. Two volume units: ml-fl'oz
7. Low battery/over-load indication
8. Works with 1 battery
9. LCD screen

Technical information:

Battery: 1 x CR2032 3V

LIVOO

Feel good moments

User Manual

Button Functions



Touch on/Touch off/Zero/Tare




Unit Conversion: g-lb:oz, ml-fl'oz
Mode Conversion: weight<->milk volume<->
Water volume


LCD Display Function




: negative value g: weight unit
 :tare weight lb: oz: weight unit
ml : volume unit fl'oz: volume unit

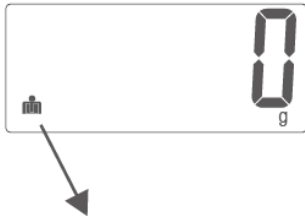

weight mode

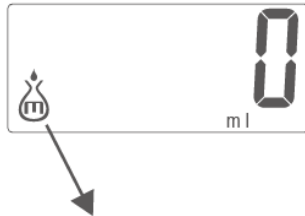


milk mode

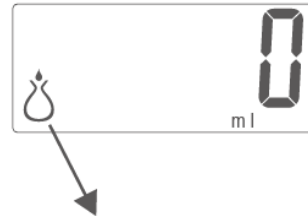


water volume mode


To Insert or Replace Battery

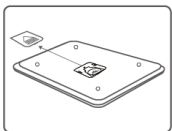

1. On the base of the scale, gently remove the battery cover as per the arrow direction. And remove the isolation sheet before use.

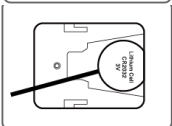

2. Take out the used battery with the aid of a sharp object to replace new battery.

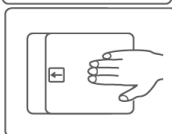

3. After inserting the battery, replace the battery cover and push the cover backward.


Kind Notice: Please be aware that the incorrect polarity will cause the permanent impact on the electronic parts.

LIVOO

Feel good moments

User Manual

Operation



Before use, place the scale on a solid, level surface. Place any container or bowl (if used) on the scale before operation.



Gently touch the  button to turn on the scale.




The scale LCD display will show its start routine of segment as it powers on.



Wait until the "0" is shown on the display.




Place the item to be weighed on the scale (or in the bowl if required). The LCD will show the weight reading.

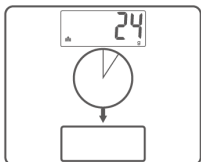

After weighing touch the  button for three seconds to turn off the scales. Or leave the scale and it will automatically power off within about 2 minutes.

Mode Conversion

The scale is with three weighing modes. To measure different items, users can select required weighing mode by touching the "UNIT" button to convert the desired weighing mode, weight mode, milk volume mode or water volume mode. At the left corner of the LCD screen, it shows the status of the weighing modes. See above LCD Display functions.

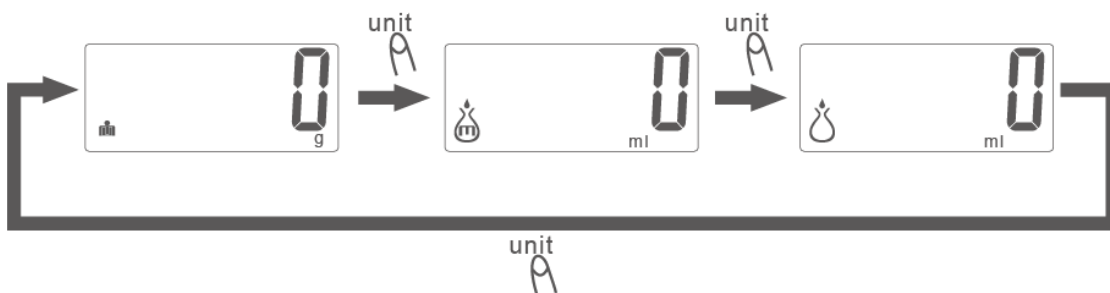

LIVOO


Feel good moments

User Manual

Unit Conversion:


The scale is with unit systems of Metric (g, ml) and Imperial (lb:oz, fl'oz), users can select units from g to lb:oz or ml to fl'oz.

While the scale is on, select the required unit by touching the  button for 3 seconds until the desired unit is shown, g/lb:oz or ml/fl'oz.

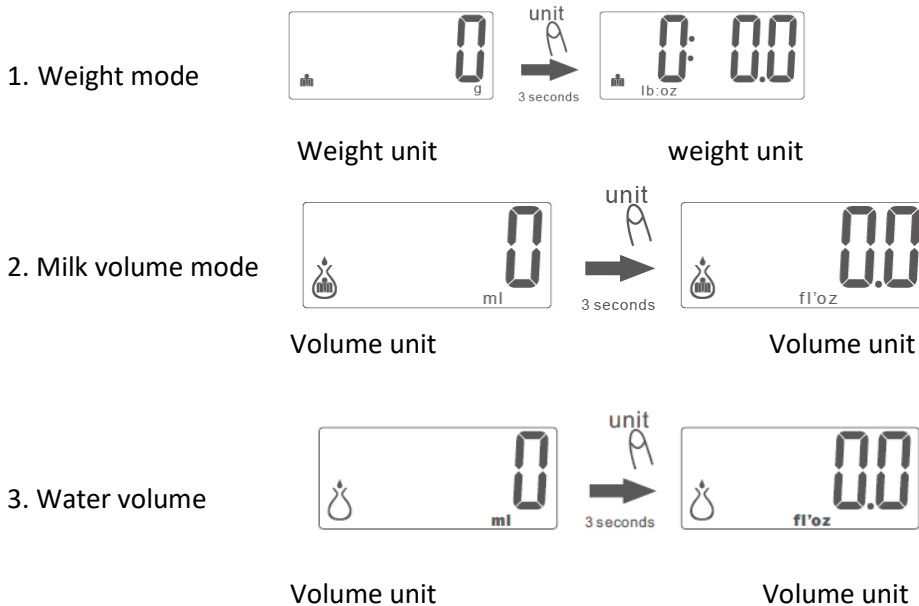

Tare function

The tare Function allows you to weigh another item consecutively after weighing the first item without removing it from the scale.

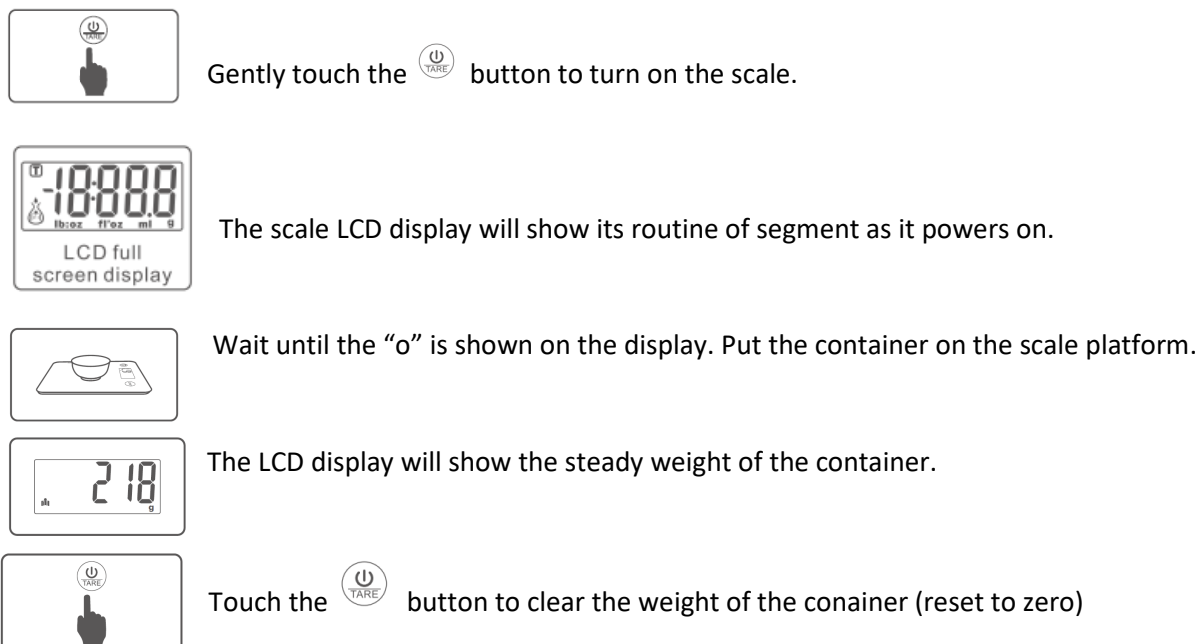


LIVOO

Feel good moments

User Manual



The lower-left corner will show icon , it means the Tare function is activated.



Add the ingredients into the container.



The LCD will show the weight of the ingredients only.


Repeat touching the  button to weight new different ingredients.

Negative Value



The display will show a negative value (see LCD functions) if a weight has been removed from the scale. Please touch the  button to clear the negative value, the display will show “0” again.


Error Indication



The “Lo” symbol on the display indicates that the battery power is running low. Please replace new battery;

The “Err” symbol on the display indicates that the scale is over-loaded. Please stop using to avoid possible damage to the product.

Cleaning and Maintenance of the Scale

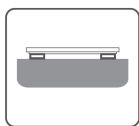


1. Place the scale on a solid level surface before use.
2. Avoid hitting or dropping the scale otherwise damage may occur.
3. Do not overload the scale or put heavy things on the scale when not use.



1. Treat the scale with care as it is a highly precise electronic instrument.
2. Do not immerse this product in water or any other liquid. Please keep dry surface.
3. Clean the scale with a soft damp cloth, do not use chemicals or harsh abrasives.
4. Be careful not to enter the water in the body of the device.

Battery Advice

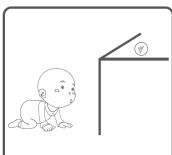


- * If the scale is not to be used for long periods, it's recommended to remove the battery to avoid damage to the scale due to possible battery leakage.
- * Keep the battery out of each of children.

LIVOO
Feel good moments
User Manual



* Do not mix old and new batteries, with different compositions or of different brands in order to prevent possible leakage, explosion.

* Do not heat or deform the batteries or expose to fire.

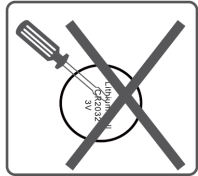

* Waste batteries should not be disposed of with household waste.

* Please check with your local authority for battery recycling advice.

Do not dispose of batteries with household waste. To preserve the environment, dispose of batteries according to regulations. Put them in the nearest battery container or bring

them into your store. Do not recharge the batteries, do not disassemble, do not throw them into the fire. Do not expose to high temperatures or direct sunlight. Do not incinerate.



**Correct disposal of the unit
(Electrical and Electronic Equipment)**

(Applicable in the European Union and the rest of Europe that have adopted separate collection systems countries)

The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal household waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain and reduce the impact on human health and the environment. The symbol of the crossed out dustbin is marked on all products to remind the obligations of separate collection. Consumers should contact their local authority or retailer for information concerning the correct disposal of their product.

LIVOO
Feel good moments
User Manual

CORRECT DISPOSAL OF THE UNIT

Disposal of batteries and accumulators (Applicable in the European Union countries and in the other European countries having systems of selective collection)



This symbol, affixed on batteries and accumulators or on packaging, indicates that batteries and accumulators supplied with this product must not be treated as simple household waste.

By assuring you that these batteries and accumulators are discarded in a appropriate way, you participate actively in the prevention of the negative consequences which their ill-treatment could cause on the environment and on the human health. The recycling of materials contributes besides to the conservation of natural resources.

For the products, which, for safety reasons, of performance or integrity of data require a permanent connection in a battery or in an accumulator, it will be advisable to move closer you to check with technical service qualified to make its replacement.

By bringing back your electric device at the end of life to an appropriate point of collection you make sure that the battery or the incorporated accumulator will be correctly treated.

For all other scenarios and to remove battery or accumulators in complete safety of your appliance, refer to the user manual.

Bring back batteries or worn accumulators to the point of collection suited for the recycling.

For any further information about the recycling of this product or batteries and accumulators, you can contact your municipality, your local waste reception center or the point of sale where you bought this product.



Pour en savoir plus :

www.quefairedemesdechets.fr

LIVOO

BP 61071

67452 Mundolsheim - FRANCE

- Non contractual illustration
- Product information is subject to change without prior notice.