

Assembly Instructions





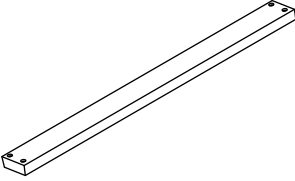
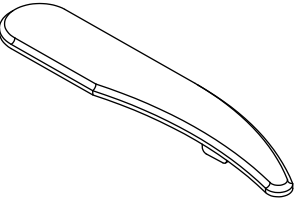
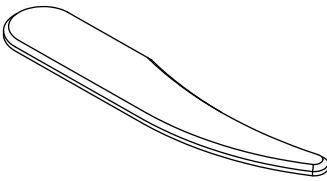
Caution: You must read this before you proceed

RECLINING ADIRONDACK


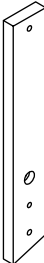
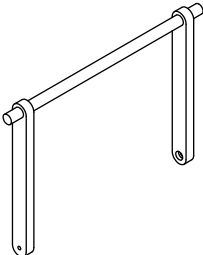


CAUTION : This Adirondack is NOT a TOY.
Keep your child / children at bay during the assembly process.
For moving the Reclining Adirondack and to prevent damage to the Reclining Adirondack, two adults are needed to execute this action.



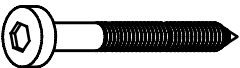


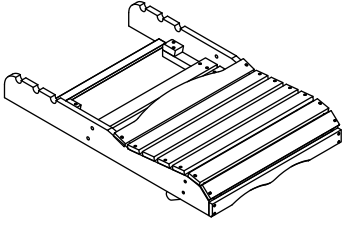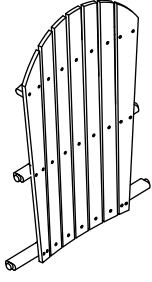

Parts List

| Label | Picture | Description | QTY |
|-------|---|--------------------------|-----|
| A |  | Seat Panel with Footrest | 1 |
| B |  | Backrest | 1 |
| C |  | Left Front Leg | 1 |
| D |  | Right Front Leg | 1 |
| E |  | Support Bar of Front Leg | 1 |
| F |  | Left Armrest | 1 |
| G |  | Right Armrest | 1 |

Parts List

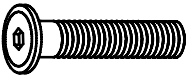
| Label | Picture | Description | QTY |
|-------|--|------------------------------|-----|
| H |  | Support Bar of Left Armrest | 1 |
| I |  | Support Bar of Right Armrest | 1 |
| K |  | Recliner | 1 |

Parts List

| Label | Picture | Description | QTY |
|-------|---|---|--------------|
| ① |  | Bolt (M8x35) | 13 |
| ② |  | Sleeve Nut (M8x15) | 13 |
| ③ |  | Long Screw (M7x70) | 3 |
| ④ |  | Short Screw (M7x40) | 3 |
| ⑤ |  | Screw (M4x30) (Use with Screwdriver) | 5 |
| ⑥ |  | Allen Key | 2 |
| ⑦ |  | Screwdriver | Not provided |

Assembly Preparation

Before Beginning Assembly:

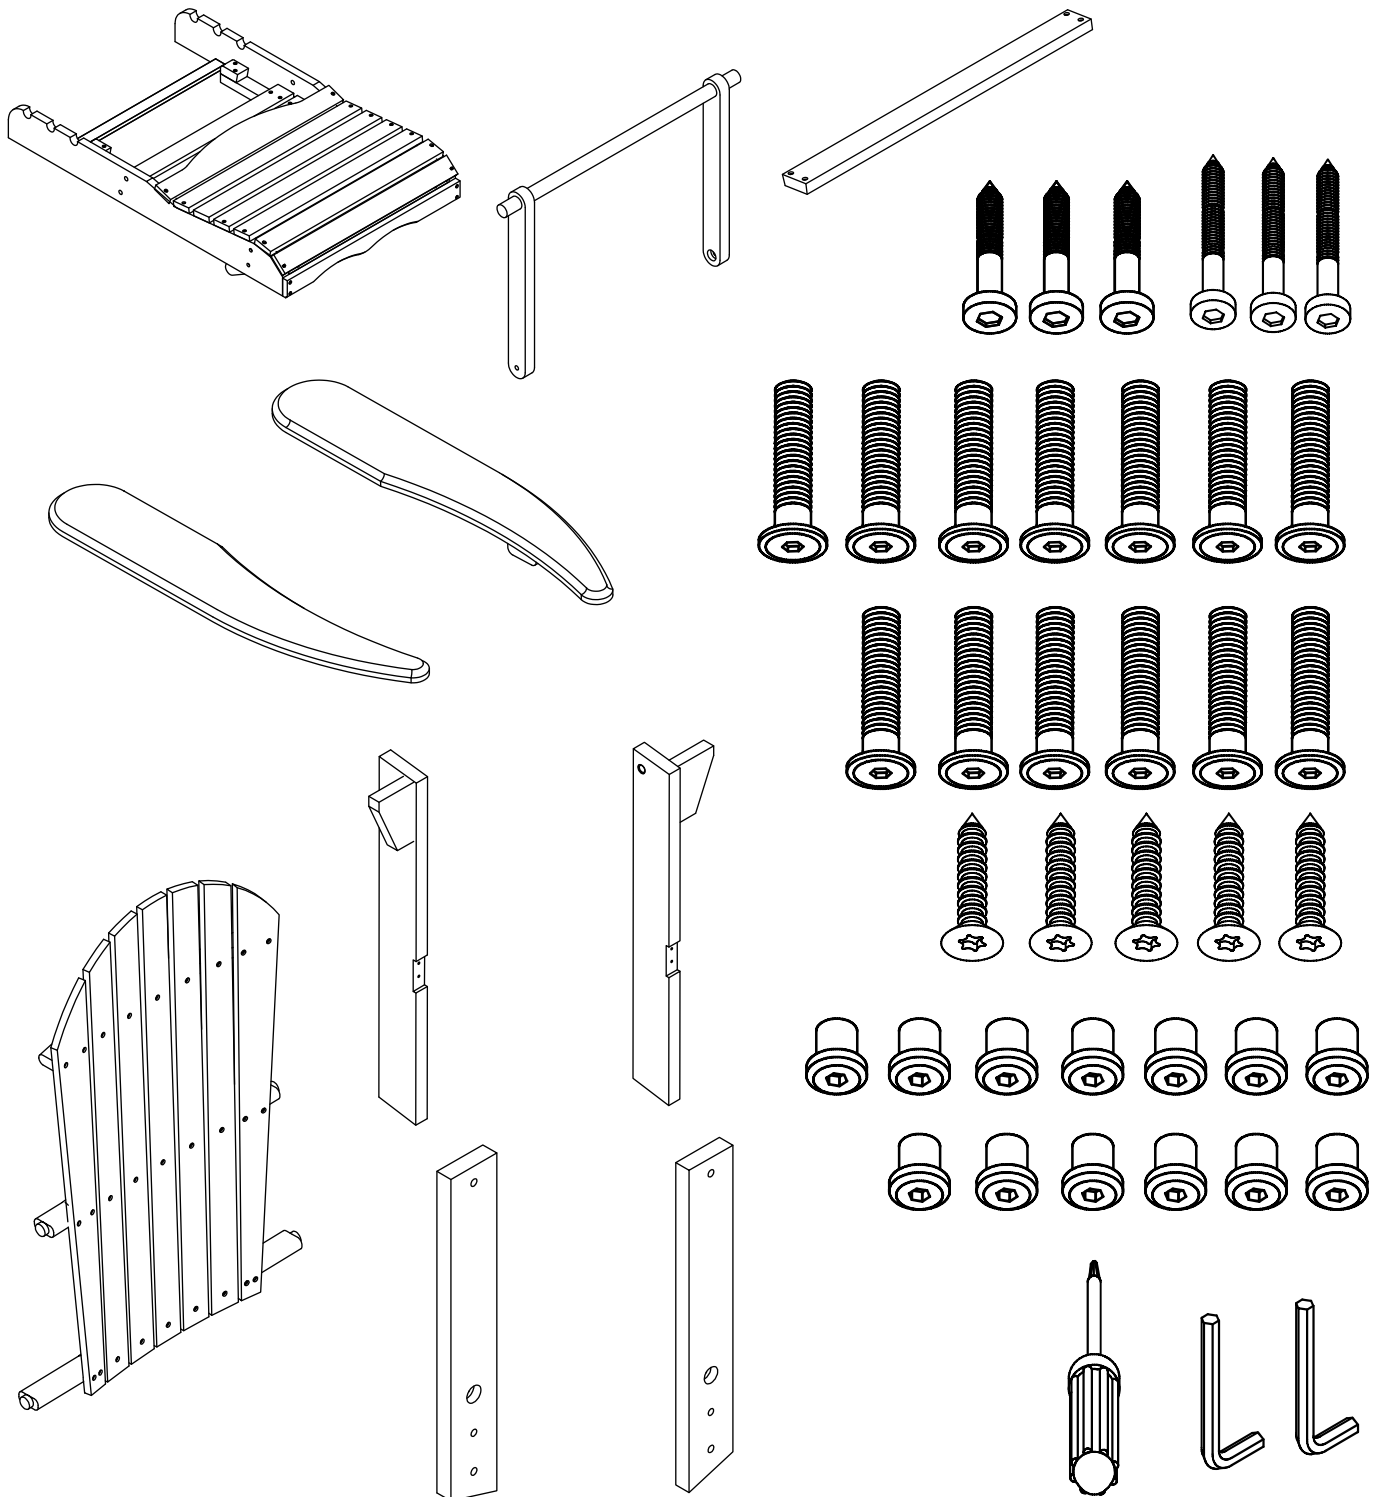

- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-


Assembly Steps

OVERVIEW

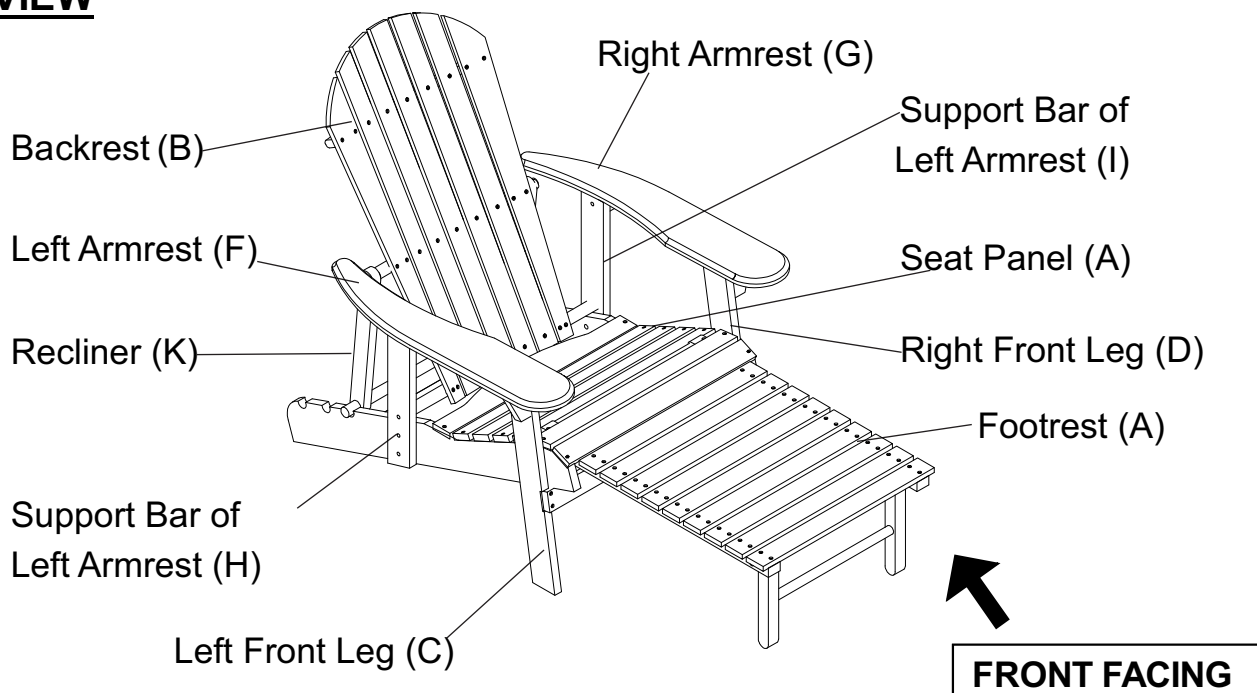


This Reclining Adirondack has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Reclining Adirondack parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

Step 1

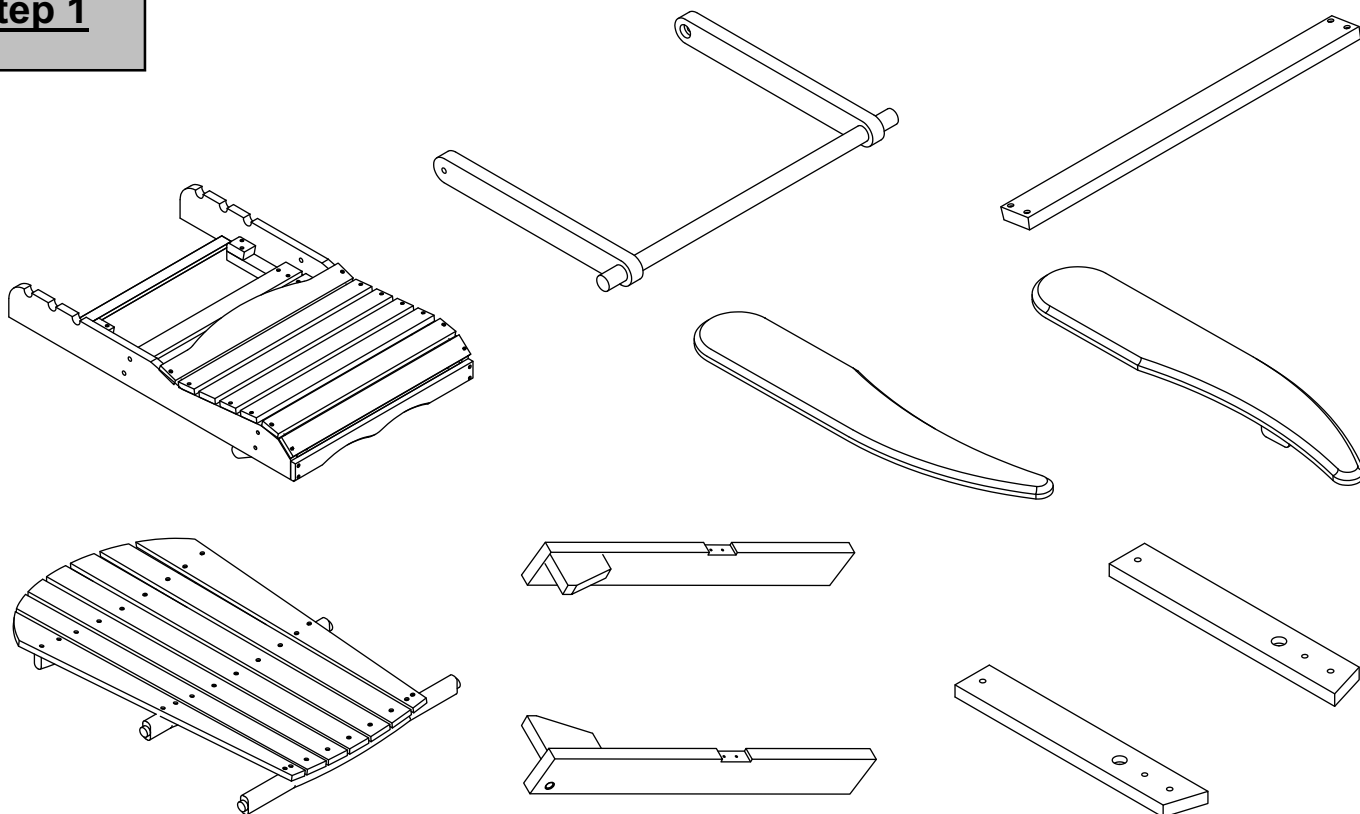

Unpack and place all parts on a clean, non-marring surface.

Step 2

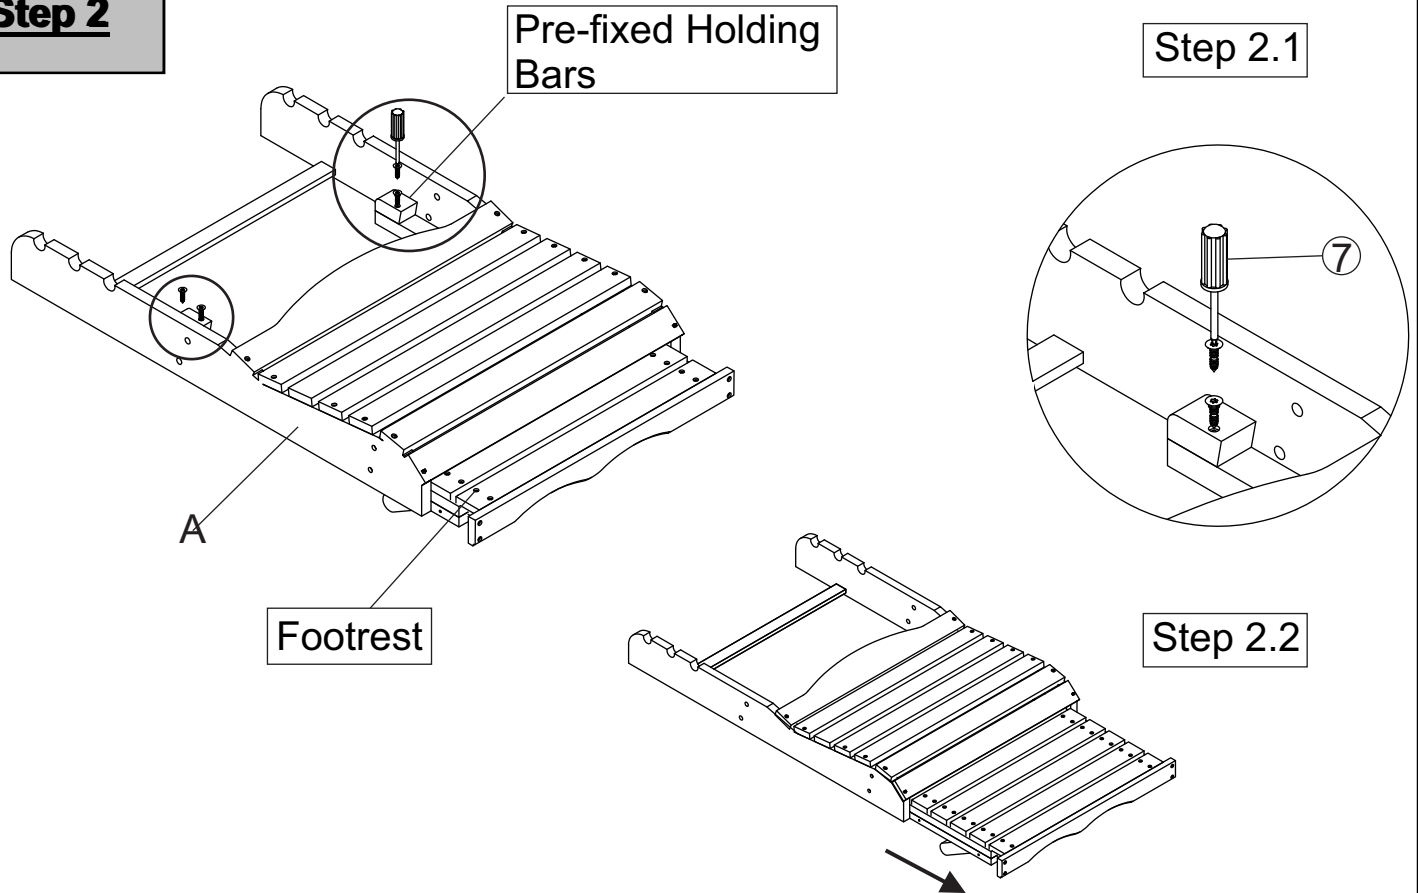


Place the Seat Panel with Footrest(A) onto a clean, non-marring surface.

2.1) Remove pre-fixed holding bars of the Footrest that are inside Seat Panel by using Screwdriver(⑦)

2.2) Pull the Footrest out of the Seat Panel as indicated by the arrow .


Note: Please keep the screws and holding bars and put aside for Step 8

Step 3

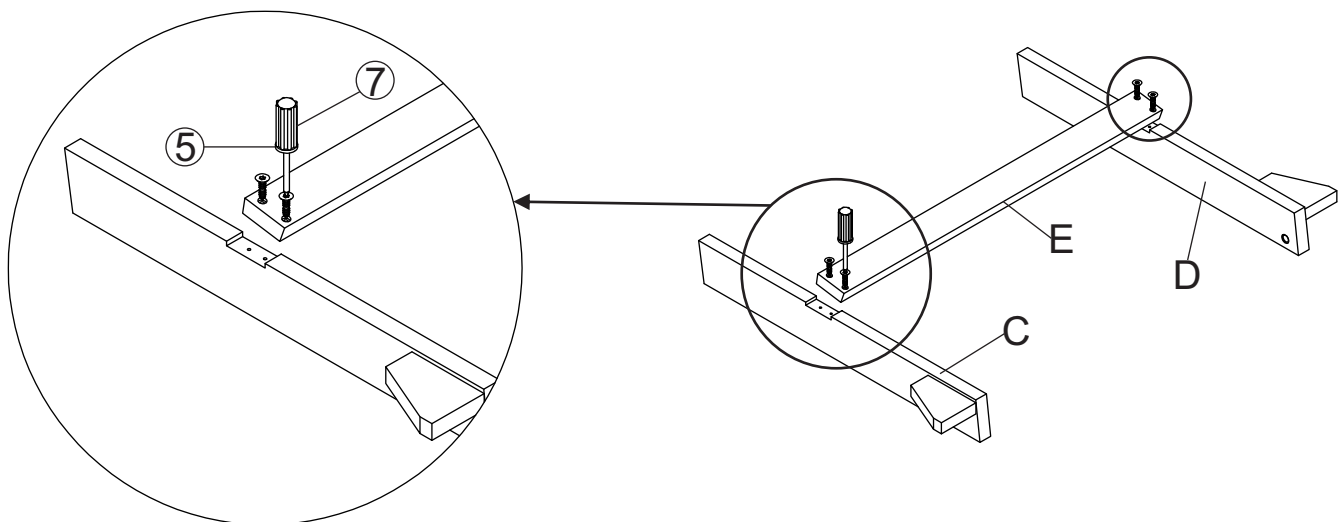


Attach Support Bar of Front Leg(E) to Left Front Leg(C) and Right Front Leg(D) using Screws(⑤) with Screwdriver(⑦).

Step 4

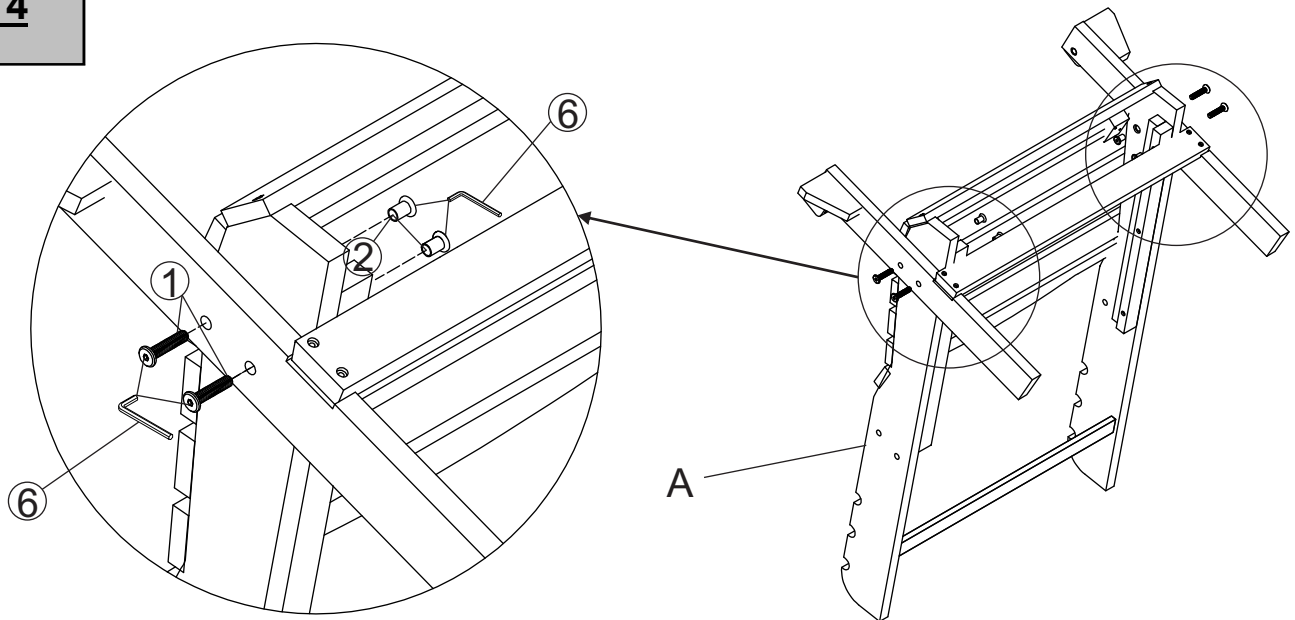

Stand the Seat Panel(A) vertically as shown in the picture.
With the assistance of an adult helper, secure Front Leg Frame from Step 3 to Seat Panel(A) using Bolts(①), and Sleeve Nuts(②) with Allen Keys(⑥).
Do not fully tighten the Bolts.

Step 5

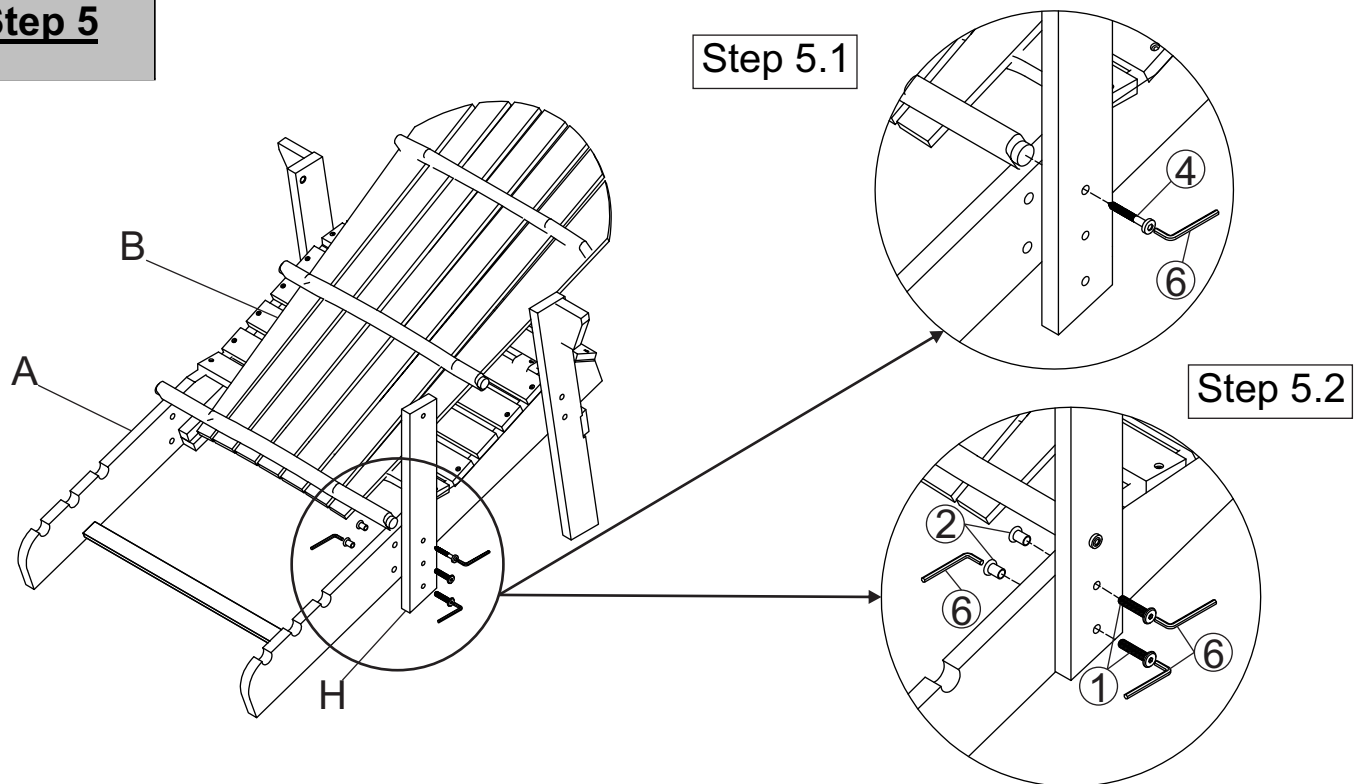

Place the Backrest(B) onto Seat Panel(A) as shown in the picture.


5.1) Secure Support Bar of Left Armrest(H) to Backrest(B) using Short Screw(④) with Allen Key(⑦).

5.2) Secure Support Bar of Left Armrest(H) to Seat Panel(A) using Bolts(①), and Sleeve Nuts(②) with Allen Keys(⑥).

Do not fully tighten Bolts and Screws.


Repeat the same process with the Support Bar of Right Armrest(I).

Step 6

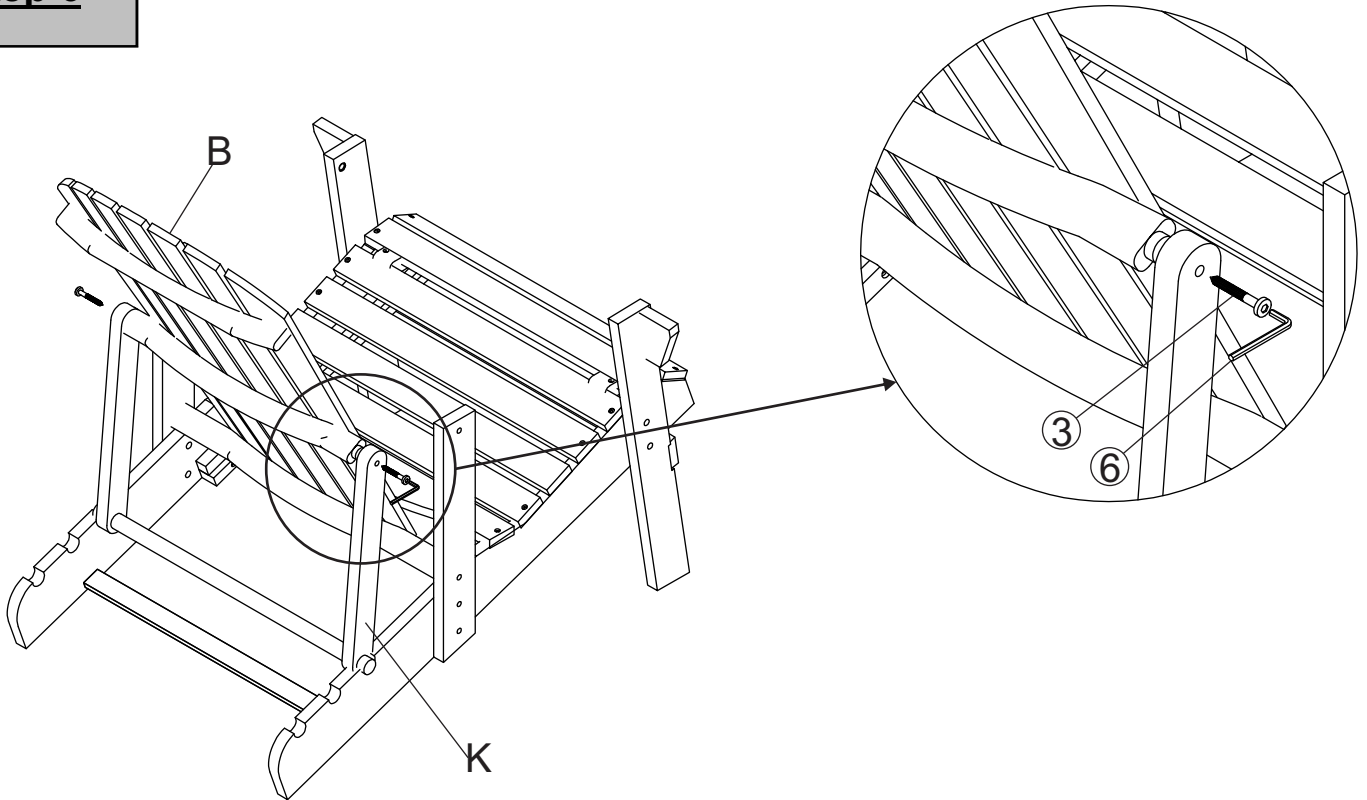


Position housing of Recliner(K) into oval mortise of Backrest(B).
Secure Recliner(K) to Backrest(B) using Long Screws(③) with Allen Key(⑥)
Do not fully tighten the Screws.

Step 7

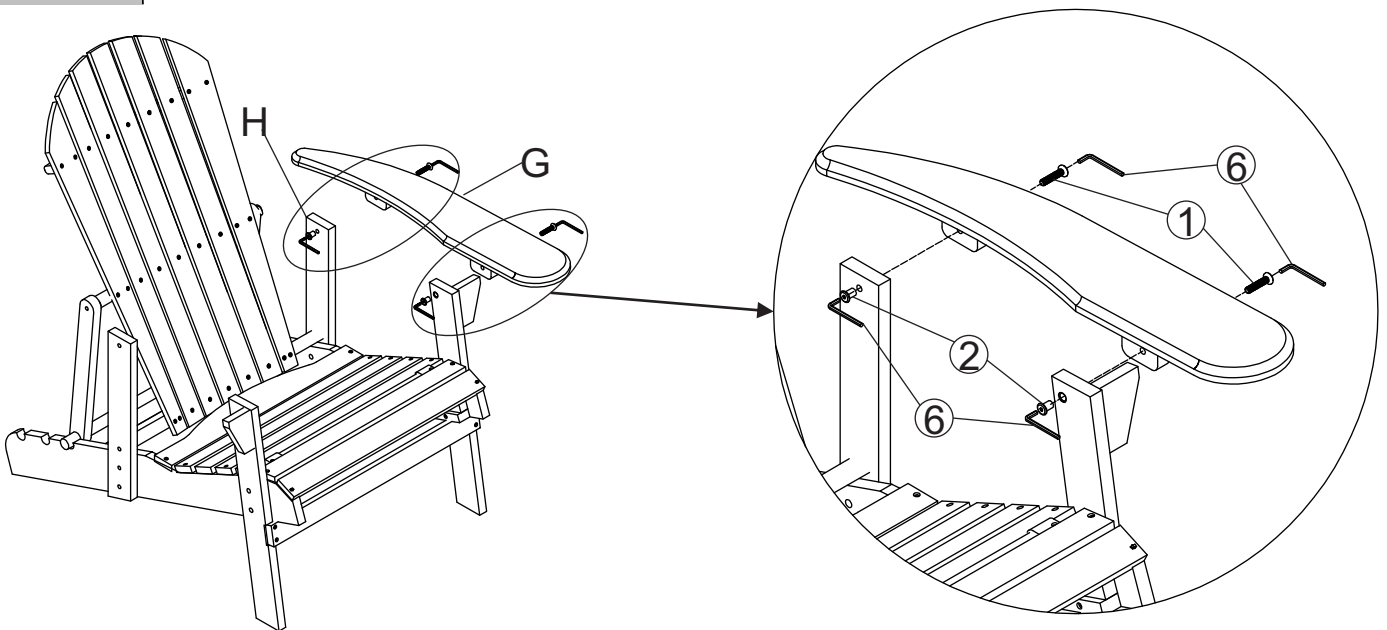


Attach Right Armrest(G) to Left Front Leg(C) and Support Bar of Left Armrest(H)
using Bolts(①), and Sleeve Nuts(②) with Allen Keys(⑥).
Do not fully tighten the Bolts.
Repeat the same process with Left Armrest(F).

Step 8

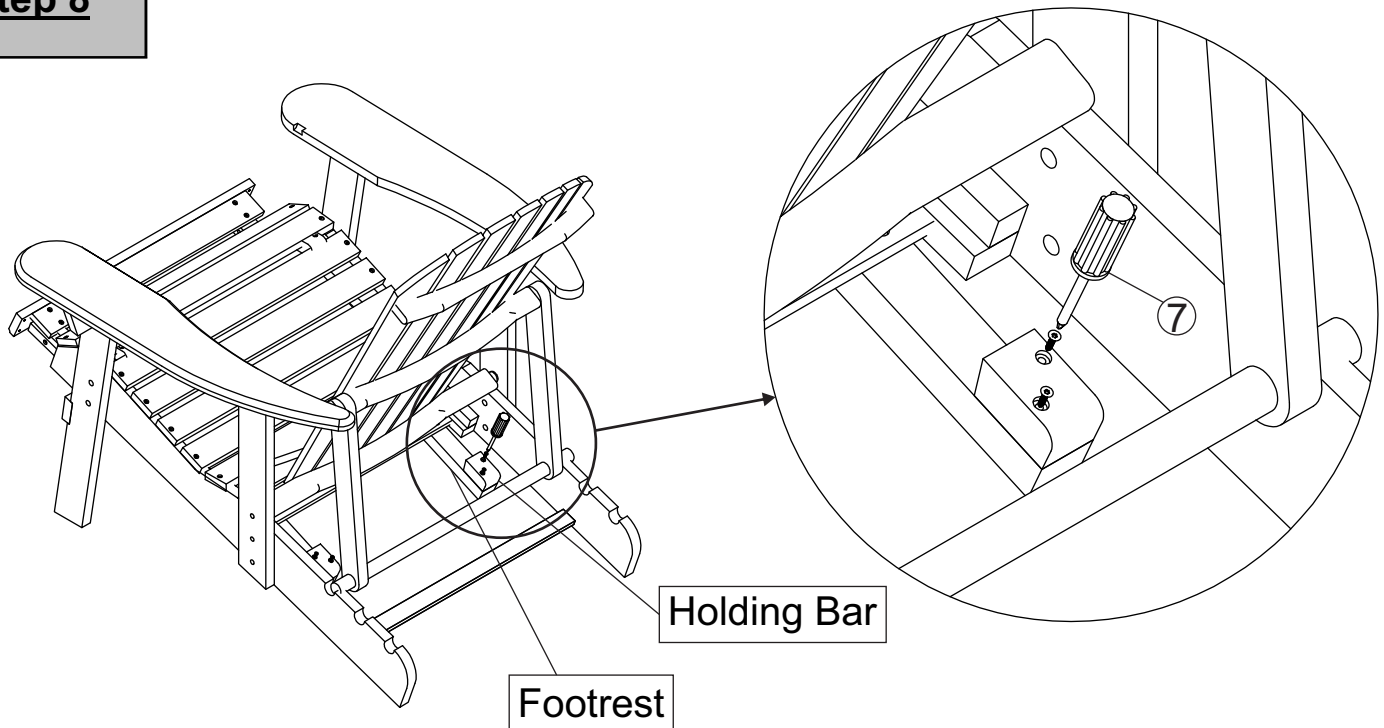

Reattach holding bars and screws from Step 2 to Footrest using Screwdriver(⑦). The holding bars are to prevent the Footrest from falling out of the Seat Panel. **In a sequential manner, tighten all Bolts and Screws at all joints until fully locked into position.**

Step 9

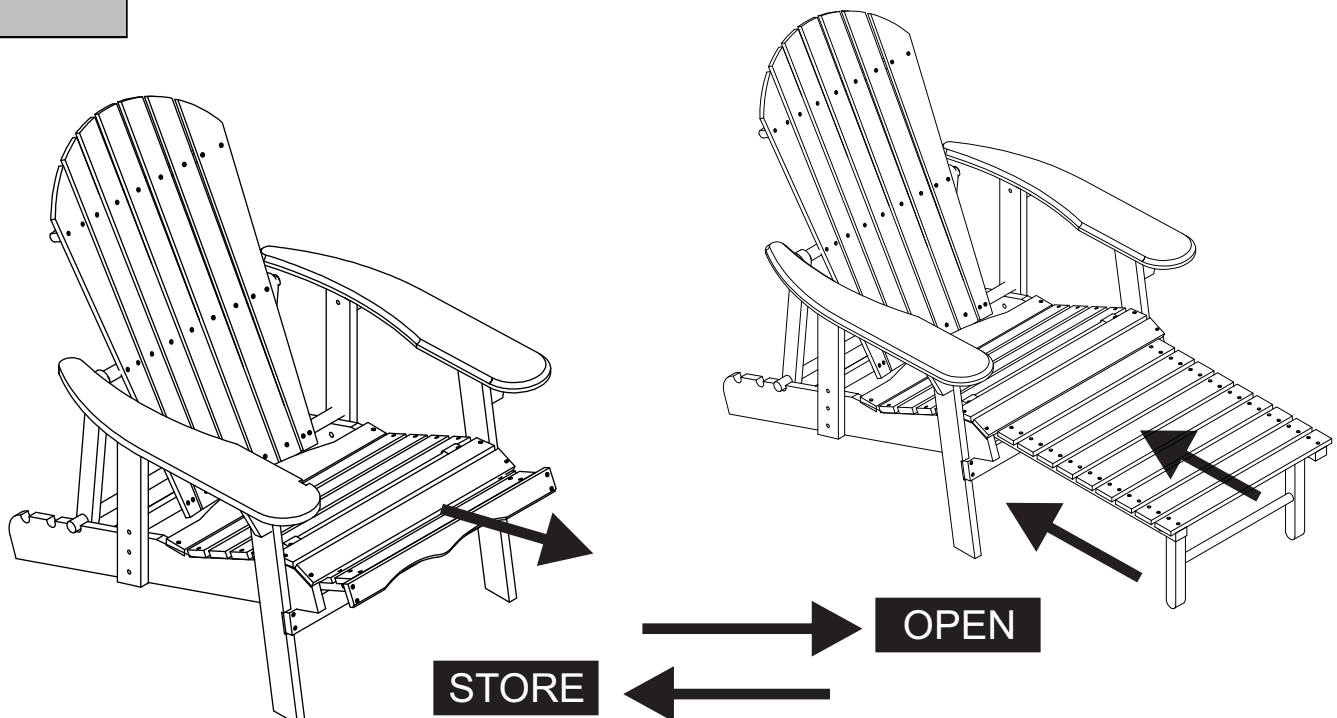

Your Reclining Adirondack is ready for use.

This Adirondack can only be used on a flat, level surface.

The Footrest can be stored under the Seat Panel when not in use.

To Open, by hand, pull the Footrest outward and unfold the Footrest's Leg

To Store, by hand, fold the Footrest's Leg and push Footrest into under the Seat Panel

Care & Maintenance

-   ● Do not put hot items directly on furniture surface
 -   ● Do not clean furniture with harsh cleansers or polish.
 -   ● To obtain the longest lifespan of your outdoor products, minimizing exposure to direct sunlight is recommended.
 -   ● Children should not climb or jump on the furniture.
 -   ● Do not write on furniture without a padded barrier to protect the surface.
 -   ● To obtain the longest lifespan of your outdoor products, avoid extended and lengthy exposure to rain, snow, and direct sunshine. Whenever possible cover the product and /or place under patio or awnings.
 -   ● Not for commercial use. For residential use only .
 -   ● Stains may be removed with mild soap solution and damp cloth.
-
-   ● Dust and pick-up spills using a clean, non-colored, lint-free cloth .

Questions & Answers about Proposition 65

- What is Proposition 65?

Proposition 65 requires businesses to provide warnings to Californians about significant exposures to chemicals that cause cancer, birth defects or other reproductive harm. These chemicals can be in the products that Californians purchase, in their homes or workplaces, or that are released into the environment. By requiring that this information be provided, Proposition 65 enables Californians to make informed decisions about their exposures to these chemicals.

Proposition 65 also prohibits California businesses from knowingly discharging significant amounts of listed chemicals into sources of drinking water.

Proposition 65 requires California to publish a list of chemicals known to cause cancer, birth defects or other reproductive harm. This list, which must be updated at least once a year, has grown to include approximately 900 chemicals since it was first published in 1987.

- What types of chemicals are on the Proposition 65 list?

The list contains a wide range of naturally occurring and synthetic chemicals that include additives or ingredients in pesticides, common household products, food, drugs, dyes, or solvents. Listed chemicals may also be used in manufacturing and construction, or they may be byproducts of chemical processes, such as motor vehicle exhaust.

- What does a warning mean?

If a warning is placed on a product label or posted or distributed at a workplace, a business, or in rental housing, the business issuing the warning is aware or believes that it is exposing individuals to one or more listed chemicals.

By law, a warning must be given for listed chemicals unless the exposure is low enough to pose no significant risk of cancer or is significantly below levels observed to cause birth defects or other reproductive harm.

- Where can I get more information on Proposition 65?

If you have specific questions on the administration or implementation of Proposition 65, you can contact OEHHA's Proposition 65 program at P65.Questions@oehha.ca.gov, or by phone at (916) 445-6900.