


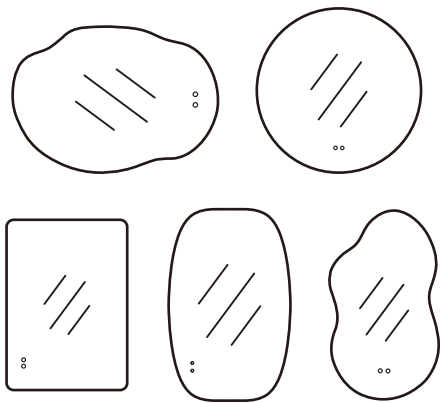

OPERATING MANUAL

BEDIENUNGSANLEITUNG
LED MIRROR

Before installation, please check to make sure these functions work properly:

Anti-fog Switch:



1. touch it to turn it on. The defogging will take effect.
2. within 10 minutes after it's turned on, so you can turn it on 10 minutes before taking a bath.

Light Dim Switch:



1. Short press this button to turn on - white light - warm light - warm white light - turn off the light.
2. Long-press this button to adjust the brightness of the light. Dimmable range 10%-100%.

PACKAGE CONTENTS:



Expansion screws * 3



Screws * 3



Cleaning cloth * 1



plug * 1

INSTALLATION TOOLS:



Electric rotary



Ruler



Hammer



Gloves




Screwdriver

SAFETY INSTRUCTIONS




1. Please read the instructions carefully before use.
2. Make sure the wall can bear the weight of the mirror.
3. Do not use ropes or chains to hang the product.
4. Before starting the electrical installation, the main power supply must be disconnected.
5. All electrical products should be installed by a qualified National Electrical Code (NEC) .
6. Before drilling, make sure there are no hidden electrical wires or pipes in the wall.
7. Keep your belongings away during the installation to avoid any damage.
8. Please note the following when modifying a wall switch:
This switch only provides power and cannot control the lights; light switching, three-color illumination, and brightness adjustment can only be achieved via the touch switch button.

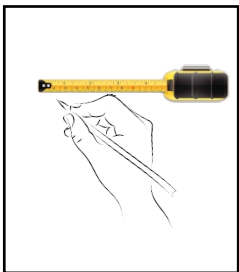


Step 1:
Use a ruler to draw a straight
line to keep the mirror level.



Step 2:
Drill two holes according to the
screws you received.

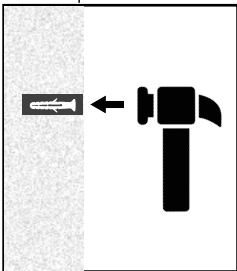


Step 3:
Use a hammer to hammer in
the expansion tube.

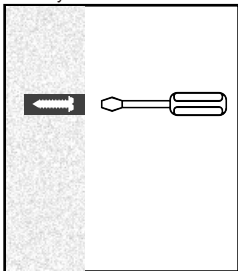

Step 4:
Screw the screws into the
expansion tube.



Vertical



Horizontal

Step 5:
Hang the mirror on the wall
screws.

- a. Wipe with a clean dry cloth before use.
- b. Check all screws and bolts for tightness every three months or as needed.
- c. Clean with glass cleaner or detergent.

How to clean



1. Vinegar water or glass cleaner



2. Wait a few seconds for the water to soften the stain



3. Microfiber cleaning cloth or newspaper



4. Let the glass sparkle!