

MASSAGE HEATING OFFICE CHAIR


ASSEMBLY & USER MANUAL




VIBRATION
MASSAGE



HEATING
FUNCTION

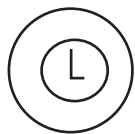


TIMER
FUNCTION

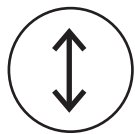

ADJUSTABLE
HEIGHT














TILT
FUNCTION

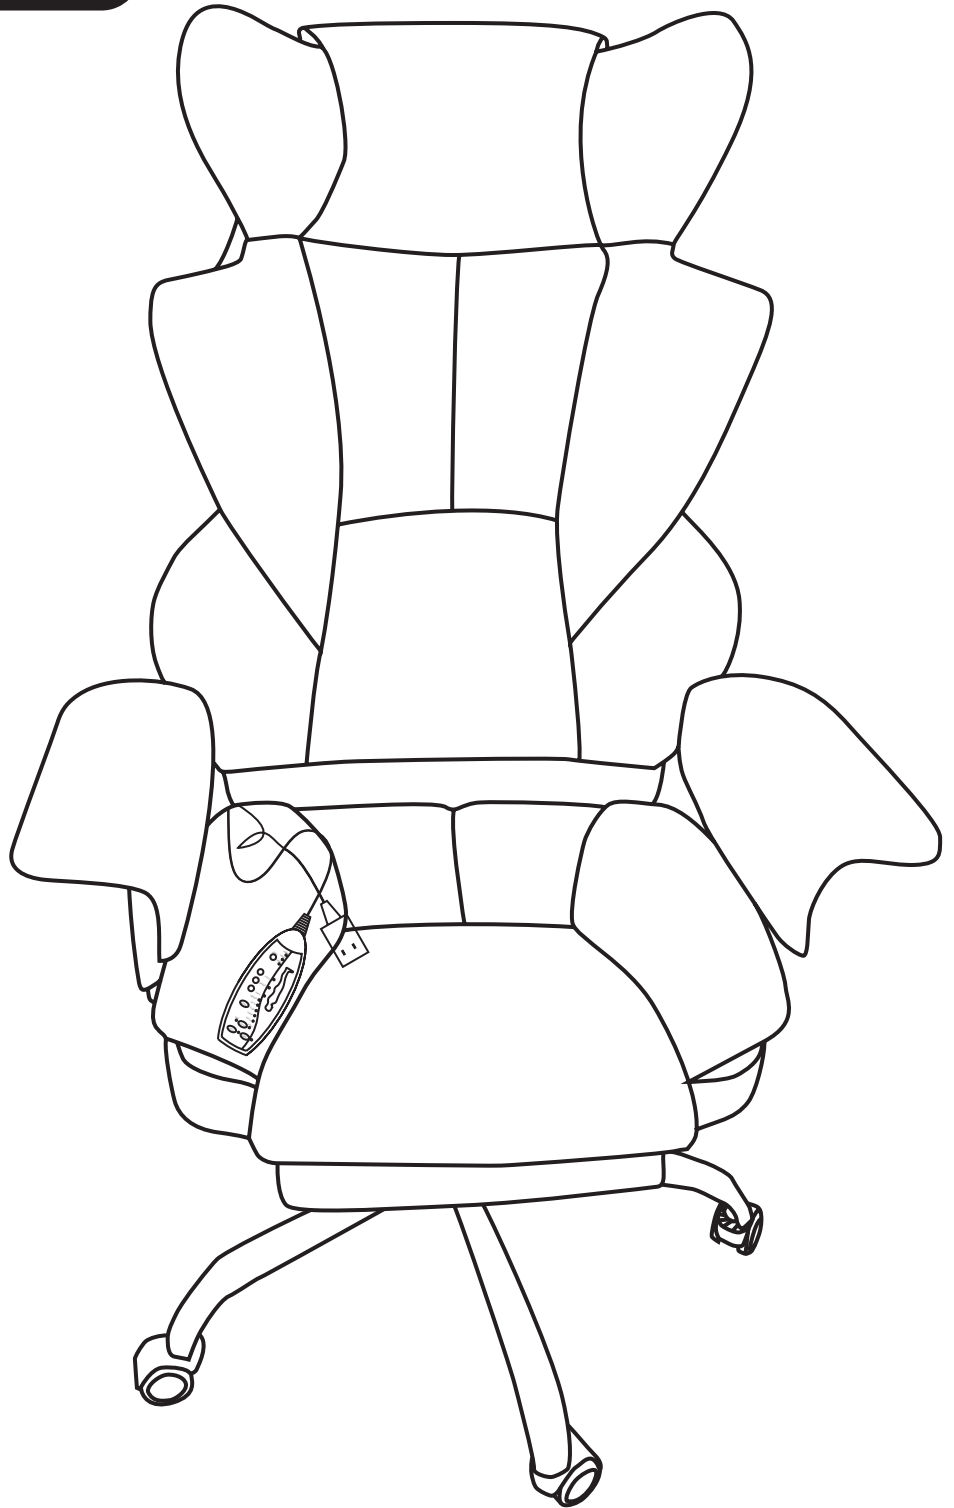


IMPORTANT: Read all instructions before assembly. Keep this manual for future reference.

PARTS LIST

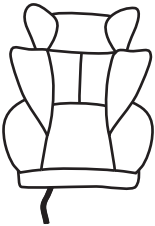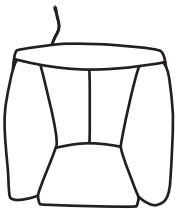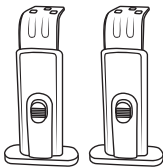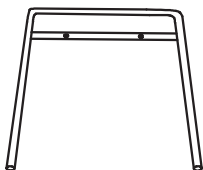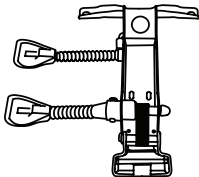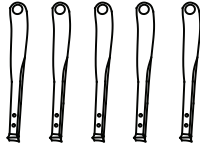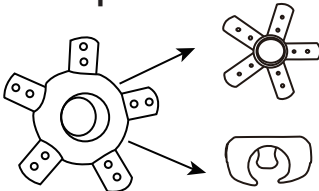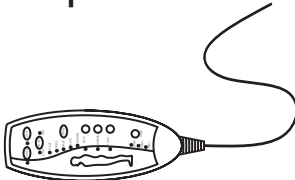A Backrest 1pc 	B Seat Cushion 1pc 	C Armrest 2pcs 	D Armrest 2pcs 
E Footstool 1pc 	F Mechanism 1pc 	G Gas Lift 1pc 	H Legs 5pcs 
I Base 1pc 	J Joint 2pcs 	K Footstool 1pc 	L Casters 5pcs 
U Backrest 1pc 	V Controller 1pc 	T Wrench 1pc 	

HARDWARE LIST

M Bolts  M6*10mm 10PCS	N Bolts  M6*16mm 4PCS	O Bolts  M6*20mm 10PCS	P Bolts  M6*30mm 2PCS
Q Bolts  M8*20mm 3PCS	R Bolts  M5*8mm 2PCS	S Bolts  M6*25mm 8PCS	

ASSEMBLY STEPS

1 Install Base



Remove the Base Cover, turn the Base (I) upside down, insert the Legs (H) into the Base (I) one by one, align them with the holes, and use a Wrench (T) to tighten the Bolts (M) to secure them.

H x 5

I x 1

M x 10

T x 1

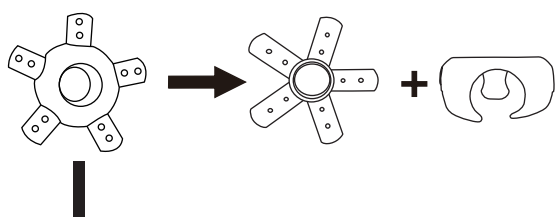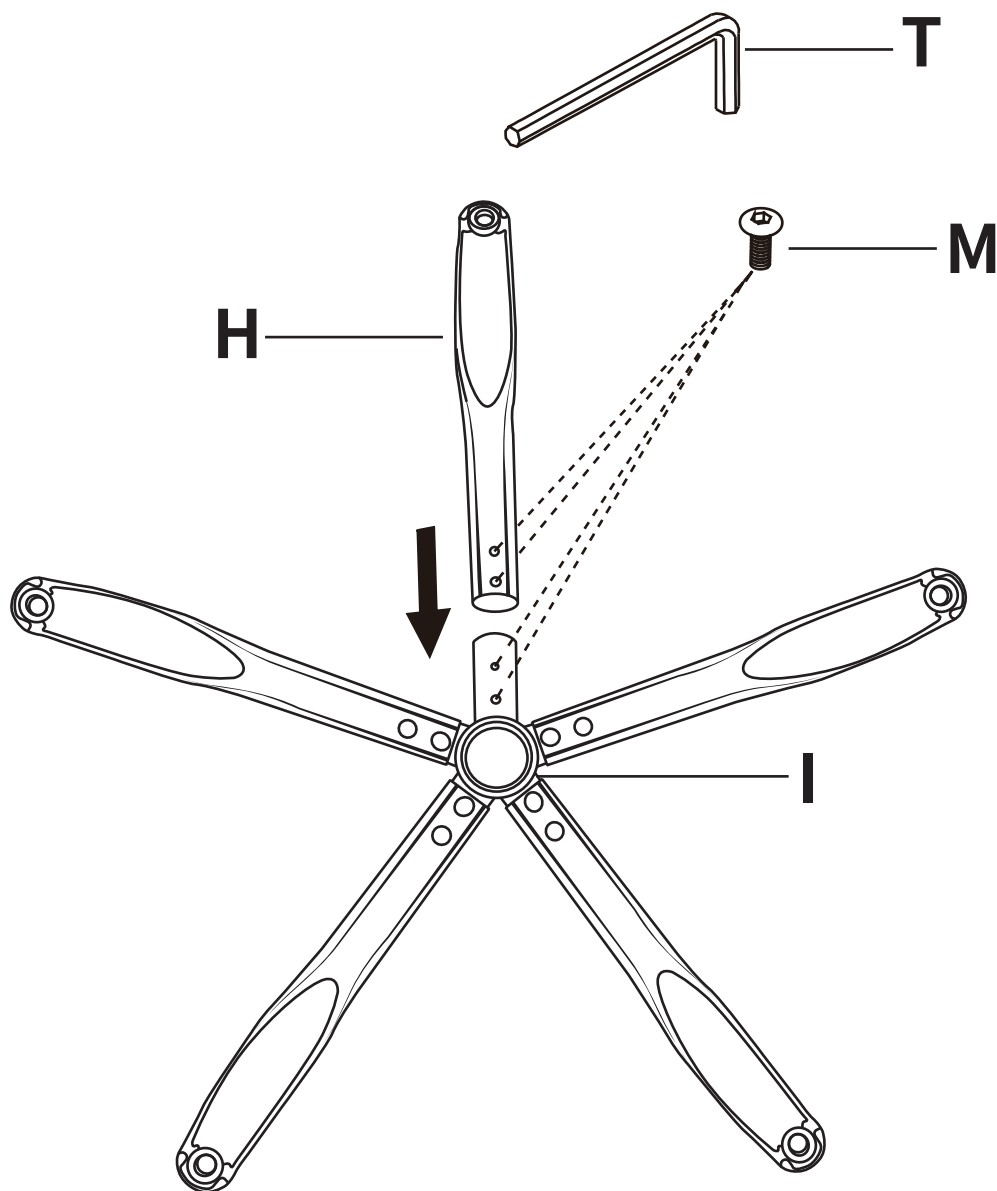


ASSEMBLY STEPS

2 Install Gas Lift & Casters

Press the Casters (L) into the holes at the ends of the Legs (H), and secure the Base Cover. Insert the Gas Lift (G) into the center hole of the Base (I).

G x 1

L x 5

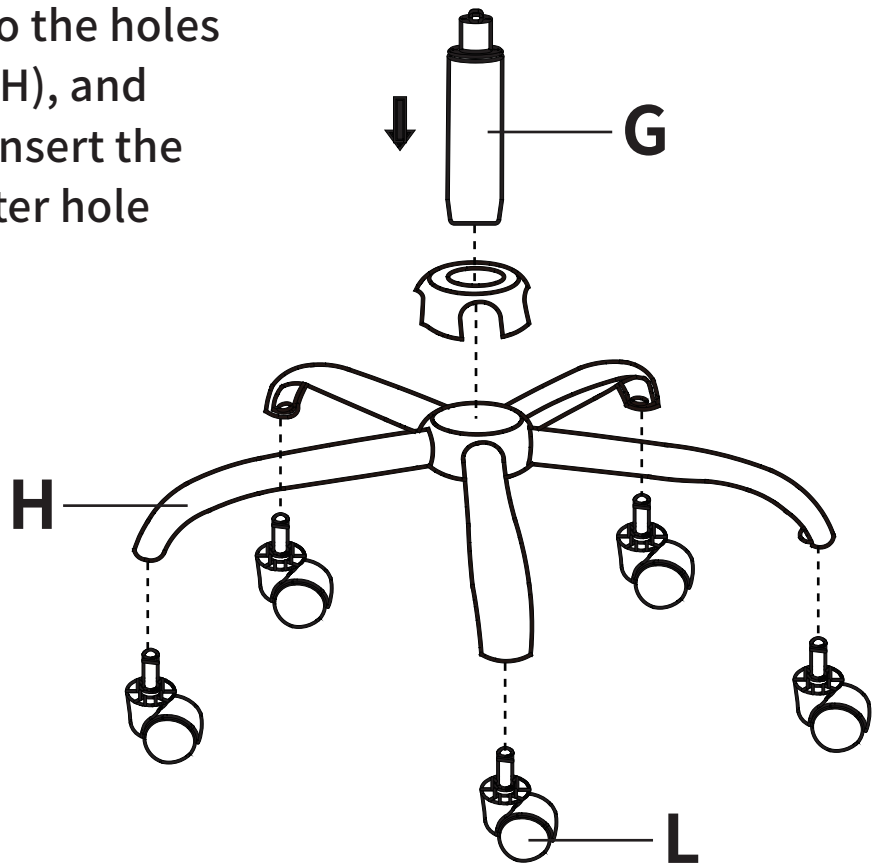

3 Install Footrest


Align the Footrest Support Bracket (E) with the holes in the Footrest (K), and use a Wrench (T) to securely tighten the Bolt (P).

E x 1

K x 1

P x 2

T x 1

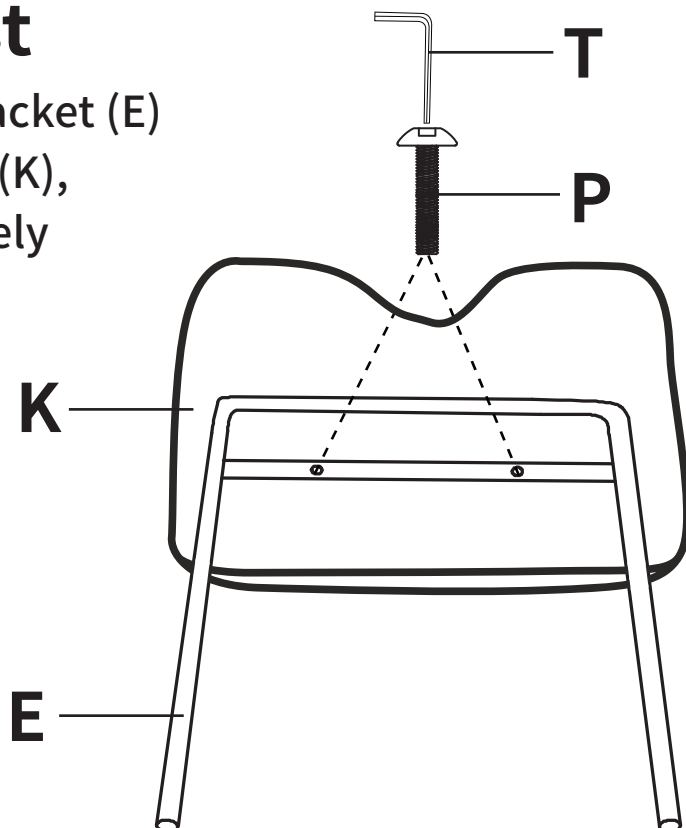

ASSEMBLY STEPS


4 Install Armrests

Align the Armrest Bracket (C) with the holes in the Armrest Pad (D), then insert the Bolts (N). Be careful not to install them the wrong way. The same applies to the other armrest.

C x 2

D x 2

N x 4

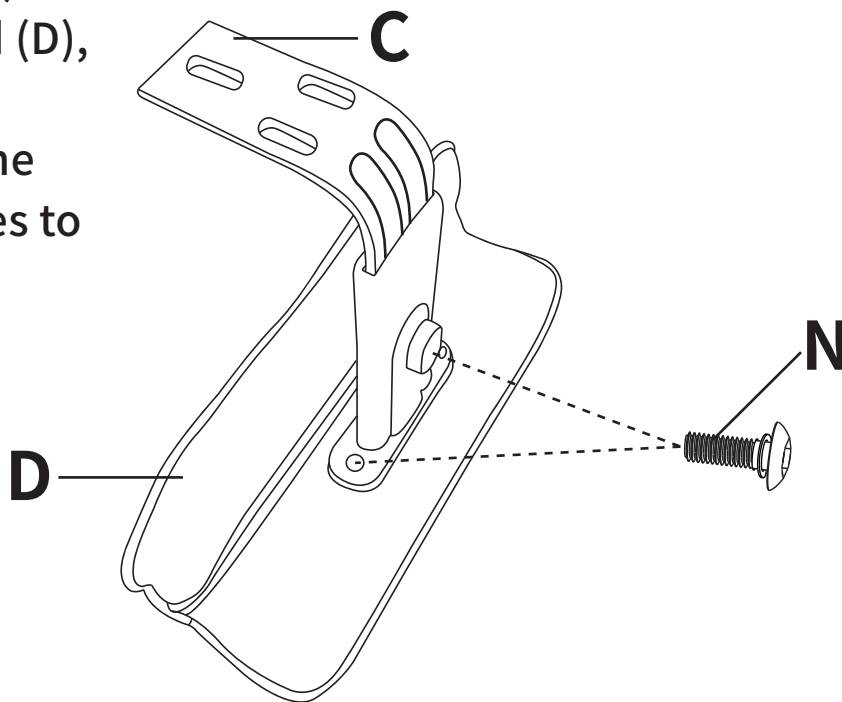

5 Install Joint

Turn the Seat Cushion (B) upside down and secure the Joint (J) with Bolts (S). Align the Armrest (C) with the holes and insert Bolts (O); once aligned, tighten them.

B x 1


C x 2

J x 2

O x 6

S x 4

T x 1

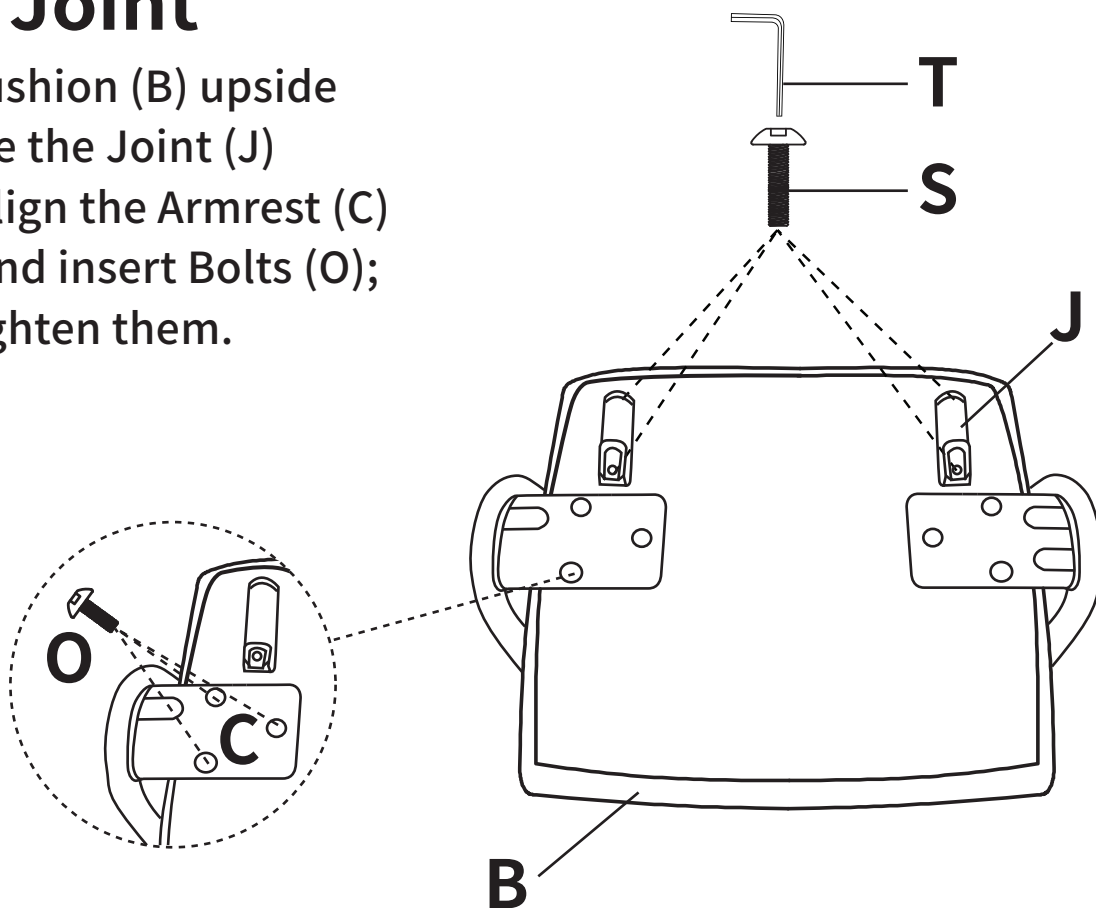


ASSEMBLY STEPS

6 Secure Footrest

Insert the Footrest into the Joint (J). Tighten Bolt (R) through the holes in the Footrest Support Bracket to secure it.

R x 2

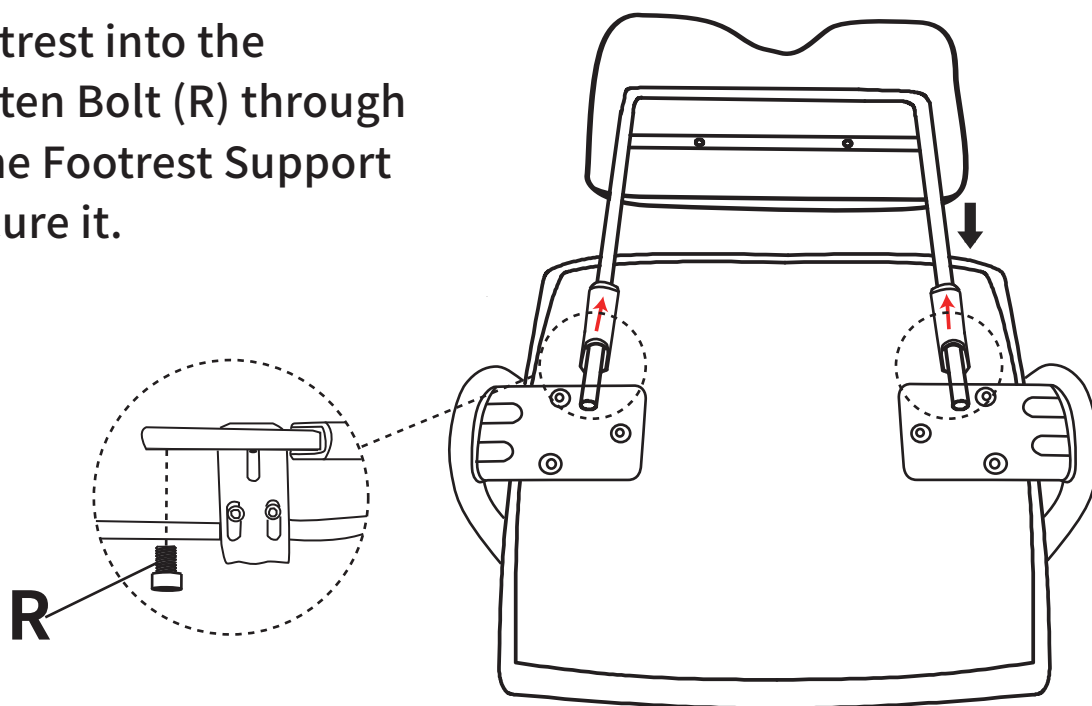


7 Install Mechanism

Align the Mechanism (F) with the holes on the bottom of the Seat Cushion (B), and secure it with Bolts (O).

F x 1

O x 4

T x 1

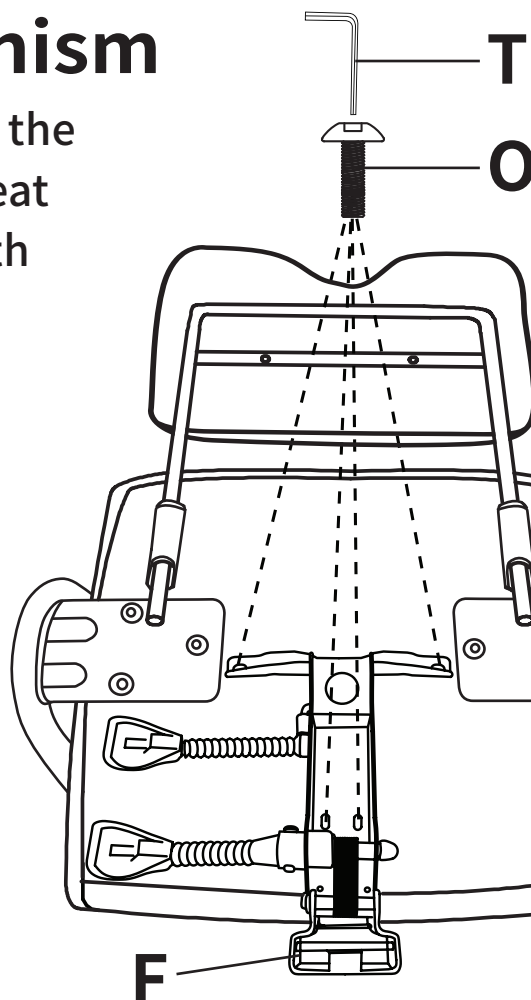

ASSEMBLY STEPS


8 Install Joint

Open the cover on the Backrest (A), align the Backrest Bracket (U) with the 4 holes, and secure it by tightening the Bolts (S).

A x 1

S x 4

U x 1

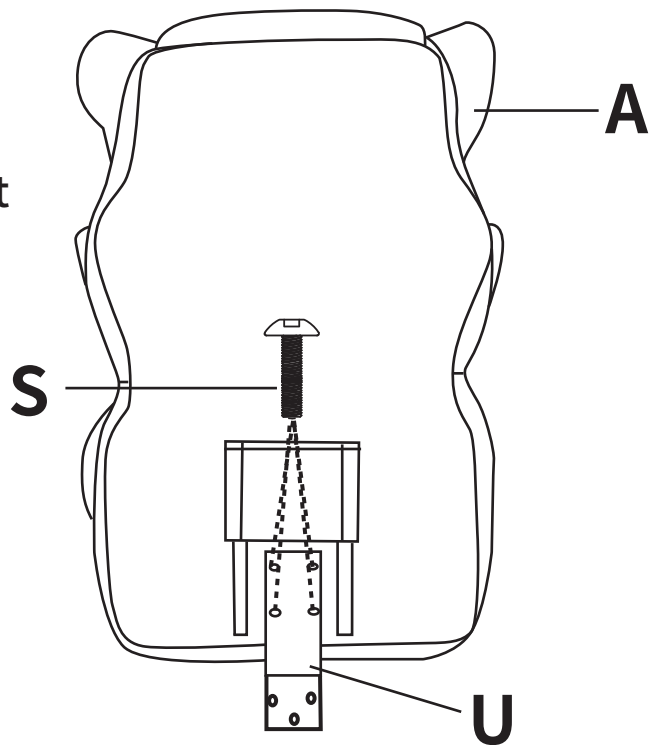

9 Install Backrest


Align the Backrest Bracket (U) with the mounting points on the Seat Cushion (B), and evenly tighten the Bolts (Q). Finally, insert the Gas Lift (G) into the center hole of the Mechanism (F).

*Two people are recommended for this task.


Q x 3

F x 1

U x 1

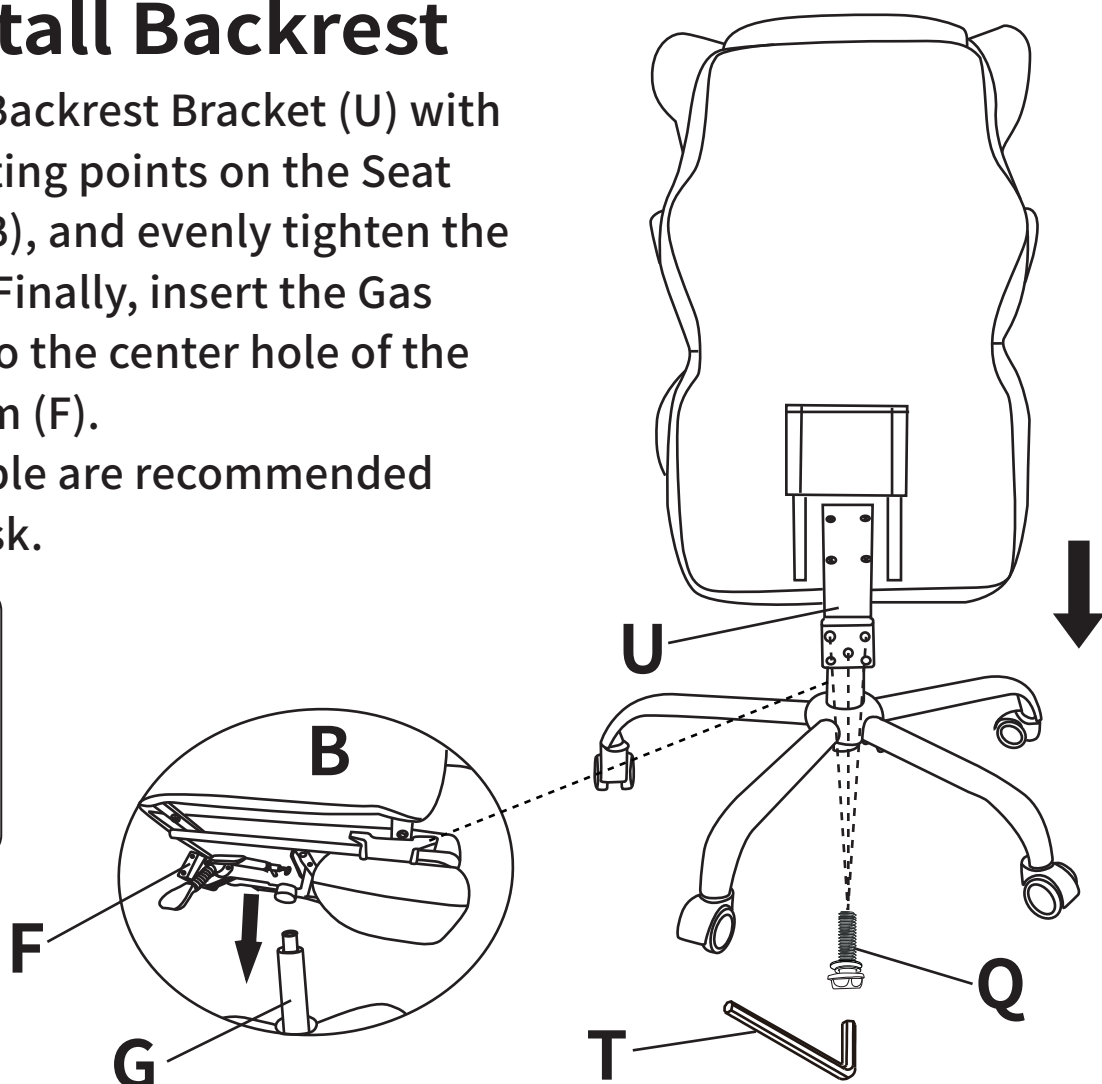

MASSAGE & HEATING CONTROLLER

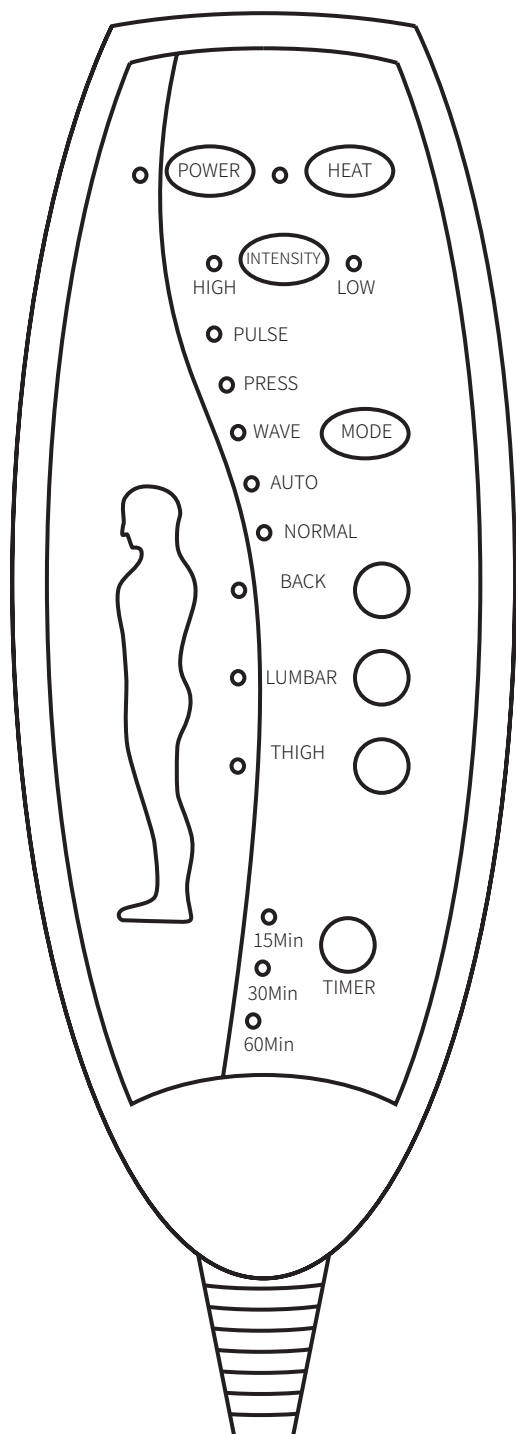

POWER

Press to turn massage and heating functions ON/OFF.

HEAT

Press to turn heating function ON/OFF.

MASSAGE INTENSITY

Press to adjust intensity level.(High - Low)

MASSAGE MODE

Press to cycle through modes.
(PULSE - PRESS - WAVE - AUTO - NORMAL)

MASSAGE AREA

Press to select massage area.
(Back -> Lumbar - Thigh)

TIMER

Press to set auto shut-off timer.
(15 min - 30 min - 60 min)

IMPORTANT SAFETY INSTRUCTIONS

WARNING: Read all safety instructions before using the massage and heating functions.

- Do not use the heating function while asleep.
- Do not cover the heating zone during operation.
- Do not use the heating function if the power cord or controller is damaged.
- Keep all liquids away from the controller and electrical connections.
- Always unplug the power adapter before cleaning or servicing the chair.
- Do not modify or disassemble any electrical components of the chair.
- Stop using the massage or heating function immediately if you experience any discomfort.
- Allow the chair to cool down before storage or extended periods of non use.
- This product is intended for household and office use only.

CARE & MAINTENANCE

- Do not exceed the maximum weight capacity: 330 lbs (149 kg).
- Wipe the chair with a soft, damp cloth.
- Do not use harsh chemicals or abrasive cleaning agents.
- Keep the controller and power adapter away from water and damp environments.
- Regularly inspect and retighten screws to ensure structural stability.
- Store the chair in a cool, dry location.
- Please note that the new product odour may take time to dissipate.

CUSTOMER SUPPORT

Should you have any inquiries, require assistance, or need after sales support, please contact our Customer Service team via email. Kindly provide your order number and a detailed description of the issue, and we will respond with thorough troubleshooting guidance.

Thank you for choosing our product!