

Assembly Instruction


Caution : You must read this before you proceed

Care & Maintenance




-   • Not for commercial use. For residential use only.
-   • Furniture may scratch floort. We recommend using furniture to protect you floors.
-   • Do not put hot items directly on furniture surface.
-   • Do not place furniture with harsh creansers or polish.
-   • Do not place furniture under direct sunlight.
-   • Do not place on furniture near heating or cooling vents.
-   • Do not write on furniture whhout a padded barrier to protect the suface.
-   • Do not plase furniture outside. For indoor use only.
-   • Stains may be remove whith mild soap solution and damp cloth.
-   • Childeren should not clim or jup+mp on the furniture.
-   • Dust and pick-up spills using a clean, non-colored, lint-free cloth.




Prease look in boxes for hardware packs and legs

BAR STOOL

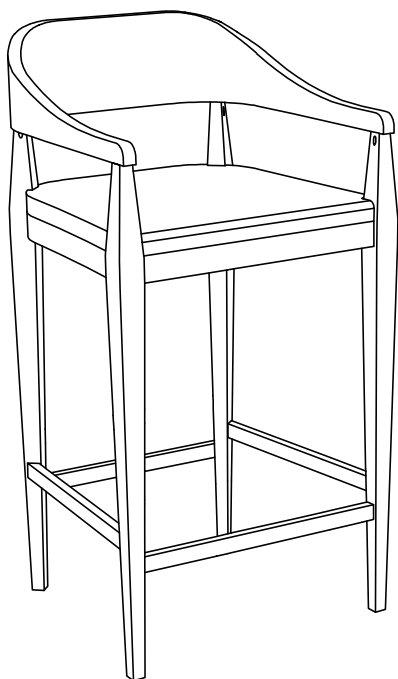


Parts List

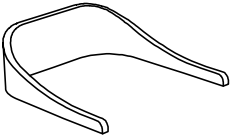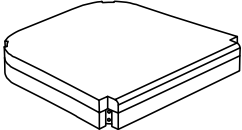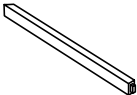Label	Picture	Description	QTY
A		Backrest	1
B		Left rear leg	1
C		Right rear leg	1
D		Rear longitudinal brace	1
E		Seat cushion	1
F		Left longitudinal brace	1


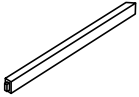
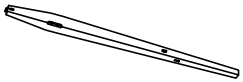
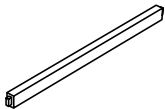
G		Right longitudinal brace	1
H		Left front leg	1
I		Right front leg	1
J		Front longitudinal brace	1

Hardware

Label	Picture	Description	QTY
①		Bolt (M6x40mm)	5
②		Bolt (M6x50mm)	5
③		Spring Washer (12mm)	11
④		Flat Washer (16 mm)	11
⑤		Screw (M4x30mm)	13
⑥		Allen Wrench (M4)	1
⑦		Screwdriver	1


Assembly Preparation

Before
Beginning
Assembly:

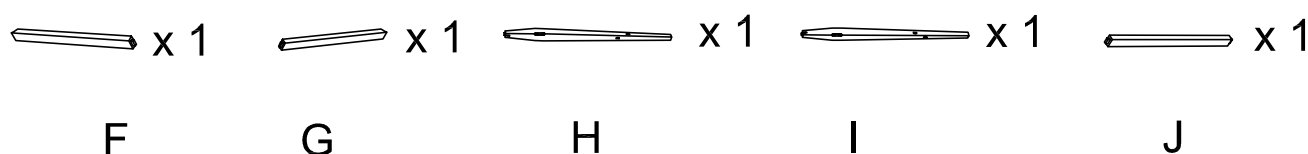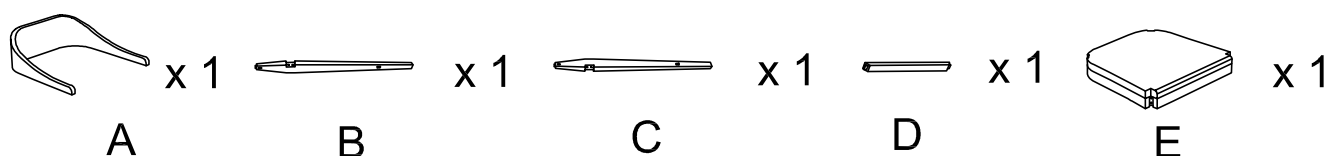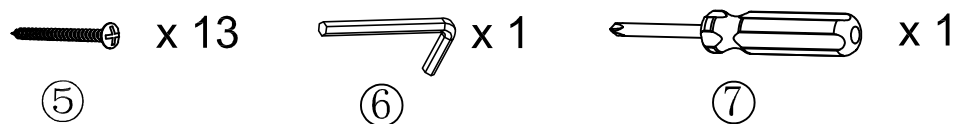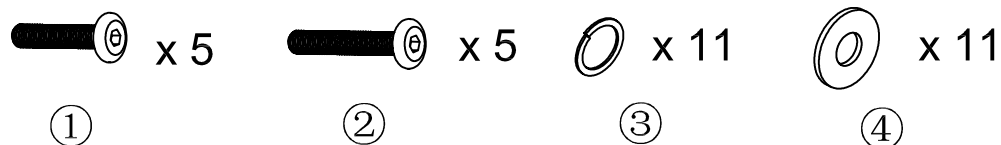

Assembly Steps

overview

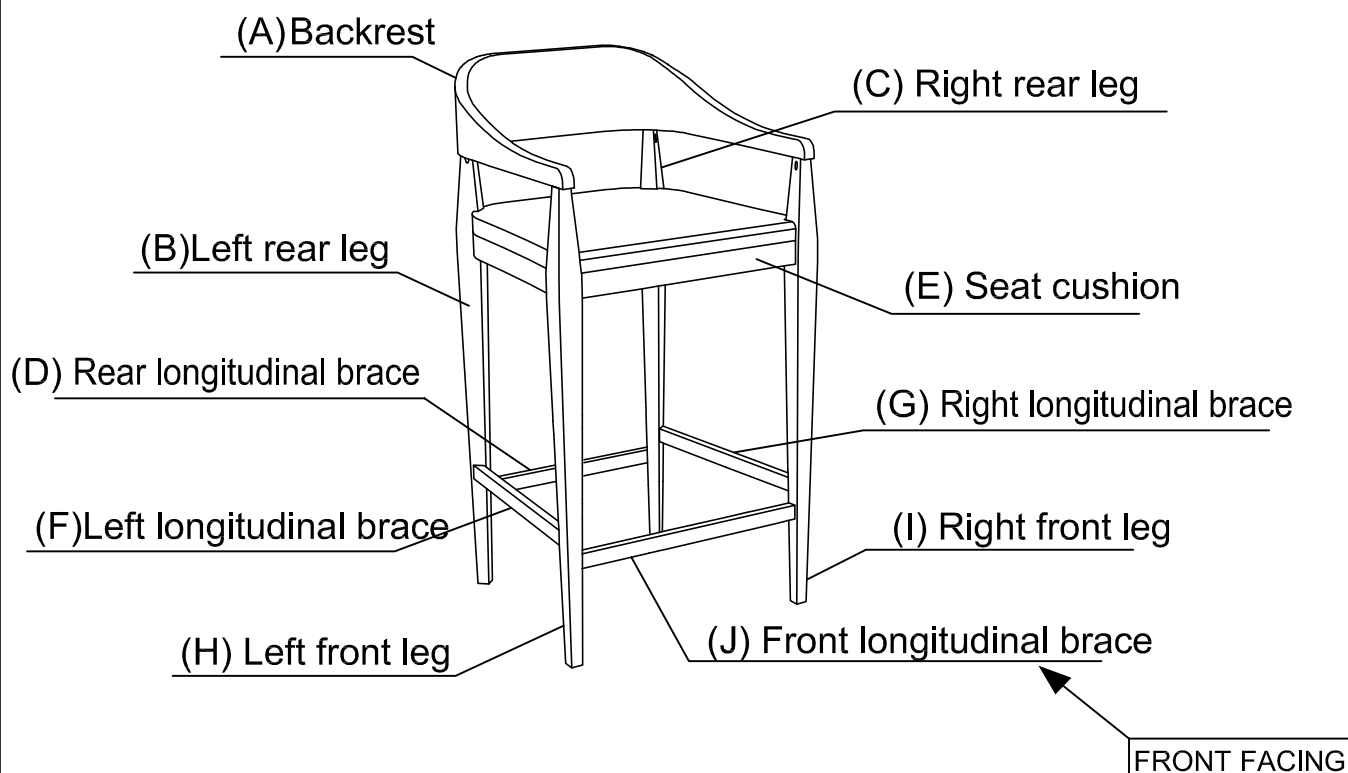


This Chair has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Chair parts, the above picture is provided to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.


Step 1: Attach Rear longitudinal brace (D) to both Left rear leg (B) and Right rear leg (C) by using Screw (5) & Screwdriver (7) as shown below.

Attach Backrest (A) to both Left rear leg (B) and Right rear leg (C) by using Screw (5) & Screwdriver (7) as shown below.

Do not fully tighten the Bolts.

Step 1

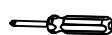⑤ x 4	
⑦ x 1	

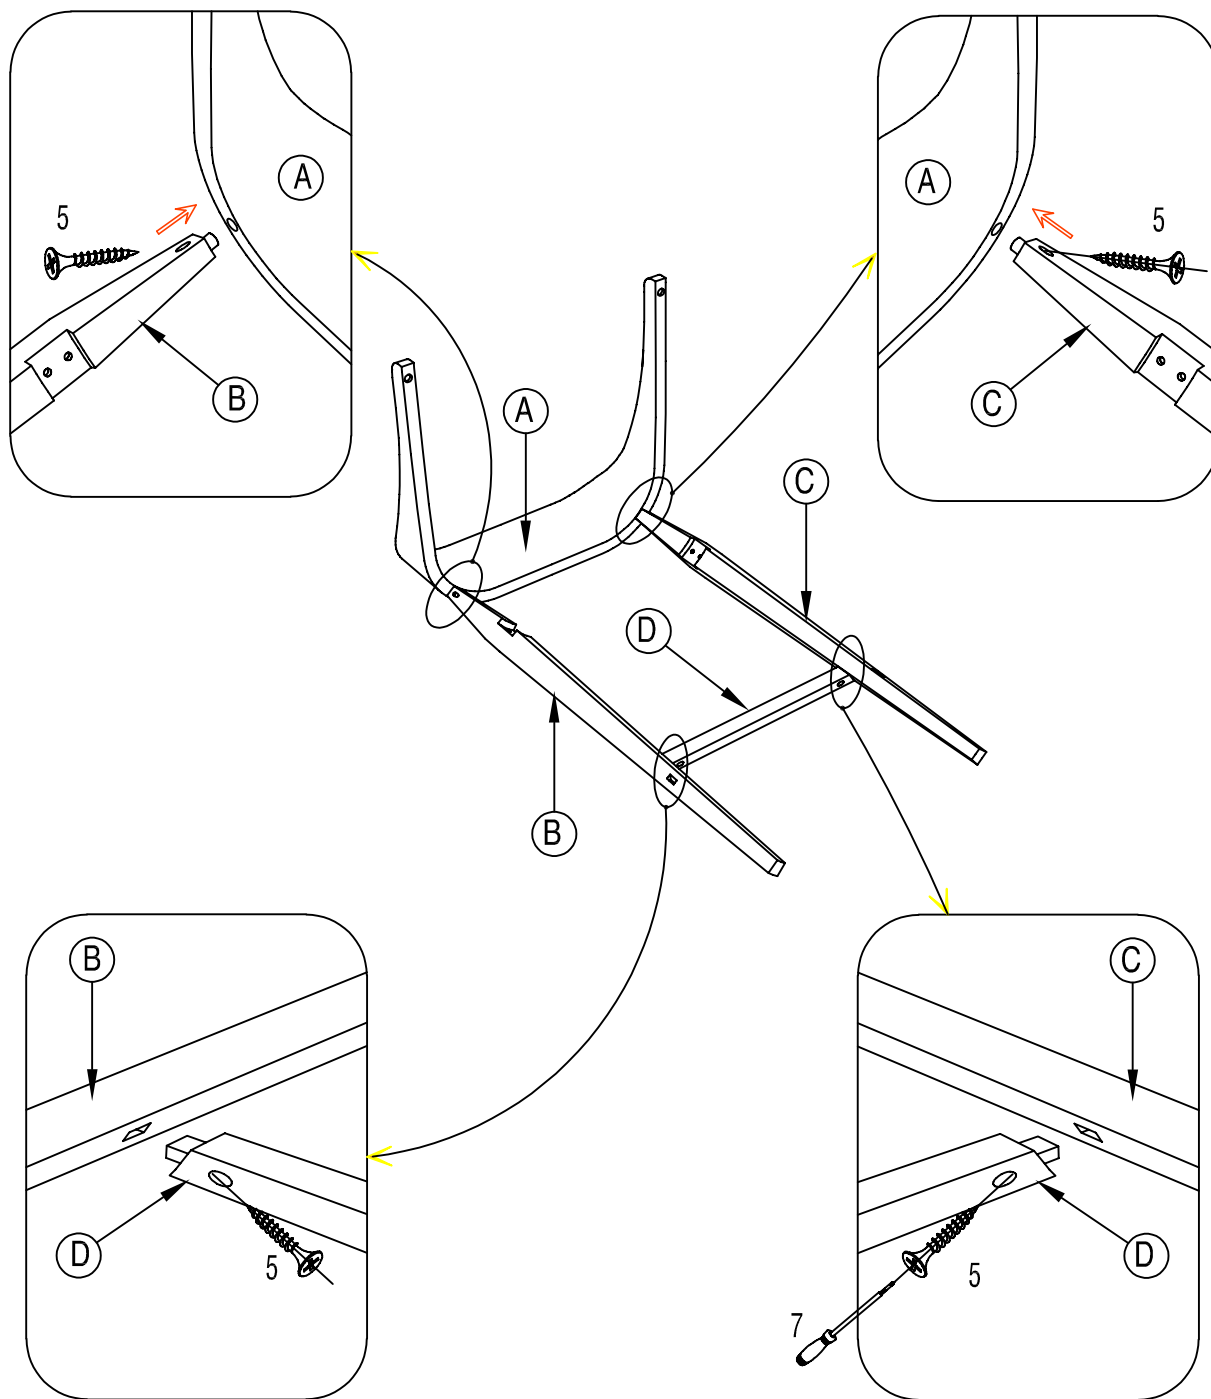



Step 2: Align Seat cushion (E) to both Left rear leg (B) and Right rear leg (C) by using Bolt (1), Spring washer (3), Flat washer (4) & Allen Wrench (6) as shown below.

Attach Left longitudinal brace (F) to Left rear leg (B) and Right longitudinal brace (G) to Right rear leg (C) matching the holes as illustrated by using Screw (5) & Screwdriver (7).

Do not fully tighten the Bolts.

Step 2

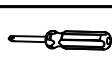① x 4		⑤ x 2	
③ x 4		⑥ x 1	
④ x 4		⑦ x 1	

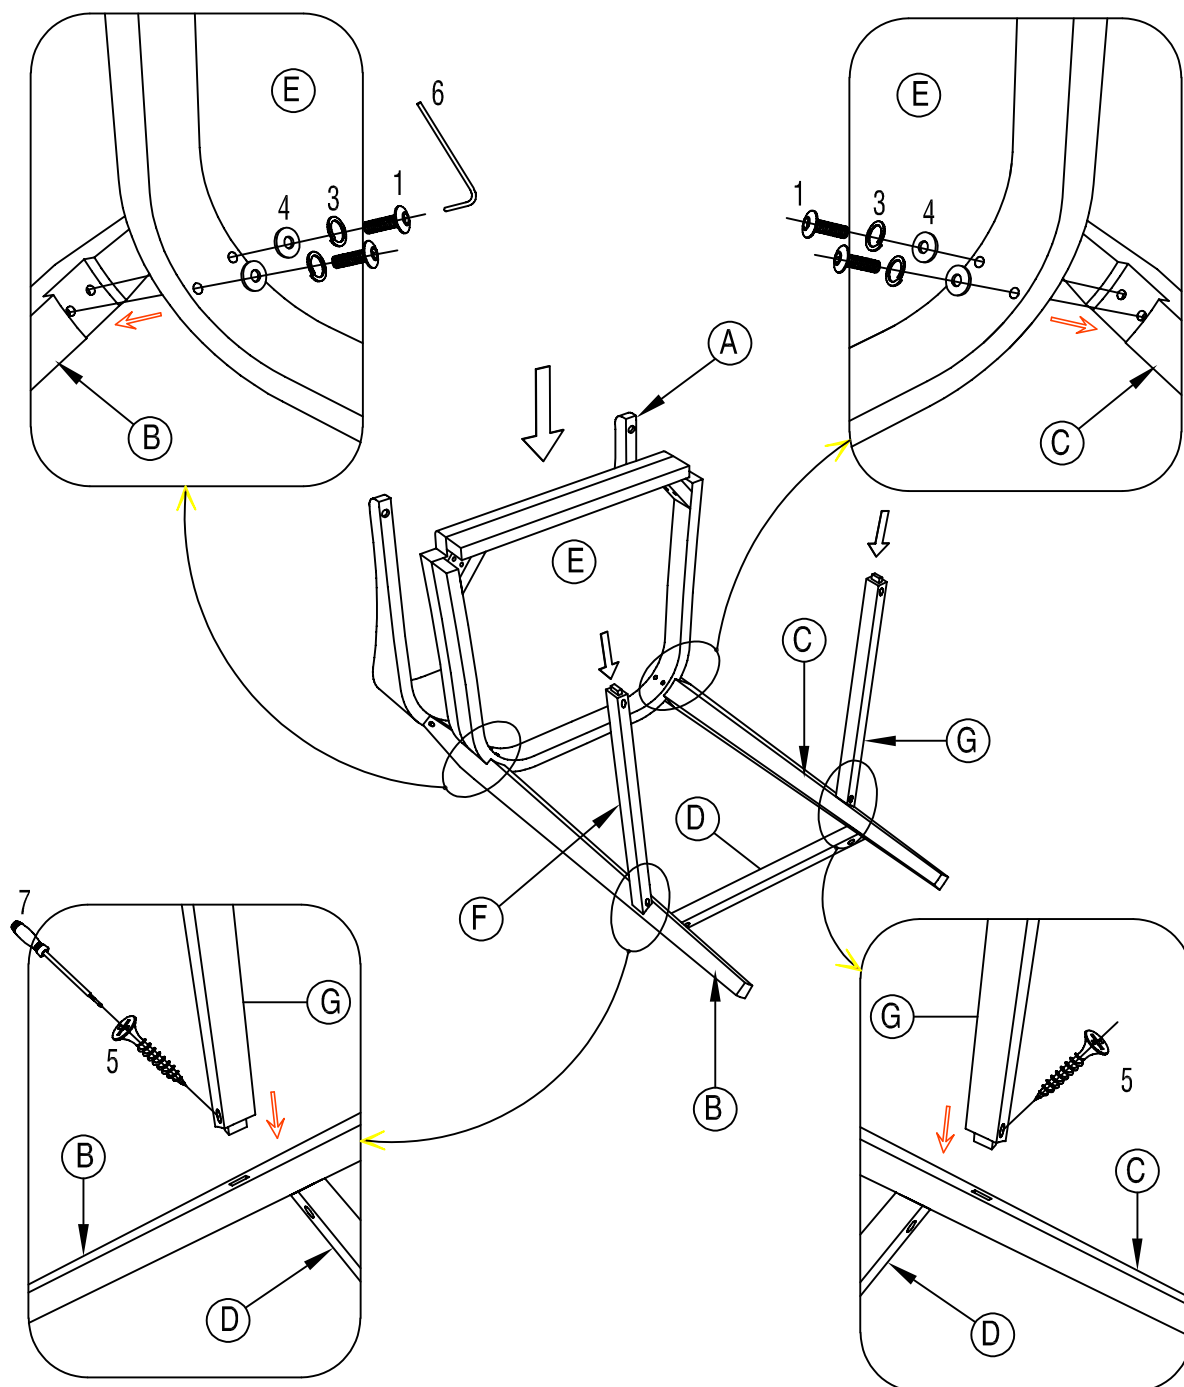


Step 3: Align Left front leg (H) to Seat cushion (E) and Right front leg (I) to Seat cushion (E) by using Bolt (2), Spring washer (3), Flat washer (4) & Allen Wrench (6) as shown below. Attach Left front leg (I) to Backrest (A), Left longitudinal brace (F) and Right front leg (H) to Backrest (A), Right longitudinal brace (G) by using Screw (5) & Screwdriver (7).

Do not fully tighten the Bolts.

Step 3

② x 4		⑤ x 4	
③ x 4		⑥ x 1	
④ x 4		⑦ x 1	

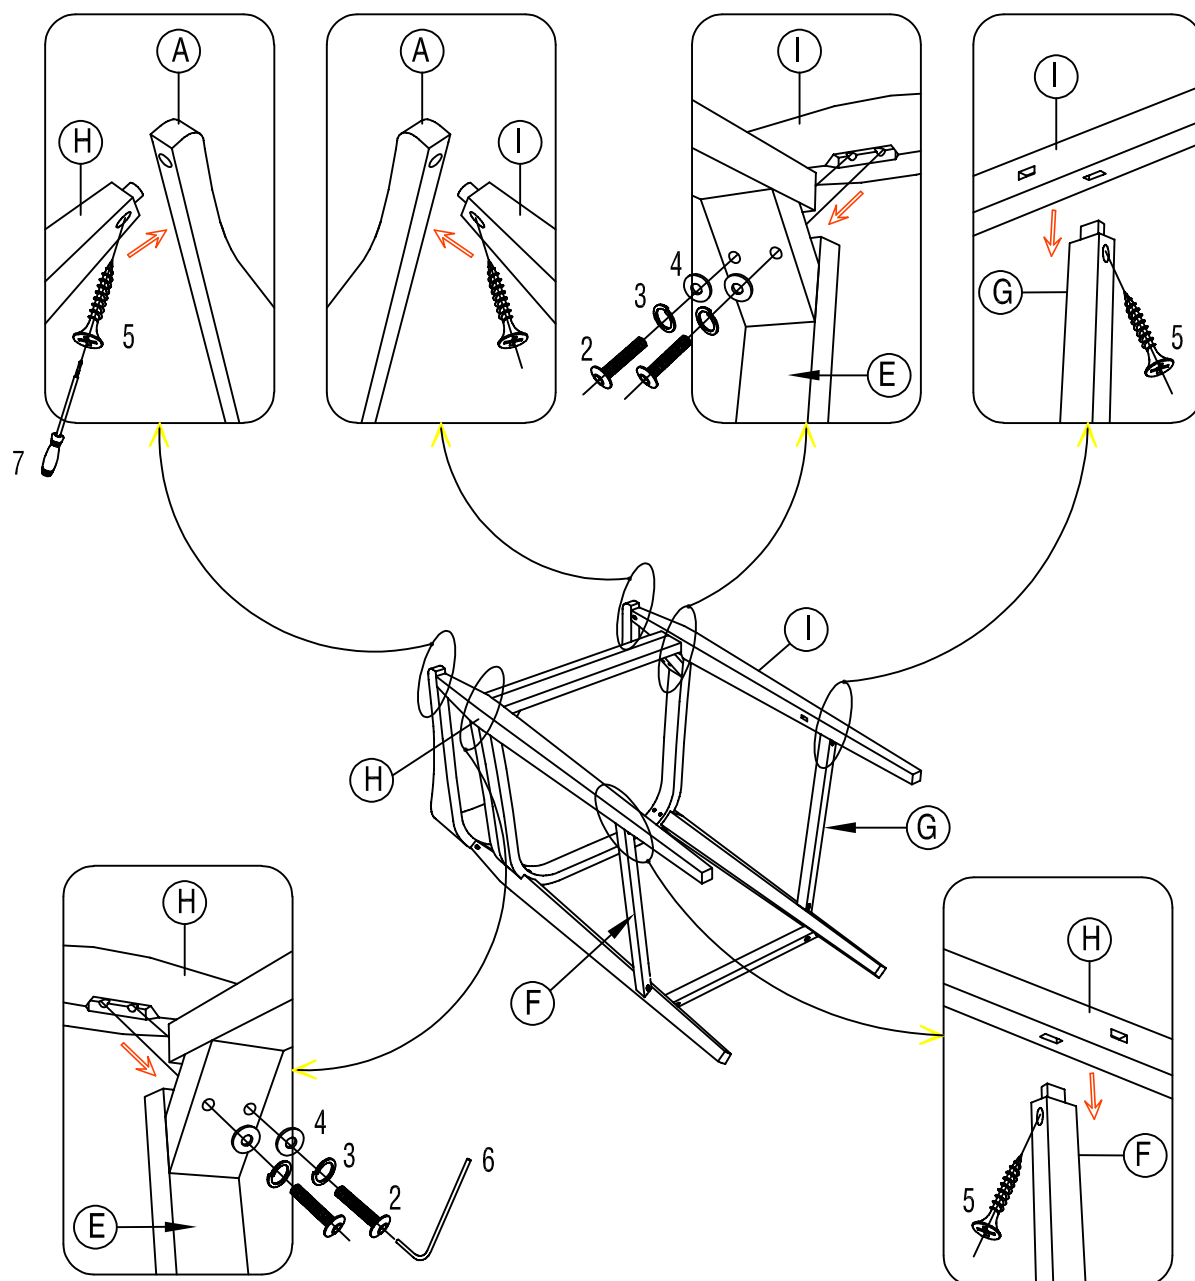

Step 4: Attach Front longitudinal brace (J) to Left front leg (H) & Right front leg (I) by using Screw (5) & Screwdriver (7).





Do not fully tighten the Bolts.

Step 4


⑤ x 2



⑦ x 1

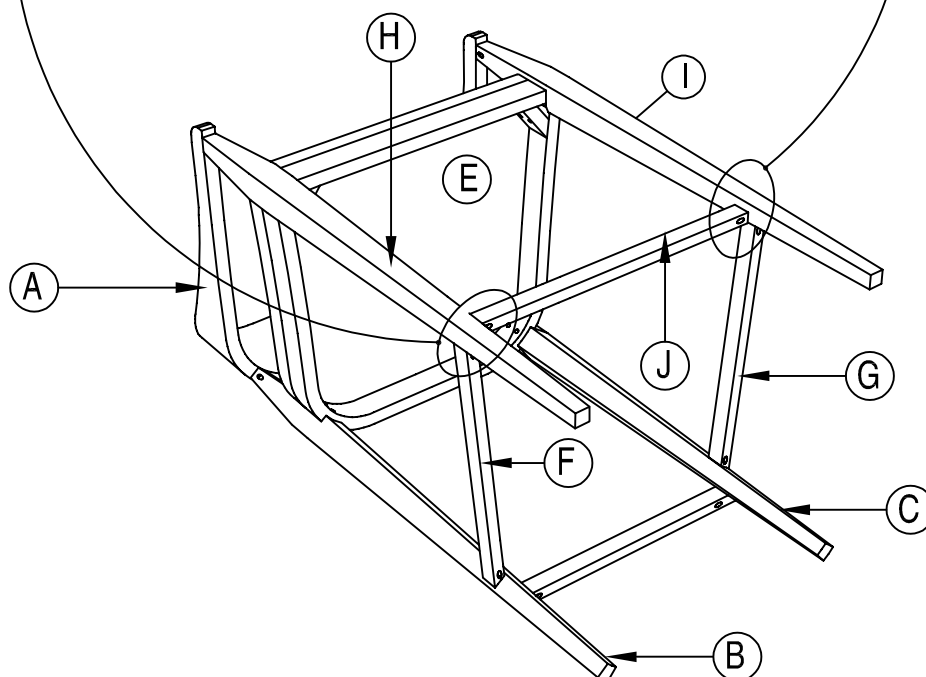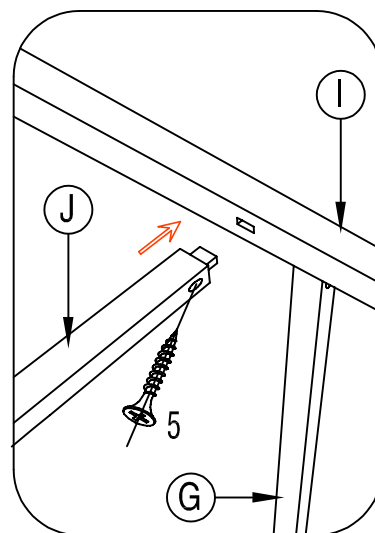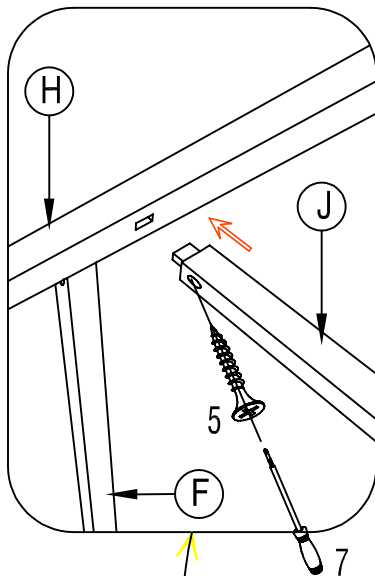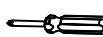

Step 5

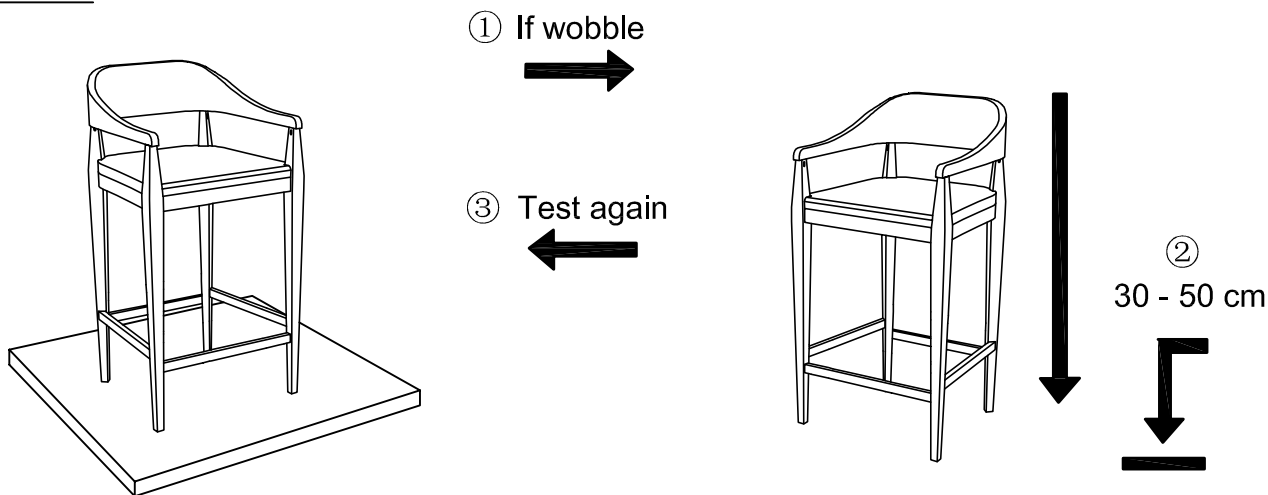

Place the Chair on a Level Surface to check for wobbles.

If it wobbles, lift the Chair some 30 to 50 cm high from the ground, keep your feet and toes well away from the top zone, and drop the Chair vertically with all four Legs, hitting the ground at the same time.

The Drop Test will help to ensure that all Bolts and gaps reach full alignment.


Test again for evenness on a Level Surface.

If no wobbles are found, proceed to tighten all the Bolts.

When tightening the Bolts, tighten sequentially. Do not tighten any Bolt fully and then move on to the next one, this could cause the frame to warp. If it still wobbles, loosen the Bolts and execute the same drop test.

If it is not Stable it could lead to damage to the product.

Step 6

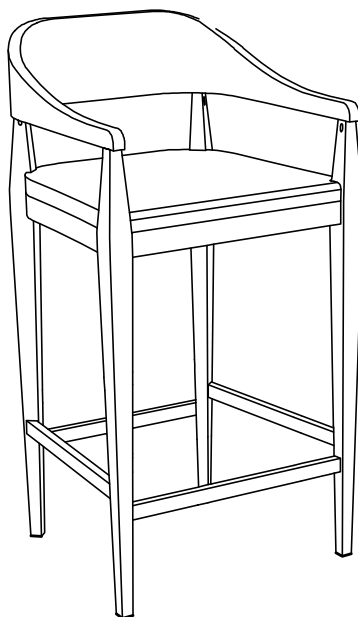

Place the fully assembled chair on a flat surface such as glass or stone, ensuring all four legs touch the surface.

Questions & Answers about Proposition 65

- What is Proposition 65?

Proposition 65 requires businesses to provide warnings to Californians about significant exposures to chemicals that cause cancer, birth defects or other reproductive harm. These chemicals can be in the products that Californians purchase, in their homes or workplaces, or that are released into the environment. By requiring that this information be provided, Proposition 65 enables Californians to make informed decisions about their exposures to these chemicals.

Proposition 65 also prohibits California businesses from knowingly discharging significant amounts of listed chemicals into sources of drinking water.

Proposition 65 requires California to publish a list of chemicals known to cause cancer, birth defects or other reproductive harm. This list, which must be updated at least once a year, has grown to include approximately 900 chemicals since it was first published in 1987.

- What types of chemicals are on the Proposition 65 list?

The list contains a wide range of naturally occurring and synthetic chemicals that include additives or ingredients in pesticides, common household products, food, drugs, dyes, or solvents. Listed chemicals may also be used in manufacturing and construction, or they may be byproducts of chemical processes, such as motor vehicle exhaust.

- What does a warning mean?

If a warning is placed on a product label or posted or distributed at a workplace, a business, or in rental housing, the business issuing the warning is aware or believes that it is exposing individuals to one or more listed chemicals.

By law, a warning must be given for listed chemicals unless the exposure is low enough to pose no significant risk of cancer or is significantly below levels observed to cause birth defects or other reproductive harm.

- Where can I get more information on Proposition 65?

If you have specific questions on the administration or implementation of Proposition 65, you can contact OEHHA's Proposition 65 program at P65.Questions@oehha.ca.gov, or by phone at (916) 445-6900.