
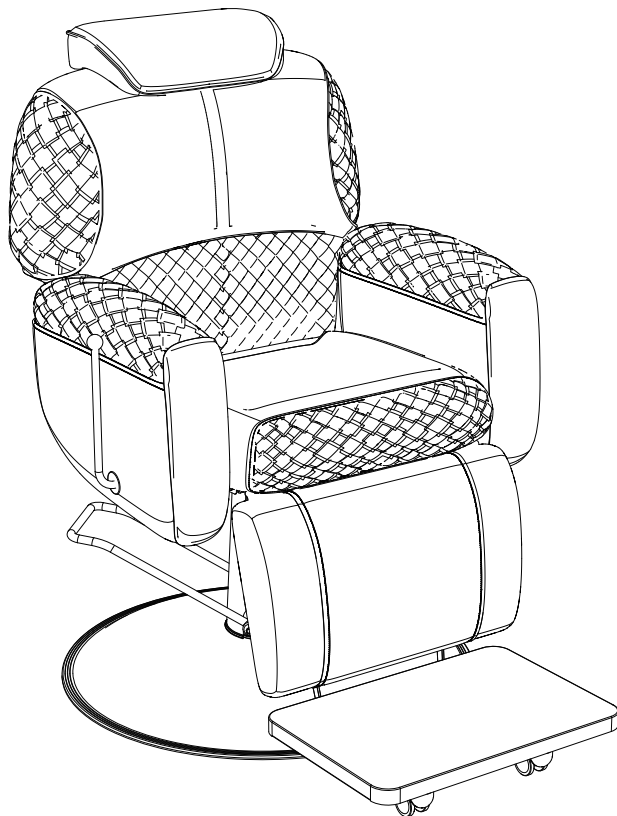
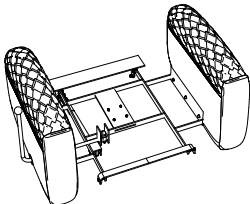
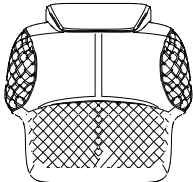



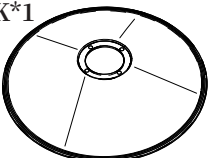




Installation Instructions







Parts Included

A*1  Seat	B*1  Backrest	C*1  Seat Cushion	D*1  Leg Rest	E*1  Footrest						
F*1  Wrench	<div>G1*1</div> <div></div> <div rowspan="2">Screws</div>	G2*1 	H*4 	I*4 	J1*1 	K*1  Base	L*1  Pump	M*1  Step Pedal	N*1  Connecting Rod	O*2 


1 Install the base and pump

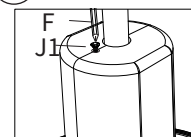

1-1. Secure the pump cover with J1.

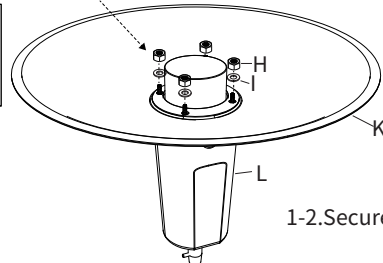
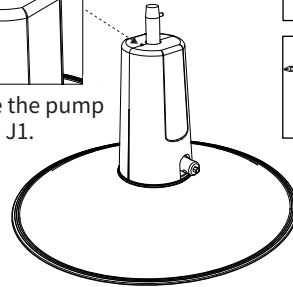


1-2. Secure the pump and base with H and I.






2 Install the step pedal

2-1. Insert M into the pump and tighten the screw.

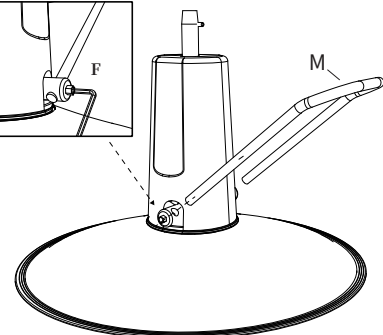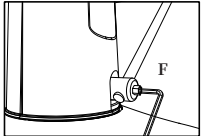

! Pay attention to the orientation of M.

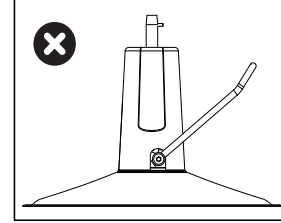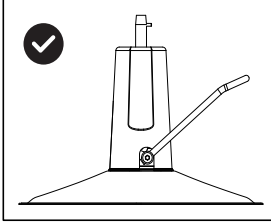



3 Install the seat to the pump

Two person are recommended to complete this step.


3-1. One person lifts the seat.

3-2. The other person adjusts the position of the seat from below.

3-3. Insert the seat onto the pump.

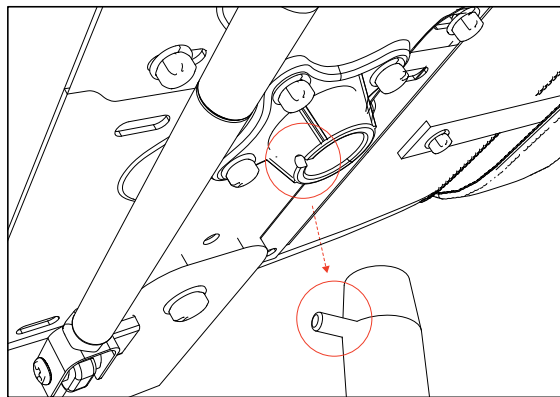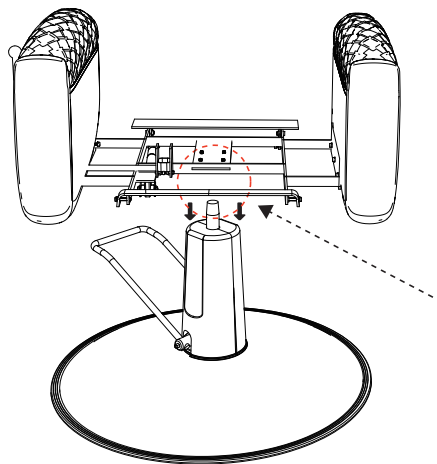

A*1

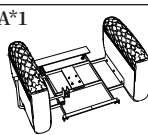



Seat

5 Install the footrest.

D*1



Leg Rest

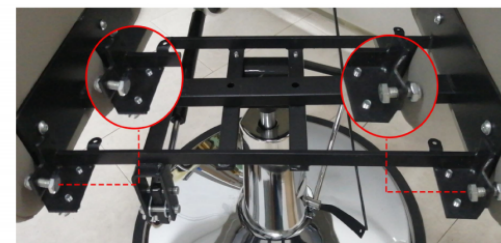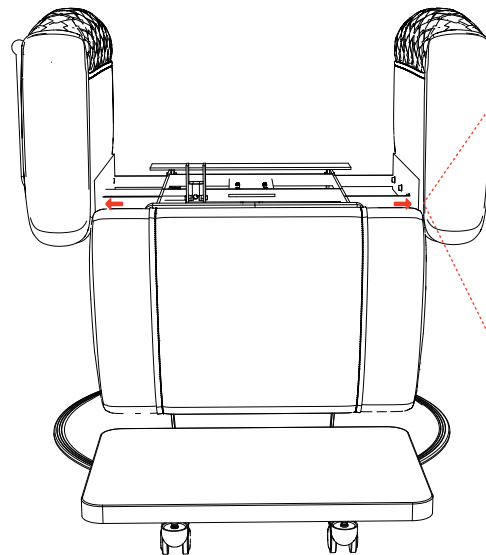

5-1 Remove the screws and nuts pre-installed on both sides of the chassis (as shown in 5-1).



5-2 Align the screw holes on both sides of the leg support and the chassis, and then re-tighten the screws with the #17 wrench and #14sleeve provided (as shown in 5-2).

4 Install the leg rest.

O*2



E*1



Footrest

F*1





Pump

G2*1



Pump

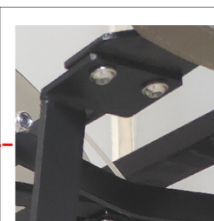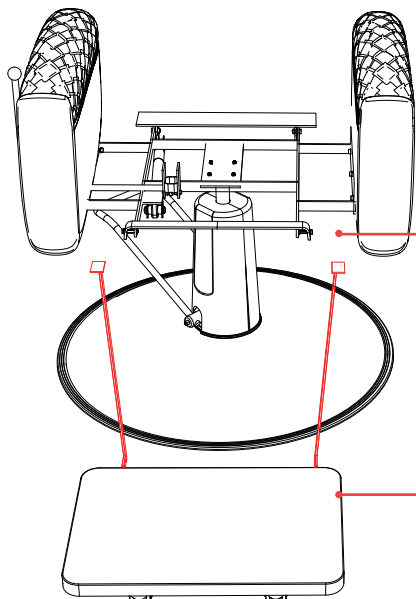

4-1

Install the Footrest Connector to the Chassis: Remove the screws pre-installed on both sides of the chassis (as shown in 4-1), align the screw holes of the footrest connector and the chassis, and then re-tighten the screws with allen wrench provided.



4-2

Install the Footrest to the Connector: Remove the screws on both sides of the footrest(as shown in 4-2), align the screw holes of the footrest and the connector, and then re-tighten the screws with allen wrench provided.

6 Install the connecting rod.

6-2. Align the the screw holes on the connecting rods and the seat frame.

6-3. Insert the screws and tighten them with F and G2.

F*1




Pump



G2*1



Pump

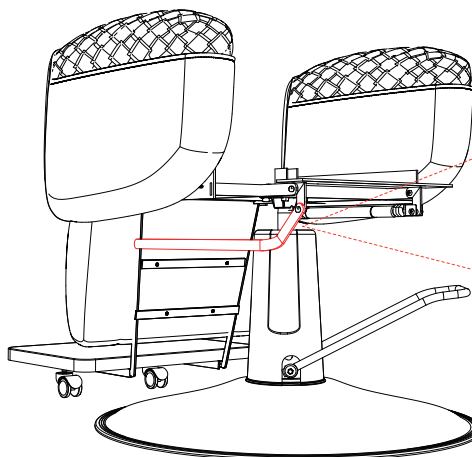


6-1. Remove the screws pre-installed on the seat frame.

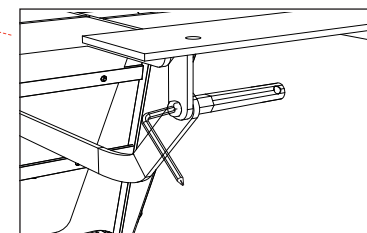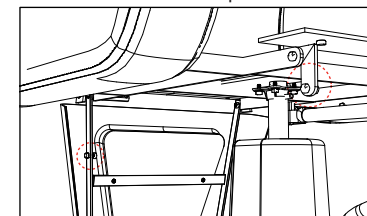


7 Install the backrest.

- 7-1. Remove the three pre-installed nuts on the backrest.
- 7-2. Insert the backrest onto the seat and tighten the nuts.

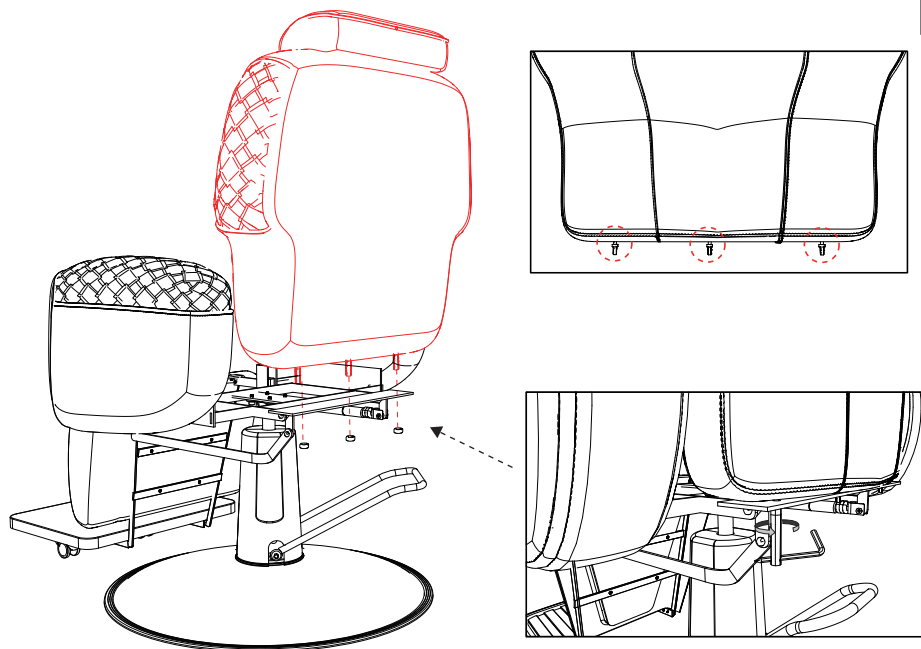

8 Install the seat cushion.


- 8-1. Place the cushion onto the seat.
- 8-2. Tighten the screws from underneath the cushion. Pay attention to the orientation of the cushion.

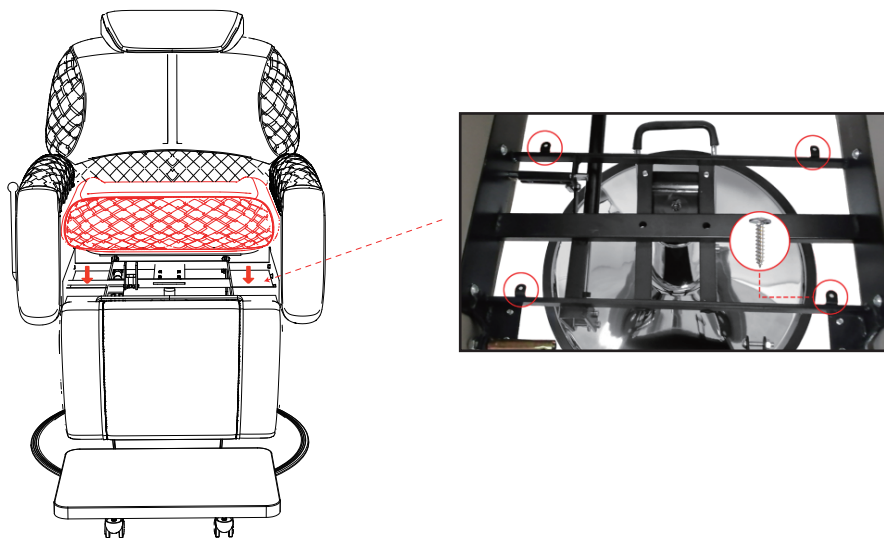

Chair Operation Guide

1 Reclining or Returning the Backrest to an Upright Position

- Sit on the chair, pull the reclining handle back while leaning your body backward, and the chair's backrest will recline.
- Pull the reclining handle while sitting up straight, and the backrest will return to the upright position.

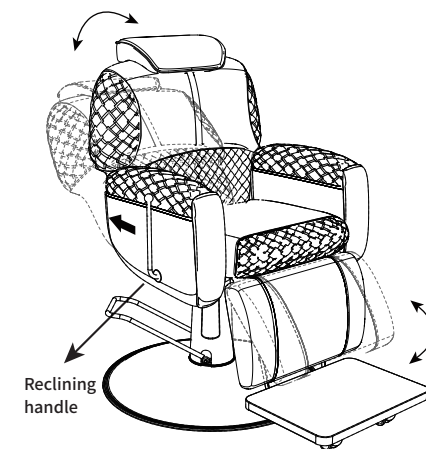


2 Locking or Unlocking the Chair's Swivel Function

This chair has a locking feature.


2-1. Locking the Chair

- Lift the step pedal upwards, and the internal oil pump will lock, preventing the chair from rotating.

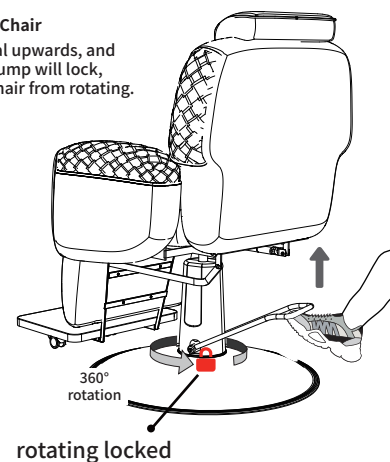

2-2. Unlocking the Chair


- Press down the step pedal while rotating the chair; at this point, the chair can swivel.

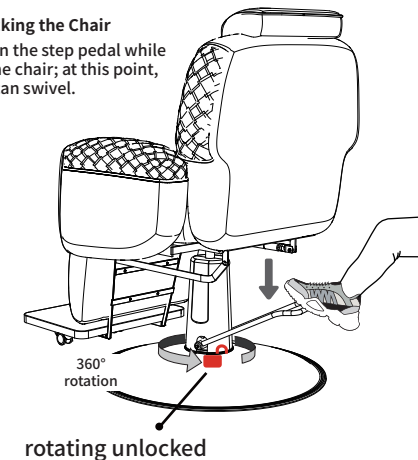

3 Adjusting the Chair Height

3-1. Raising the Chair


- Continuously press the step pedal halfway down, and the chair will rise.

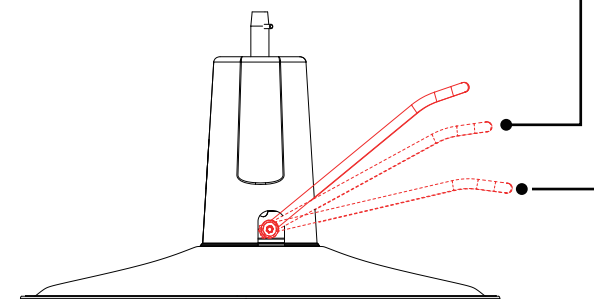

3-2. Lowering the Chair

- Press the step pedal all the way down and hold it, and the chair will lower.

Correct Way to Leave the Chair to Avoid Tipping

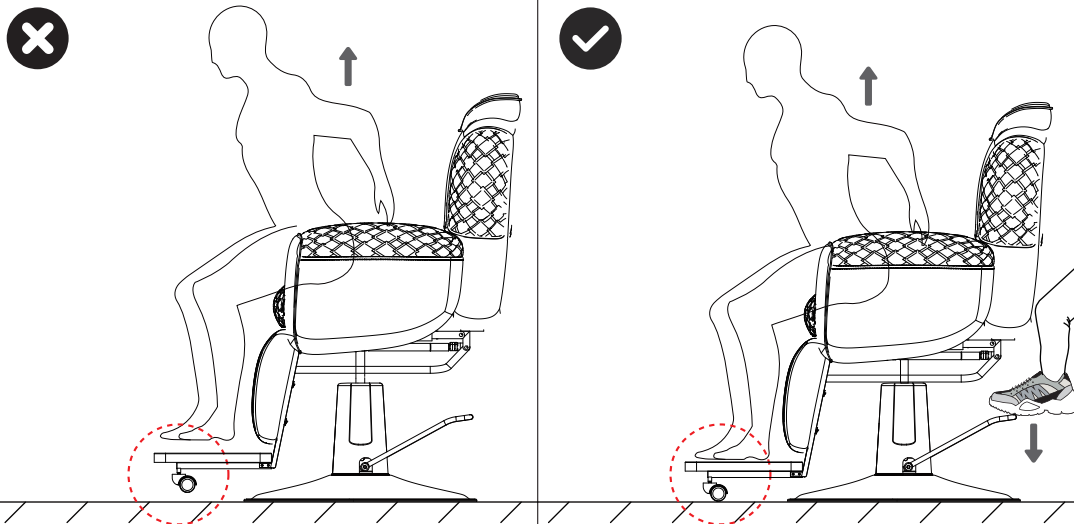

Incorrect Example:

There is a significant distance between the support rod and the ground, stepping on the foot pedal at this time may cause the chair to tip forward.

Correct Example:

Lower the chair to the lowest position, the support rod will close to the ground, you can safely step on the foot pedal and leave the chair.

Trouble and Solution

NO.	Trouble	Potential Issues	Solution
4	The chair is wobbling.	Loose connection between the pump and the base.	Please check the screws underneath the base and tighten them again.
5	Missing screws.	Some screws are pre-installed.	Most screws are pre-installed on the chair's components. Please check again to see if there are screws in the screw holes on the chair's components.
6	Missing parts.	The chair is shipped in two packages.	If your chair is shipped in two separate packages, we will send you the tracking numbers for both packages via Amazon after the chair has been shipped. Please keep an eye out for them. The two packages may not arrive simultaneously.
7	Damaged	The chair leather, metal, and other accessories are damaged.	If you find any damage to the chair after receiving it, please do not rush to return it. Please contact us and provide pictures of the damage in your message so that we can quickly identify the required parts. We will promptly send you the replacement parts.
8	Other issues	Contact Us	If you have any further questions, please feel free to contact us at service@baashabeauty.com . In order for us to better understand and resolve the issue quickly, please provide relevant pictures or videos related to the problem in your email.

Trouble and Solution

NO.	Trouble	Potential Issues	Solution
1	The pump is not working.	The pump's lift function is not working properly.	Please refer to section 4 of the operation guide to check if the operation is correct.
2		Cannot swivel.	Please refer to section 2 of the operation guide to check if the operation is correct. If the chair still has difficulty rotating, please repeat lifting the foot pedal and then pressing it down while rotating the chair several times. This should make the chair easier to rotate.
3	The pump is making unusual noises.	There is air inside the pump.	Because it's brand new, there may be some air inside the pump. Please repeatedly lift and lower the chair to expel the air.

WARNING:

ANY PACKING BAGS OF THIS PRODUCT ARE NOT TOYS. TO AVOID THE DANGER OF SUFFOCATION, KEEP AWAY FROM BABIES AND CHILDREN. DO NOT USE IN CRIBS OR BEDS.