
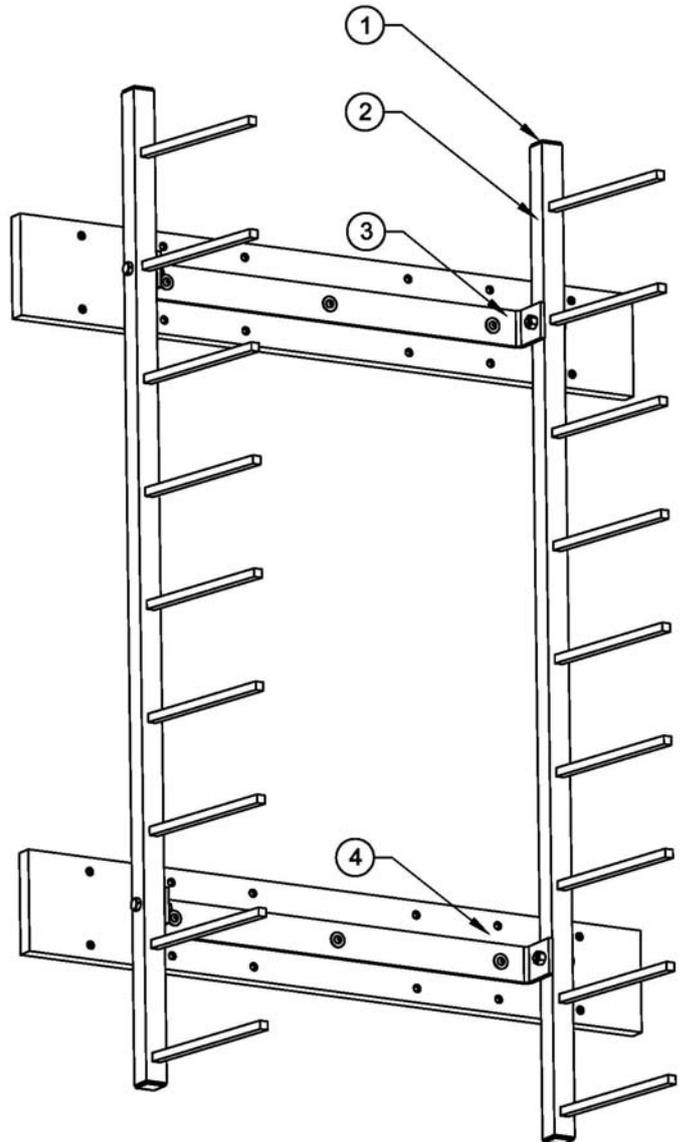
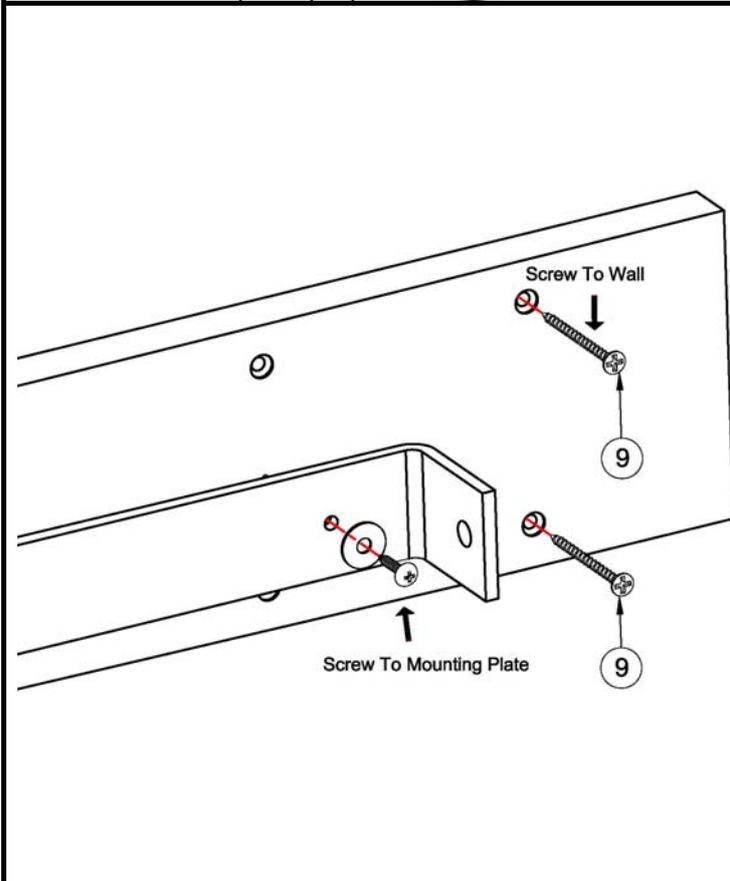


Vis-i-Rack VRW46/VRW85

High Capacity Roll Storage Rack

Installation Instructions

Part#	Description	Qty
1	End Cap	4
2	Frame Assembly	2
3	Wall Brace	2
4	Mounting Plate	2
5	Nylon Nuts	4
6	Flat Washers	6
7	Short Mounting Plate Screw	6
8	Bolt	4
9	Long Drywall Screw	8

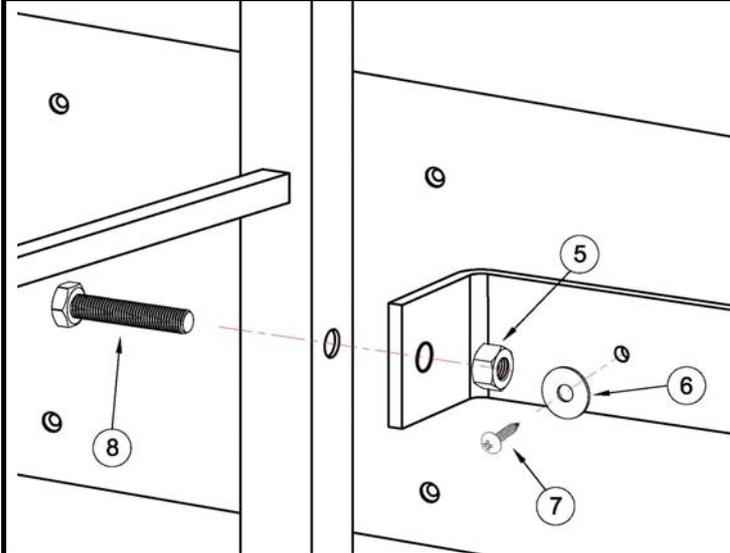



Tools required for assembly: Phillips screwdriver

Vis-i-Rack VRW46/VRW85



High Capacity Roll Storage Rack

Installation Instructions

- 1) Attach wall braces to frame assembly using hardware provided.

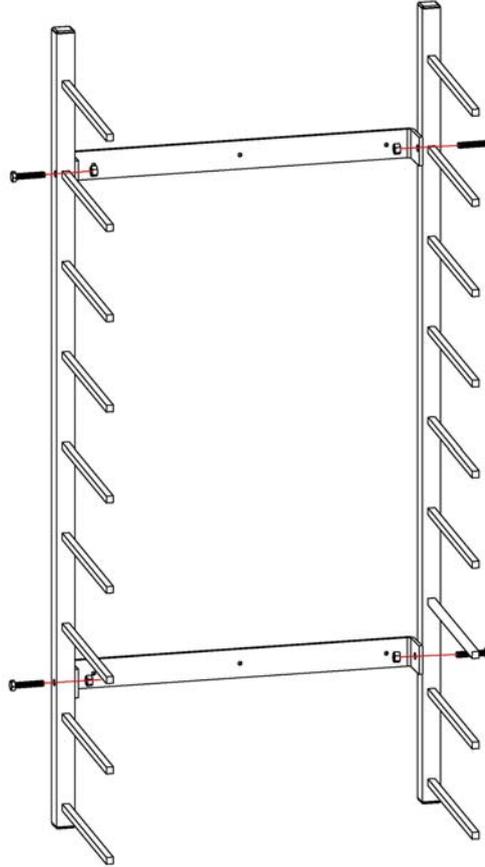

- 2) Mount wall braces to wood mounting plates using hardware as provided.

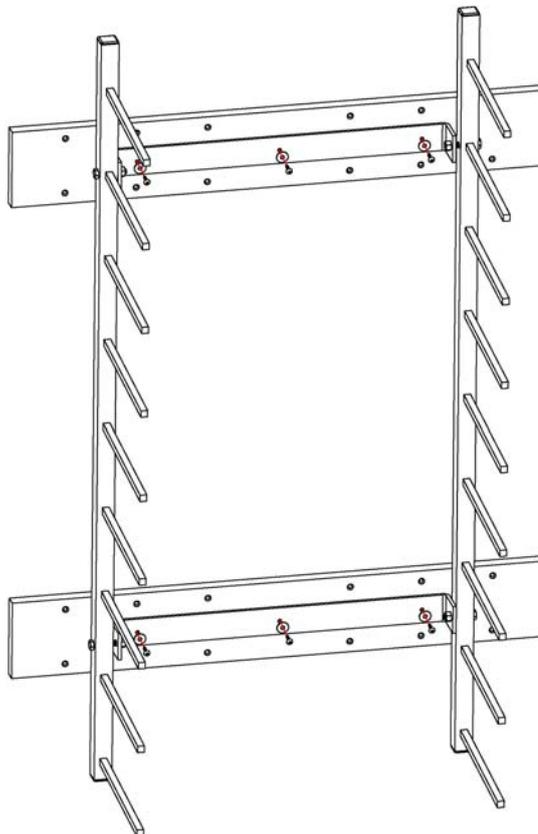

Vis-i-Rack VRW46/VRW85

High Capacity Roll Storage Rack

Installation Instructions

- 3) Locate wall studs if possible and attach mounting plates using the hardware provided. The mounting plate has been pre-drilled to accommodate studs that are 8", 16" or 24" apart. If you cannot locate wall studs we suggest you attach the rack to a solid wall surface. If you cannot locate the studs or are unable to attach to a solid wall surface, we suggest that you have the rack installed by a professional using hollow wall anchors.

