


INSTALLATION MANUAL

**Single-Tier Pull-Out Cabinet Organizer
(LY003)**



Installation guide video

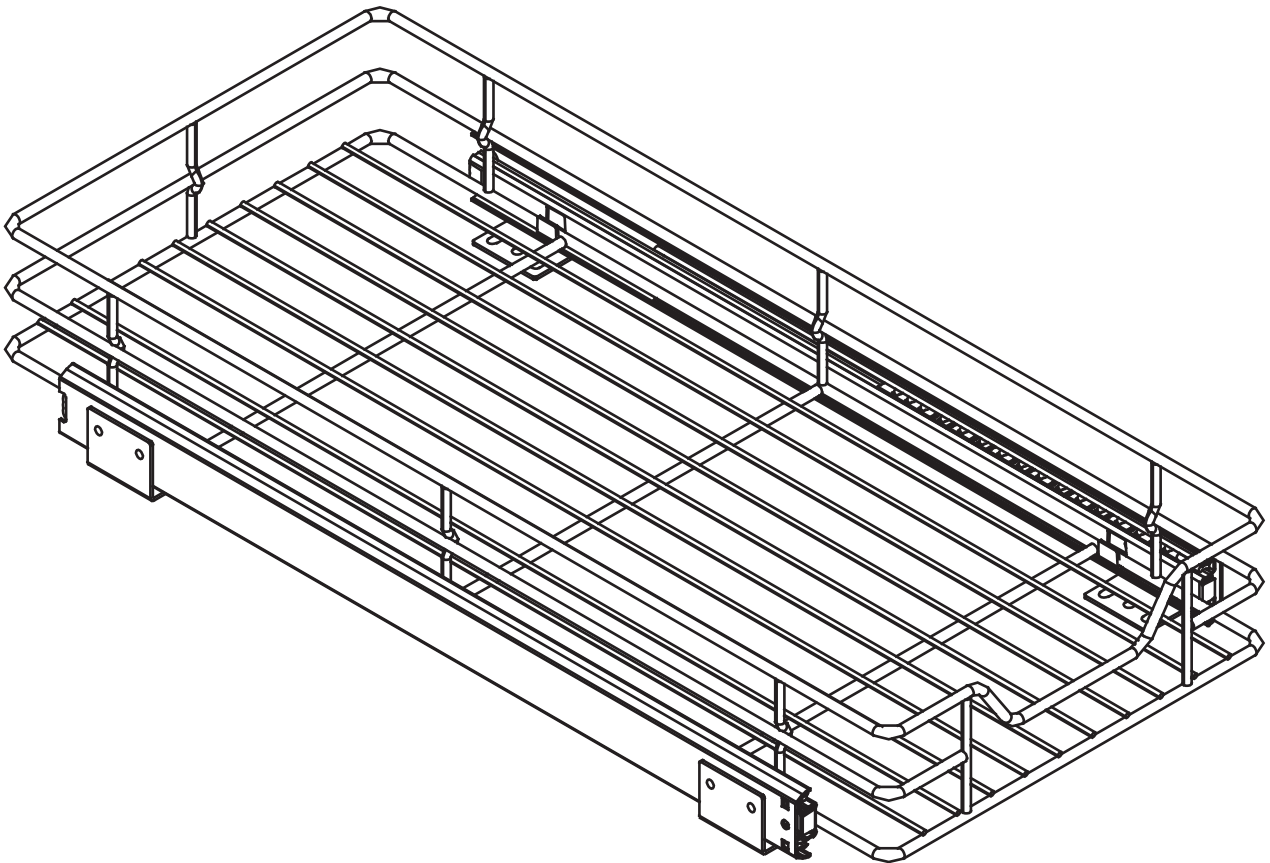

https://youtu.be/fMrdLjMw_p0

Customer Support

Phone: +1(986)-888-1726

Email: help@unified-support.com


CARE & MAINTENANCE

- For daily cleaning, use a dry cloth and a soft liquid cleaner.
- Never use abrasive cleaners containing acetone, chlorine or strong bleach. Also, do not use tools as scrapers, metallic brushes, and other products which can scratch or tarnish surfaces.

PRIOR TO INSTALLATION

- Carefully remove all the items from the carton and place them individually on a soft cloth to prevent scratches or other damage.
- Check the included items. If any items are missing or have been damaged during shipment, please contact our service team to obtain any missing or damaged item.
- Carefully and strictly follow these installation instructions to ensure a completed product as designed.
- Do not tighten all the screws until the product is properly installed.
- Have the necessary tools ready.

Tools Required

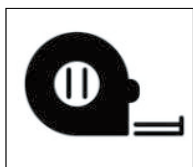


Tapemeasure




Electrical Drill



Screwdriver

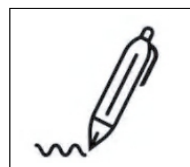

Pencil /Marker

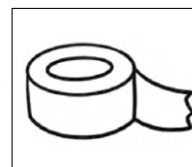

Tape


PARTS LIST

Your pull-out cabinet organizer should include the following parts, please inspect your box contents to ensure you have received all components.

Parts Included

A


**1
PC**

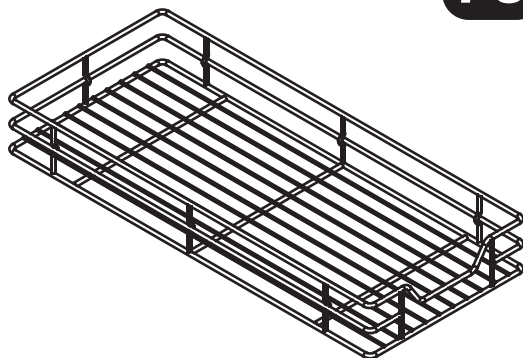

Upper Basket

B


**1
Pair**

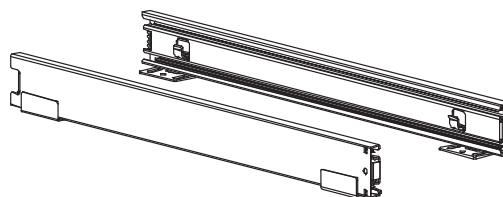

*Slide Rails
Left & Right*

C


**8
Pcs**

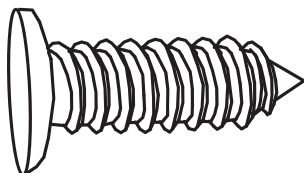

Mounting Screws(ST4x18)

D

**1
PC**

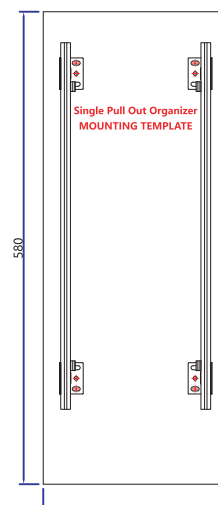



Drilling Template

For more installation details, please follow the installation video on youtube by searching: "Pull-Out Cabinet Organizer Installation".

If any part is missing, contact Customer Support before installation.

Measure Your Cabinet Opening(MCO)

Measure **INSIDE** the cabinet opening

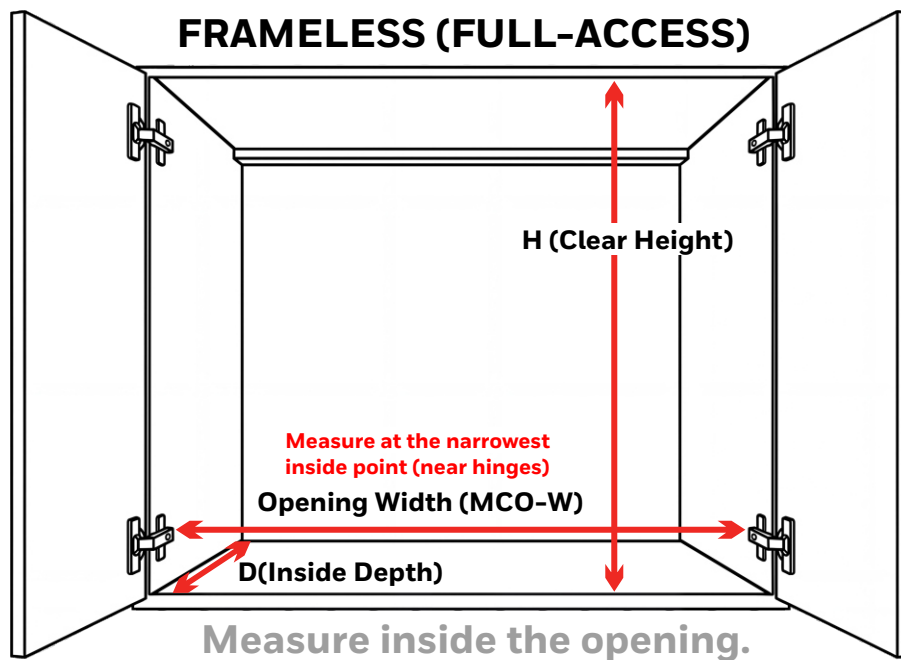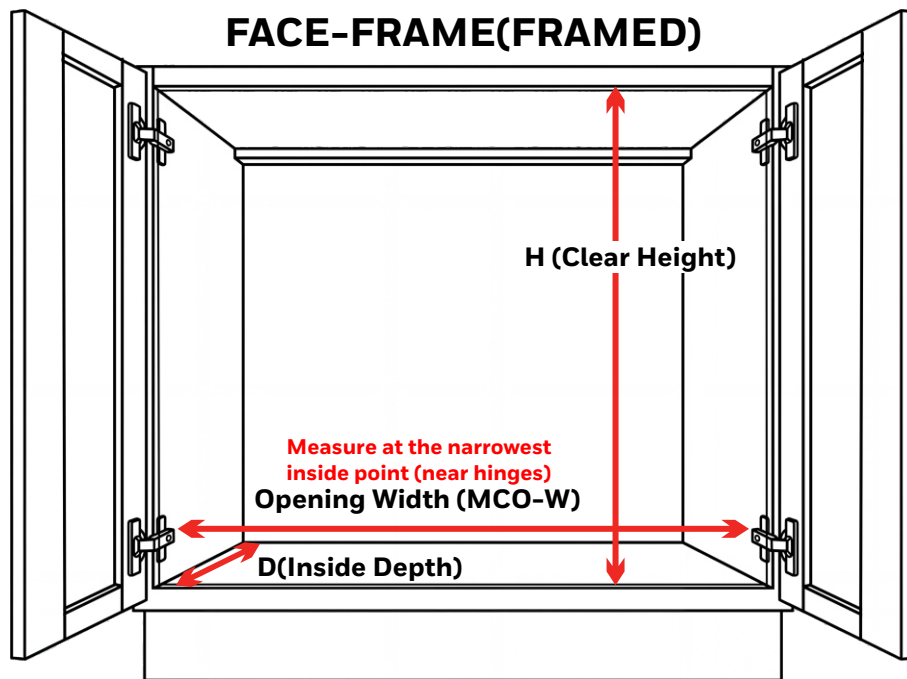

How to Measure

1. Measure MCO-W at the narrowest inside point.
2. Measure D and H inside the cabinet.
3. Write down your numbers, then choose the correct size.

✓ Measure inside the opening ✗ Do NOT measure the outside cabinet width

Your opening width (MCO-W) must meet the minimum requirement for your selected model.

INSTALLATION INSTRUCTIONS

STEP1- Mark Centerline & Position Template

Mark the cabinet centerline (Figure1).

- Measure the inside opening width and mark the center point.
- Draw a straight centerline from the front edge to the back.


Place and align the drilling template(D)

- Fold template (D) along the dotted line.
- Align the template FRONT EDGE with the inside front edge of the cabinet opening.
- Align the template CENTER LINE with the cabinet centerline.

Secure and mark holes.

- Tape the template so it cannot move.
- Mark all hole locations with a pencil.





NOTE: Hole locations on template(D) match the slide rail mounting points.

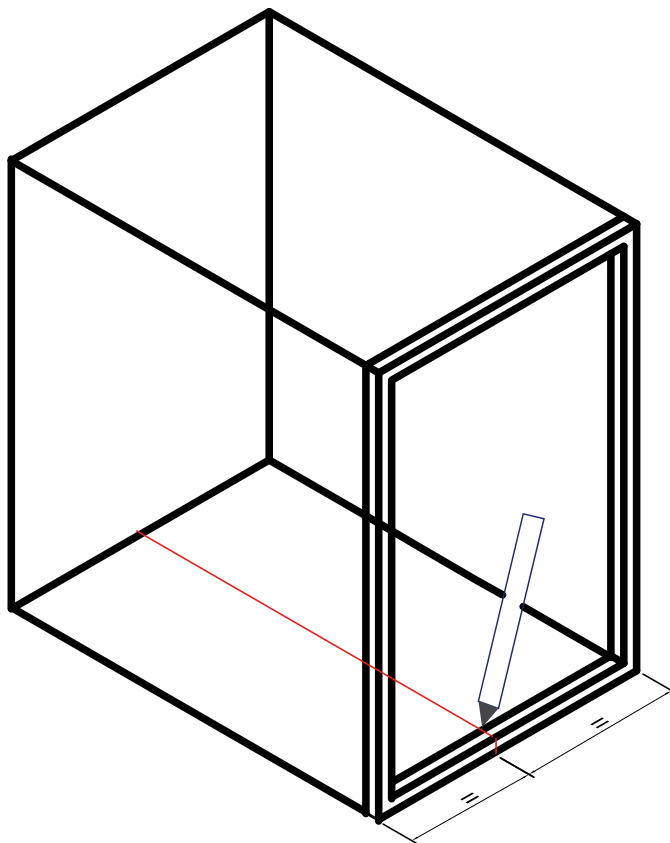

(Figure 1)

Frameless Cabinet

Fold, Align & Drill

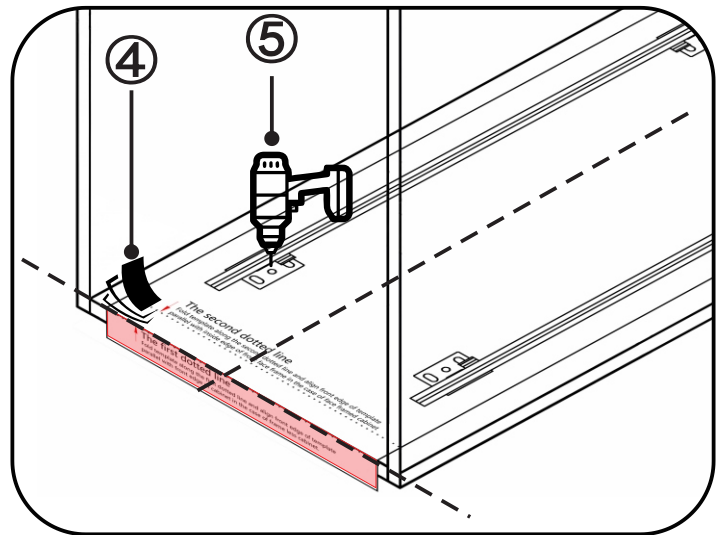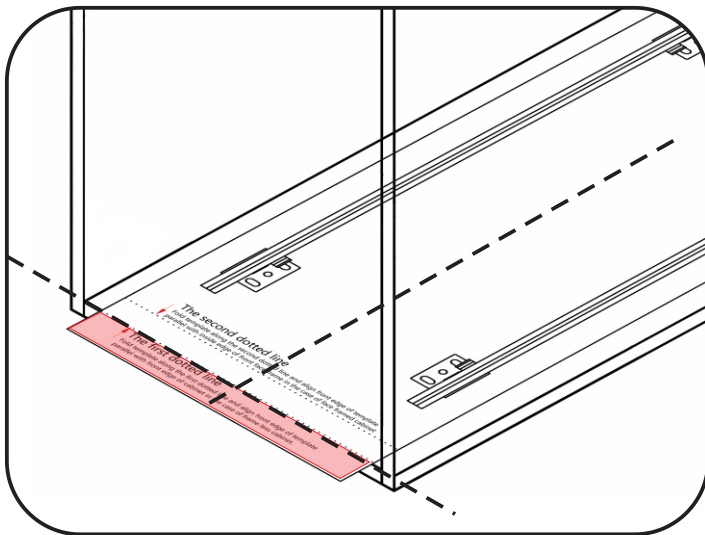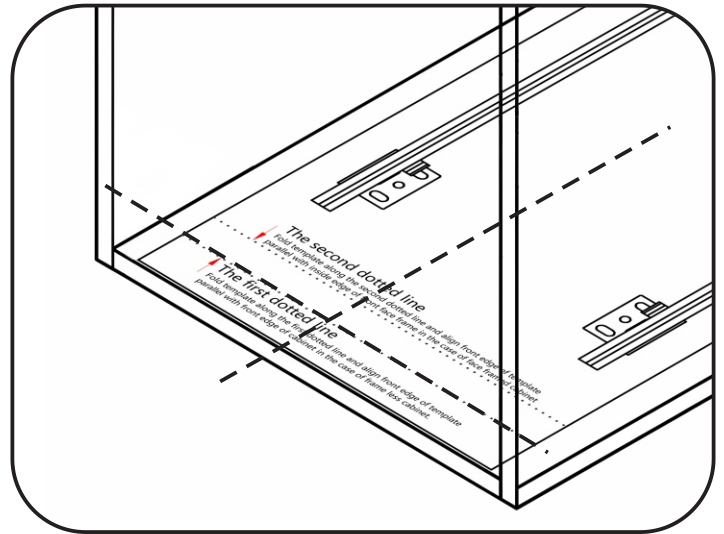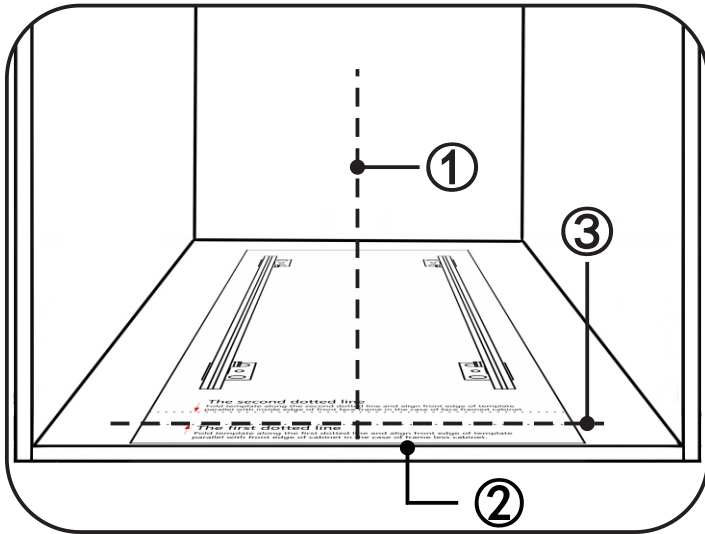

① **CENTER LINE:** Align the template centerline with the cabinet centerline.

② **FRONT EDGE:** Place the folded edge flush with the inside front edge of the cabinet opening.

③ **First dotted line:** Fold along the first dotted line.





④ **Tape:** Tape the folded edge so the template cannot move.

⑤ Drill

- Pre-drill pilot holes (Ø 0.1 in / 2.5 mm) through the marked hole locations while the template is in place.
- Remove the template after drilling.
- Do not drill through the cabinet bottom.

Face-Frame Cabinet

Fold, Align & Drill

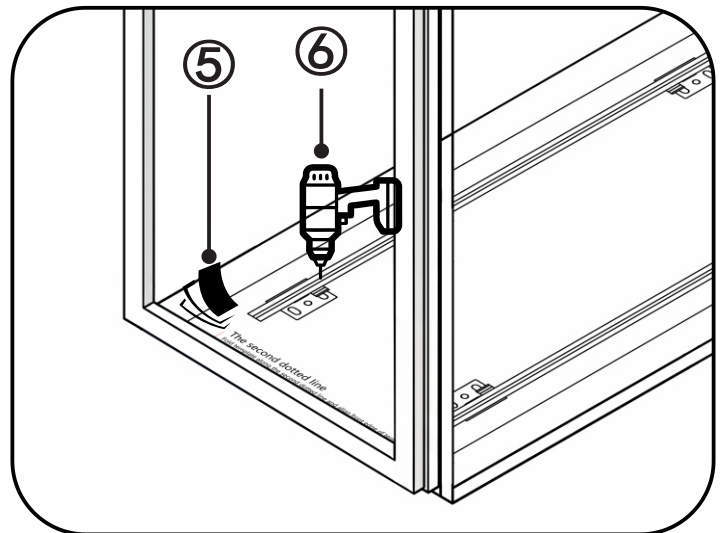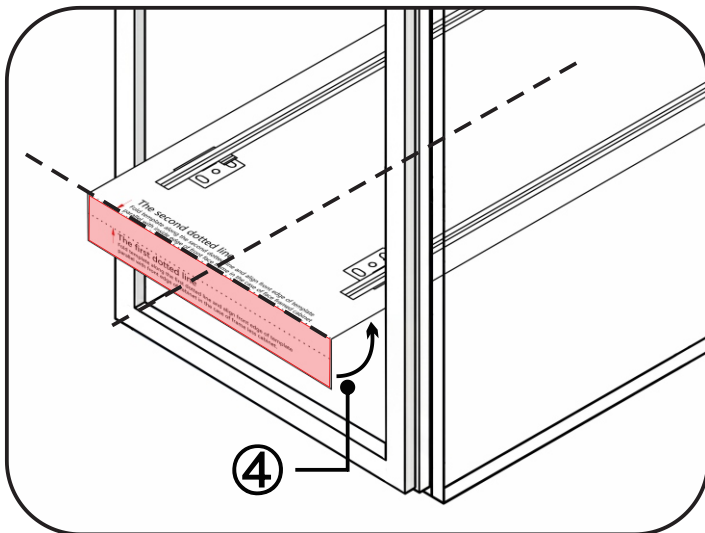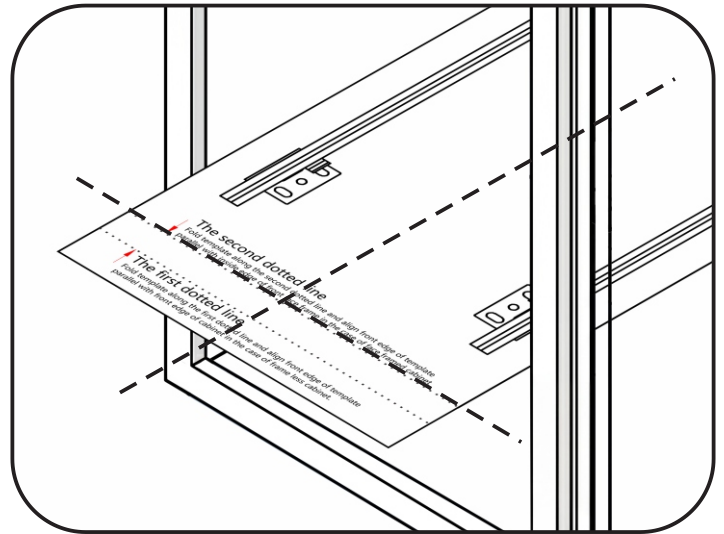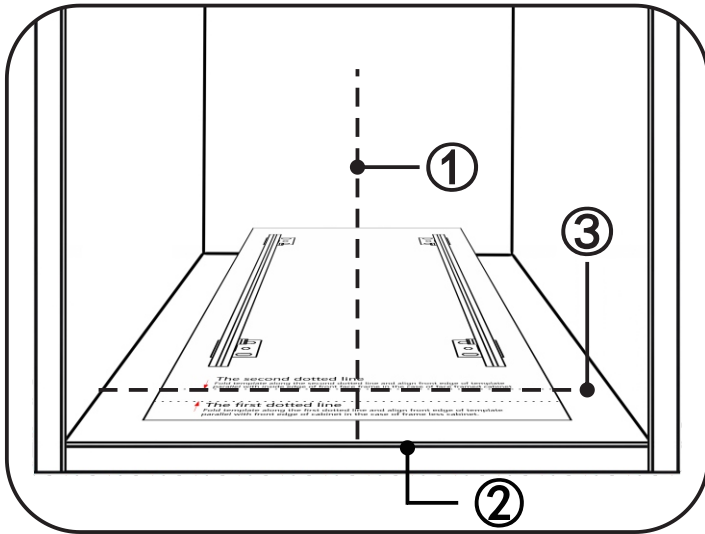

① **CENTER LINE:** Align the template centerline with the cabinet centerline.

② **FRONT EDGE:** Place the folded edge flush with the inside front edge of the cabinet opening.

③ **Second dotted line:** Fold along the second dotted line.

④ **Flip :** Fold the paper and flip it backwards

⑤ **Tape :** Tape the folded edge so the template cannot move.

⑥ **Drill**

- Pre-drill pilot holes (Ø 0.1 in / 2.5 mm) through the marked hole locations while the template is in place.
- Remove the template after drilling.
- Do not drill through the cabinet bottom.

Install Slide Rails


① Position the Slide Rails

Identify rail orientation before installation.

- Locate the back end of each slide rail (with black rubber bumper).
- Make sure the black bumper end faces inward (toward the cabinet back).
- Align the rail mounting holes with the pre-drilled pilot holes.

② Use four ST4 x 18 tapping screws (Screw C) to fix the slide rail seat (B)

②	B	C
Required Tools		

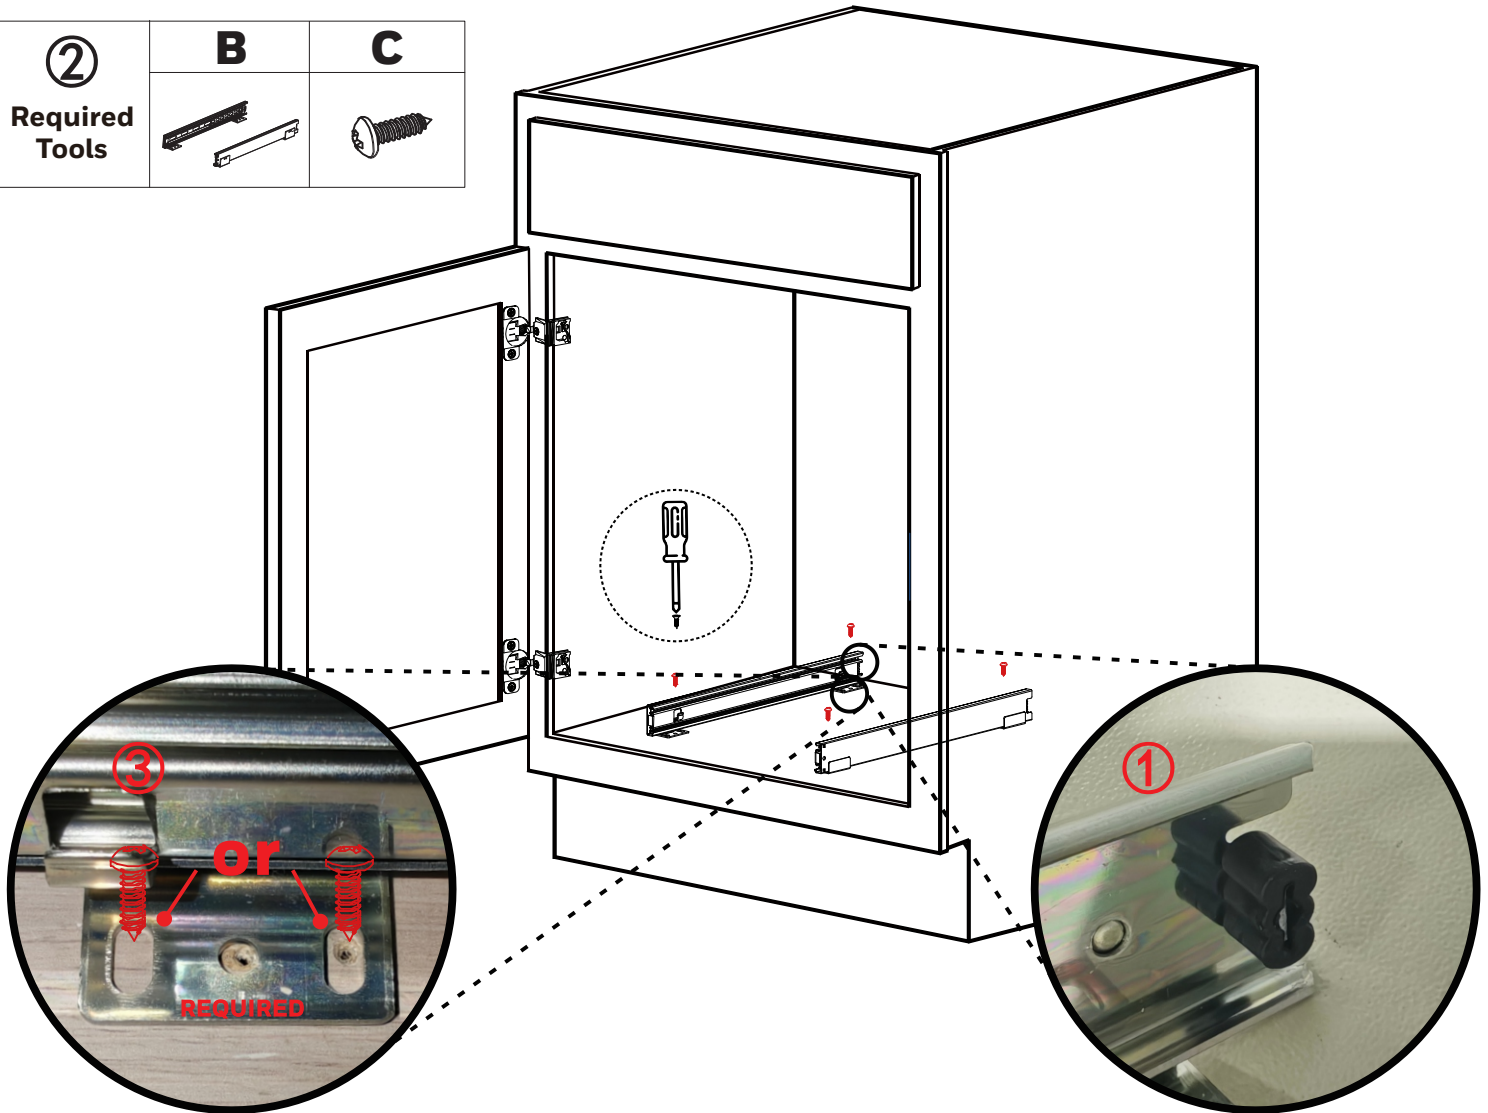




③ Template alignment:

- The center hole on the installation template corresponds to the mandatory center mounting hole on the slide rail.
- The two side holes on the template indicate optional reinforcement screw positions.
- Install only one reinforcement screw, not both.

Install the Basket



Install the basket onto the brackets.

- Install the assembled basket onto the brackets on the slide rails.

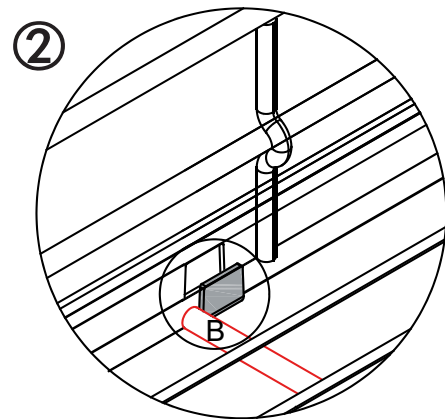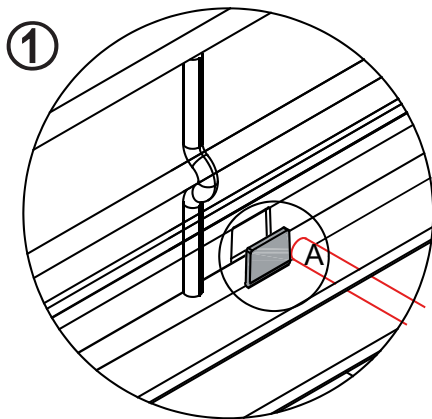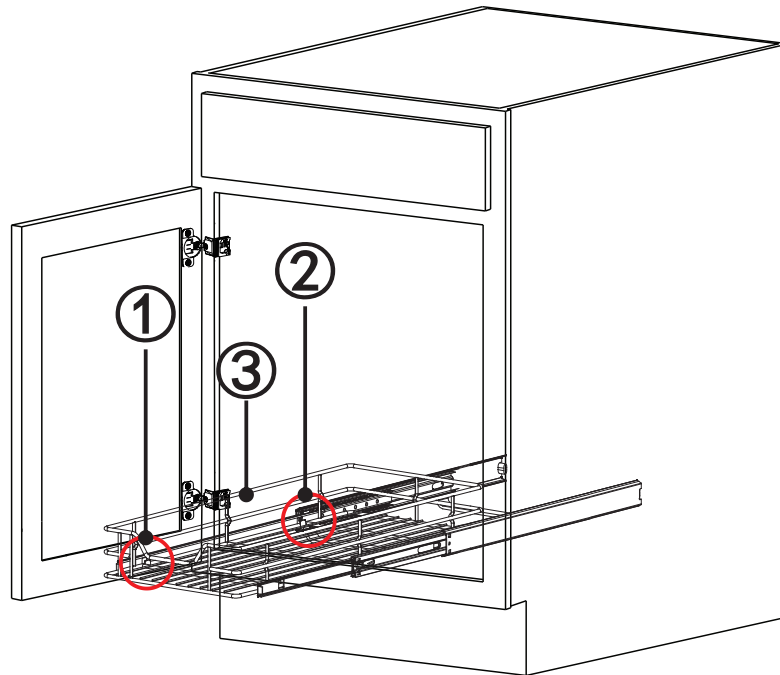

The installation buckle at the front end is located in front of the crossbar

The rear-end mounting buckle is located behind the crossbar

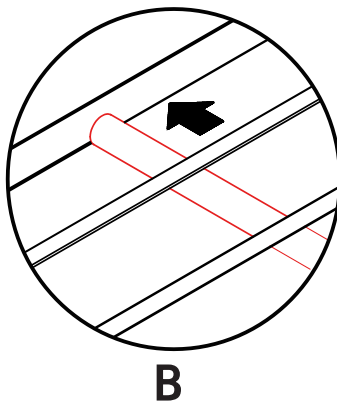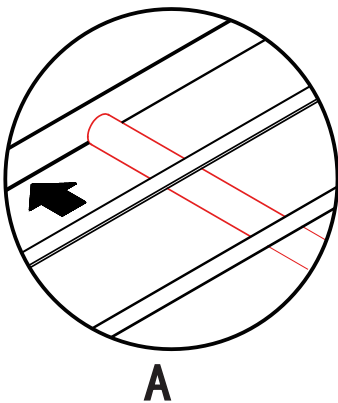

NOTE: Fully extend the lower basket slides. Place basket on the slides and push basket into hooks on the left-hand slide and right-hand slide.(you will hear a click sound) Slide the baskets in and out several times and make sure the baskets are firmly installed.

- ③ **Installation Suggestion:** During the installation process, make sure to hold the baskets (③) to avoid injury.

AFTER-SALES SERVICE CARD

We sincerely thank you for trusting our service and our products, and may this product add enrichment to your home. We guarantee that the product has undergone strict quality inspection and meticulous packaging. If you encounter any issue regarding either shipping or the product, please feel free to contact us at any time. We'd be more than happy to serve you wholeheartedly.

Yours Sincerely

- Please clean with a damp cloth and wipe dry.
- Please avoid harsh, corrosive and abrasive cleaners.

If you have any questions or concerns please feel free to contact us. We're committed to providing our customers with the quality service.

Installation guide video



https://youtu.be/fMrdLjMw_p0

Customer Support

Phone: +1(986)-888-1726

Email: help@unified-support.com

Hours: Mon-Fri, 9:00 AM - 6:00 PM ET