


1. Remove screw and binder post holding roller bracket to door.
2. Make sure glass is thoroughly clean, use alcohol or acetone. Dry completely.
3. If equipped, reinstall rubber sleeve.
4. Apply a bead of silicone adhesive (RTV-108) to each side, place the bracket over the beads wet, tighten screws securely, wait 24 hours before using the door or moving the brackets.

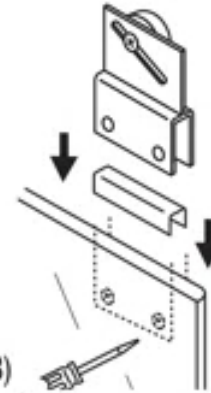

1. Saque el tornillo y el vástago que sujeta la plaquita de soporte de la ruedita a la puerta.
2. Asegúrese de limpiar el vidrio completamente usando alcohol o acetona. Séquelo completamente.
3. Si lo tiene, reinstale la manga de caucho.
4. Aplique una línea de adhesivo de silicona (RTV-108) a cada lado, coloque el soporte sobre las líneas de adhesivo aún húmedas, ajuste los tornillos en forma segura, espere 24 horas antes de usar las puertas o de mover los soportes.

1. Retirez la vis et la cheville d'assemblage qui retient le support de roulette sur la porte.
2. Assurez-vous que le verre soit soigneusement propre; utilisez l'alcool ou l'acétone et asséchez complètement.
3. Le cas échéant, réinstallez le manchon en caoutchouc.
4. Appliquez un cordon d'adhésif de silicone (RTV-108) sur chaque côté, placez le support sur les cordons humides, resserrez les vis solidement, attendez 24 heures avant d'utiliser la porte ou de déplacer les supports..