

elongated cleansing toilet seat K-26132-CSP

Features

- Hybrid heater provides continuously heated water for consistent comfort.
- LED lighting illuminates the bowl to serve as a nightlight.
- Heated seat with five temperature settings.
- Front and rear wash modes provide warm water for personal cleansing.
- Adjustable water temperature and water pressure.
- Side-mounted control panel.
- Self-cleaning stainless steel wand with automatic rinsing and Kohler-exclusive wand UV--light sanitization.
- Quiet-Close[™] lid closes slowly and quietly without slamming.
- Quick-Release[™] hinges allow seat to be unlatched from toilet for easy removal and convenient cleaning; no tools required.

Material

Plastic

Installation

- Requires connection to toilet water supply line. All hoses and connections are included.
- Fits most elongated toilets.

Included Components

Additional Components: Inlet water supply hose Seat mounting bracket



Codes/Standards

ASME A112.4.2/CSA B45.16 UL 1431 CSA C22.2 No. 64 CSA C22.2 No. 68

KOHLER® Intelligent Toilet and C3® Cleansing Seat Three-Year Limited Warranty

See website for detailed warranty information.

Available Colors/Finishes

Color tiles intended for reference only.


Color Code Description

White





elongated cleansing toilet seat K-26132-CSP

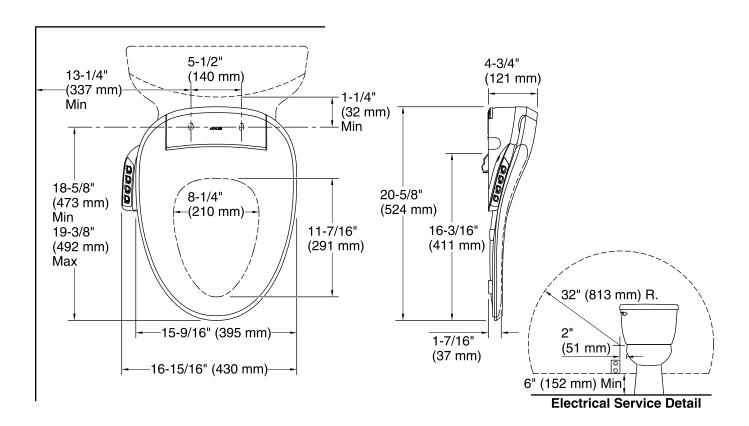

Required Electrical Service

One dedicated circuit required, protected with Class A Ground-Fault Circuit-Interrupter (GFCI). Outside North America, this device may be known as a Residual Current Device (RCD).

120 V, 15 A, 60 Hz

Technical Information

All product dimensions are nominal.

Seat shape type: Elongated

Seat front type: Closed-front

Seat-mounting holes: 5-1/2" (140 mm)

Power cord length: 43" (1092 mm)

Notes

Install this product according to the installation instructions.

Connect the seat to a cold water supply of drinking quality water at a pressure of 20 psi - 80 psi (139 kPa - 551 kPa).

Do not install this seat in a location where: (1) water might be splashed on the product or (2) excessive moisture, high humidity levels, or condensation is present. This will avoid damage to the electronic components.

Do not use an extension cord with this product. To avoid possible product malfunction, do not plug in the seat until instructed to do so. Locate the recepticle at least 6" (152 mm) above the floor, and within a 32" (813 mm) radius

measured 2" (51 mm) from the bowl ledge.

