

ASSEMBLY INSTRUCTION WF307270/WF307271 TIPS

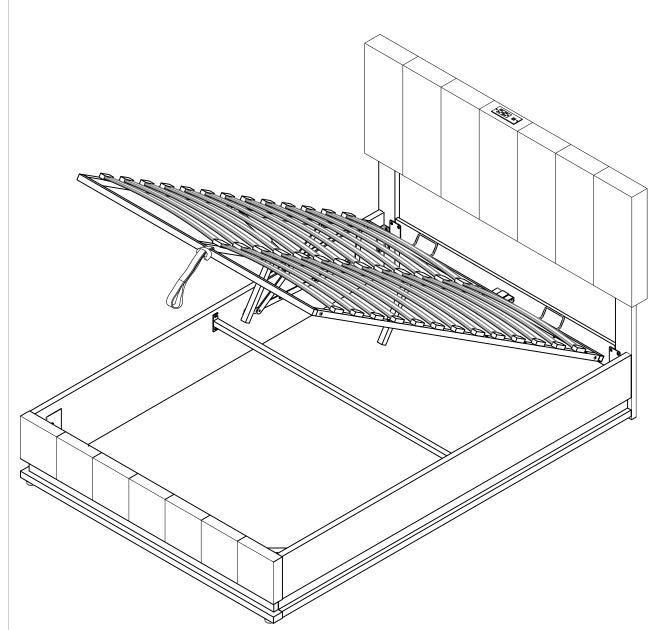


1. Please read the instructions fully before assembly. These instructions include important information which could ensure correct assembly. We have been working on providing high quality products for you. However, in the rare instance that your product is defective, missing parts or there are some issues, please don't hesitate to contact our customer service to submit parts requirements, assembly suggestion, or warranty claims, and we will give the best solution as soon as possible. If necessary, we need you to provide some more clear pictures of the issue. 2. Insert the screws in holes and tighten the screws, but not too tight, 70%~80% is ok, finally tighten all the screws. If some

issues happened that some screws can not target to the hole or some parts are difficult to install, please adjust the tightness of the screws.

3. 2 people are recommended to finish.

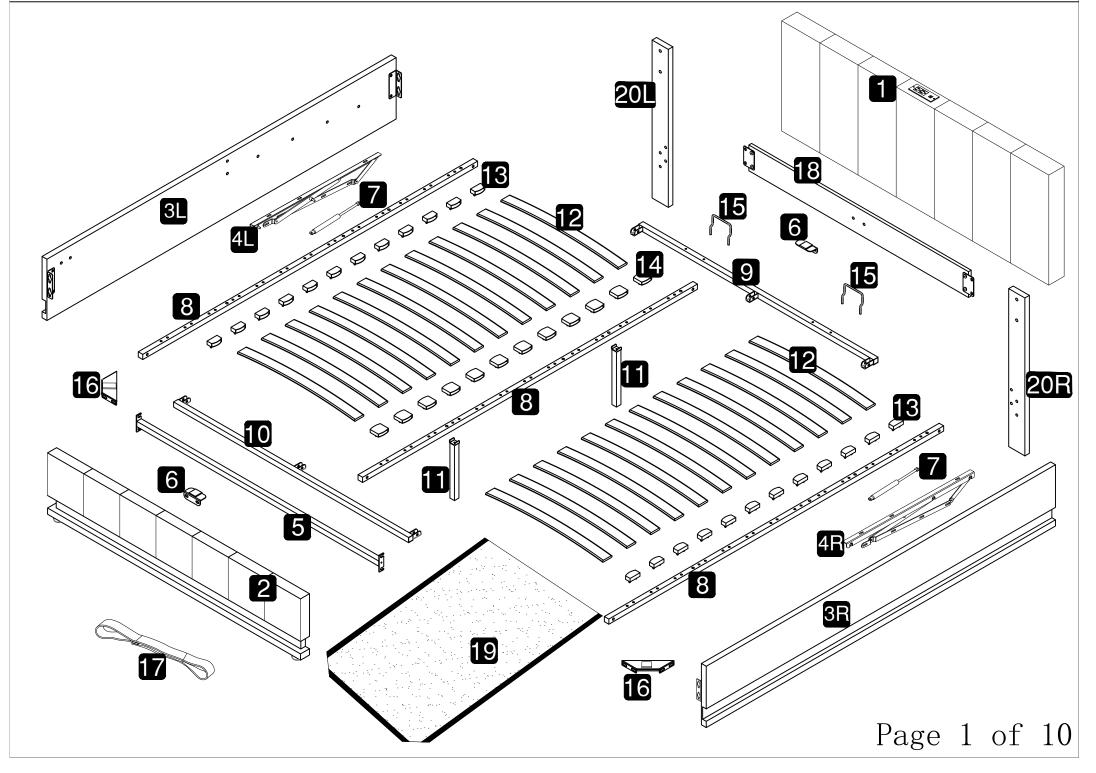

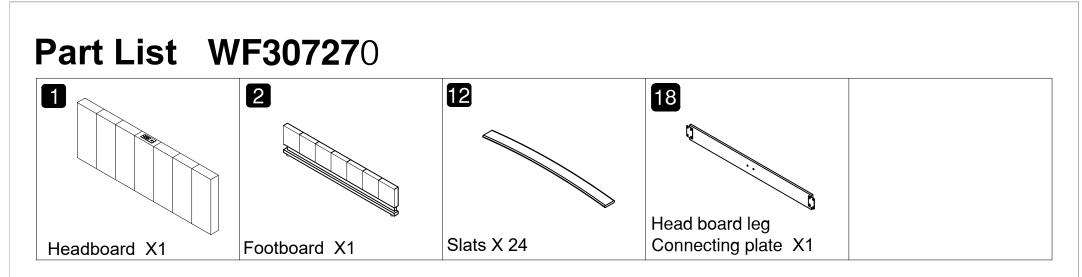

Part List WF307271

3	3R	4L	4R	5
Side Rails(LH) X1	Side Rails(RH) X1	Lift Mechanism (LH) X1	Lift Mechanism (RH) X1	Reinforced Pipe X1
6	7	8	9	10
Angle Iron X2	Gas Strut X2	Side Rails for Metal Slat Frame X3	Cross Rail for Metal Slat Frame - Headend X1	Cross Rail for Metal Slat Frame - Footend X1
11	13	14	15	16
Centre Support Leg X2	Plastic Slat Caps	Centre Slat Caps	Mattress Stopper X2	Metal Corner Bracket X2
17	19	201		M
Rope X1	Bottom cloth X1	Head board leg -(LH) X1	Head board leg-(RH) X1	LED Power Transformer X1
N	Unplug the battery separator of the remote control before use.		1	



Controller X1 Controller X1




Hardware List WF307271


Α	В	С	D	E
Bolts(M8x18mm) X4	Bolts(M8x20mm) X24	Bolts(M8x30mm) X8	Bolts(M8x40mm) X12	Bolts(M8x50mm) X4
F	G	H	J	K
Bolts(M6x35mm) X2	Spanner X1	Non-slip nuts(M8) X16	Flat Washer X12	Allen Key X1
L				
\bigcirc				

Plastic washer X8

Page 3 of 10

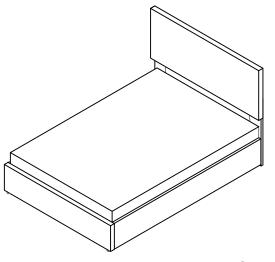

This product is not suitable for mattress recessed type.

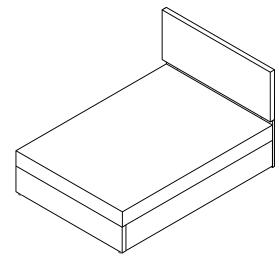

This product is suitable for placing mattresses on the top.

IMPORTANT NOTICE

OTTOMAN OPERATING INSTRUCTIONS

Once your bed frame is completely assembled, the slat unit will not operate correctly unless a mattress is placed on the slat frame. Position the mattress on the slat frame whilst it is in the closed position.

PLEASE NOTE - It takes a lot of force to make the initial movement of the ottoman. This is a design feature of the product so that it does not fall shut - the nearer to being closed the ottoman is, the easier it is to move. When the ottoman is al most shut, it will close completely under its own weight.

When lowering the slat unit for the first time, take care to make sure it does not rub unevenly on the inside face of the side rails. If it does, the bed has been assembled slightly out of square. This can be rectified by moving the foot end of the bed slightly to the left or right whilst leaving the head end stationary.


PISTONS


The pistons used in the construction of this product are extremely strong and cannot be operated by hand when taken off the ottoman. All pistons are tested for correct pressure and operation before being attached to the slat unit.

Initially it might appear that the pistons are very stiff when opening and closing the ottoman.

THIS IS PERFECTLY NORMAL


When fully assembled and the mattress is in position, please raise and lower the ottoman 4/5 times to ensure the gas piston are fully lubricated.

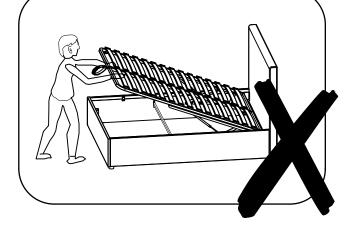


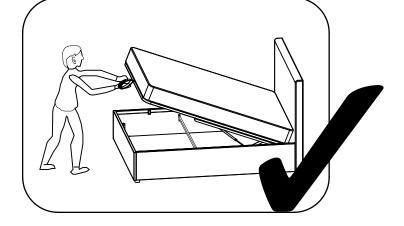

Page 4 of 10

Attention: Do not tighten the screws before completing the entire installation. If you have any difficulty with the installation process, please feel free to contact us.

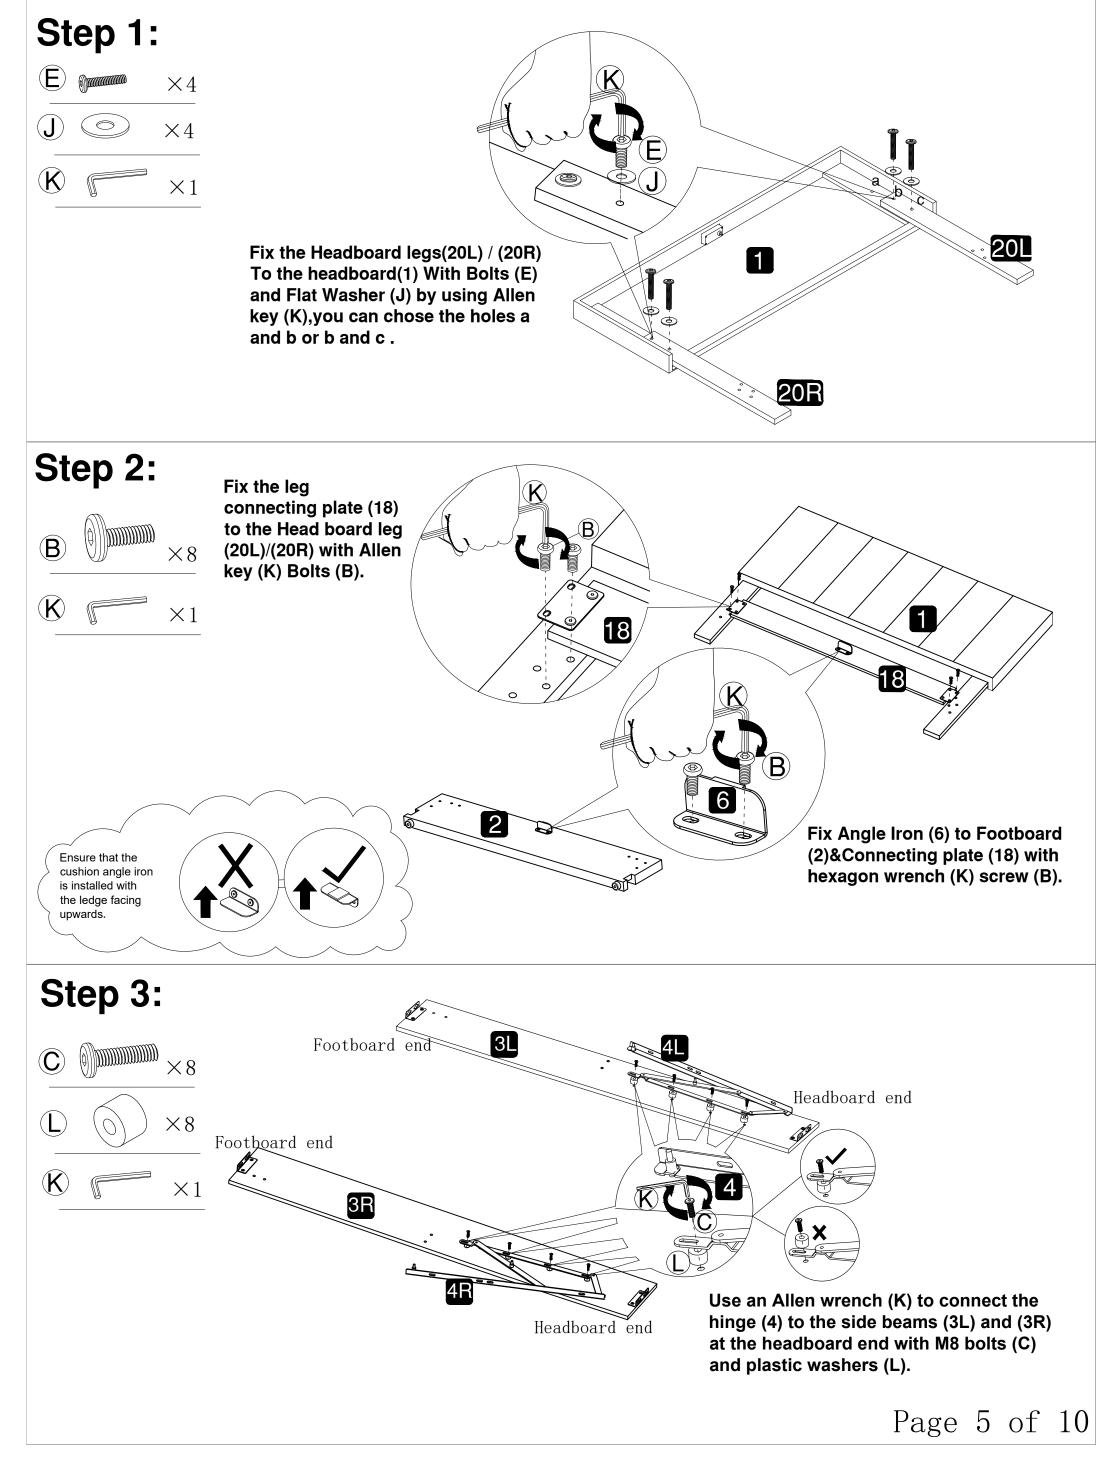

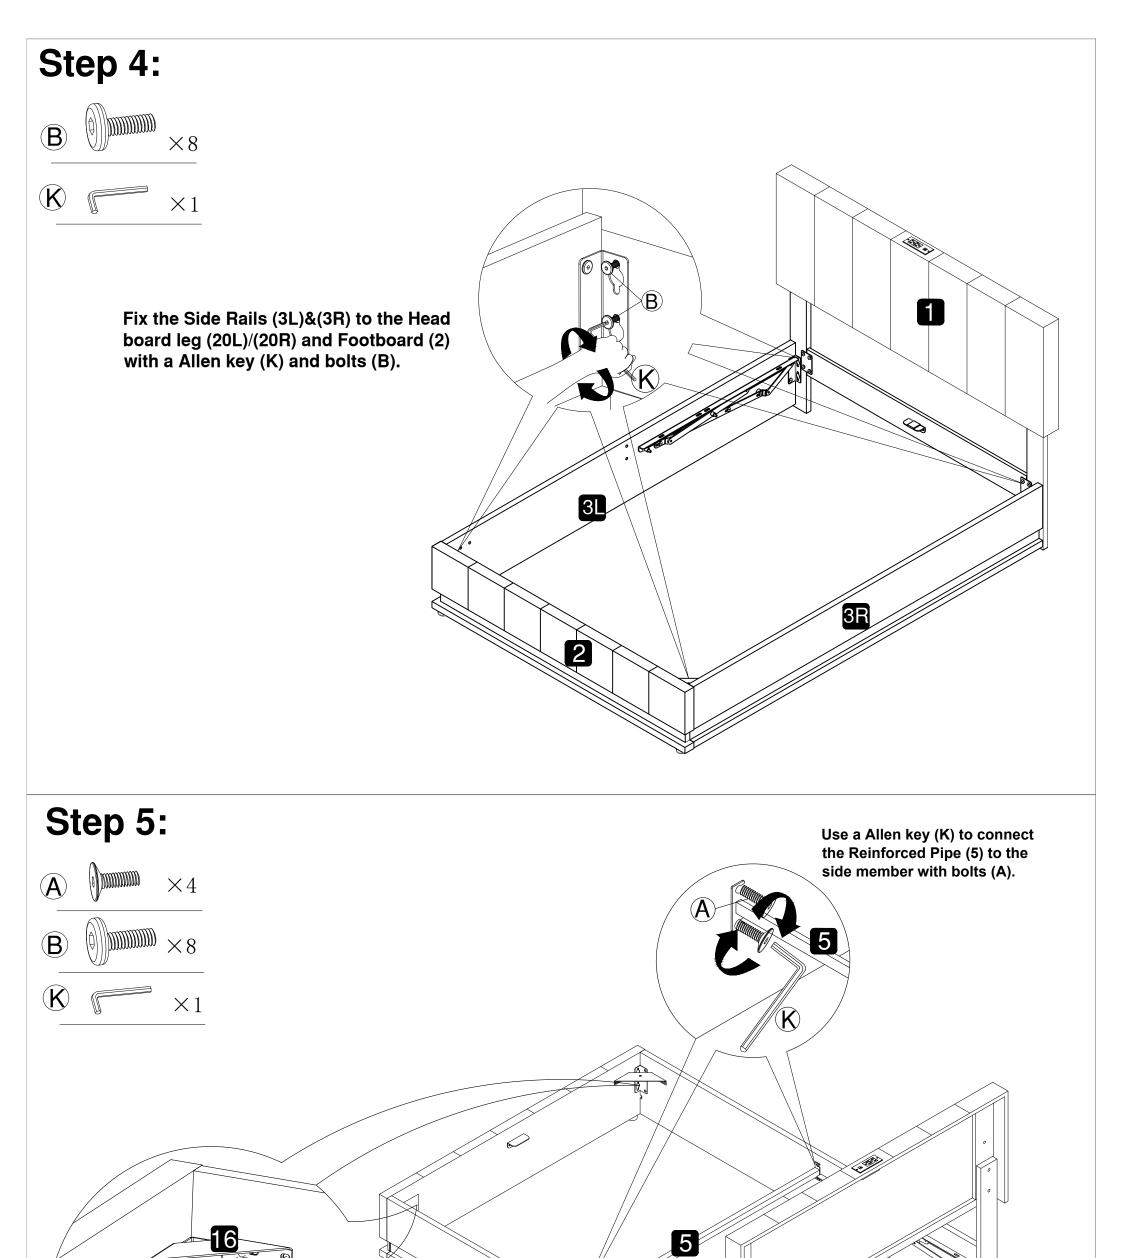

Use a Allen key (K) to fix the metal bracket (16) to the Side Rails and Footboard with bolts (B).

 \bigcirc

Ŕ

0

B

B


0


B

E S


Page 6 of 10

Step 6:

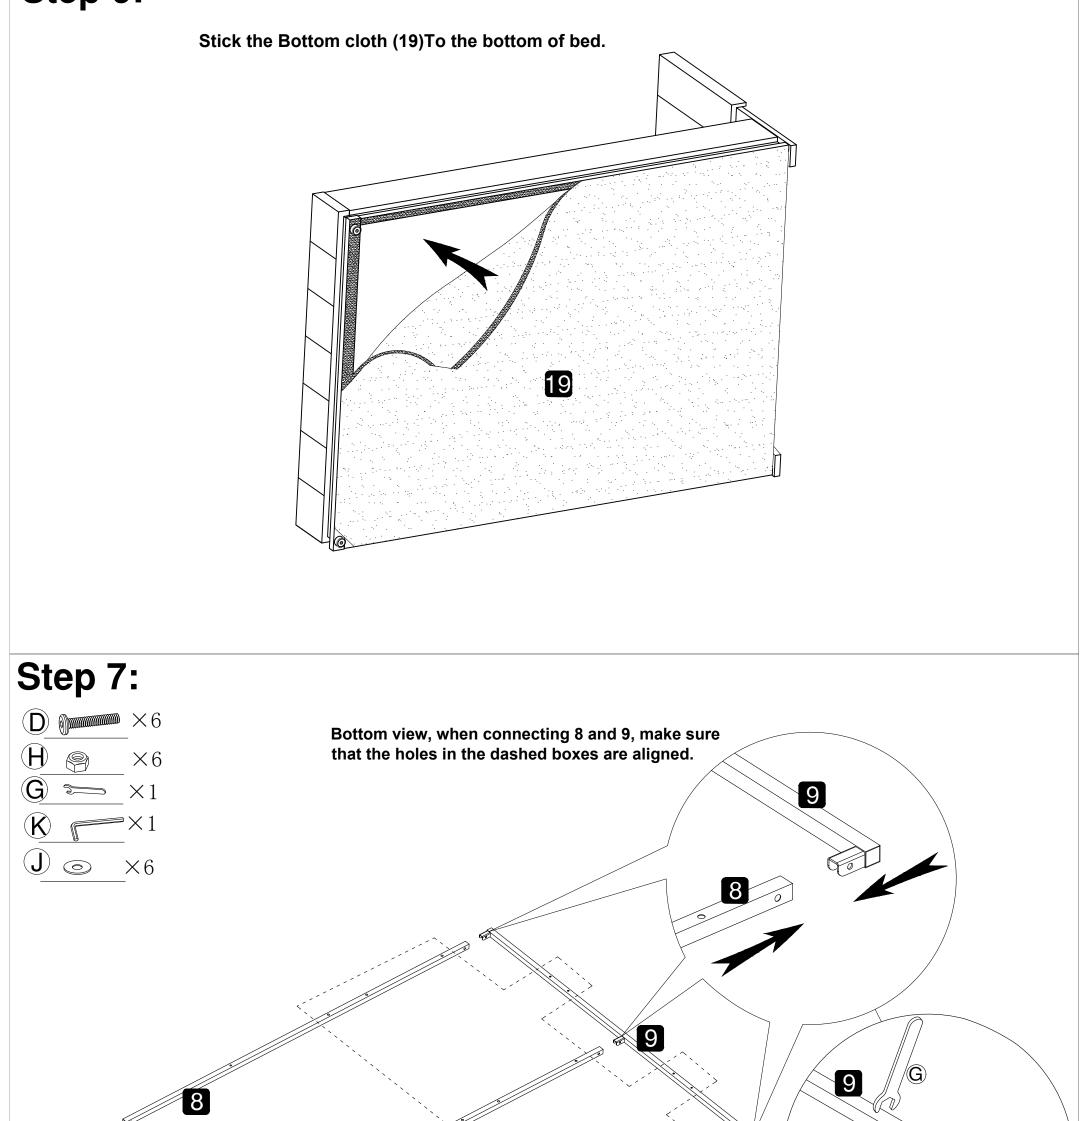


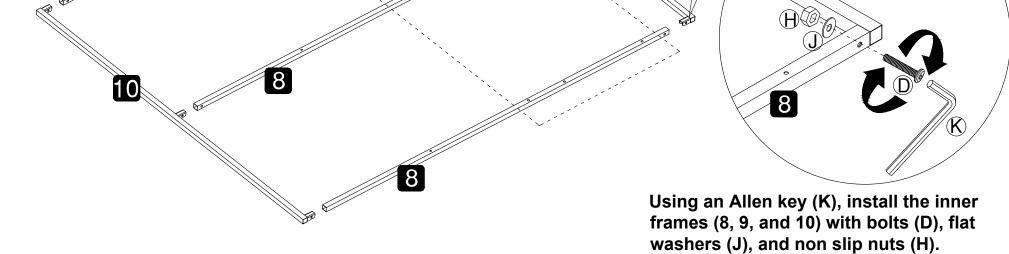

Page 7 of 10

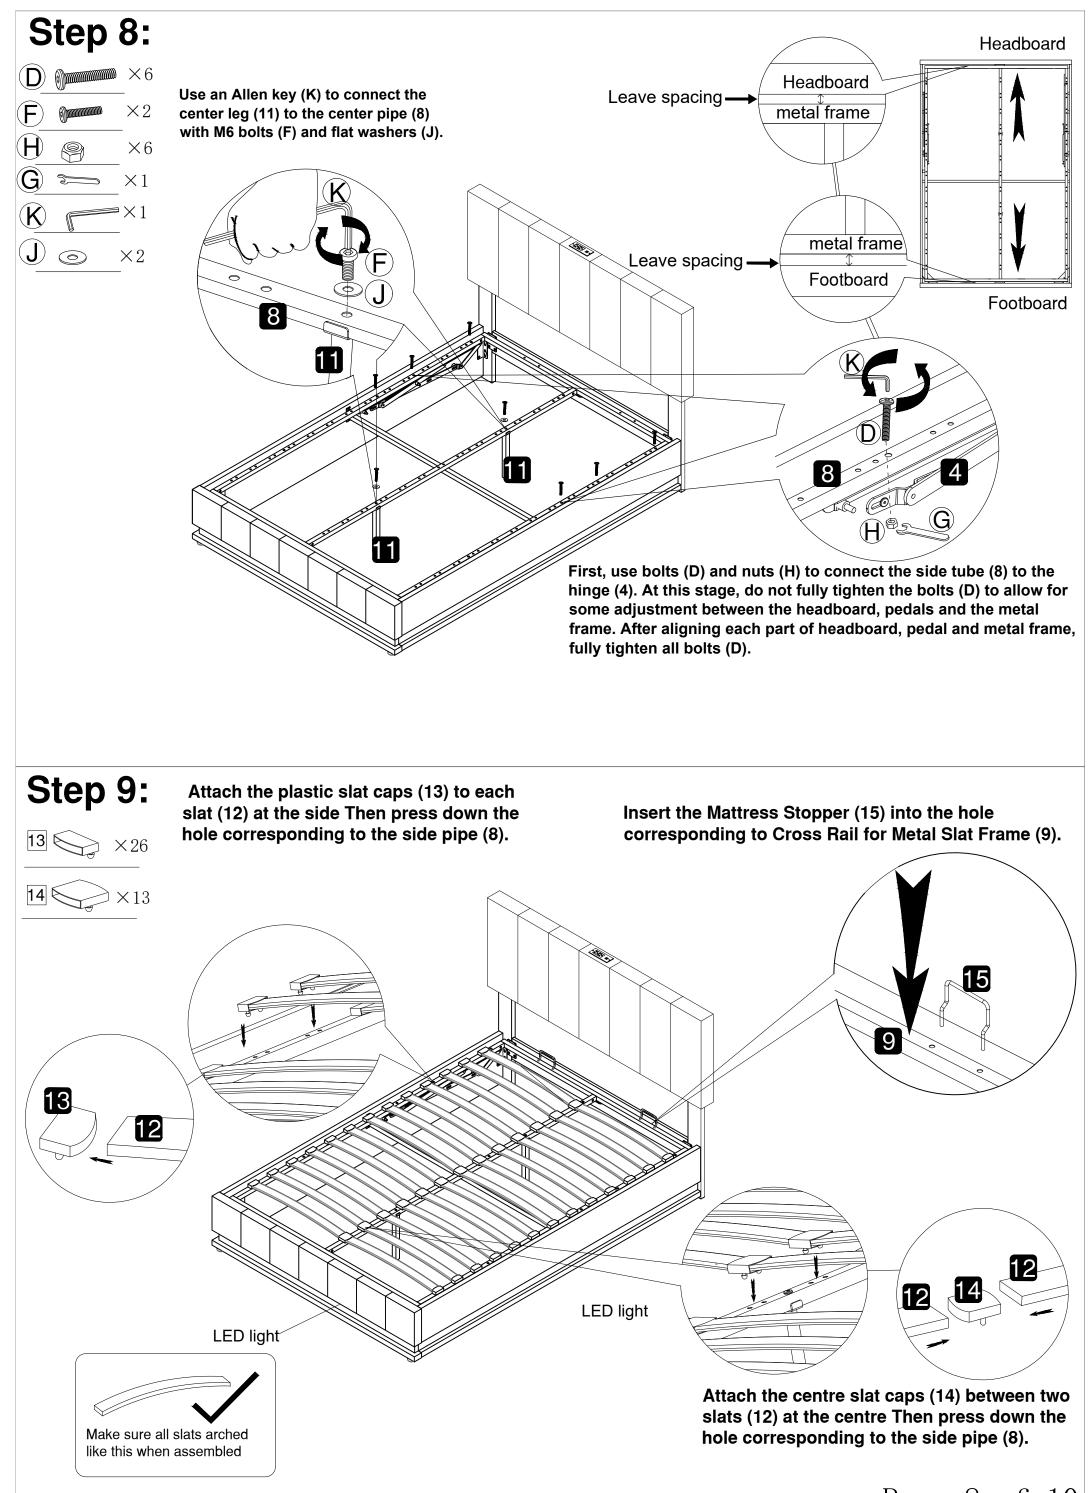

Page 8 of 10

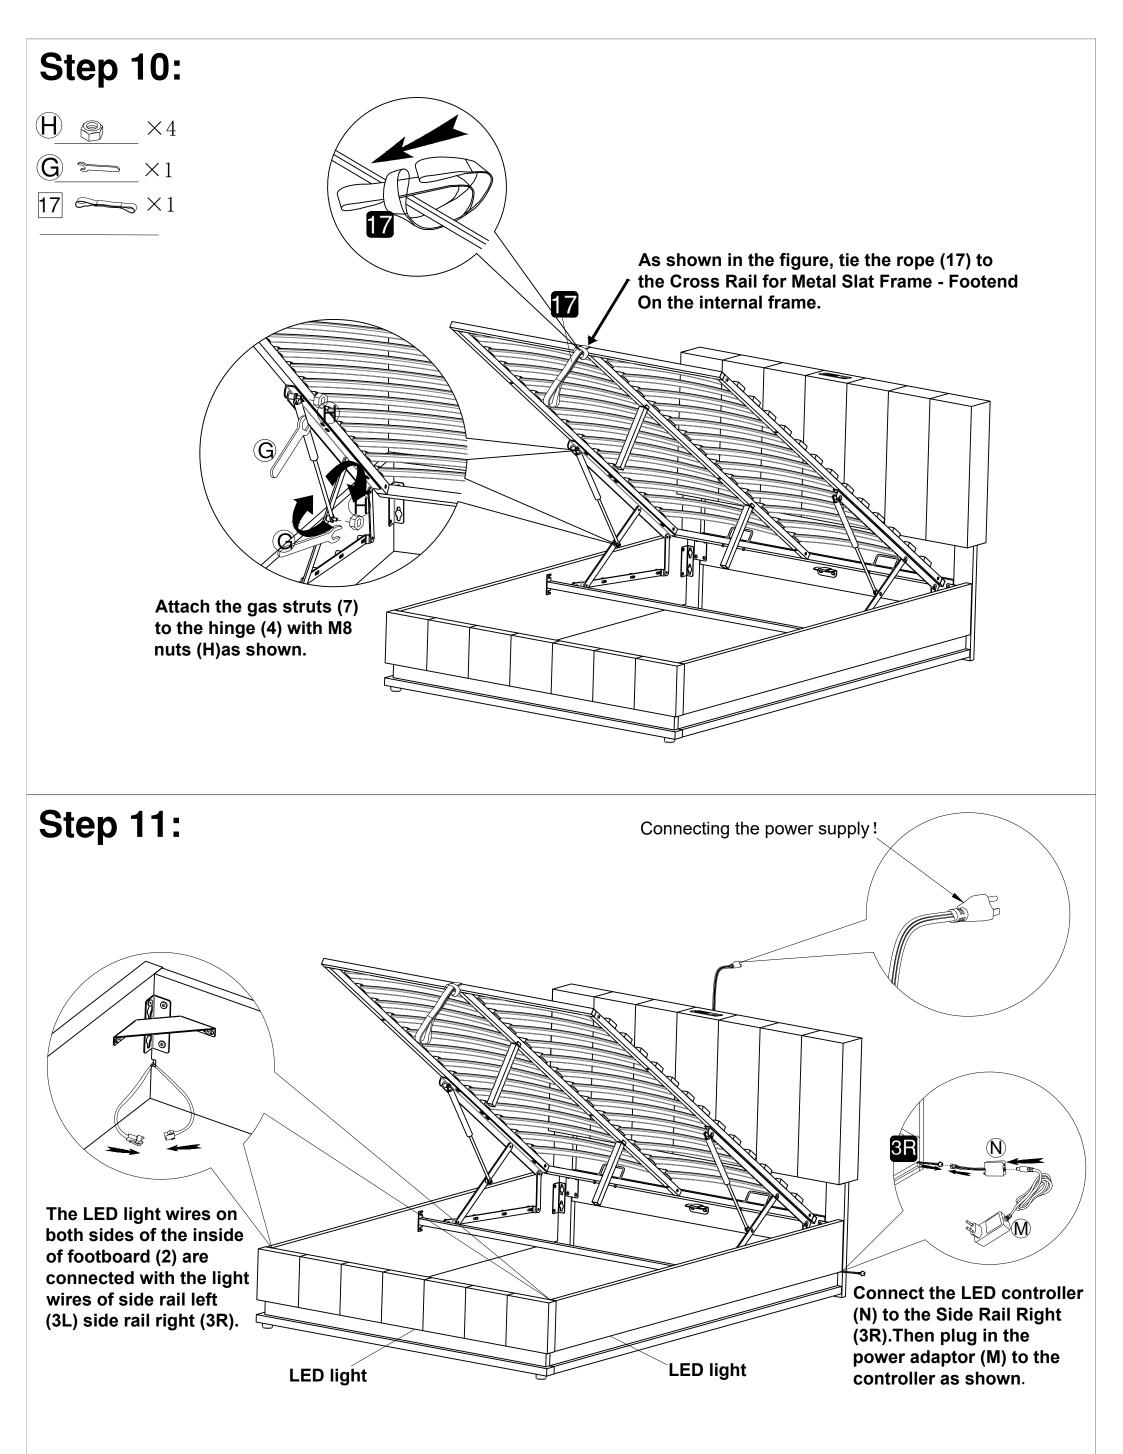

Page 9 of 10

LED light

If you can't let the lights work successfully, please check the following:

1. Please check the direction of the connect, try it in the opposite direction, according to the following picture.

2.Please check the remote control, it need you to tear down the plastic septum before use it.

3.If one of the colors is not bright, please check whether the four wires in the plug are skewed, and move the main line to make the four wires flush.

(1)

Working temperature: -20-60 °C Product size:L62xW35xH23mm Net weight:42g Output: Three CMOS drain- open output

I.Specifications:

Supply voltage: DC12V Package size:L95xW68xH45mm

Gross weight:57g

Connecting Mode: Common anode

II.Control Method:

(2)


Max load current: 2 A each color

Adopt RF remoter to control the led controller, which has 24 buttons, the function of each button as the table below:

Operation Instructions of Controller

Brightness +(Speed up)	Brightness - (Speed down)	Off	On
Static red	Static green	Static blue	Static white
Static orange	Static pea green	Static dark blue	7 color jumpy change
Static dark yellow	Static cyan	Static brown	All fade out&fade in
Static yellow	Static light blue	Static pink	7 color fade change
Static straw yellow	Static sky blue	Static purple	3 base color jumpy

III.Panel specification and connecting drawing as follows:

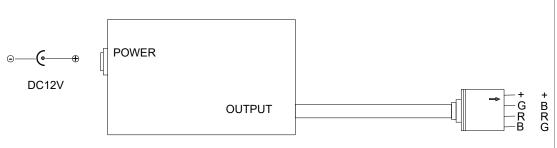

IV.Warning:

1. Supply voltage of this product is DC12V never connect to DC24V or AC220V. 2.Never connect two wires directly in case of short circuit.


3.Lead wire should be connected correctly according to colors that connecting diagram offers.

4.Warranty of this product is one year, in this period we guarantee replacement or repairing with no charge, but exclude the artificial situation of damaged or overload working.

WARNING

THIS PRODUCT CONTAINS A BUTTON BATTERY If swallowed, a lithium button battery can cause severe or fatal injuries within 2 hours.

Keep batteries out of reach of children.

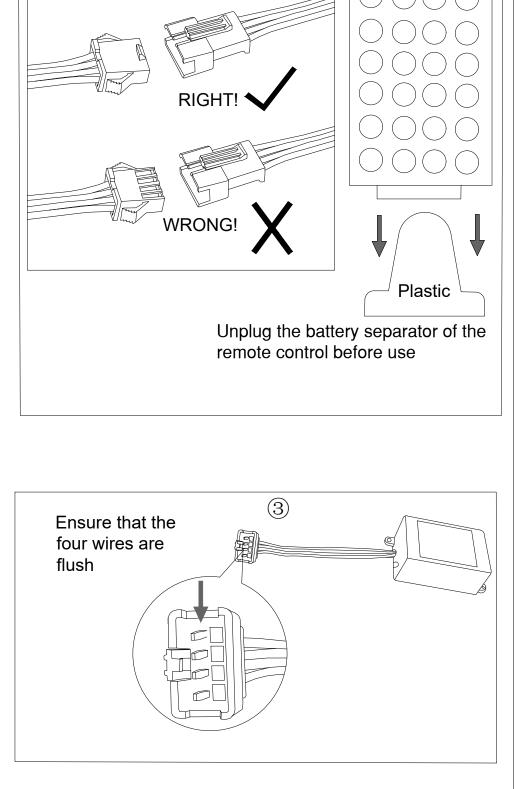

1. Please check the direction of the arrow 2. Please pull the plastic block out of the remote control

3. Please check whether the four wires of the plug are neat

If you think batteries may have been swallowed or placed inside any part of the body, seek immediate medical attention.

Page 10 of 10