



INSTALLATION GUIDE – FRAMED HAMPERS

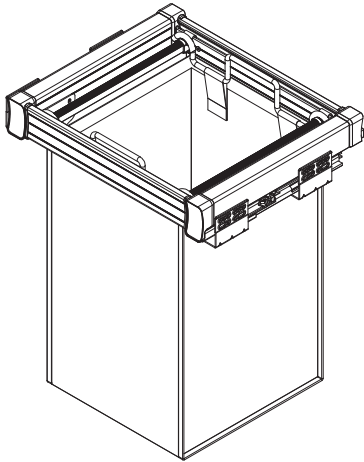


16.5" - 24"

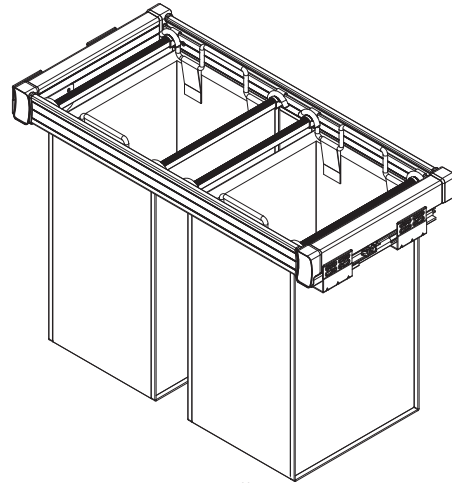


30"

- Aluminum Frame Hamper with **Soft-Close Slides**
- Designed for **14" deep cabinets**
- Available in multiple widths: **16.5", 18", 24", 30" widths**
- Hamper heights: **22"**
- Load capacity: **80 lbs**


Included Components

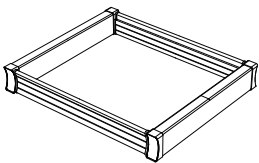


Aluminum frame




Aluminum rods
(Crossbars)

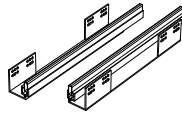

Left & right
soft-close rails



Plastic slide covers
(with pre-installed
3M tape)

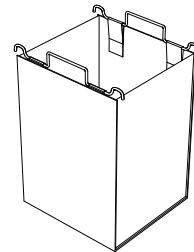


Fabric hamper bag
with metal
handle inserts




Mounting
screws


Required Tools

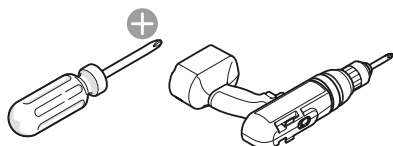

Phillips screwdriver or drill



Tape measure


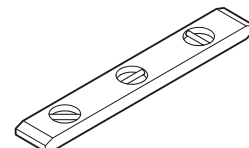


Level

Installation Steps


1 Select Position

- Choose hamper location inside cabinet.
- Ensure clearance above and below.

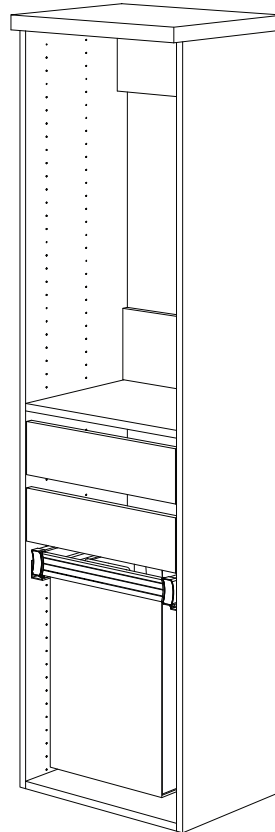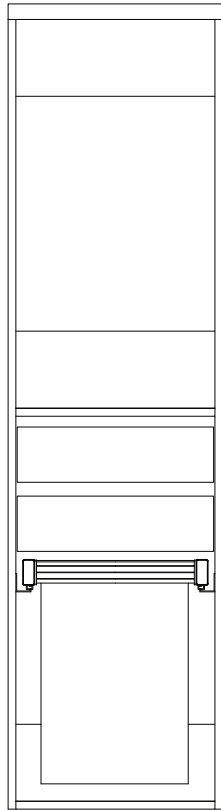


2 Align Rails

- Identify left and right slides.

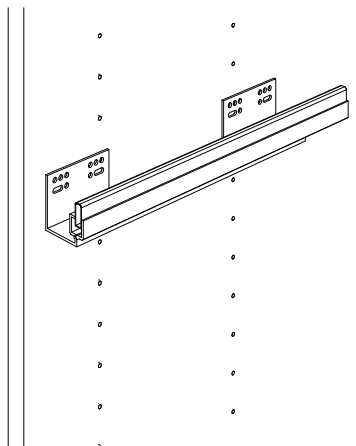

Left rail

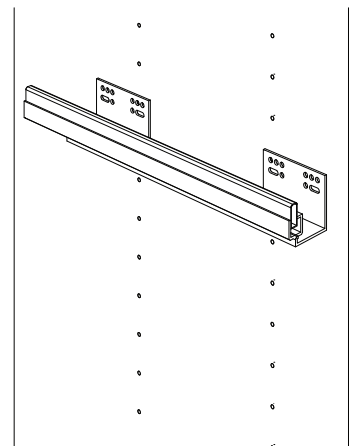


Right rail


Installation Steps

Position the front of each drawer slide 20 mm from the front edge of the cabinet.

- In cabinets with compatible pre-drilled holes, align the drawer slide with the holes and secure using the supplied 5mm screws.

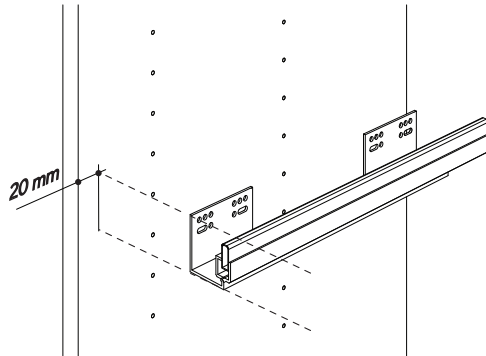


- In other cabinets:
 - Measure 20 mm from the cabinet front edge and mark the front mounting hole.
 - Use any of the 12 holes at the front of the slide as the first screw position.
 - Position the rail at this mark, ensure it is level.
 - Use the rail itself as a template to mark and drill the remaining rear mounting hole.

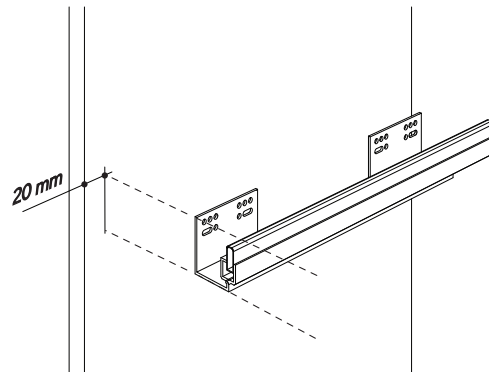

3 Fasten Rails

- Secure slides with provided screws.
- Confirm both sides are parallel and level.

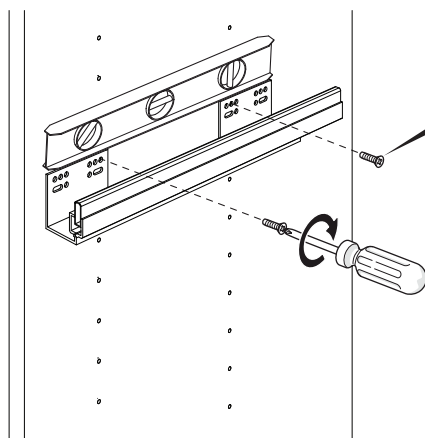


-  Euro screws for pre-drilled cabinets
-  Wood screws for generic cabinets


Installation Steps

4 Attach Frame

- Position aluminum frame onto slides.

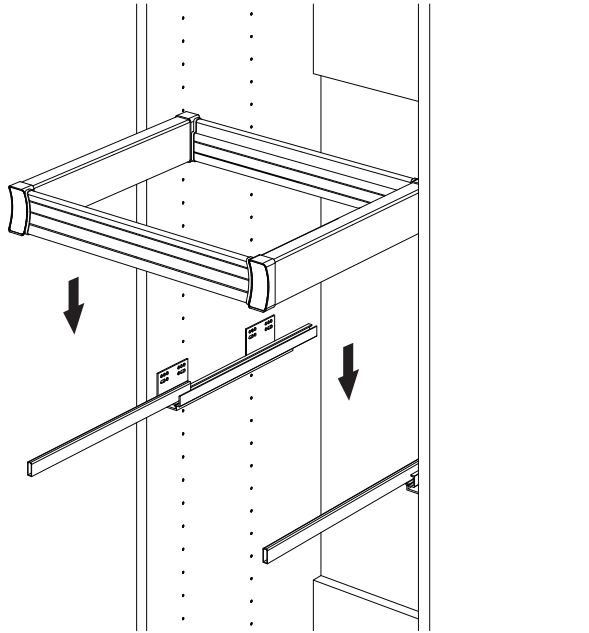


- Clip/seat frame securely into place.

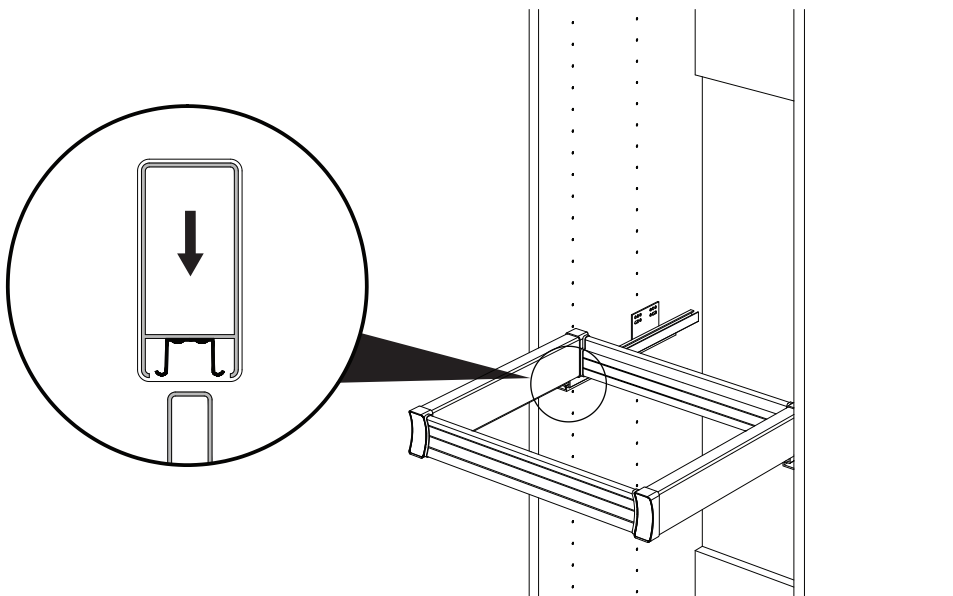

Installation Steps


5 Insert Crossbars

- Insert aluminum rods into the designated slots on the frame.
- Ensure rods are fully seated.

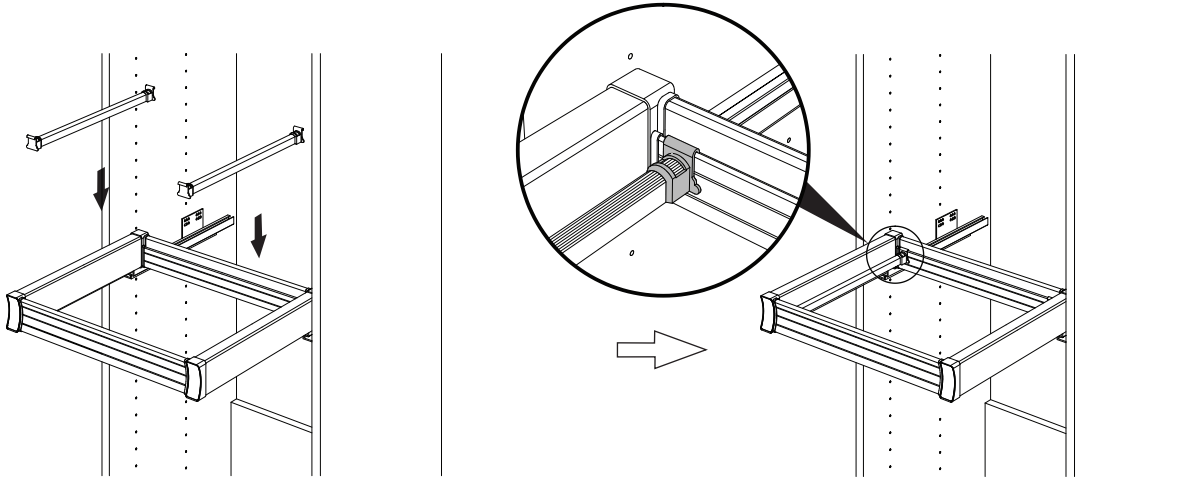

6 Install Hamper Bag


- Hook bag handles onto aluminum rods inside the frame.

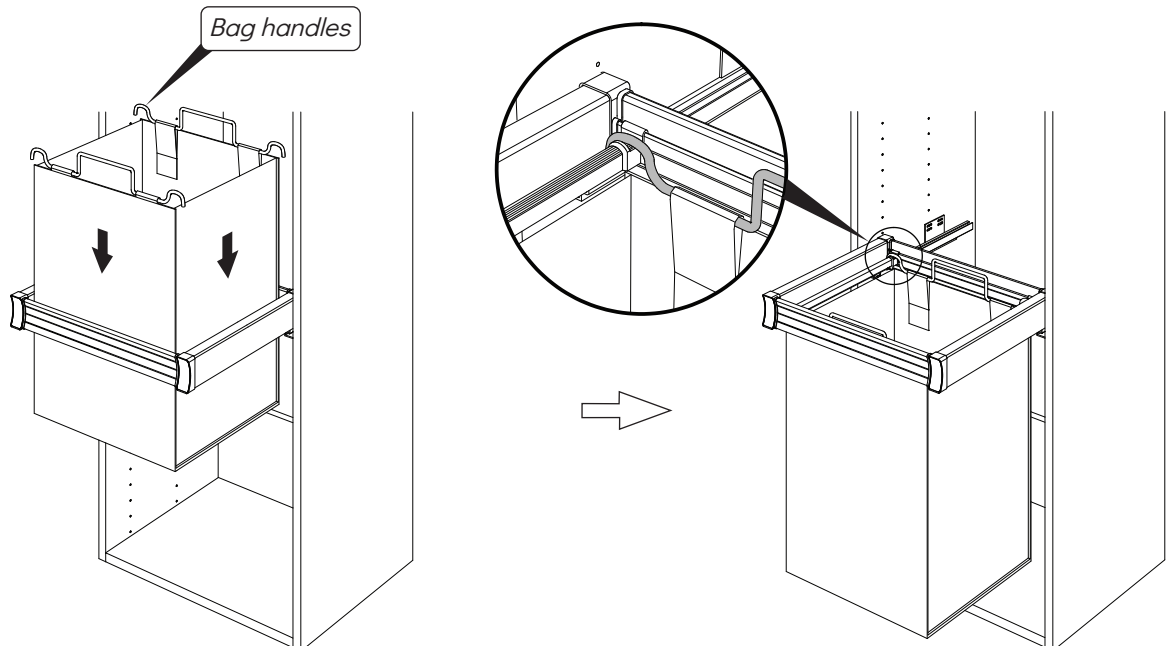

Installation Steps


7 Apply Covers

- Peel off the release liner from the pre-installed 3M tape.
- Press plastic covers onto the slides to conceal hardware.

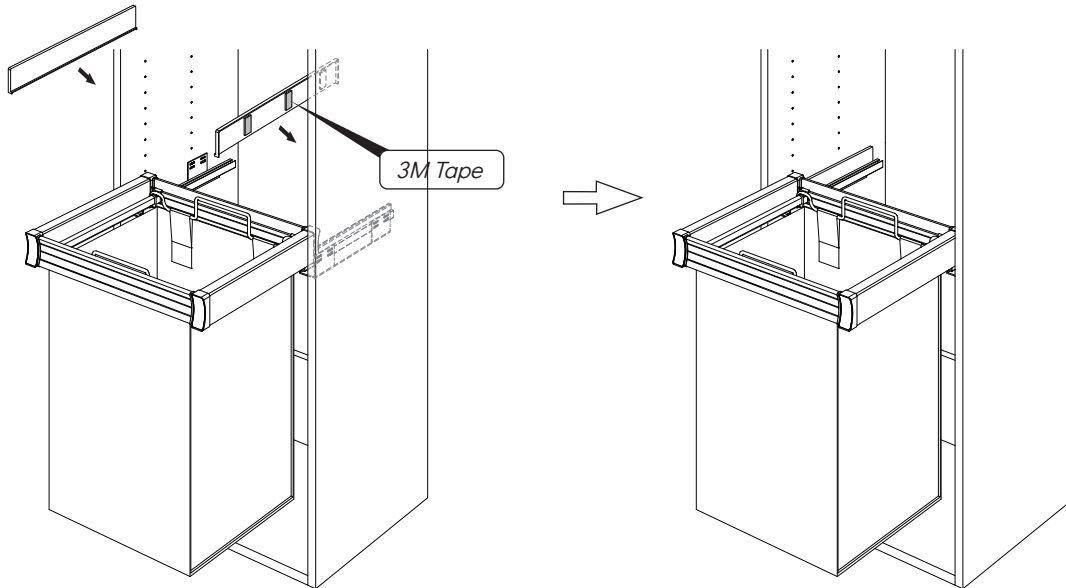

8 Test Operation

- Pull hamper forward to confirm smooth movement.
- Push back to check soft-close function.

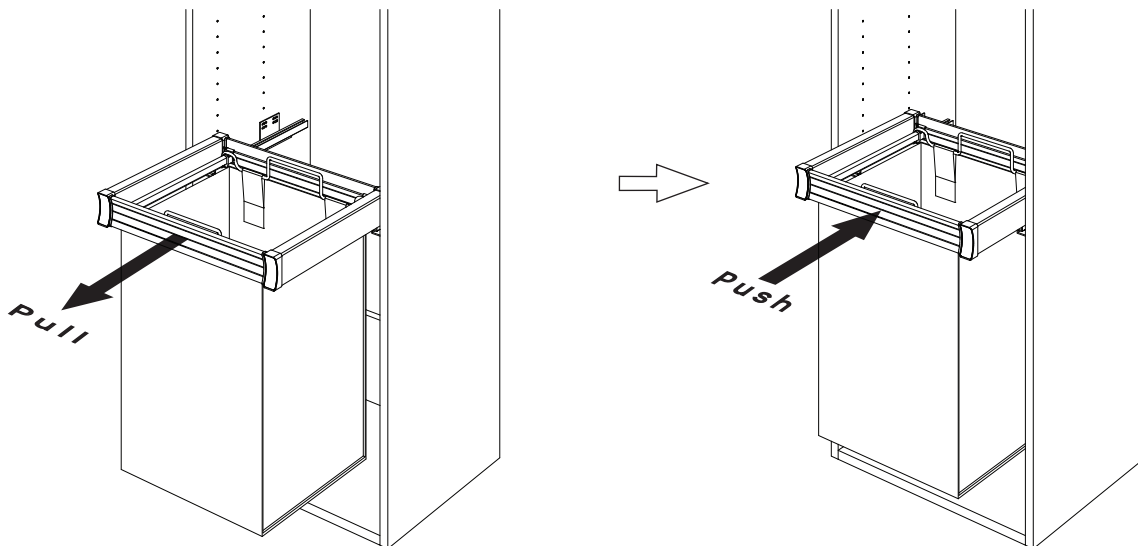

Notes:

- Do not exceed **80 lbs** capacity.
- Hamper bag is removable by lifting handles off the rods.
- Re-check screws periodically.
- For door installation, see the separate Hamper Door Installation Guide.