


Installation Instructions

Aluminum **Medicine Cabinets**

All frame LED light.

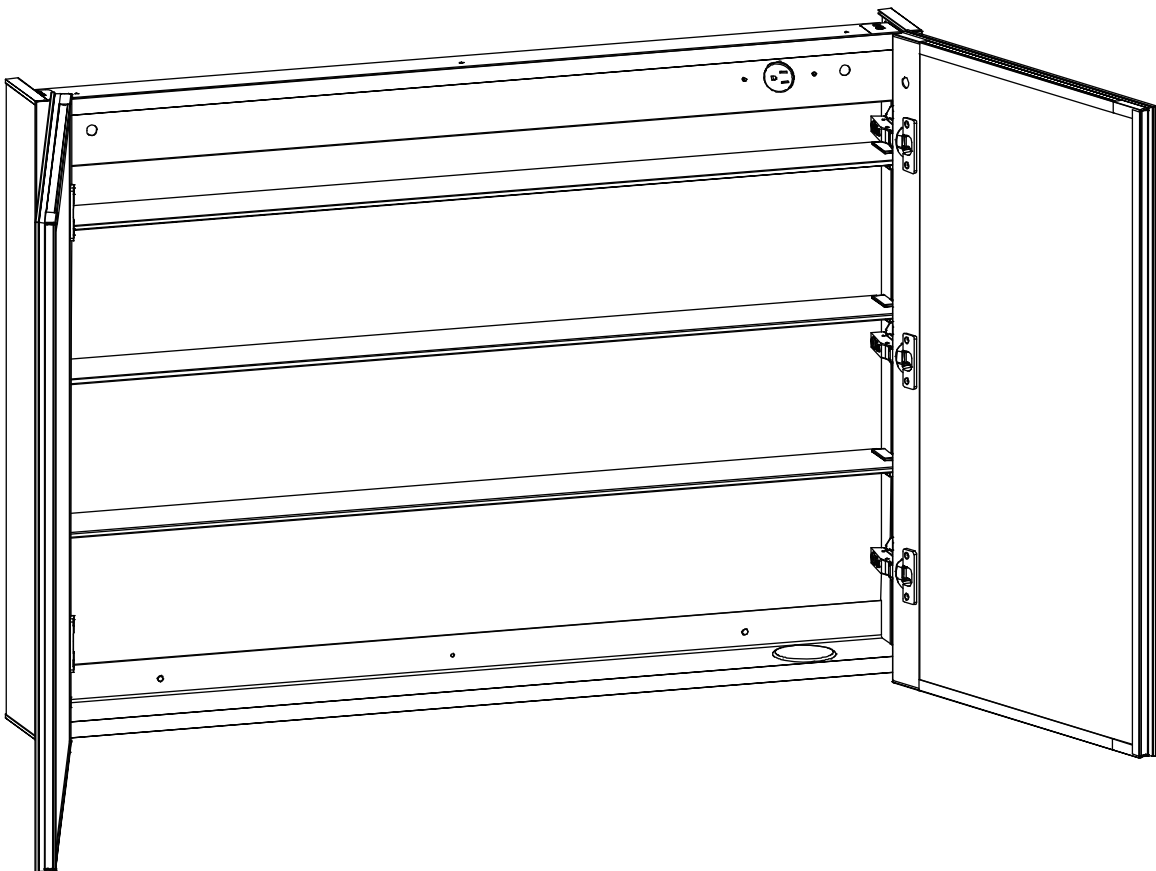

Glass mirror + Aluminum body = 42" X 30" X 5"



READ ALL INSTRUCTIONS BEFORE UNPACKING THE PRODUCT

INSTRUCTIONS THAT, IF IGNORED COULD RESULT IN DEATH OR SERIOUS INJURY CAUSED BY INCORRECT HANDLING OR INSTALLATION OF THE PRODUCT. THESE INSTRUCTIONS MUST BE OBSERVED FOR SAFE INSTALLATION.

CAUTION!



**TWO PERSON
LIFT REQUIRED**

**2 PEOPLE ARE REQUIRED TO LIFT AND DURING
ENTIRE INSTALLATION OF THIS PRODUCT**



**INSTALLATION OF THIS PRODUCTS BY AN
INEXPERIENCED INSTALLER MAY RESULT
PERSONAL INJURY OR DEATH!**



We reserves the right to change, update, modify, alter, redesign this manual/product or its policies without prior notice!
It is your responsibility to visit website to download or contact customer service for the most updated version of the installation instructions.

We shall not be liable for any injuries or property damages in connection with this product during installation or use of this product!

Warm tips:

During operation, never put hard and sharp materials directly on the mirror surface, otherwise, it may result in current leakage and even personal injury accident.

Never forget to turn off the power switch in storm days, or otherwise, lightning may damage electric elements of the product.

During normal operation, never forcibly pull out the power plug to stop the product, or otherwise, electric elements of the product may be damaged.

Please pull out the power plug if the product is not used for a long time.

During unpacking the product and prior to installation inspect your new product for any damages or missing parts. Do not attempt to install or operate the product if the product is damaged.



Expansion plug Ø8



Screw M5




Plastic hang




L-Mounting Clip


TOOLS REQUIRED FOR INSTALLATION



Tape Measure




Level




Drill




Knife




Drill bit



Pencil/Marker




Philips
Screwdriver



Hammer

DIMENSIONS/TECHNICAL DATA

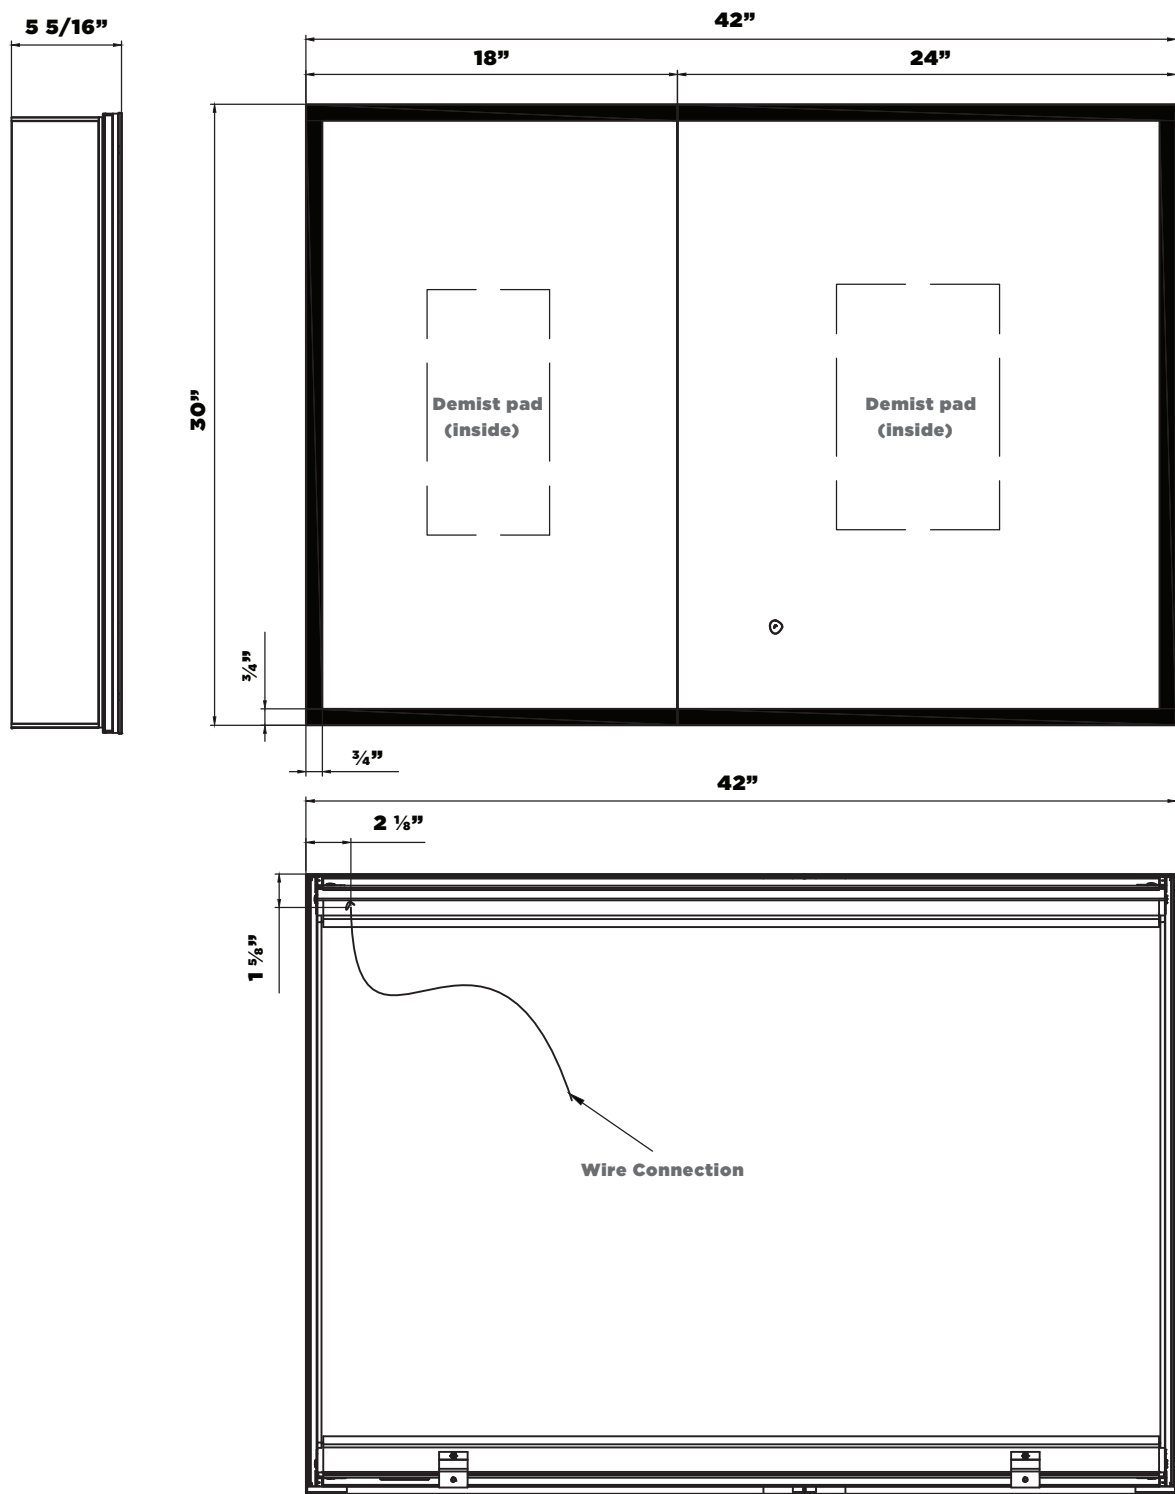

ATTENTION! Dimensions may vary by up to $\frac{3}{8}$ ". It is highly recommended to pull all dimensions of actual model for installation and measuring purposes.

Installation method of Recessed Mount

(If the product is mounted on the wall and then buried in the wall, the installation steps are as follows:)

1. Positioning and Installation of Mirror Cabinet:

1. 1 Remove the side panels from the cabinet (Fig.1)
1. 2 Loosen the screws on the glass bracket (Fig.2)
1. 3 Remove the four glass holders (Fig.3)
1. 4 Put the screw back in place (Fig.4)
1. 5 Take out the wall holder (Fig.5)
1. 6 Install the nut back onto the screw (Fig.6)
1. 7 Measuring the wall size of the cabinet (Fig.7)
1. 8 Open the screw hole in the wall (Fig.8)
1. 9 Connect the power cord (Fig.9)
1. 10 Put the cabinet into the wall (Fig.10)
1. 11 Open the door and lock the screws on the cabinet (Fig.11)
1. 12 After the installation is complete, power on, test function (Fig.12)

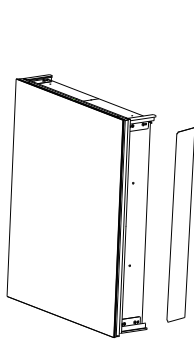


Fig.1

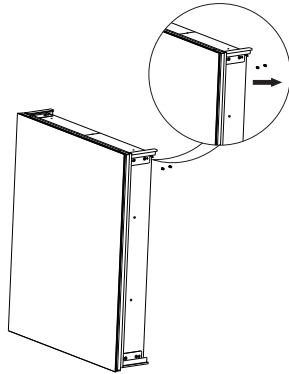


Fig.2

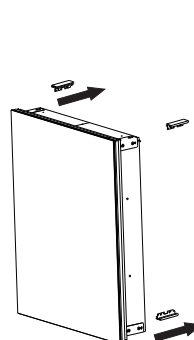


Fig.3


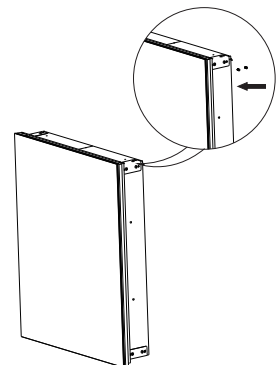


Fig.4

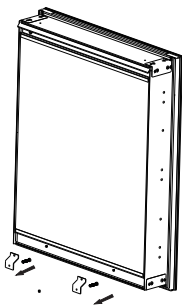

If the product is small,
only provide one pull-proof part

Fig.5

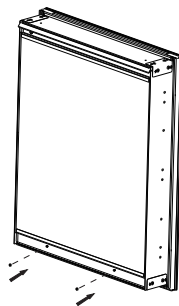


Fig.6

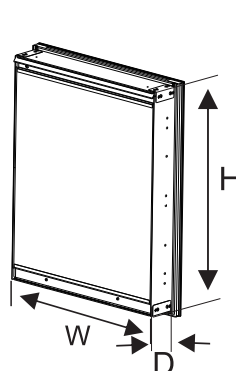


Fig.7

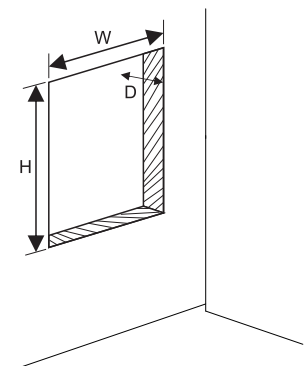


Fig.8

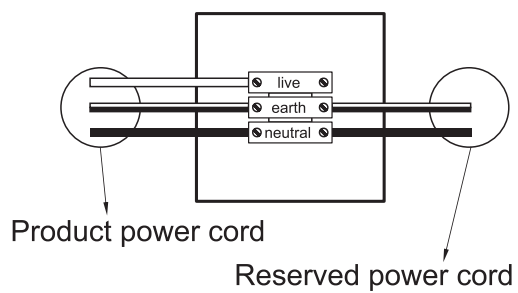


Fig.9

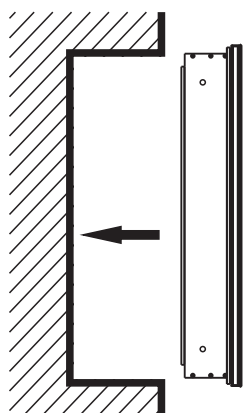


Fig.10


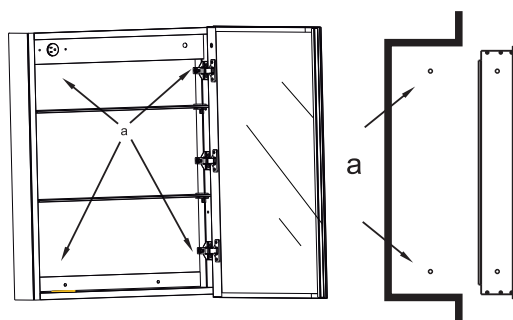


Fig.11

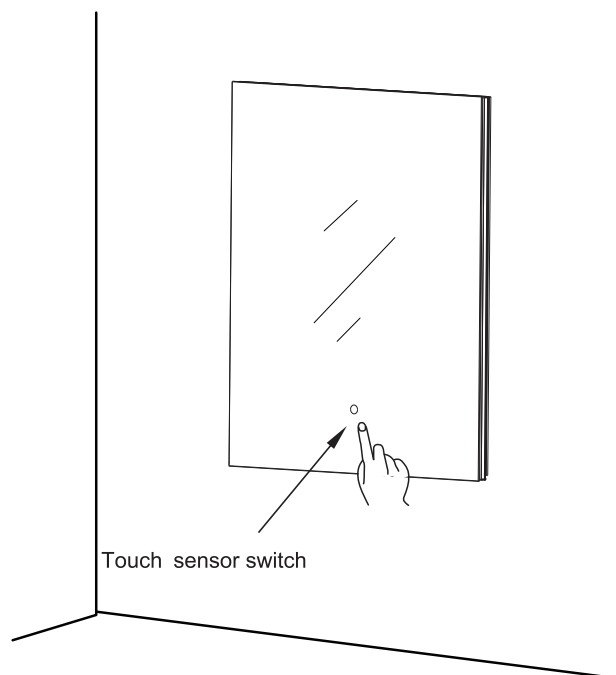

(If the product is directly buried in the wall,
the operation is as follows)

Fig.12

Installation steps for wall mounting

1. Fixing the bar

- 1.1 Open the product packaging, and check whether the product has any exception or functional damage; if yes, please return it to the dealer.
- 1.2 After selecting the location of the mirror cabinet, check whether the wall is solid, and measure the distance of the holes (A) in the aluminum alloy bar with a tape measure and mark it on the wall with a pencil (Fig.13).
- 1.3 Drill holes in the marked position with electric drill and $\varnothing 8$ drill bit, and use special ceramic drill to check whether the wall surface is ceramic tile.
- 1.4 Knock the expansion plugs into the holes in the wall with a hammer, and then tighten the screws with a screwdriver to fix the bar, and calibrate the level with a spirit level (Fig.14).

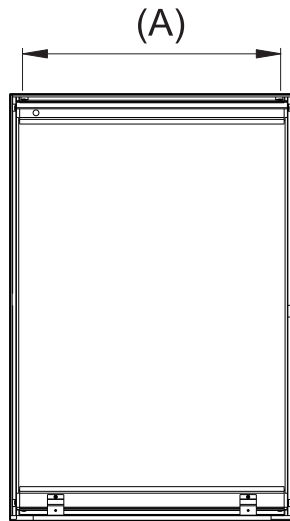


Fig.13

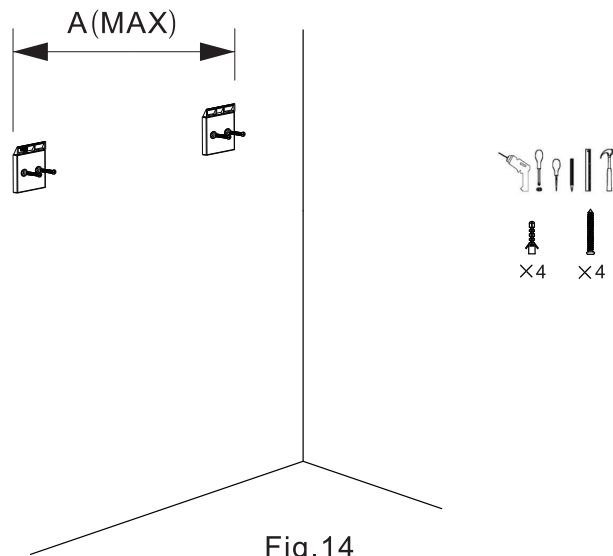


Fig.14

2. Positioning and Installation of Mirror Cabinet:

- 2.1 Install the mirror cabinet on the hanging strip, see details in (Fig.15). Choose right locating place and use pencil to make sign on the wall through the base fixing the hole (a) (Fig.16).
- 2.2 Remove the mirror cabinet, drill the fixing hole in the wall in the marked position, and place the expansion plugs (Fig.17).
- 2.3 Repeat the operation as shown in Fig 9 and mount the mirror cabinet to the bar,, make sure that the circuit on the wall is not energized and connect the three-core wire reserved on the wall to the three-core wire terminal block on the product (Fig.18), and then use the screwdriver to tighten the screws into the holes
- 2.4 In order to turn on the mirror light, please follow below procedure: 1) Push the ⊙ sensor on the mirror 2) Let your finger leave the ⊙ sensor for 1 second 3) Hold press the ⊙ sensor. Then the light will turn from 100% to 10%, after that you can repeat 2nd and 3rd procedure, the light will turn from 10% to 100%.

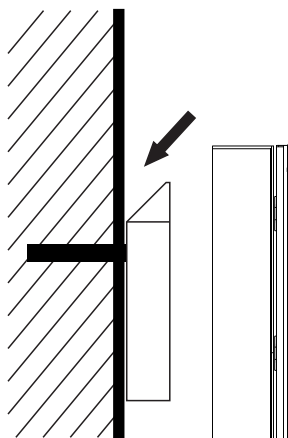


Fig.15

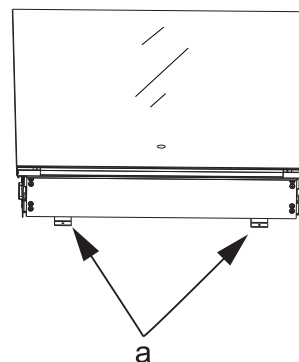


Fig.16

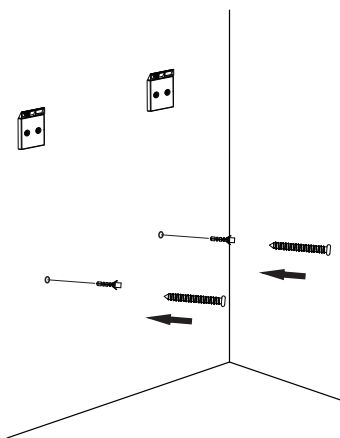


Fig.17

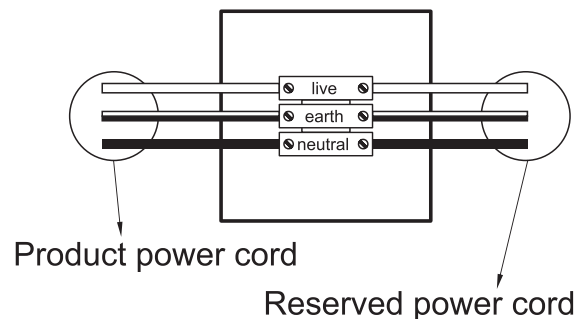


Fig.18

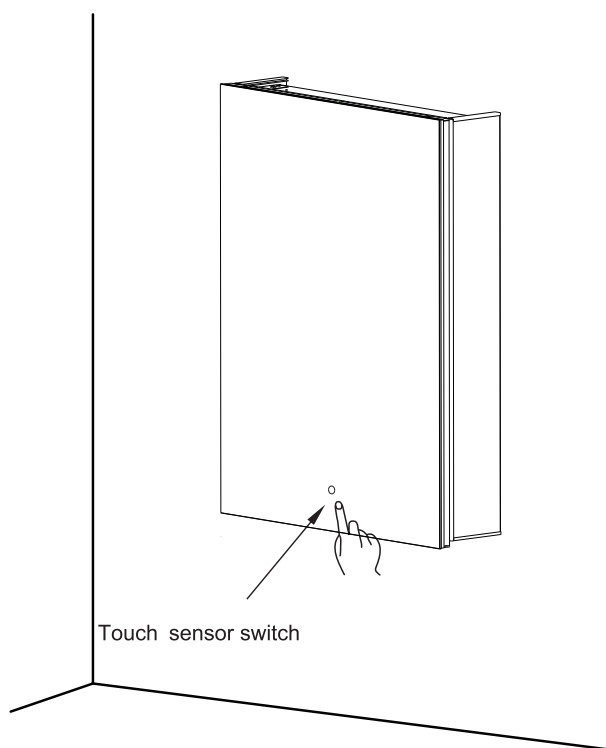
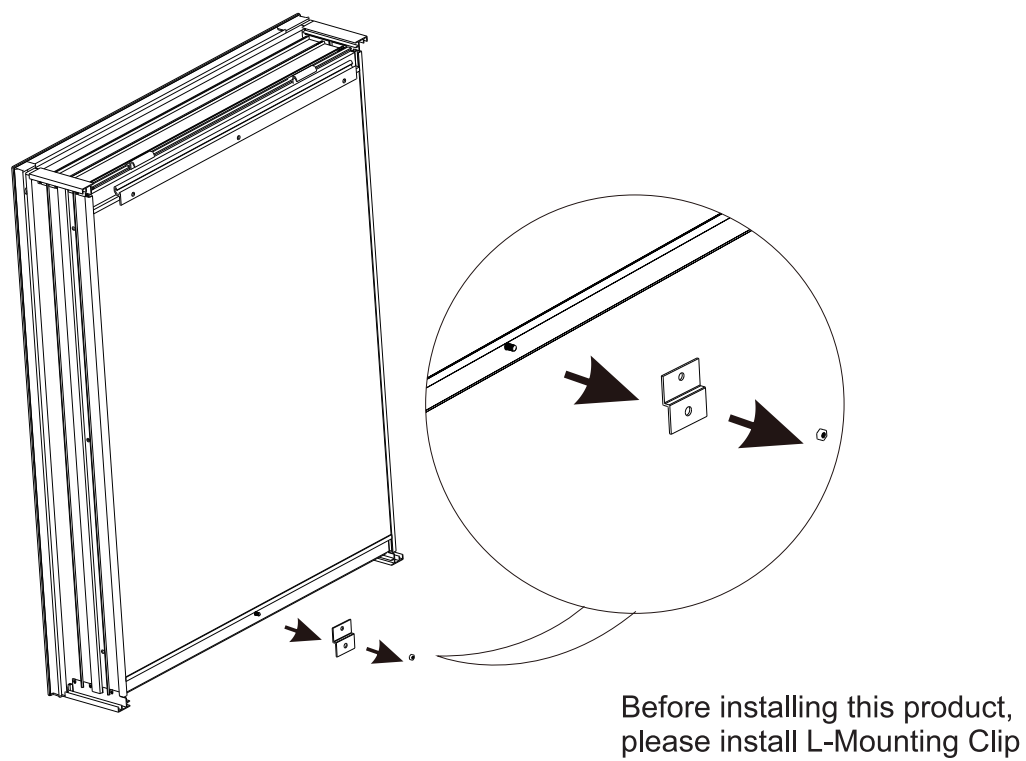


Fig.19

Mirror Door Adjustment

- 1.1 Fix the mirror cabinet, and check if the mirror door is flat; if not (as shown in Fig. 20), and adjust the distance of the door opening by adjusting the hinge screw (b) and keep the door level (Fig. 21).


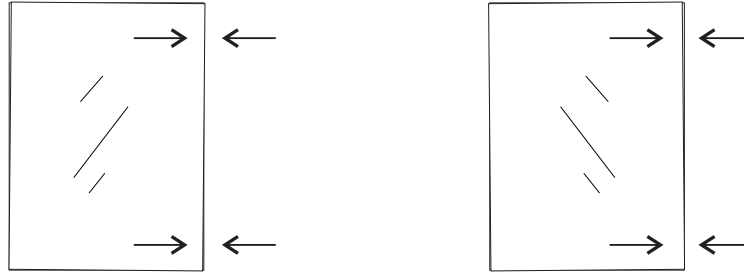


Fig.20

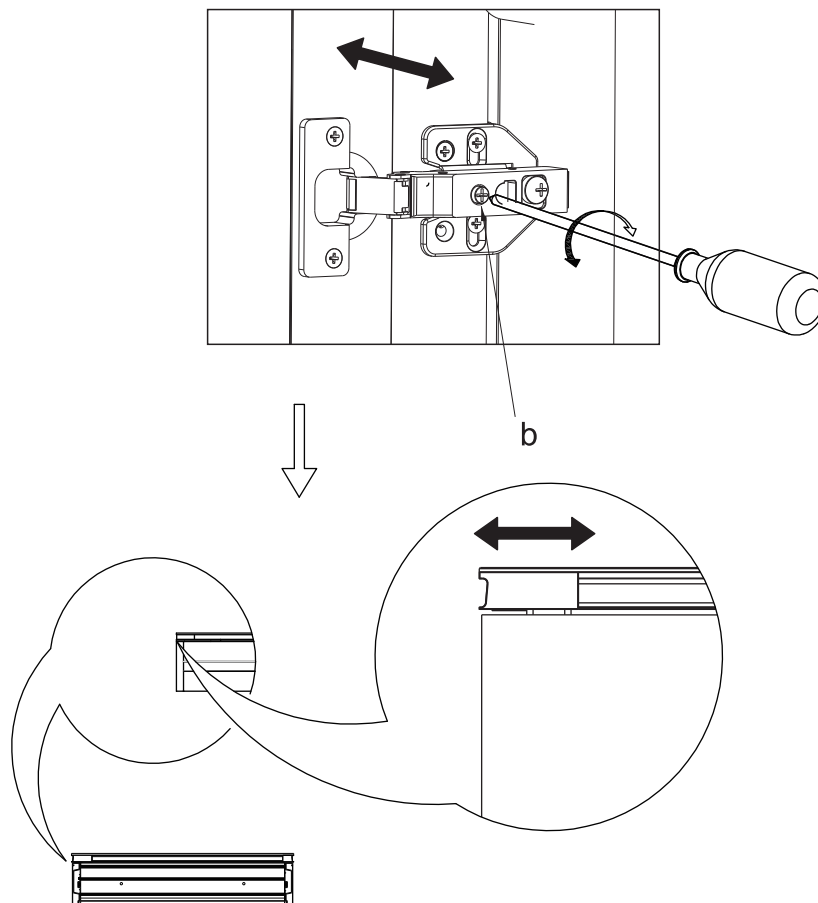

Rotate CW: Door moves to the center of the mirror cabinet
Rotate CCW: Door moves to both sides of the mirror cabinet


Fig.21

- 2 If the cabinet door isn't flat (Fig.22), please adjust the distance between the door and the cabinet by adjusting the screw (c) to make the door flat. (Fig.23)

⚠ Warning: The distance between the door and the cabinet should not be too small, otherwise the door can't be opened and may lead to the door rupture.



Fig.22

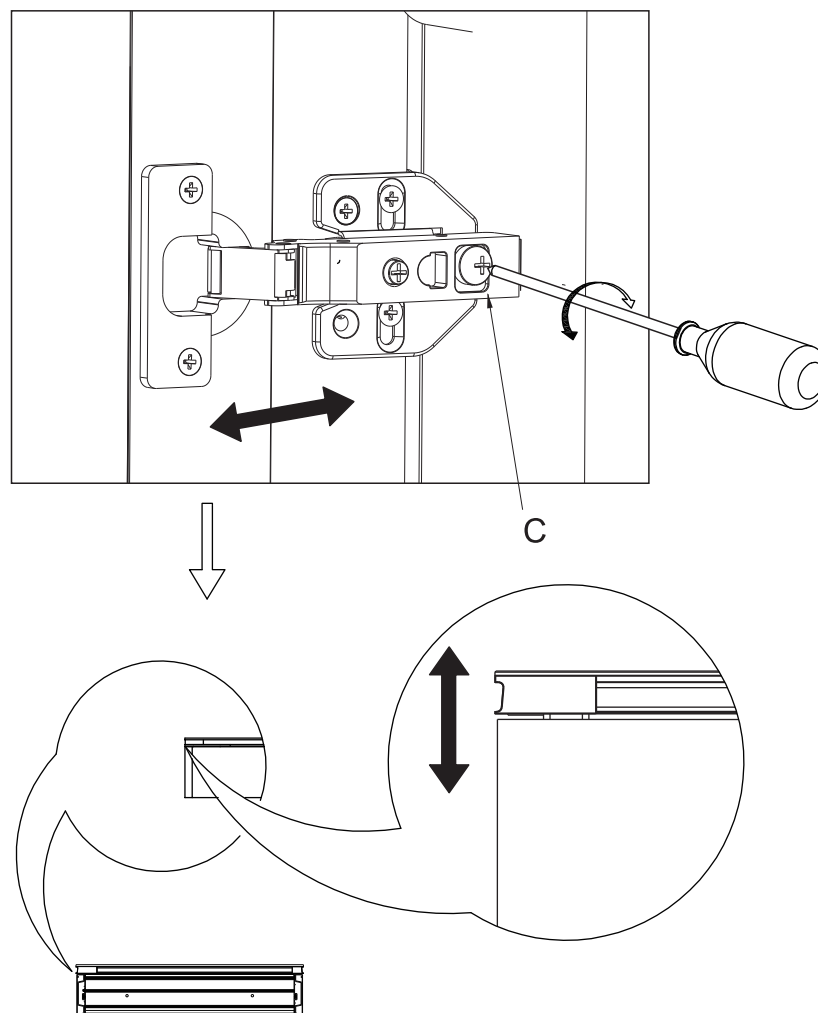

Rotate CW: Distance between door and cabinet reduces
Rotate CCW: Distance between door and cabinet increases

Fig.23

4. Loosen the snap screw (d) of the shelf to adjust the shelf position (Fig.24).

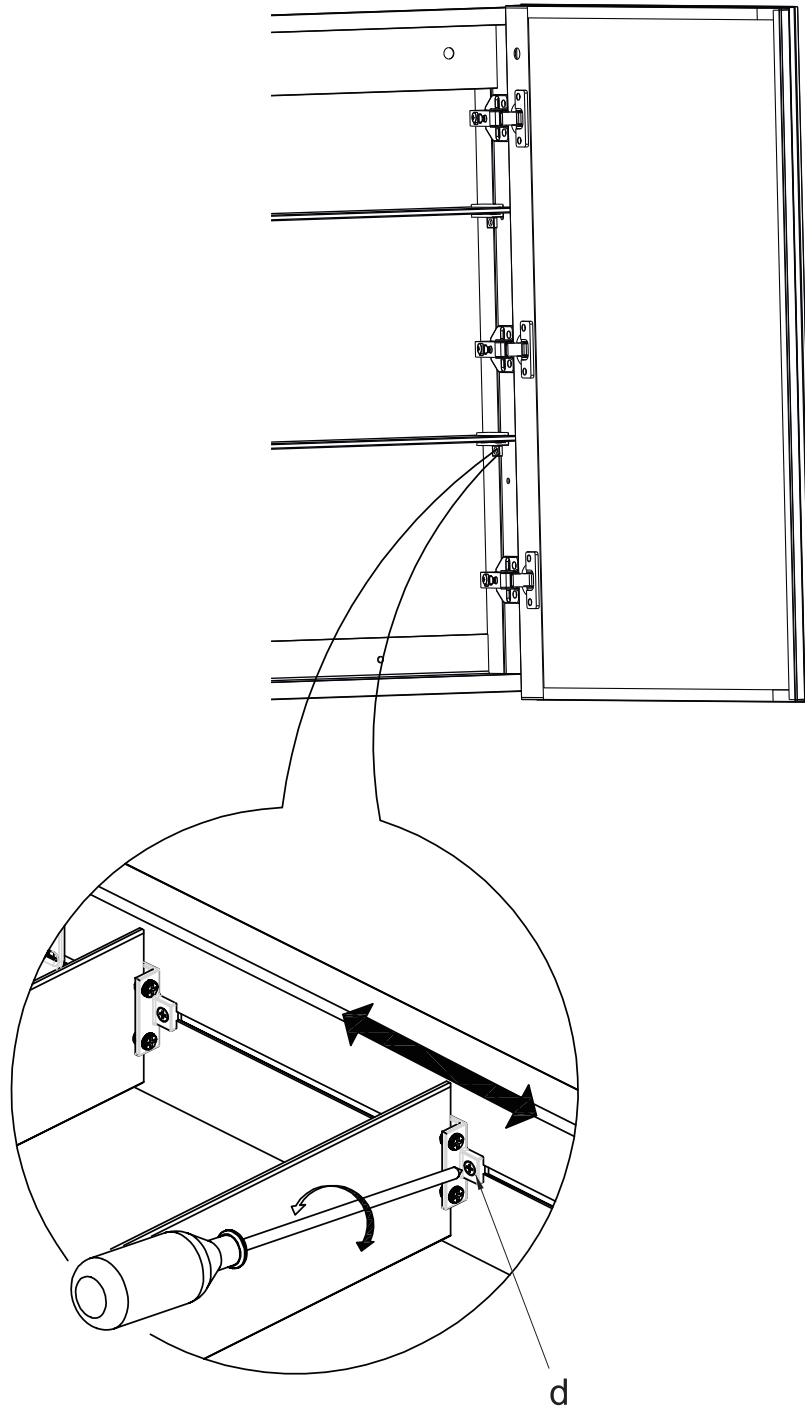


Fig.24



Safety Warning

- Do not disassemble the door unless necessary

Please take your phone in the cabinet's wireless charger (“b”in Fig.25)
to battery charging

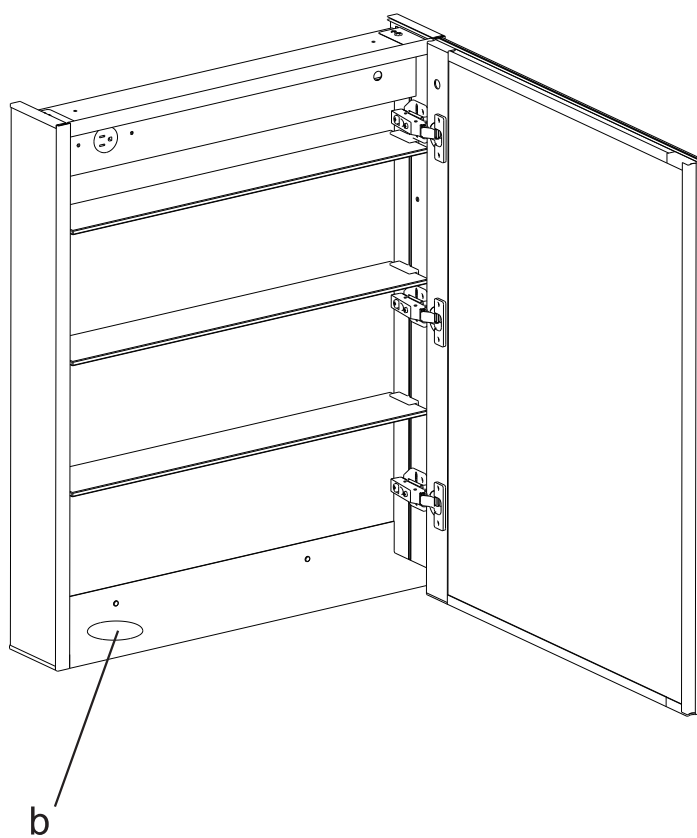


Fig.25