



Assembly Instructions

Caution : You must read this before you proceed. This headboard must be used in conjunction with a Mattress Support Frame (not included and not supplied with this headboard.)

Headboard

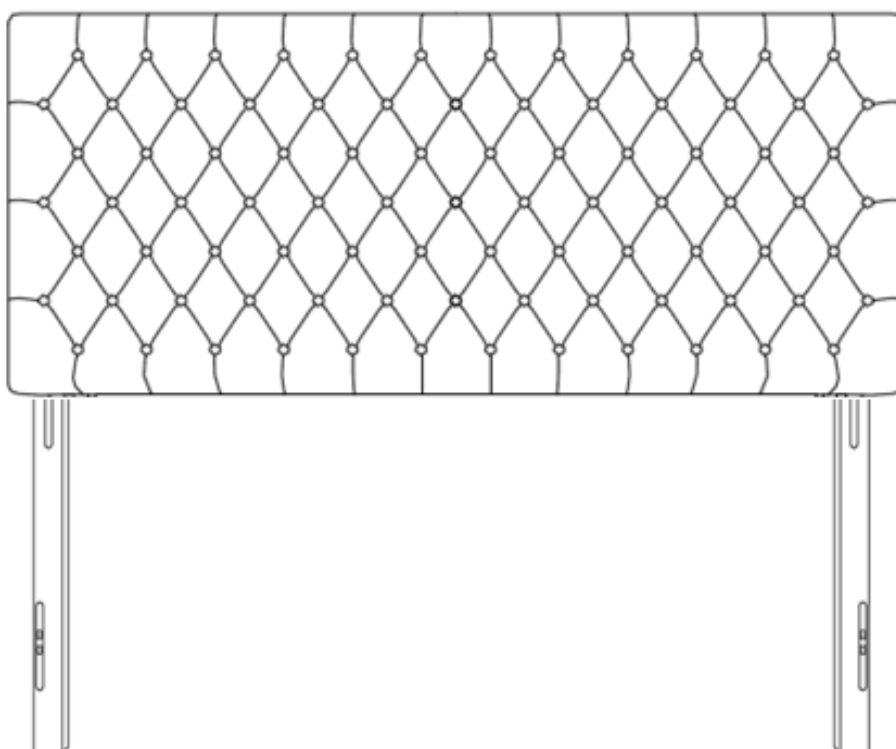

Parts List

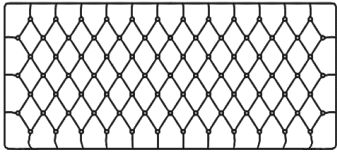Part NO.	Picture	Description	Qty
A		Headboard	1
B		Left Support Leg with 3 Mounting Brackets (With the sticker "Left" on the bottom)	1
C		Right Support Leg with 3 Mounting Brackets (With the sticker "Right" on the bottom)	1



Hardware

Label	Picture	Description	Qty
①		Bolt M8X25mm	9
②		Spring Washer Ring	9
③		Flat Washer Ring	9
④		Nut Cap	5
⑤		Allen Key	1
⑥		Solid Wrench	1
⑦		Screws(1.6cm Self Tapping)	2
⑧		Screws(5cm Self Tapping)	2
⑨		Metal Brackets	4
⑩		Restraint Strap	2
⑪		Screwdriver	not provide

Assembly Preparation

Before Beginning Assembly:

Unpack and place all parts for clear visibility.

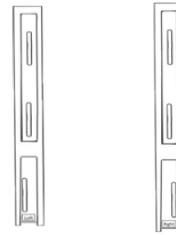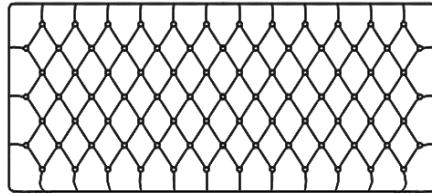


Pack A: For assembly the legs to the headboard

4 Bolts (①) + 4 Flat Washers (③) + 4 Spring Washers (②) with the Allen key (⑤).



Pack B: For assembly the legs to the bed frame

4pcs M8X25mm bolts (①) + 4pcs of Flat Washer Ring (③) + 4pcs Spring Washer Ring (②) + 4pcs Nut Cap (④) with a Solid Wrench (⑥).

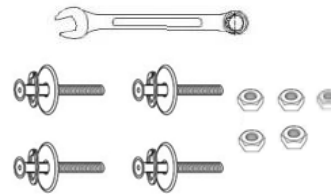

- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-


Assembly Steps

Overview

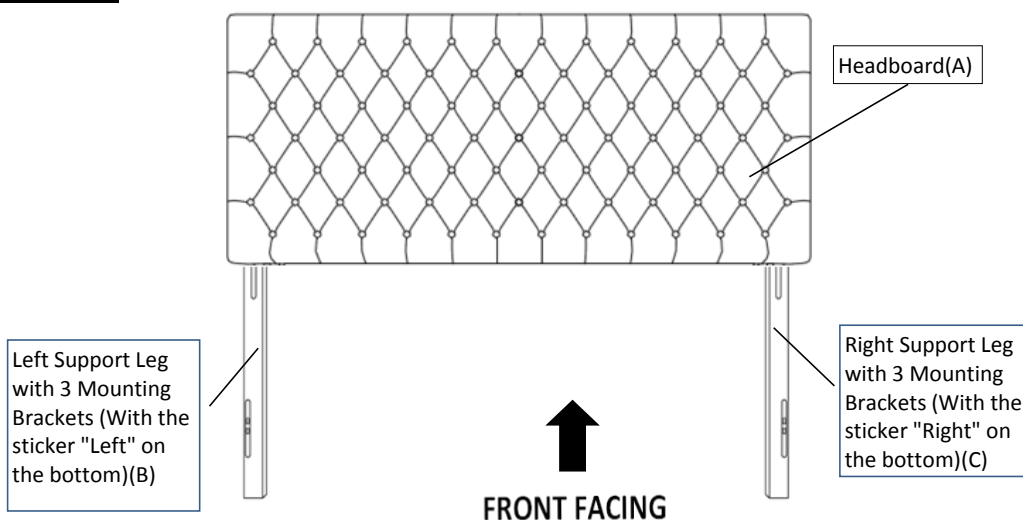

This Headboard has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Bed parts, the above picture is to help you put the various Bed parts into perspective. Please read through the instructions herebelow to familiarise yourself with the parts and steps before assembly.

Step 1

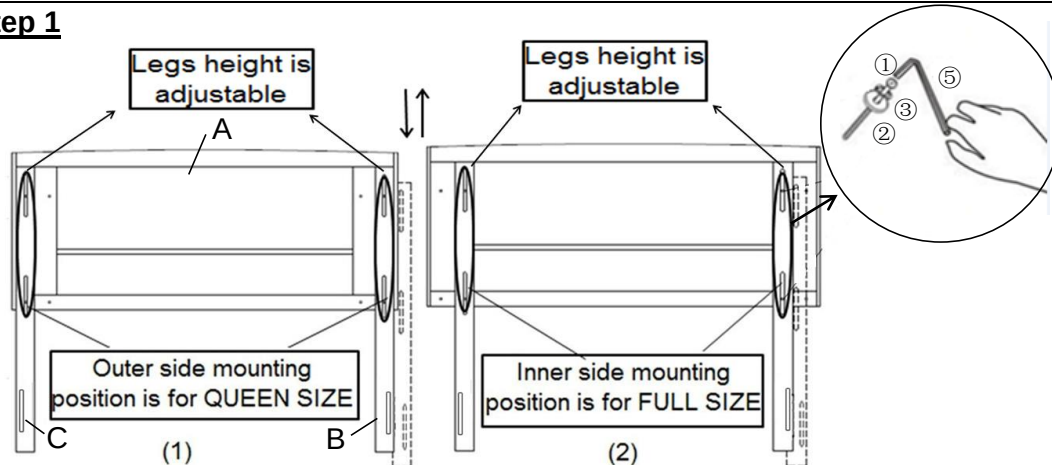

Put the Headboard(A) onto a flat table or panel.

With assistant to your adult partner. One person hold the headboard(A) and another person hold the Support Leg(B)

Align the mounting position on Headboard(A) to the top and middle mounting positions on Left Support Leg(B).

Then, lock the top and the middle mounting positions(use Pack A).

The hardware for Pack A : 4 Bolts (①) ,4Flat Washers (③) ,4Spring Washers (②) with the Allen key(⑤).

Attach Left Support Leg(B) to the Headboard(A)using Bolts (①), Washers (③), Spring Washers (②) with the Allen key(⑤).

Tighten to only 70% tightness.

Repeat the same steps to install the Right Support Leg(C).


At this point of assembly, DO NOT over fasten the connections.

The final height of the Headboard may be adjusted to your own need.

Note:Queen size assembly as picture (1) show;Full size assembly as picture (2) show.

To assembly the headboard to Mattress Support Frame

Step 2

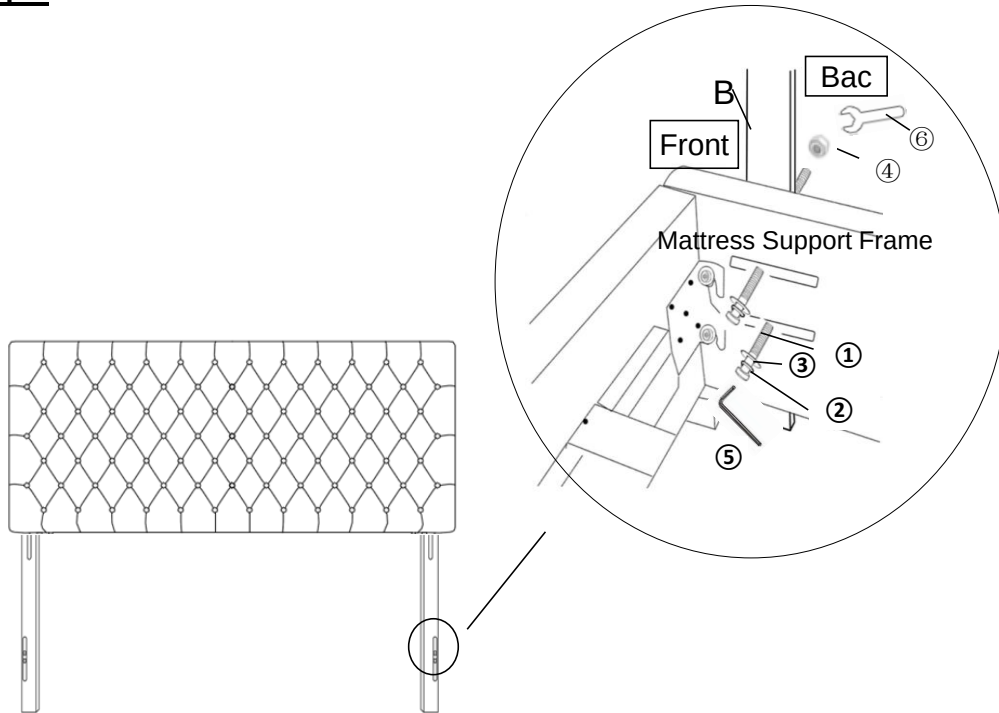

To assembly the headboard to your platform.

With assistant to you adult partner.


One person hold the Headboard upright and another person align the Headboard bottom mounting positions to the Mattress Support Frame mounting positions.

Attach the Headboard to the Mattress Support Frame using Pack B.

The hardware for Pack B: 4bolts(①),4Washers(②), 4Spring Washers(③) and 4Nuts(④) with Allen Key(⑤) and Wrench(⑥).

Please install the bolts from the FRONT TO BACK of the headboard.

Step 3

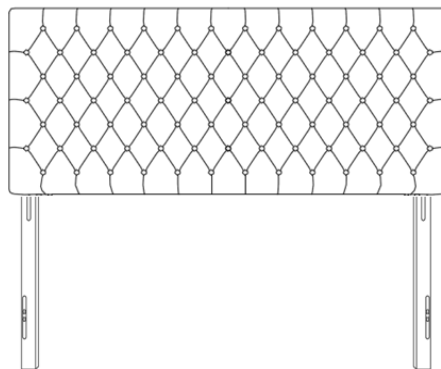

Make sure all parts are connected and all Bolts are securely locked into position.

Your Headboard is ready for use.


Caution: This Headboard can only be used on a flat, level surface.



WARNING


Serious or fatal crushing injuries can occur from tipping furniture. To help prevent tip-over: ALWAYS secure this furniture to the wall using a Safety Restraint Device. See product instructions for more ways to help prevent furniture tip-over.

Headboard Restraint Device Installation Instruction

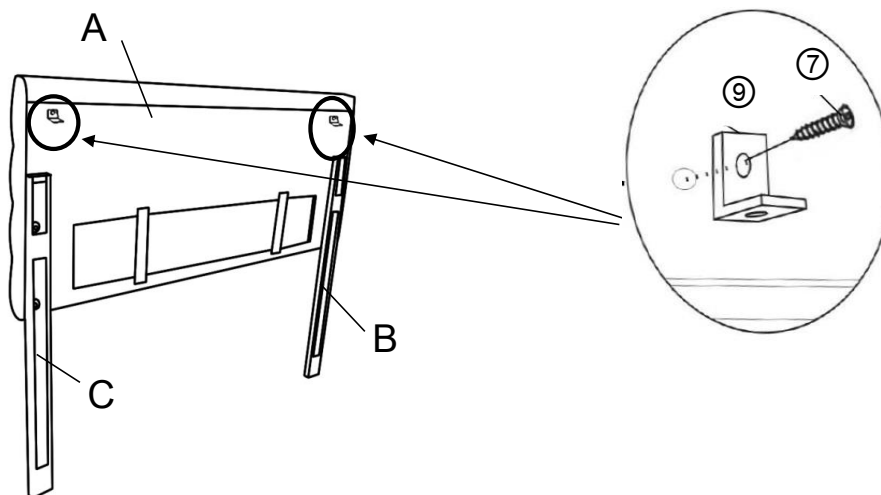

Firstly, turn back the Headboard.

Find the two marks on the product. Then, Attach Metal Brackets(9) to the back of Headboard(A) using Screws(7) with Screwdriver(11) as shown above. Make sure two parts are connected and securely locked into headboard.

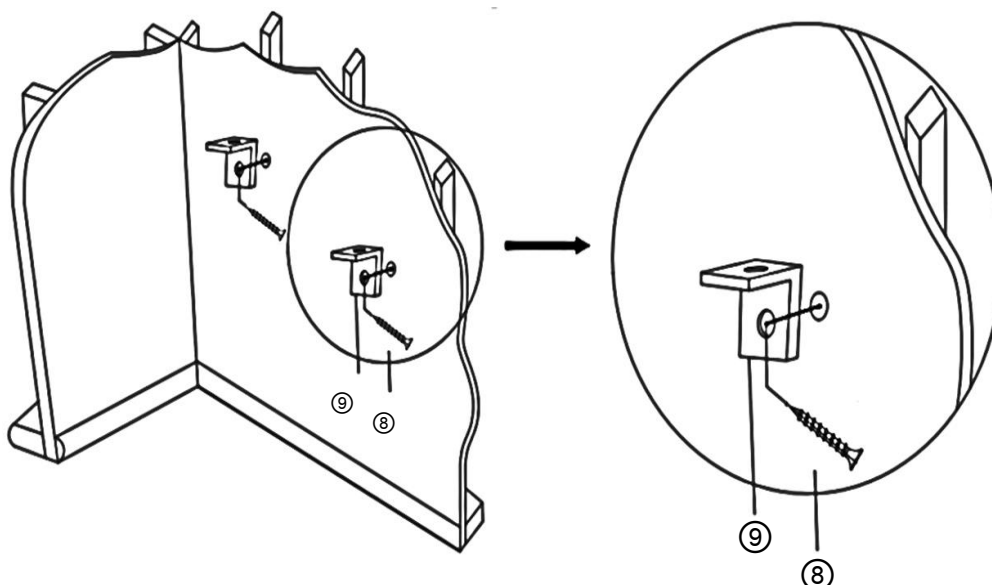


Put the Headboard against the wall where desired and mark the location for the Metal Brackets(⑨) to be the same height as the top of the Headboard.

Attach Metal Bracket(⑨) to the wall where you marked using Screws(⑧) with Screwdriver(⑪).

Repeat this process with the other Metal Bracket(⑨).

Note: The Metal Brackets need to be secured to solid, load bearing surface. Please use a Stud Finder(not supplied) if needed to locate the Wall Frame.

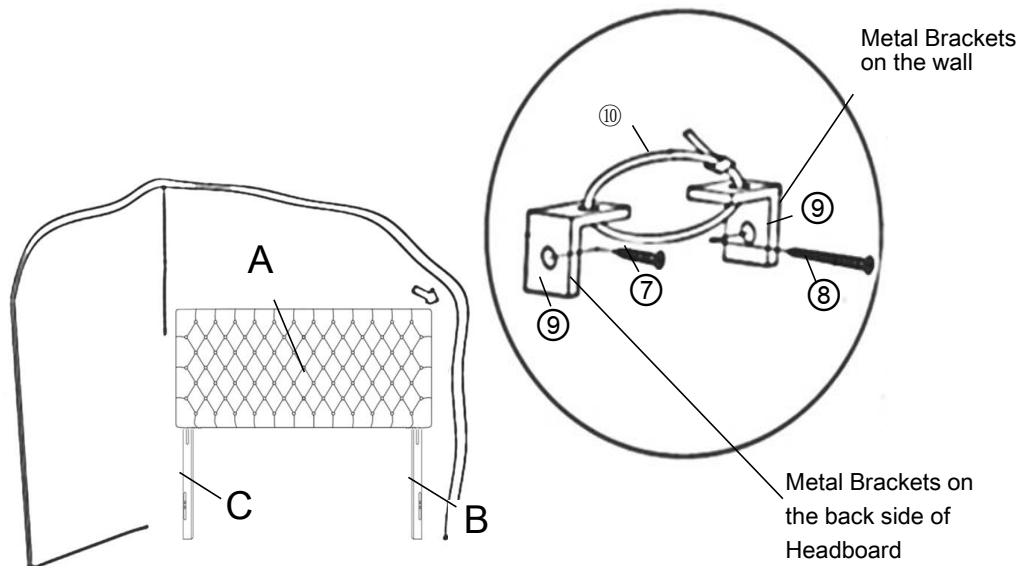

Move the Headboard back against wall.

Pull the Restraint Straps(⑩) through the Metal Brackets(⑨) on the wall and Headboard(A) one by one, and pull the Restraint Straps(⑩) tight.

Note: 2pcs of Restraint Strap(⑩) on each position.

Headboard Restraint Device is installed and Headboard is ready for use.

The strap between headboard(A) and Metal Brackets(⑨) on wall should be within 3.5".

Care & Maintenance

-  ● Do not put hot items directly on furniture surface.
 -  ● Do not clean furniture with harsh cleansers or polish.
 -  ● Do not place furniture under direct sunlight.
 -  ● Do not place furniture near heating or cooling vents.
 -  ● Do not write on furniture without a padded barrier to protect the surface.
 -  ● Do not place furniture outside. For indoor use only.
 -  ● Not for commercial use. For residential use only.
 -  ● Stains may be removed with mild soap solution and damp cloth.
 -  ● Children should not climb or jump on the furniture.
-
-  ● Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Questions & Answers about Proposition 65

• What is Proposition 65?

Proposition 65 requires businesses to provide warnings to Californians about significant exposures to chemicals that cause cancer, birth defects or other reproductive harm. These chemicals can be in the products that Californians purchase, in their homes or workplaces, or that are released into the environment. By requiring that this information be provided, Proposition 65 enables Californians to make informed decisions about their exposures to these chemicals.

Proposition 65 also prohibits California businesses from knowingly discharging significant amounts of listed chemicals into sources of drinking water.

Proposition 65 requires California to publish a list of chemicals known to cause cancer, birth defects or other reproductive harm. This list, which must be updated at least once a year, has grown to include approximately 900 chemicals since it was first published in 1987.

• What types of chemicals are on the Proposition 65 list?

The list contains a wide range of naturally occurring and synthetic chemicals that

• What does a warning mean?

If a warning is placed on a product label or posted or distributed at a workplace, a business, or in rental housing, the business issuing the warning is aware or believes that it is exposing individuals to one or more listed chemicals.

By law, a warning must be given for listed chemicals unless the exposure is low enough to pose no significant risk of cancer or is significantly below levels observed to cause birth defects or other reproductive harm.

• Where can I get more information on Proposition 65?

If you have specific questions on the administration or implementation of Proposition 65, you can contact OEHHA's Proposition 65 program at P65.Questions@oehha.ca.gov, or by phone at (916) 445-6900.