

**USER MANUAL** 

#### **Thank You For Choosing Our Product**

Before assembly, please read this USER MANUAL first, and check according to Parts List to make sure all parts are included.

Feel free to contact us if you have any concerns or questions about your product, we are always ready to help. Your satisfaction is our first priority!

#### **Precautions**

#### **BEFORE YOU BEGIN THIS INSTALLATION**

Thoroughly read all instructions for both safety and usage prior to installations.





1. Avoid long-term direct sunlight exposure.





2. Keep away from heat.





3. Keep away from sharp objects.





 Keep infants/children away from assembly parts to avoid choking and suffocation.





5. Keep away from corrosive substances.






6. Pay attention to avoid over-tightening fasteners, or they may induce cracking within the board.





7. Keep weight on desk balanced for correct operation and longer life of components.





8.Keep area of vertical motion free of obstacles.





Do not place hands on or near support bars. Moving parts can crush and cut.

### **Package Contents**

Standing Desk With Monitor
Stand & Keyboard Tray

Assembly tool kit

Instruction manual

### **Safety Instructions**

#### SAFETY AND WARNINGS

- 1.Inappropriate use of this product may cause property damage or bodily injury.
- 2.Check surroundings on all sides before using the desk. Body parts and property can be crushed if trapped between an immobile obstacle and the desk's range of motion.
- 3.Ensure the length of power cords are accounted for when operating the desk. Monitors, computers, speakers, anything with a cord that is not long enough for the desk's range of motion could be pulled down or have its wires broken.
- 4.Items pulled off the desk may cause other items to fall.
- 5.Please provide this operating manual to any users, installers, or support personnel operating the product.
- 6. Do not place any objects taller than 20" underneath the desk.
- 7. Do not open any of the components, the Legs, Control Box, or Switch. There is a danger of electric shock.

#### **USAGE**

This height adjustable desk has an electric motor and is designed for use in dry work areas only.

The desk height is adjustable so that it can be positioned at the ergonomically desired height.

These desks are designed only for the purposes included in this manual.

They should not be used in environments where there is high humidity or in areas with dampness. Any other environments are at user's own discretion.

#### **Safety Instructions**

Do not move around, crawl or lie under the desk frame. Do not sit or stand on the desk frame.

Children should never use the desk without parental supervision.

Liability: Under no circumstances does the manufacturer accept warranty claims or liability claims for damages caused from improper use or handling of the desk frame other than that which is described in this operation manual.

#### SETUP AND INSTALLATION

Once the desk has been assembled, adjust the feet so that the desk is level and does not shift its position. After this, connect the desk to the 110v or 220v outlet and the desk is ready for use.

Check that no cables can get twisted or jammed.

Choose a proper placement for the desk that's a safe distance from window frames, radiators and/or furniture so that people do not get lodged or trapped by the desk. When moving the desk after it has been fully assembled, DO NOT lift the desk by the desktop.


Lifting this way can stress the fasteners connecting the desk base to the desktop. Lower the desk completely and lift the desk by grabbing the top of the desk base or by removing the desktop first.



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



## **Disassembly Diagram**

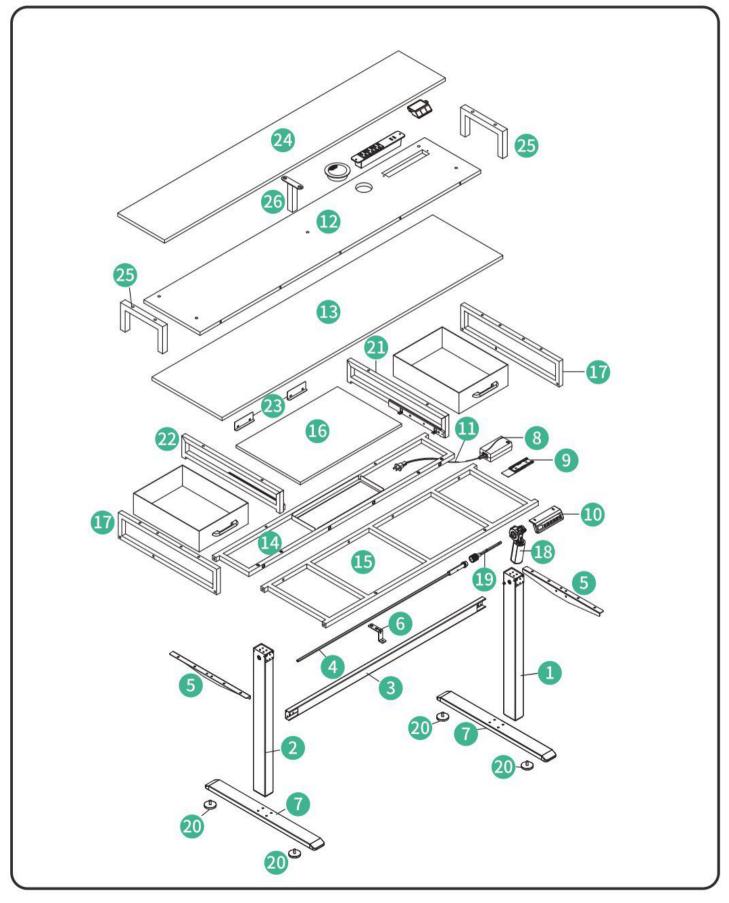


### Parts List

For ease and safety, we recommend two people for assembly.





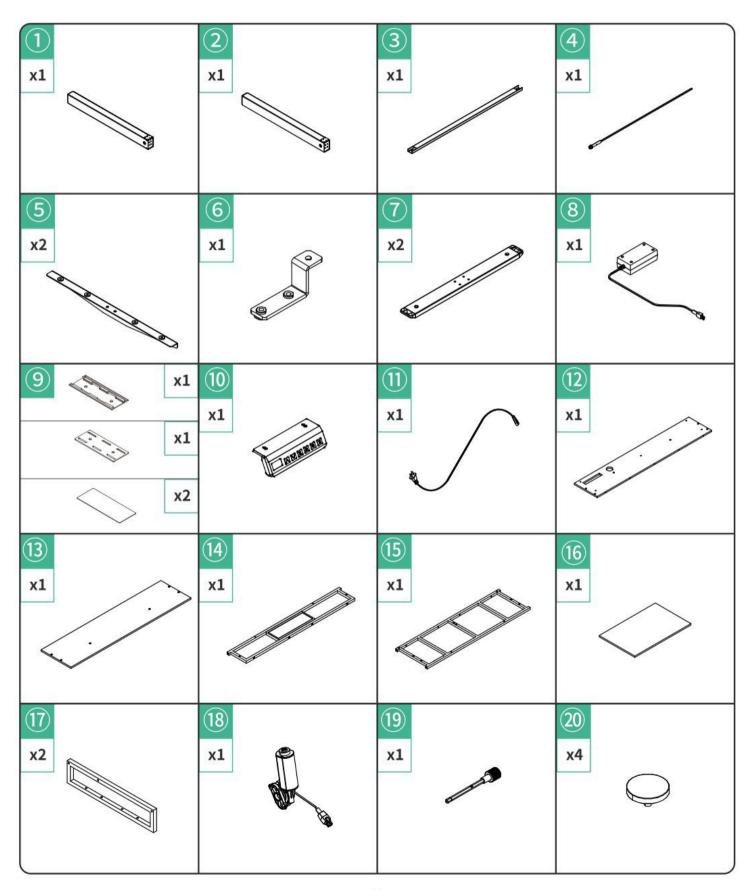


### **Parts List**

For ease and safety, we recommend two people for assembly.






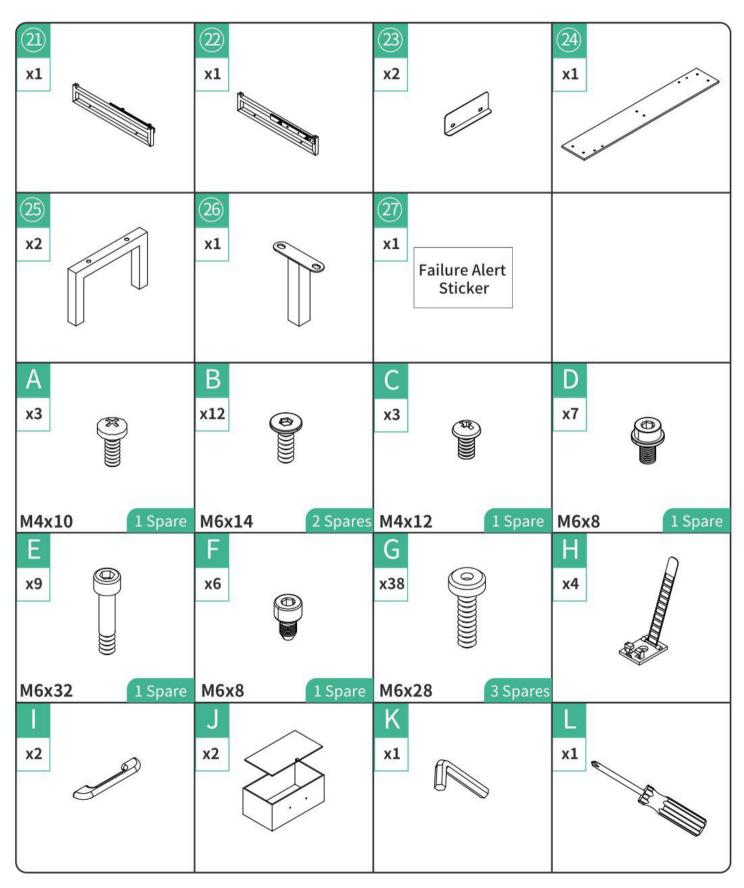


### **Parts List**


For ease and safety, we recommend two people for assembly.



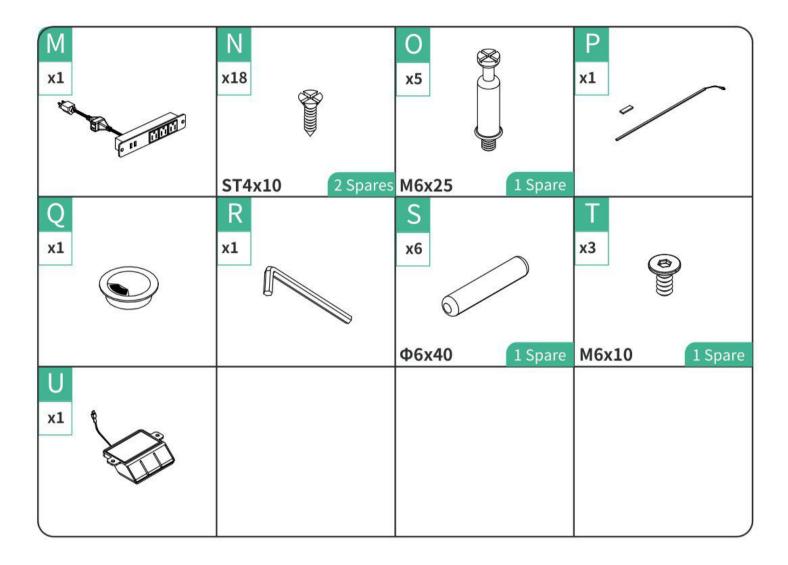


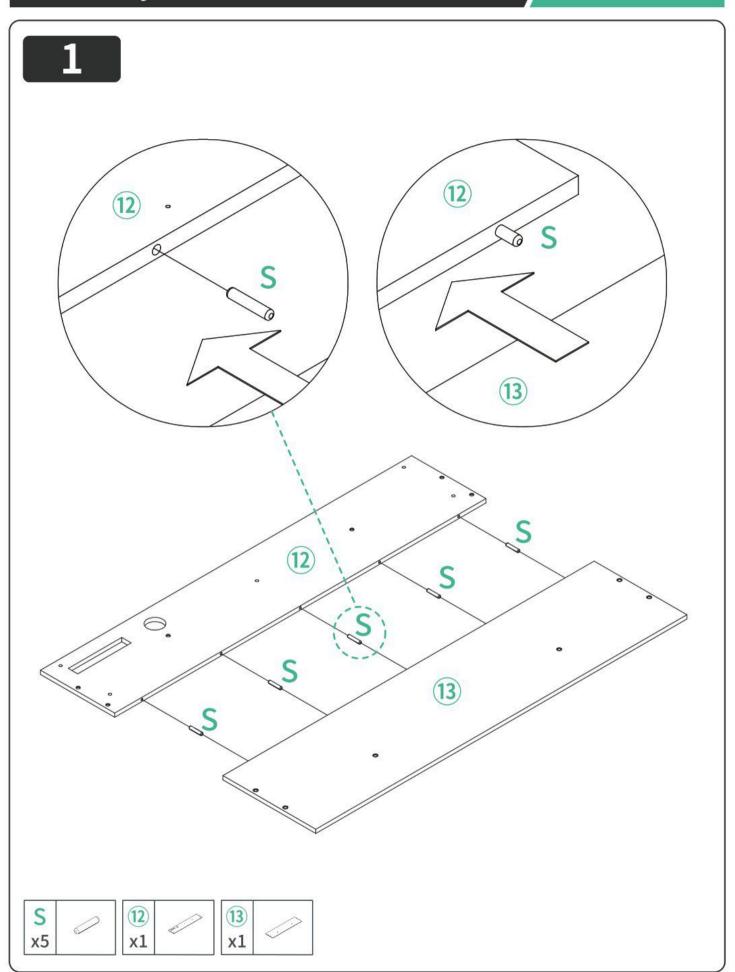



Please pay attention to the orientation of ② and ②: Make sure the rails are directly above board ③ and keep the rails facing each other for installation. Incorrect mounting will result in the keyboard tray being unable to be mounted.

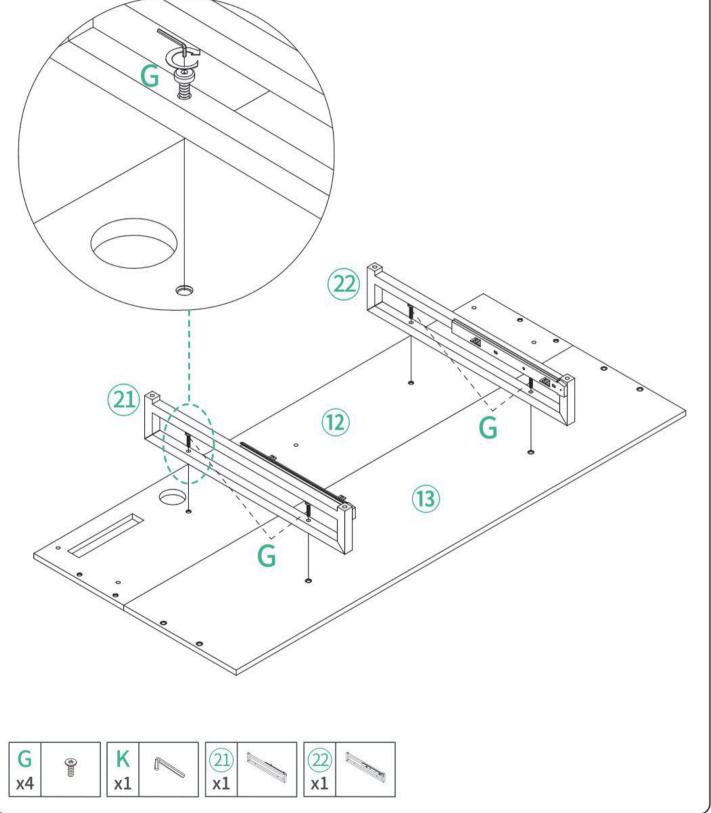



Please note the orientation of the bracket 17: ensure that the holes shown by the arrows are above the table board 12.Incorrect mounting will result in the steel frame being unable to be mounted. G G 12 17 13 G x1 x4

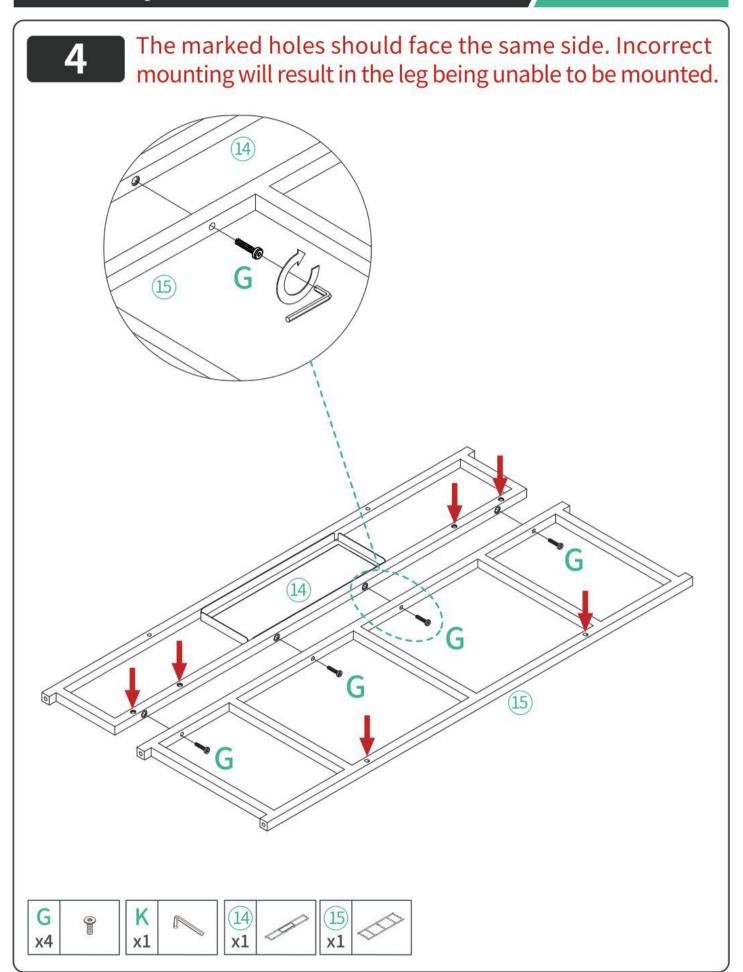

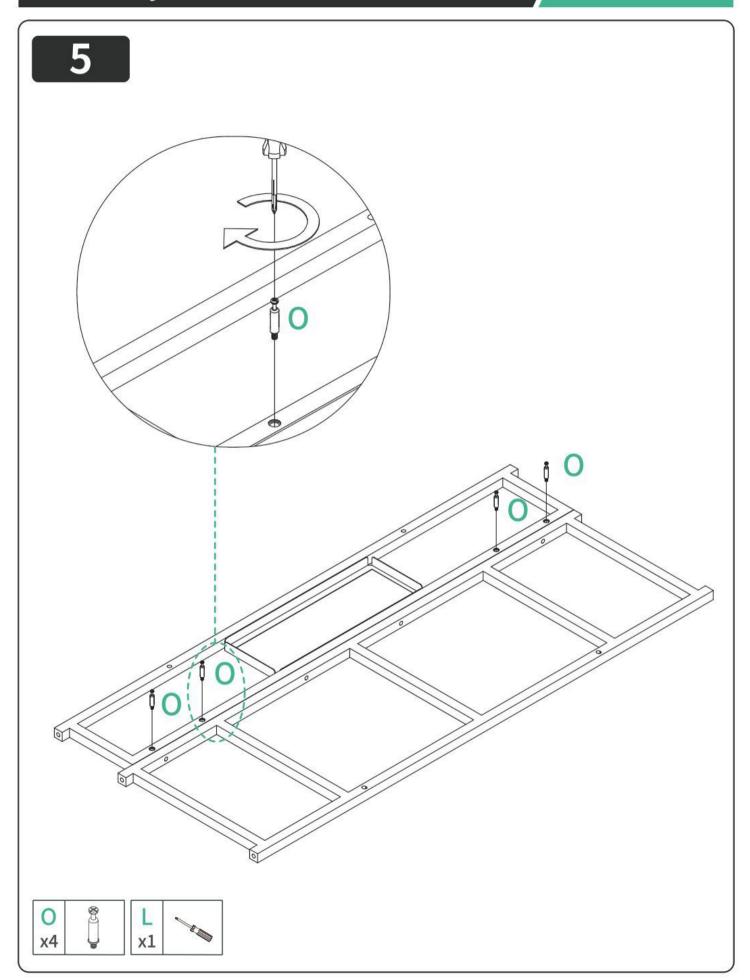

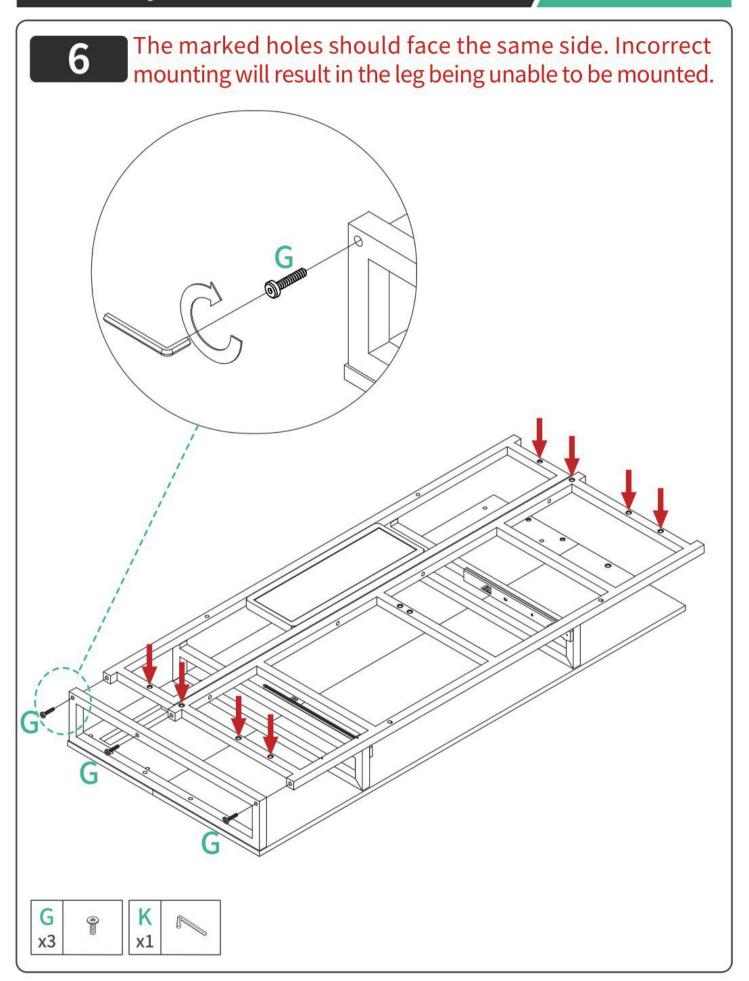

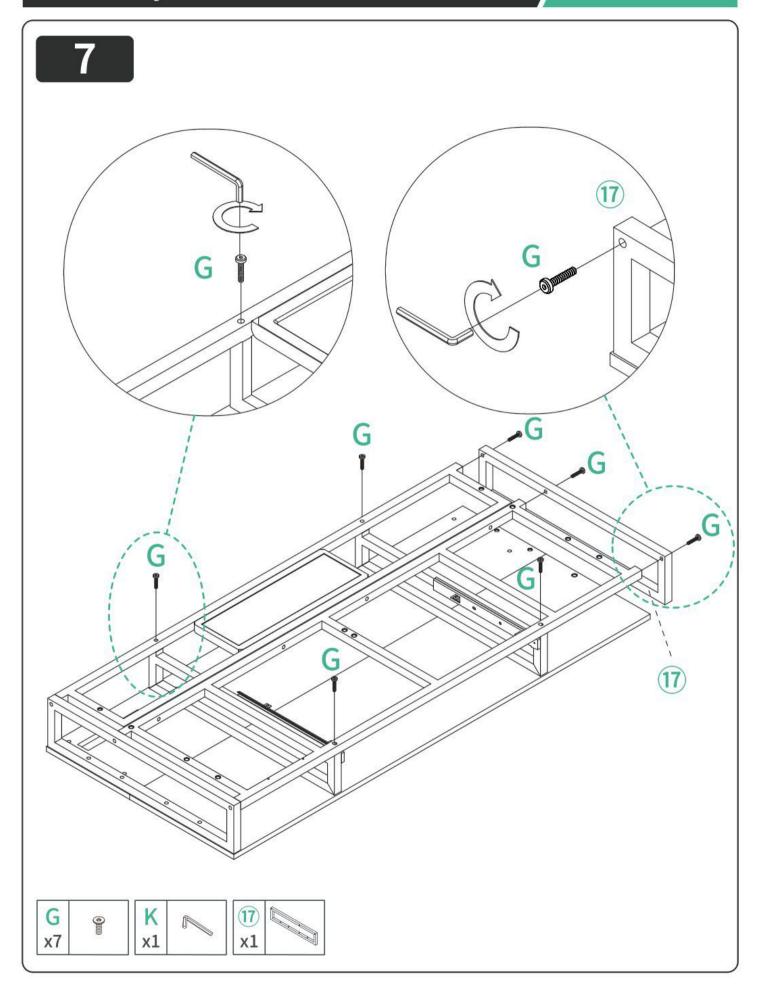

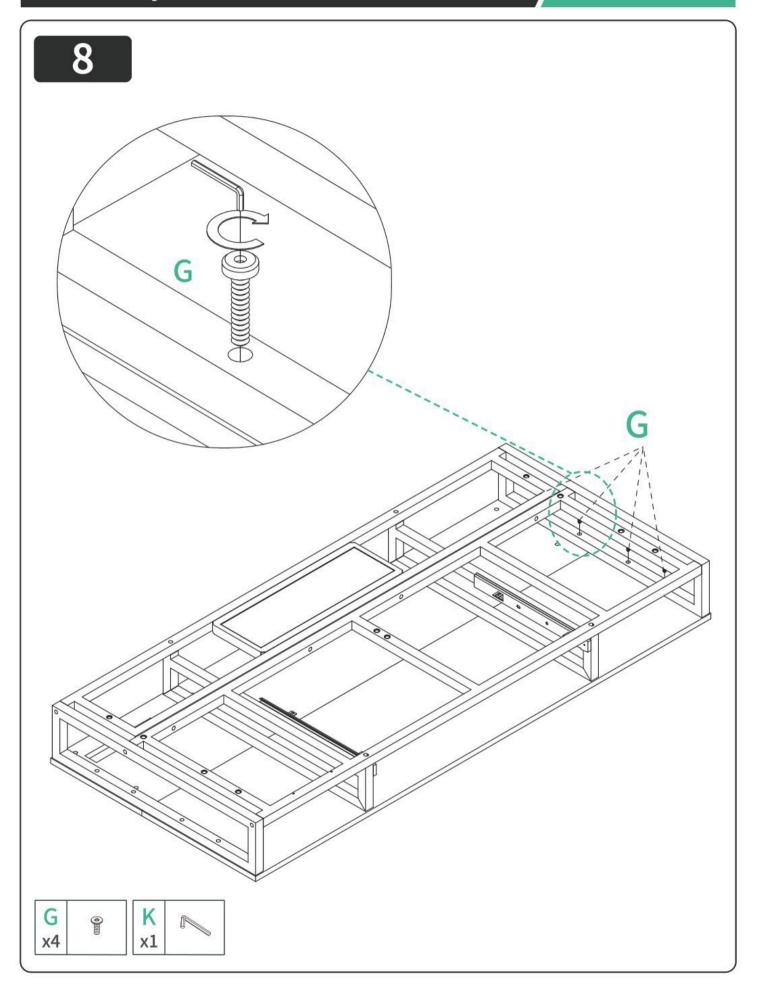

Motor assembly installation steps: Assemble 18 and 19 as shown in the picture, and then install the motor unit on leg ① and fix it with screw A (adjust the angle of 19 in the motor unit so that it is aligned with the hexagonal holes on the table leg ①)

Note: Please make sure that 19 in the motor unit is installed in the positioning slot as shown in the picture.




















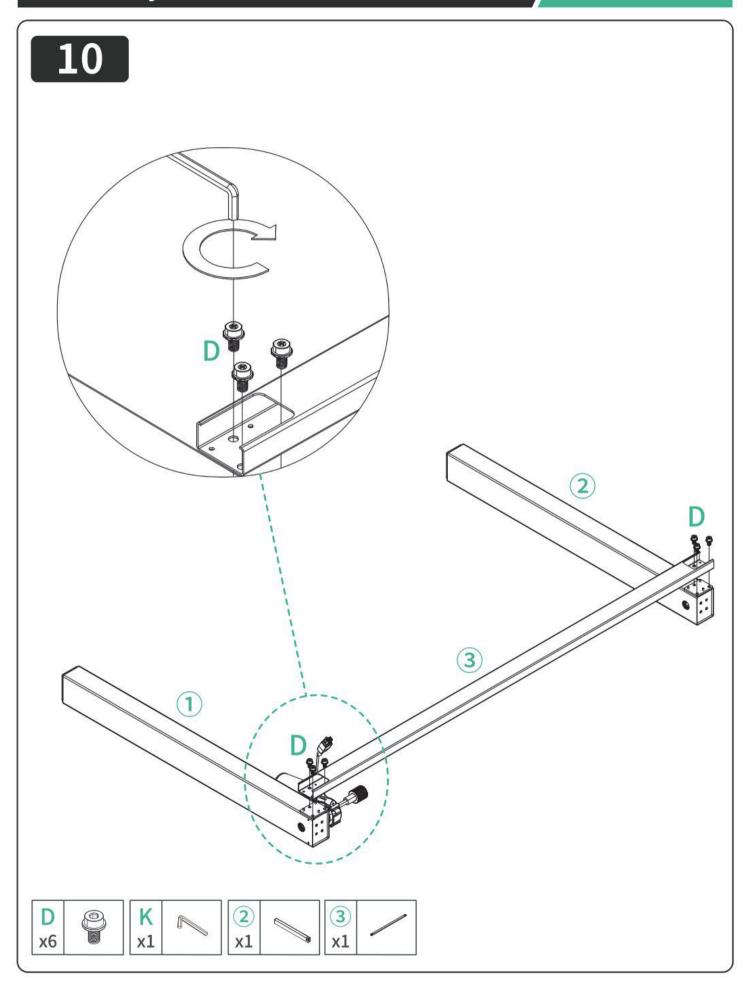


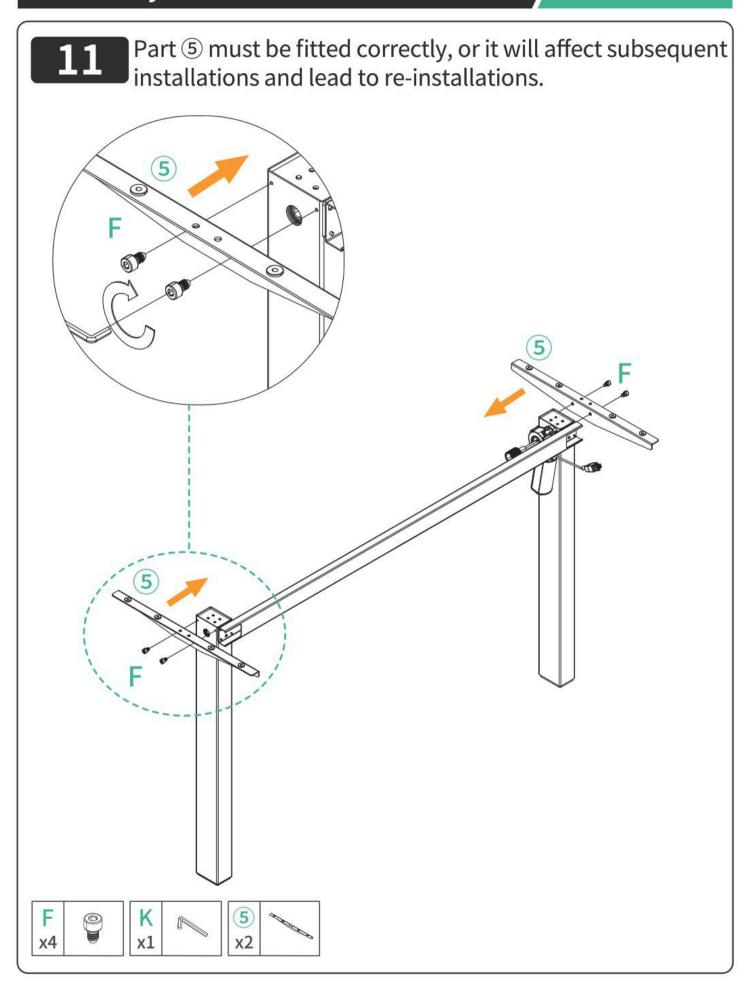


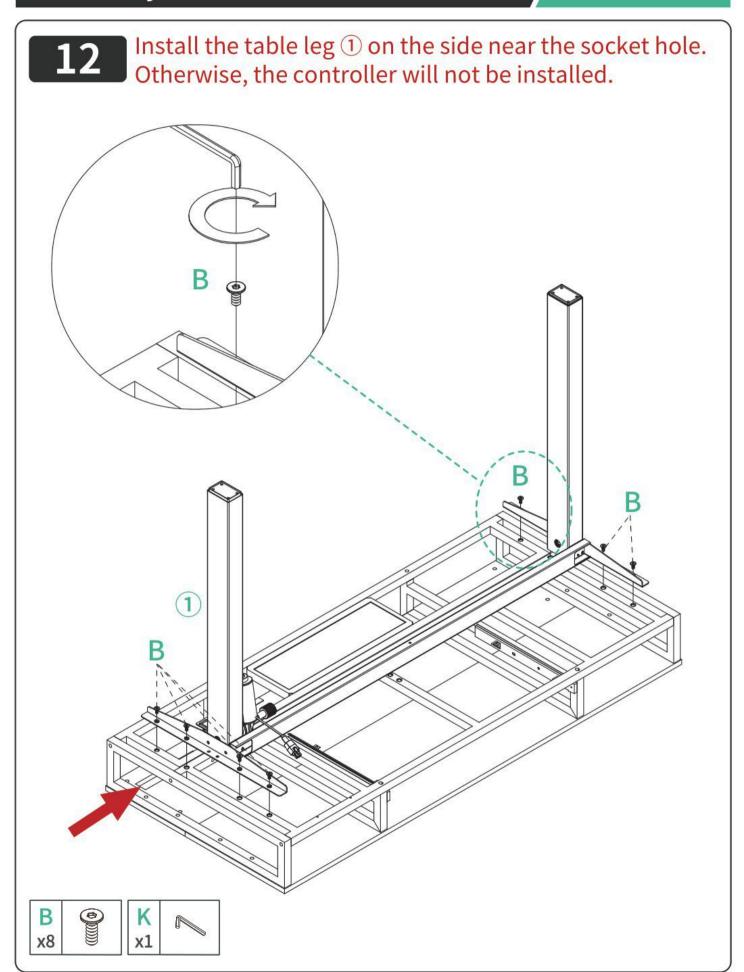

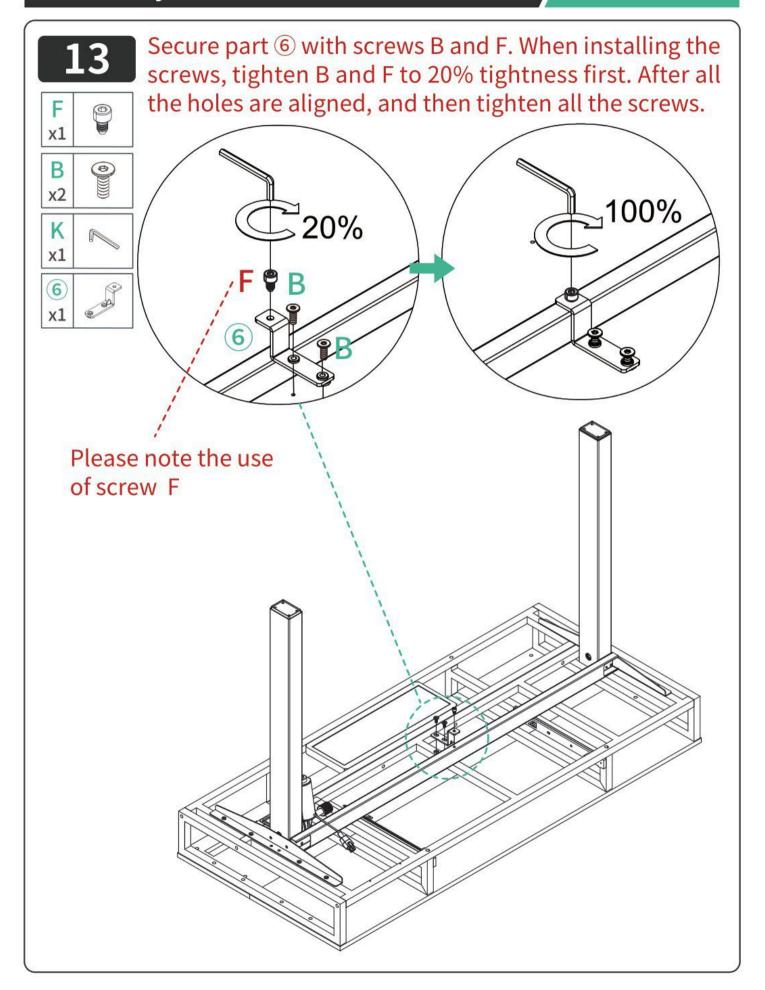

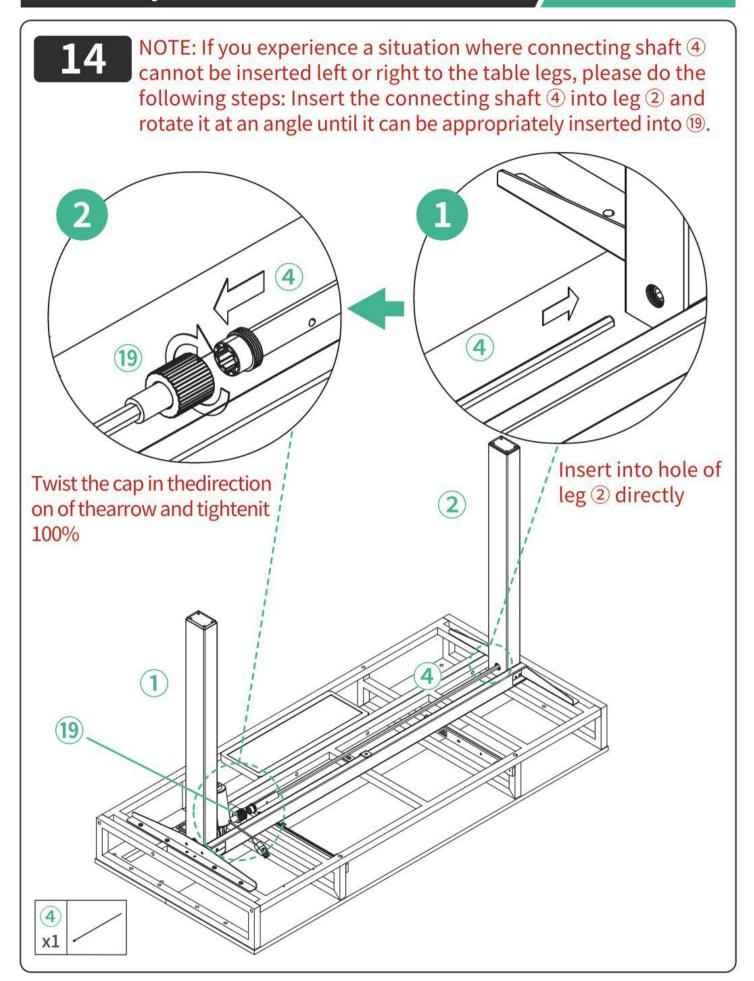


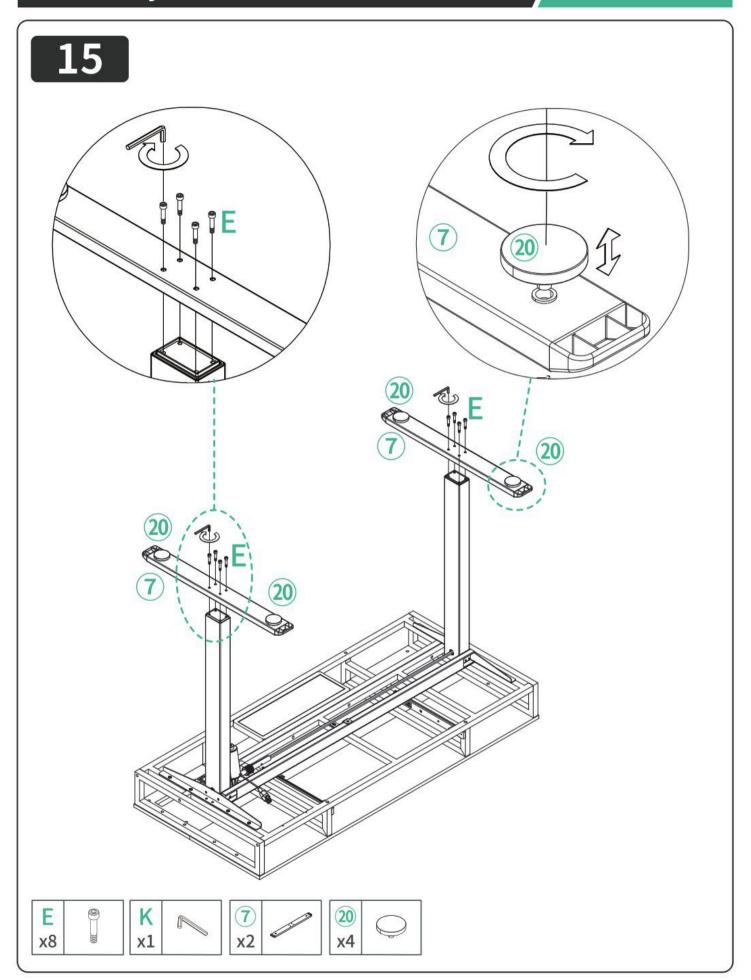


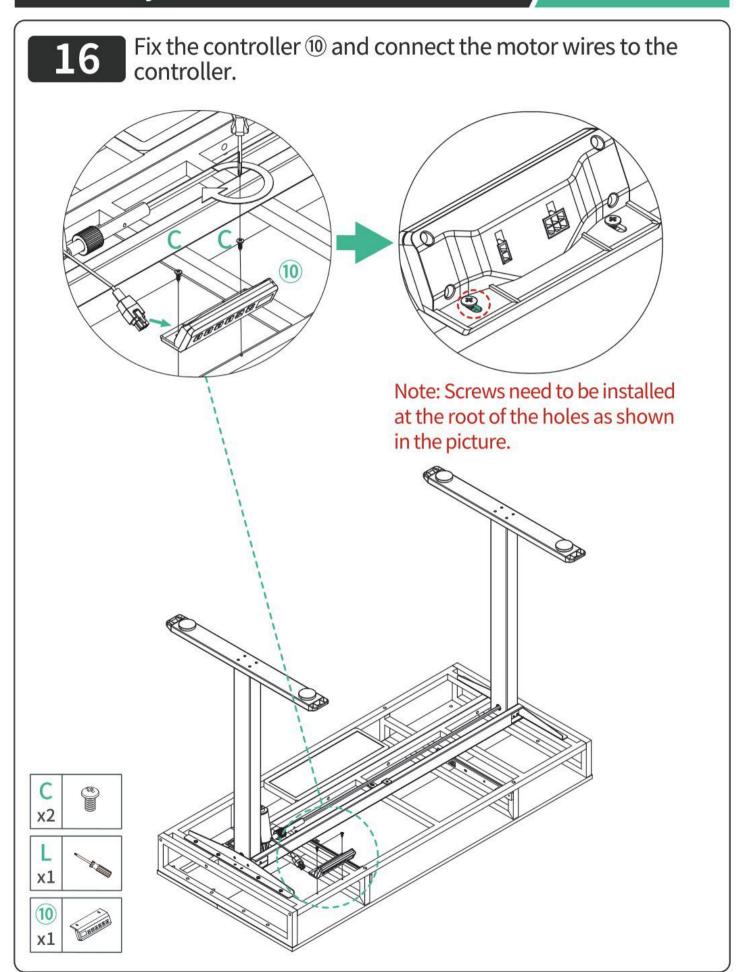



Use double-sided tapes and card slots to fix the Adapter. Before starting the gluing work, make sure where to fix theadapter. Please place the adapter as shown in the detail on the


left, making sure the cable can be plugged into the controller, this is where you can use the double sided tape.

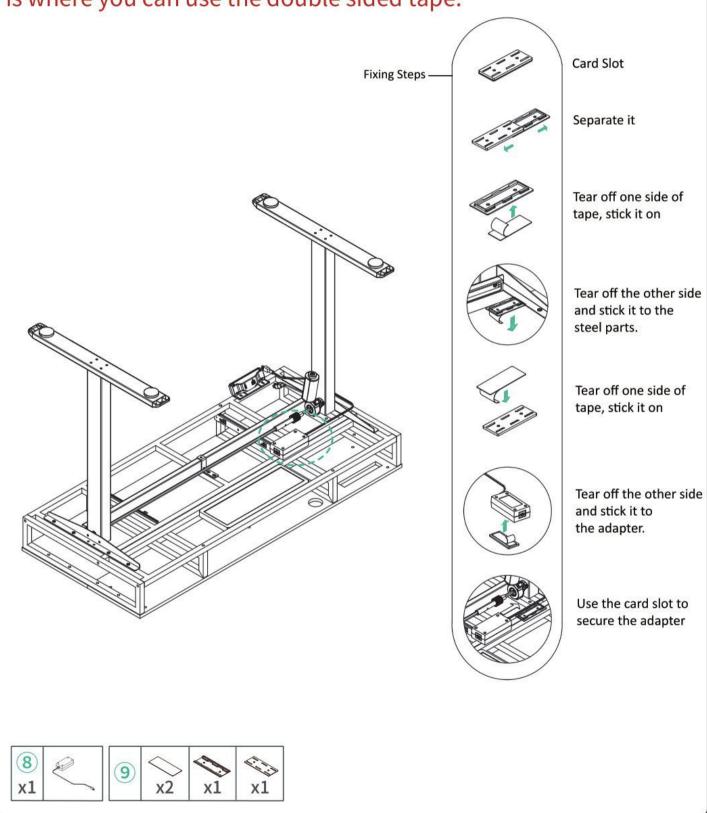


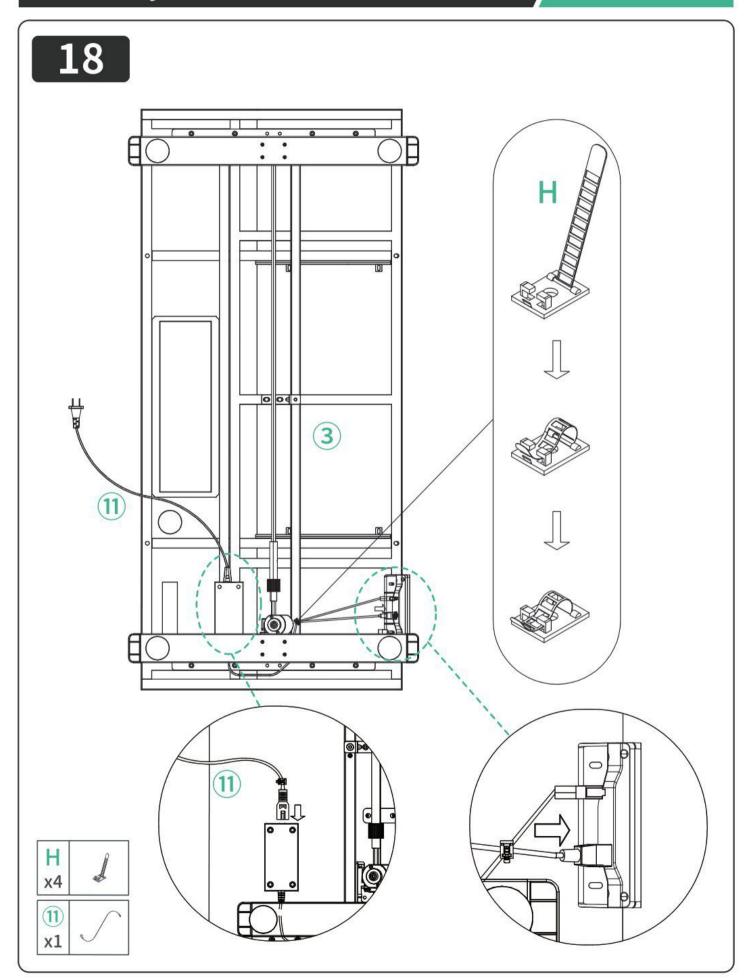


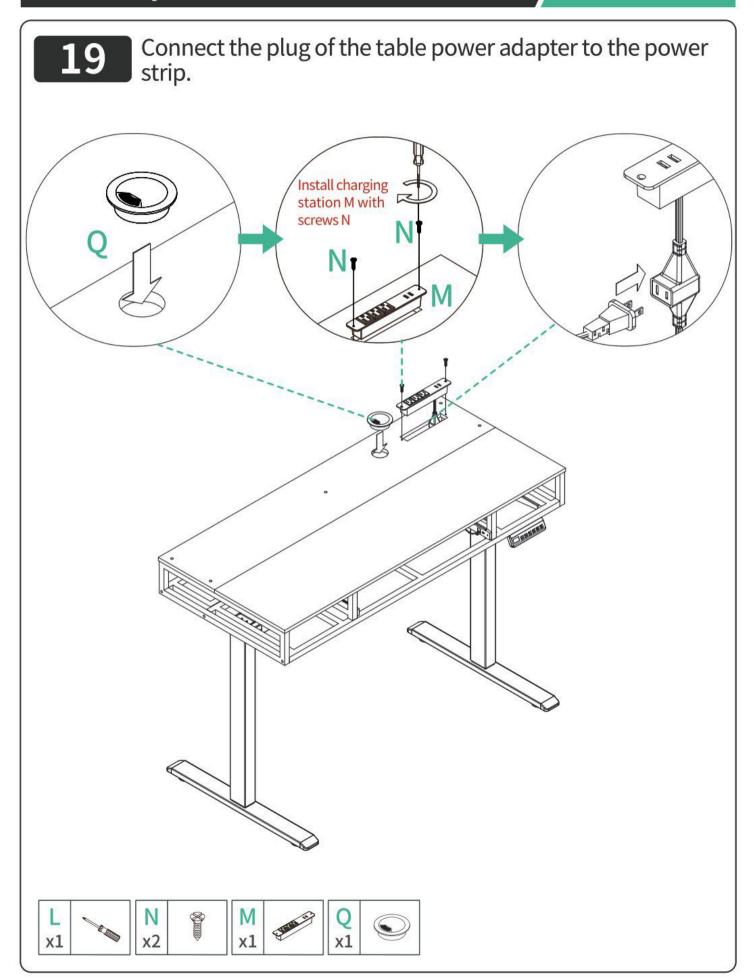


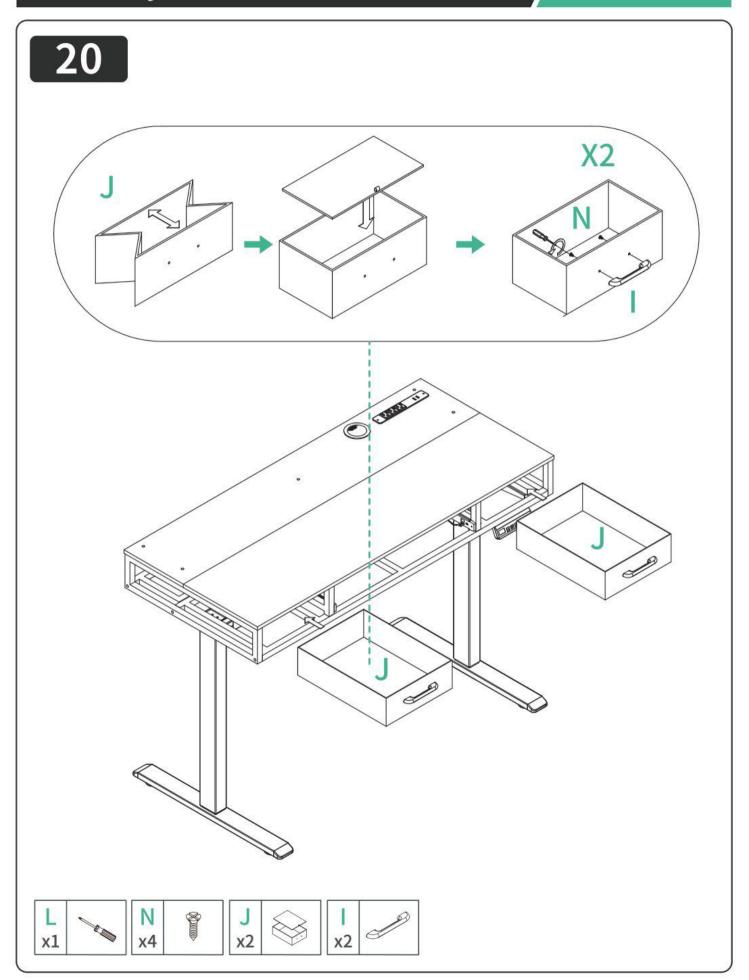


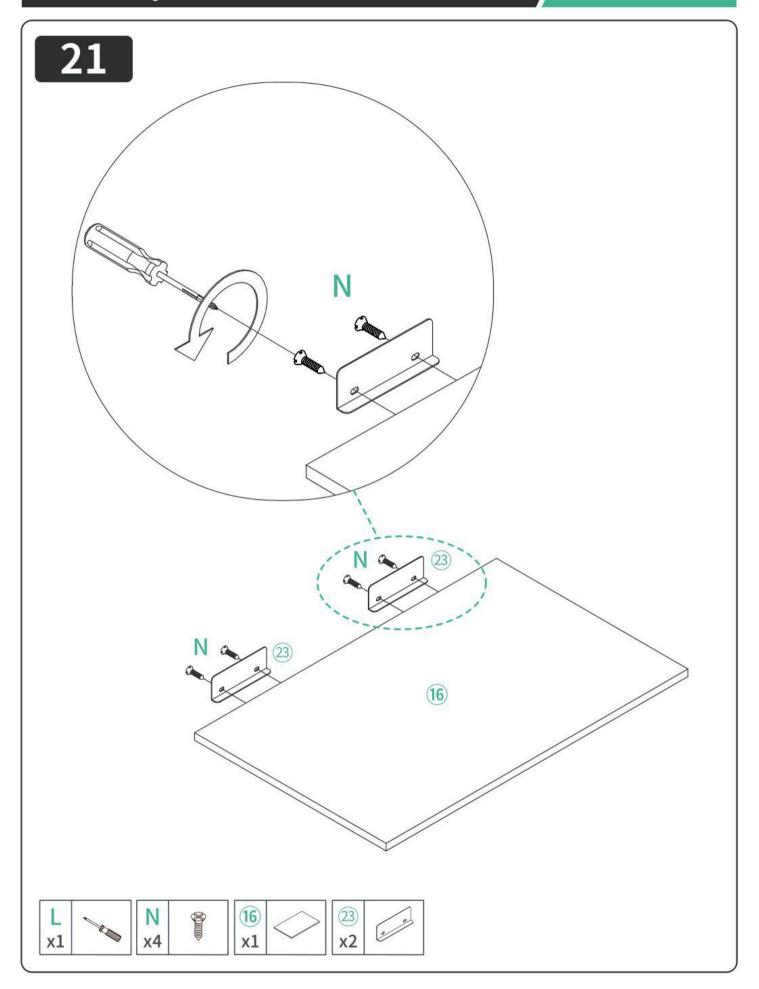


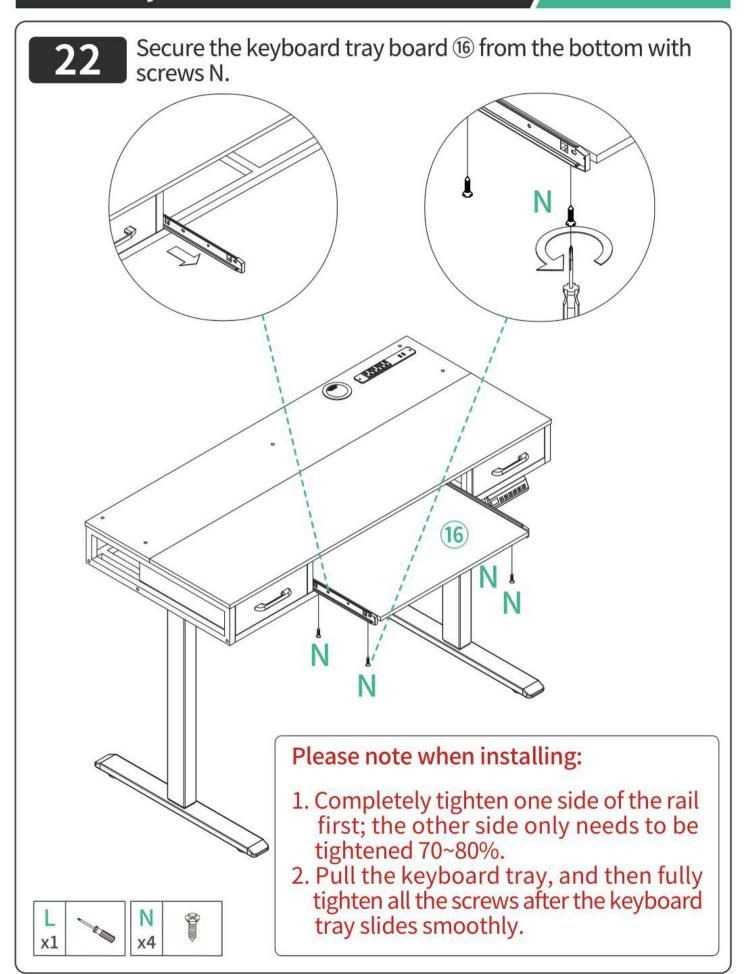

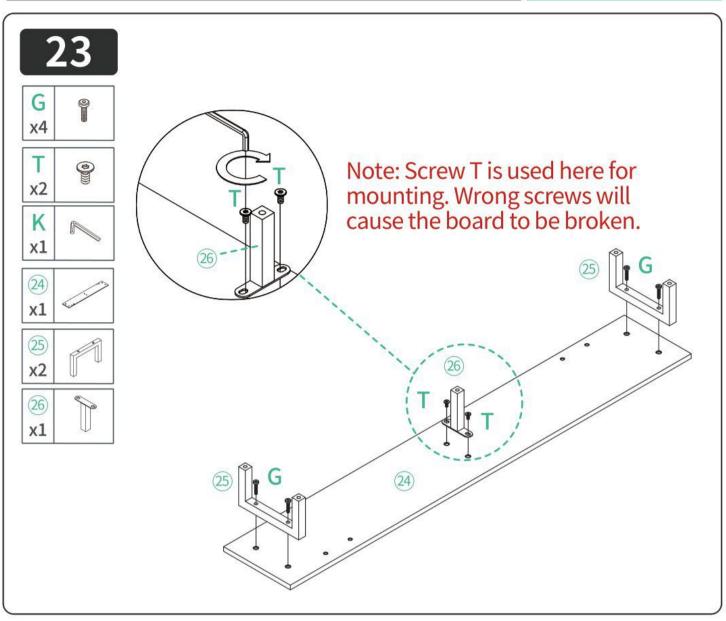

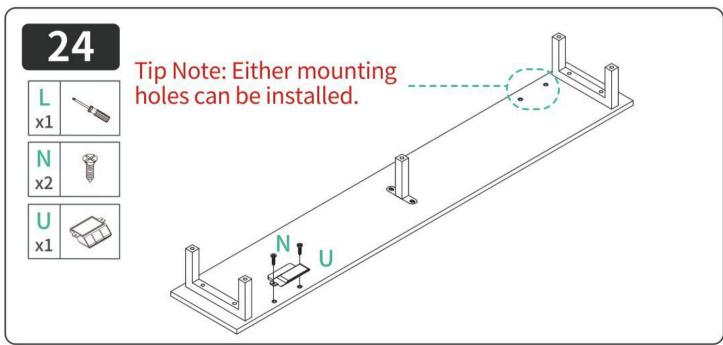


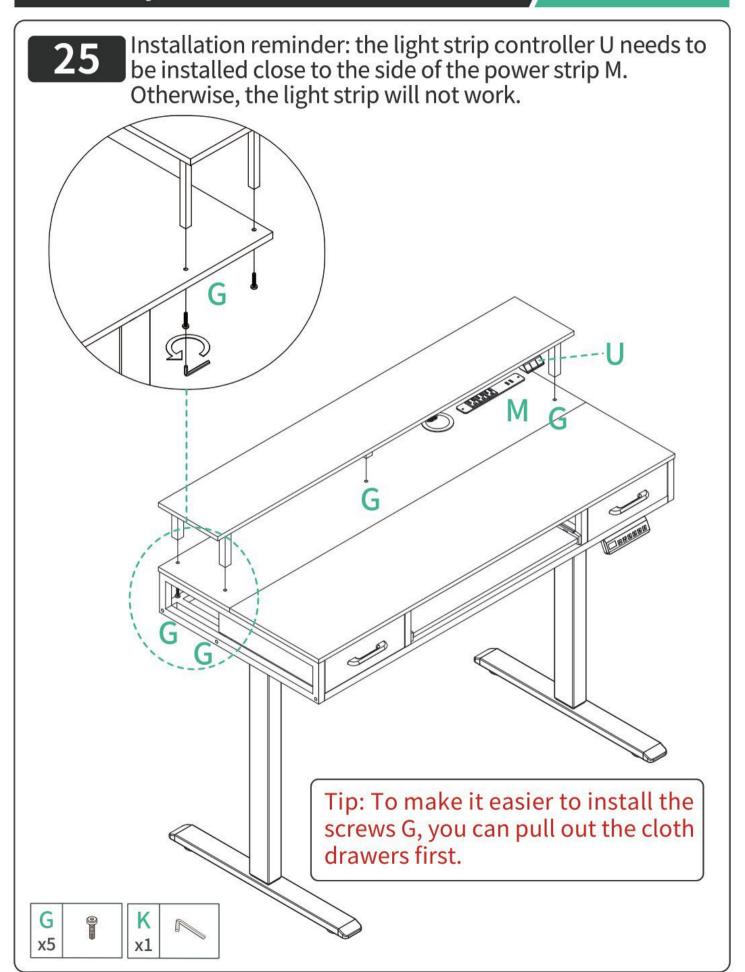

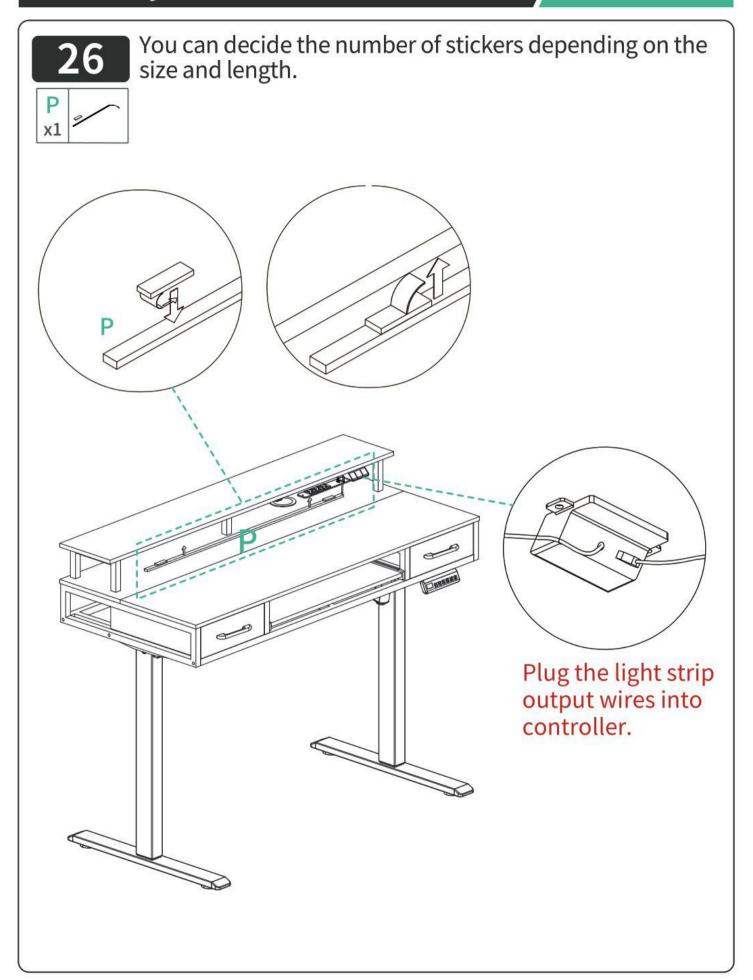

27

Choose where to paste the ②7 to your preference.

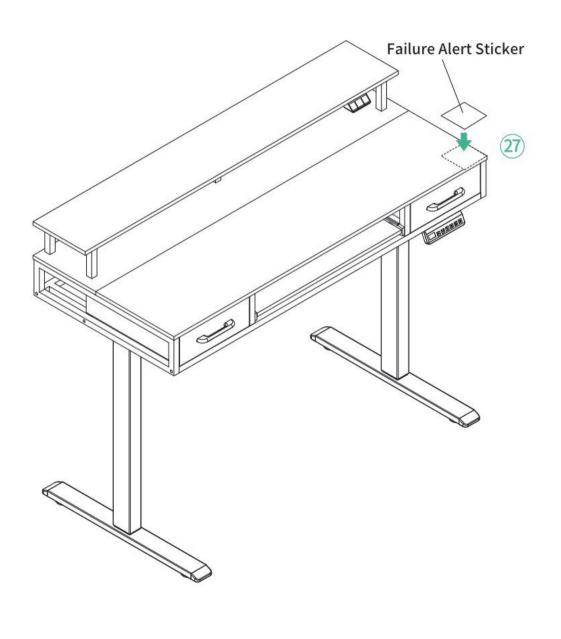




**Static Color Button** 

M

**Dynamic Mode Button** 



Speed & Brightness and Power Button

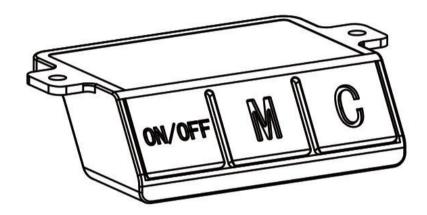

#### STATIC COLOR BUTTON

Press this button once to switch to the static color mode, and then each pressing can change the color.

#### DYNAMIC MODE BUTTON

Press this button once to switch to the dynamic mode effect, and then each pressing can change the dynamic mode.

Press this button for more than 2s to switch to the demo mode; In the demo mode, the strip will automatically cycle through various dynamic modes.


#### SPEED & BRIGHTNESS AND POWER BUTTON

A. In the static mode, press this button to adjust the brightness of the light bar; each press can switch to a brightness level.

- B. In the dynamic mode, press this button to adjust the dynamic mode speed; each press can switch to a speed level.
- C. Press and hold this button to shut it down when the strip is on. Press this button to turn it on when the strip is off.

The product has a power-off memory function; the strip can restore the color, brightness, and mode in the next power-on.

## Controller Instruction

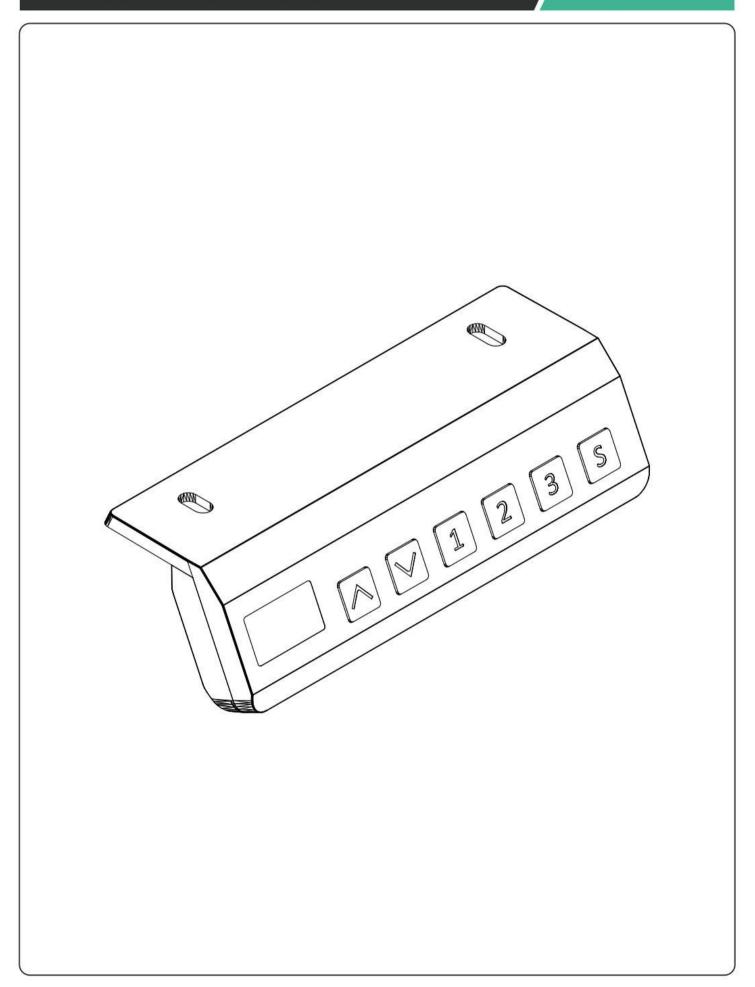

### **Display Instructions**

Key name	Description	Press duration	Operation process
	Raise the desktop	Long press	Press and hold the (a) key to raise the desktop and enable the LED screen to display the real-time height value, and release it to stop the height adjustment.
$\bigcirc$	Lower the desktop	Long press	Press and hold the  key to lower the desktop and enable the LED screen to display the real-time height value, and release it to stop the height adjustment.
123\$	Set the memory heights	Press the Skey once	Press the (S) key once and the height value starts flashing. At this time, press the (1), (2) or (3) key to save the current height to the corresponding position.
123	Move to the memory height / To use memory heights	Press the numeral key once	Press the numeral key to enable the height adjustable desk to automatically move to the corresponding preset height.

#### **Parameter Setting**

- 1. After holding down the S key for 3 seconds, the digital tube displays "S--" and begins to blink;
- 2. Press the Skey again to enter the setting mode, and display the function name. The functions that can set parameters are as follows:
- Display unit of table height: Unit (IJ¬)
- Display brightness: Brightness (৮)
- Buzzer switch: Beep (ЬΕΕ)
- Strength of collision protection: Collision Force (CF)

Function of each key in setting mode:

- ① Return key to return to the upper-level menu.
- - S Confirm key (Confirm to enter the next level menu of the current interface or confirm to select the current parameter).

If you do not press any key within 20 seconds, exit the setting mode;

### **Parameter Setting**

Main menu interface	Submenu interface		Description	
Um	51	SI Metric	After entering, the height unit value set last time is displayed. You can flip In the options (SI, In) with ⊗ and ⊗ keys. After selecting	
	ſΠ	Inch	the option, press ⑤ key to save the current option value, and keep the current option displayed for 2 seconds, exit the setting mode.	
Ьг	L	Lw	After entering, the handle brightness set last time is displayed. Press ⊗ and ⊗ keys	
	п	Normal	to flip in the options (L, N, H). After selecting the option, press S key to save the current option value and keep the current option	
	н	High	displayed for 2 seconds before exiting t setting mode.	
ьее	OFF	Off	After entering, the buzzer switch state set last time is displayed. You can flip in the options (Off, On) with ⊗ and ⊗ keys. After selecting the option, press S key to save the	
	оп	On	current option value, and keep the current option displayed for 2s, and exit the setting mode.	
CF	OFF	Off	After entering, display the impact force	
	L	Light	gear set last time, use ⊗ and ⊗ keys to flip in the options (Off, L, N, H), press the ⑤	
	П	Normal	key to save the current option value, ar keep the current option displayed for 2	
	Н	Heavy	exit the setting mode.	

#### **ANNOTATION:**

- ①There may be an error of up to 10mm between the value on the display and the actual height value, which is within the normal range;
- ②The display will be automatically extinguished if no key is pressed for a long time.

  At this time, you can press any key to turn on the display.

# Description of faults

Troubleshooting	Trouble Code	Description	Troubleshooting
Resistance Protection	E02	If resistance is suddenly encoun tered during operation, the LED display will show and flash "E02"; the table will stop moving and then move 40mm in the opposite direction, and the LED display will show the actual height.	Ensure that the standing desk does not vibrate violently, hit any obstacles or tilt during operation.
Overheat Protection	Hot	Continuous long-time operation may cause this protection to be activated.	Re-energize or wait at least 15 minutes before use.
Motor Abnormal Protection	E10	In any case of disconnection/loosening of wires, the motor fails, and the LED display flashes "E10".	After disconnecting the power, recheck and make sure that the connection between the motor and the controller is secure, and then reapply the power.
Overload Protection	E20	When the load exceeds the set value (under normal circum stances, the load should be controlled under 176 pounds), "E20" is displayed and flashes on the LED display.	If this alarm occurs during upward operation, remove some of the weight on the table and run again; if this alarm occurs during downward operation, disconnect the power, remove some of the weight on the table, and re-energize the power.
Over-voltage Protection	E31 E32	<ol> <li>When the input voltage of the controller is lower than 34V, the LED screen displays "E31".</li> <li>When the input voltage of the controller exceeds 34V, the LED screen displays "E32".</li> </ol>	After power failure, recheck and make sure that the connection between the power supply and the controller is solid, and then re-power it; when the voltage drops to 34V, the system automatically recovers, and the LED displays the actual height.

#### **Description of faults**

In the "E10, E20" alarm state or run to the lowest height position, long press the ⊗ key for 3 seconds, and release the key after display (Reset), the standing desk will start to run down to the end and bounce a certain height, reset will be completed and the minimum height will be displayed.

If the table legs are not aligned but can be moved up and down, please contact the after-sales service in time. Unscrew the connecting nut, rotate the connecting rod and plastic-covered hexagonal rod to manually adjust the table legs to the initial state, and reinstall the fixed coupling rod.

#### **Product Care**

- Power supply: AC110V-240V,50/60HZ.
- Service Environment: temperature 0-40C. Keep products awaw from corrosive gas.liquid and dusty objects. Outdoor use is prohibited.
- Keep children and animals away from the tabletop during use, and make sure the tabletop does not touch any walls.
   Remove obstacles that are above 65 centimeters under the desk.
- Never operate system in damp environments or ifany electrical components havemade contact with liquids.
- Unplug the power plug before cleaning, wipe the dust on surface with slightwet dishcloth when cleaning, be careful not to let the drops into the internal parts, not loosen the connector.
- Slight noise caused by the V-ribbed belt or brake system dueto structure will nothave anyeffect on the use of the equipment.
- Please make sure there is no hazard sources in your operating environment.e.g., do not litter the tools around.
- This product is designed with a duty cycle of Max. 10%. (Max. 1 min. ON,9 min.OFF).
- During daily maintenance, use a clean soft cloth to remove surface dust. Do not usea wet cloth or hard material to wipe the surface of the table.
- Avoid contacting the surface with acid-based chemicals.
- To smooth out slight scratches, gently wipe with a soft cloth.
- Avoid attaching tape directly to the outer surface of the metalfeet to prevent paintfrom peeling.



#### **30-DAY Return Policy**

If you're not completely satisfied with your purchase, simply return the merchandise via our official customer support. Unused merchandise can be refunded or exchanged within 30 days from the original purchase date.

#### 1-Year Warranty



We guarantee your product is free from defects in product material and workmanship for one (1) year starting from the date of purchase during normal use of household conditions. If your appliance fails to operate properly within our warranty period, we will arrange a new one. Replacement is free and all shipping costs are covered.

#### **Quick Response within 24 Hours**



If you are still unable to resolve the issue you are experiencing, please contact us immediately via our support email. It doesn't matter if the product has been installed or not, our customer support team will respond within 24 hours and assist you quickly and efficiently. The most efficient way to confirm your problem to us is to attach a video, which illustrates your product issues.

PART	PROBLEM	SOLUTION
	The table is uneven.	Loosen the screws, and adjust the corner of the table until it is stable, then tighten all of the screws.
DECKTOD	Wrong hole position.	Check if the panel is reversed.
DESKTOP	Uneven hole position.	Rotate each screw just a few turns. When all screws are threaded, go back and tighten all remaining screws.
	The desktop could not be lifted.	Check if overloaded, max loading: 80kg. Find after sales in time.
	Strange sound and shaking, incorrect assemblely.	Check if all of the screws are 100% tightened.
LEGS	Only one side moves up and down.	Check whether the coupling is connected to two ports at both ends and whether the black circlip is still there. If the coupling rod can be pulled out, it means that it is not installed and not fixed.  Reassemble the coupling rod, and reset the desk.
	Uneven legs but the desk can go up and down.	Find after sales in time. Remove the hexagonal coupling rod and rotate the coupling rod to adjust the table leg manually to the initial state.
MEMORY HEIGHT	Memory position button not work.	Once the desk is reset and displays 30.7 or 78, your desk is now ready to use.
ACCESSORIES	Not enough or inconsistent.	Find after sales in time.
MOTOR ISSUE	Error code E10 . Motor doesn't work.	Find after sales in time.
	Overwork (Duty cycle: Max 2min ON / 15min OFF)	Restart it after switching off for 15 mins for overworking. Find after sales in time.
POWER ISSUE	Handset doesn't display, and power indicator light is not on.	Find after sales in time.

We are committed to providing our customers with premium quality products and convenient customer service.